



ThinkSystem SD530 V3 Messages and Codes Reference



Machine Types: 7DD3, 7DDA

Note

Before using this information and the product it supports, be sure to read and understand the safety information and the safety instructions, which are available at:

https://pubs.lenovo.com/safety_documentation/

In addition, be sure that you are familiar with the terms and conditions of the Lenovo warranty for your server, which can be found at:

<http://datacentersupport.lenovo.com/warrantylookup>

First Edition (March 2024)

© Copyright Lenovo 2024.

LIMITED AND RESTRICTED RIGHTS NOTICE: If data or software is delivered pursuant to a General Services Administration (GSA) contract, use, reproduction, or disclosure is subject to restrictions set forth in Contract No. GS-35F-05925

Contents

Contents	i	List of UEFI events.	157
Chapter 1. Messages	1	Chapter 4. Lenovo XClarity	
Event and alert message format	1	Provisioning Manager V3 events . . .	179
Chapter 2. XClarity Controller		LXPM V3 events organized by severity	179
events	5	List of Lenovo XClarity Provisioning Manager V3	
XCC events that automatically notify Support	6	events	182
XCC events organized by severity.	7	Appendix A. Getting help and	
List of XClarity Controller events	27	technical assistance	205
Chapter 3. UEFI events	153	Before you call	205
UEFI events organized by severity	153	Collecting service data	206
		Contacting Support	207

Chapter 1. Messages

When attempting to resolve issues with your server, the best practice is to begin with the event log of the application that is managing the server.

- If you are managing the server from the Lenovo XClarity Administrator, begin with the Lenovo XClarity Administrator event log.
- If you are using some other management application, begin with the Lenovo XClarity Controller event log.

The event log contains server hardware events that are recorded by the Lenovo XClarity Controller or by UEFI. In addition, events can be generated when you perform diagnostic testing on hard drives or memory through the Lenovo XClarity Provisioning Manager (although these events are not stored in the event log).

Use this section to view the events that can be generated by Lenovo XClarity Controller, UEFI, or the Lenovo XClarity Provisioning Manager. For each event, a user action is available to help you understand what must be done to resolve the issue.

Important:

- The system supports Lenovo XClarity Controller 2 (XCC2). For additional information about Lenovo XClarity Controller 2 (XCC2), refer to <https://pubs.lenovo.com/lxcc-overview/>.
- Lenovo XClarity Provisioning Manager (LXPM) supported version varies by product. All versions of Lenovo XClarity Provisioning Manager are referred to as Lenovo XClarity Provisioning Manager and LXPM in this document, unless specified otherwise. To see the LXPM version supported by your server, go to <https://pubs.lenovo.com/lxpm-overview/>.

Event and alert message format

You can use the following content to help you understand the event and alert message format.

The following information is provided for each event message.

Event identifier

A string that uniquely identifies the event or class of events. This is a 12 character string in the following format:

FQXppnnxxxxc

where:

- *pp* indicates the product where the event originate, as follows.
 - **CM**. Chassis Management.
 - **HM**. Hardware manager.
 - **PM**. XClarity Provisioning manger - LXPM (LEPT).
 - **SF**. System Firmware.
 - **SP**. Service Processor.
- *nn* identifies the component or system management where the event originated, as follows:

Components

- **AA**. Canister/Appliance - Contains system components not expected to be serviced by a customer.
- **CA**. Cooling - Fans, blowers, mux cards, policies, chillers/refrigeration, water management units, water pumps, water filtration, air flow sensors, thermal monitors.

- **DA.** Display - Graphics adapters, op panel, monitor/console (including front/back panel, control panel, LCD panel etc).
- **IO.** I/O connectivity - PCI/USB hub, bridge, bus, risers, configuration settings, interconnect, keyboard, mouse, KVM.
- **MA.** Memory - Includes DIMMs, memory card, configuration settings, memory controller, redundant modes (mirroring, spare, etc), RAID memory, NVRAM, EPROM.
- **PU.** Processing - Involves the processor, processor cards and system board, configuration settings, and microcode, cache, Trusted Computing Module, processor interconnect (QPI cables).
- **PW.** Power - Can be power supplies, VRMs, VRDs, voltage levels, system power state, policies, batteries, AT power width, TPMD, power controllers, external power, Battery Backup Unit (UPS), PDUs.
- **SB.** System Board - Main system board, associated risers, system planar, mid-planes, backplanes, interconnects.
- **SD.** Client Data Storage Device - Flash storage adapters, drives, cd/dvd drives, SSD, SAS, DASD, Flash storage, tape, volumes, remoteCopy, flashCopy, managed Storage Systems.
- **SR.** Storage RAID - Adapters, configuration, settings, interconnect, arrays, drive enclosures.
- **VD.** VPD - Configuration settings, EPROMs, communication.

Systems Management - FSM, PSM, HMC, FDMC UEFI, CMM, IOMC, CCE, PMC, DPSM, SVC, management of storage, services, IMM, FSP, systems management networking.

- **BR.** Systems Management - Backup/Restore & Failover (HA).
- **BT.** System management - Boot, reboot, hard/warm reset, shutdown.
- **CL.** LEPT Clone.
- **CN.** Systems Management - Console.
- **CP.** Systems Management - Config Patterns.
- **CR.** Systems Management - Core / Virtual Appliance.
- **DD.** Device Driver - AIX, IBM I, Subsystem Device Driver (SDD), IPMI Service.
- **DM.** Systems Management - Data Management.
- **EA.** Vendor Events.
- **EM.** Events Monitoring - LEPT Dash Board.
- **EM.** Systems Management - Events / Monitoring.
- **FC.** Systems Management - FlexCat OS/Config deployment.
- **FW.** System management - Firmware.
- **HA.** Hypervisor - Virtual Components, Boots, Crashes, SRIOV, LPARs.
- **IF.** Interconnect (Fabric) - common, podm, icm, Irim (SWFW major, various minors & functions).
- **II.** Interconnect (Interfaces) - cimp, smis, cli, mapi (SCFG major).
- **IM.** Interconnect (PCI Manager) - pcim (SWFW major, various minors and functions).
- **IN.** Interconnect (Networking) - bos, ethm, fcf, npiv (FCF major plus SWFW major, various minors & functions) data network, network settings, ports, security, adapters, switches, fiber channel, optical ports, Ethernet.
- **IP.** Interconnect (PIE) - tbd.
- **IU.** Interconnect (Utilities / Infrastructure) - util, infr, serv, isds (IBIS major), remote copy (storage).
- **NM.** Network Management - LEPT Welcompage.
- **NM.** Systems Management - Network Management.
- **OH.** OS/Hypervisor Interface - Passing of error logs, partition management, services (time, etc).
- **OS.** LEPT OS Deploy.
- **OS.** OS - Power Linux, AIX IPL, AIX, crash and dump codes, IBM i kernal code, IBM i OS, management of storage.
- **PR.** System management - Entity presence.
- **RC.** Systems Management - Remote Control.
- **SD.** LEPT Storage Test.
- **SE.** Systems Management - Security.
- **SR.** LEPT Raid Setup.
- **SS.** Service & Support - LEPT FFDC Collection.
- **SS.** Systems Management - Service & Support.

- **TR.** Time Reference - RTC, Master clock, drawer clocks, NTP.
- **UN.** Unknown/any entity.
- **UP.** LEPT Firmware Update.
- **UP.** Systems Management - Updates.
- **WD.** System management - Watchdog.
- **xxxx** is an incrementing number of the Sub-System events set.
- **c** identifies the severity, as follows.
 - **A.** Reserved as Immediate Action.
 - **B.** Unknown / No action.
 - **D.** Reserved - Immediate Decision.
 - **E.** Reserved - Eventual Action.
 - **F.** Warning / No Action.
 - **G.** Warning / Deferred Action.
 - **H.** Minor / Deferred Action.
 - **I.** Information / No Action.
 - **J.** Minor / Immediate Action.
 - **K.** Major / Deferred Action.
 - **L.** Major / Immediate Action.
 - **M.** Critical / Immediate Action.
 - **N.** Fatal / Immediate Action.
 - **W.** Reserved - System Wait.

Chapter 2. XClarity Controller events

When a hardware event is detected by the Lenovo XClarity Controller on the server, the Lenovo XClarity Controller writes that event in the system-event log on the server.

Notes: Event identifier (ID) is a unique identifier used to search for XCC events. The event message may have one or more arguments, which could be replaceable text of FRU name or sensor name to identify the failed component. So one XCC event ID could represent a generic event or similar faults that happened on different hardware components. The general way of problem determination is to locate the event by ID, identify the hardware component by message argument if it contains hardware component name, and then perform actions defined in User Action.

Example:

FQXSPCA0017M: Sensor [SensorElementName] has transitioned to critical from a less severe state where:

- FQXSPCA0017M is the event ID.
- *[SensorElementName]* is a sensor variable, indicating the name of hardware component. It can be CPU, PCI adapter, OCP card or chipset. You can find the event by the event ID FQXSPCA0017M and perform actions defined in User Action for the component.

For additional information about the Lenovo XClarity Controller event log, see “Viewing Event Logs” section in the XCC documentation compatible with your server at <https://pubs.lenovo.com/lxcc-overview/>.

For each event code, the following fields are displayed:

Event identifier

An identifier that uniquely identifies an event.

Event description

The logged message string that appears for an event. When the event string is displayed in the event log, information such as a specific component is displayed. In this documentation, that additional information appears as variables, which include but not limited to the following:

- *[SensorElementName]*, *[ManagedElementName]*, *[ProcessorElementName]*, *[ComputerSystemElementName]*, *[PowerSupplyElementName]*, ...
- *[arg1]*, *[arg2]*, *[arg3]*, *[arg4]*, *[arg5]*...

Explanation

Provides additional information to explain why the event occurred.

Severity

An indication of the level of concern for the condition. The following severities can be displayed.

- **Informational.** The event was recorded for audit purposes, usually a user action or a change of states that is normal behavior.
- **Warning.** The event is not as severe as an error, but if possible, the condition should be corrected before it becomes an error. It might also be a condition that requires additional monitoring or maintenance.
- **Error.** The event is a failure or critical condition that impairs service or an expected function.

Alert Category

Similar events are grouped together in categories. The alert category is in the following format: *severity - device*, where:

- *severity* is one of the following severity levels:
 - **Critical.** A key component in the server is no longer functioning.
 - **Warning.** The event might progress to a critical level.
 - **System.** The event is the result of a system error or a configuration change.
- *device* is the specific device in the server that caused the event to be generated.

Serviceable

Specifies whether user action is required to correct the problem.

CIM Information

Provides the prefix of the message ID and the sequence number that is used by the CIM message registry.

SNMP Trap ID

The SNMP trap ID that is found in the SNMP alert management information base (MIB).

Automatically contact Service

You can configure the Lenovo XClarity Administrator to automatically notify Support (also known as call home) if certain types of errors are encountered. If you have configured this function and this field is set to Yes, Lenovo Support will be notified automatically if the event is generated. While you wait for Lenovo Support to call, you can perform the recommended actions for the event.

Note: This documentation includes references to IBM web sites, products, and information about obtaining service. IBM is Lenovo's preferred service provider for the Lenovo server products.

For more information about enabling Call Home from Lenovo XClarity Administrator, see https://pubs.lenovo.com/lxca/admin_setupcallhome. In addition, see “XCC events that automatically notify Support” on page 6 for a consolidated list of all Lenovo XClarity Controller events that are called home to Lenovo Support.

User Action

Indicates what actions you should perform to solve the event. Perform the steps listed in this section in the order shown until the problem is solved. If you cannot solve the problem after performing all steps, contact Lenovo Support.

XCC events that automatically notify Support

You can configure the XClarity Administrator to automatically notify Support (also known as *call home*) if certain types of errors are encountered. If you have configured this function, see the table for a list of events that automatically notify Support.

Table 1. Events that automatically notify Support

Event ID	Message String
FQXSPEM0008N	The System [ComputerSystemElementName] has encountered a system hardware fault.
FQXSPEM4014I	The RAID controller has problem with the battery. Please contact technical support to resolve this issue.([arg1],[arg2],[arg3],[arg4],[arg5])
FQXSPEM4015I	The RAID controller detected unrecoverable error. The controller needs replacement.([arg1],[arg2],[arg3],[arg4],[arg5])
FQXSPEM4025I	One or more virtual drive have problem. Please contact technical support to resolve this issue.([arg1],[arg2],[arg3],[arg4],[arg5])
FQXSPEM4026I	Drive error was detected by RAID controller. Please contact technical support to resolve this issue.([arg1],[arg2],[arg3],[arg4],[arg5])

Table 1. Events that automatically notify Support (continued)

Event ID	Message String
FQXSPIO0001L	The connector [PhysicalConnectorElementName] has encountered a configuration error.
FQXSPIO0011N	An Uncorrectable Error has occurred on [SensorElementName].
FQXSPIO0015M	Fault in slot [PhysicalConnectorSystemElementName] on system [ComputerSystemElementName].
FQXSPPW0002L	Power supply [arg1] in the enclosure (MTM-SN: [arg2])has failed.
FQXSPPW0003L	Power supply [arg1] in the enclosure (MTM-SN: [arg2])has failed.
FQXSPPW0013L	[PowerSupplyElementName] has Failed.
FQXSPPW0035M	Numeric sensor [NumericSensorElementName] going low (lower critical) has asserted.
FQXSPPW0047M	Numeric sensor [NumericSensorElementName] going high (upper critical) has asserted.
FQXSPSD0001L	Drive [arg1] in the enclosure(MTM-SN: [arg2]) has been disabled due to a detected fault.
FQXSPSD0002G	Failure Predicted on drive [arg1] in the enclosure (MTM-SN: [arg2]).
FQXSPSD0002L	Drive [arg1] in the enclosure(MTM-SN: [arg2]) has been disabled due to a detected fault.
FQXSPSD0003G	Failure Predicted on drive [arg1] in the enclosure (MTM-SN: [arg2]).
FQXSPSD0006L	Array failed on drive [arg1] in the enclosure (MTM-S/N: [arg2]).
FQXSPSD0008L	Array failed on drive [arg1] in the enclosure (MTM-S/N: [arg2]).
FQXSPSS4004I	Test Call Home Generated by user [arg1].
FQXSPSS4005I	Manual Call Home by user [arg1]: [arg2].

XCC events organized by severity

The following table lists all XCC events, organized by severity (Information, Error, and Warning).

Table 2. Events organized by severity

Event ID	Message String	Severity
FQXSPBR4000I	Management Controller [arg1]: Configuration restored from a file by user [arg2] from [arg3] at IP address [arg4].	Informational
FQXSPBR4002I	Management Controller [arg1] Reset was caused by restoring default values.	Informational
FQXSPBR4004I	Server timeouts set by user [arg1]: EnableOSWatchdog=[arg2], OSWatchdogTimeout=[arg3], EnableLoaderWatchdog=[arg4], LoaderTimeout=[arg5].	Informational
FQXSPBR4005I	Management Controller [arg1]: Configuration saved to a file by user [arg2].	Informational
FQXSPBR4006I	Management Controller [arg1]: Configuration restoration from a file by user [arg2] completed from [arg3] at IP address [arg4].	Informational

Table 2. Events organized by severity (continued)

Event ID	Message String	Severity
FQXSPBR4009I	Management Controller [arg1]: cloning configuration from neighbor server [arg2] by group name [arg3].	Informational
FQXSPBR400AI	Management Controller [arg1]: cloning configuration from neighbor server [arg2] by group name [arg3] completed.	Informational
FQXSPBR400BI	Management Controller [arg1]: cloning configuration from neighbor server [arg2] by group name [arg3] failed to complete.	Informational
FQXSPBR400CI	Management Controller [arg1]: cloning configuration from neighbor server [arg2] by group name [arg3] failed to start.	Informational
FQXSPBR400DI	Neighbor group clone configuration was initiated by user [arg1].	Informational
FQXSPBR400EI	Neighbor group firmware update was initiated by user [arg1].	Informational
FQXSPBR400FI	The neighbor group management is [arg1] by user [arg2] from [arg3] at IP address [arg4].	Informational
FQXSPBT0007I	No bootable media available for system [ComputerSystemElementName].	Informational
FQXSPCA2002I	Numeric sensor [NumericSensorElementName] going low (lower critical) has deasserted.	Informational
FQXSPCA2007I	Numeric sensor [NumericSensorElementName] going high (upper non-critical) has deasserted.	Informational
FQXSPCA2009I	Numeric sensor [NumericSensorElementName] going high (upper critical) has deasserted.	Informational
FQXSPCA2011I	Numeric sensor [NumericSensorElementName] going high (upper non-recoverable) has deasserted.	Informational
FQXSPCA2017I	Sensor [SensorElementName] has transitioned to a less severe state from critical.	Informational
FQXSPCA2019I	Sensor [SensorElementName] has deasserted the transition to non-recoverable from a less severe state.	Informational
FQXSPCN4000I	Serial Redirection set by user [arg1]: Mode=[arg2], BaudRate=[arg3], StopBits=[arg4], Parity=[arg5], SessionTerminateSequence=[arg6].	Informational
FQXSPCN4001I	Remote Control session started by user [arg1] in [arg2] mode.	Informational
FQXSPCN4002I	User [arg1] has terminated an active CLI console session.	Informational
FQXSPCN4003I	Remote Control session started by user [arg1] in [arg2] mode has been closed.	Informational
FQXSPCN4004I	User [arg1] has created an active [arg2] console session.	Informational
FQXSPCN4005I	A [arg1] console session is timeout.	Informational
FQXSPCN4006I	User [arg1] has terminated an active IPMI console session.	Informational
FQXSPCR2001I	Sensor [SensorElementName] has deasserted the transition to non-recoverable from a less severe state.	Informational
FQXSPDM4000I	Inventory data changed for device [arg1], new device data hash=[arg2], new master data hash=[arg3] .	Informational
FQXSPDM4001I	Storage [arg1] has changed.	Informational

Table 2. Events organized by severity (continued)

Event ID	Message String	Severity
FQXSPDM4003I	TKLM servers set by user [arg1]: TKLMServer1=[arg2] Port=[arg3], TKLMServer2=[arg4] Port=[arg5], TKLMServer3=[arg6] Port=[arg7], TKLMServer4=[arg8] Port=[arg9].	Informational
FQXSPDM4004I	TKLM servers device group set by user [arg1]: TKLMServerDeviceGroup=[arg2] .	Informational
FQXSPDM4005I	User [arg1] has generated a new encryption key pair and installed a self-signed certificate for the TKLM client.	Informational
FQXSPDM4006I	User [arg1] has generated a new encryption key and certificate signing request for the TKLM client.	Informational
FQXSPDM4007I	User [arg1] has imported a signed certificate for the TKLM client from [arg2].	Informational
FQXSPDM4008I	User [arg1] has imported a server certificate for the TKLM server.	Informational
FQXSPDM4009I	User [arg1] has [arg2] file [arg3] from [arg4].	Informational
FQXSPDM4010I	Inventory data collecting and processing complete for [arg1], sequence number is [arg2].	Informational
FQXSPDM4011I	EKMS server protocol set by user [arg1]: TKLMServerProtocol=[arg2] .	Informational
FQXSPEA2001I	Sensor [SensorElementName] has deasserted the transition from normal to non-critical state.	Informational
FQXSPEA2002I	Sensor [SensorElementName] has transitioned to a less severe state from critical.	Informational
FQXSPEM0003I	The Log [RecordLogElementName] has been cleared.	Informational
FQXSPEM0004I	The Log [RecordLogElementName] is full.	Informational
FQXSPEM0005I	The Log [RecordLogElementName] is almost full.	Informational
FQXSPEM0009I	The System [ComputerSystemElementName] has generated an auxiliary Log Entry in Log [RecordLogElement].	Informational
FQXSPEM4000I	The [arg1] on system [arg2] cleared by user [arg3].	Informational
FQXSPEM4001I	The [arg1] on system [arg2] is 75% full.	Informational
FQXSPEM4002I	The [arg1] on system [arg2] is 100% full.	Informational
FQXSPEM4003I	LED [arg1] state changed to [arg2] by [arg3].	Informational
FQXSPEM4004I	SNMP [arg1] enabled by user [arg2] .	Informational
FQXSPEM4005I	SNMP [arg1] disabled by user [arg2] .	Informational
FQXSPEM4006I	Alert Configuration Global Event Notification set by user [arg1]: RetryLimit=[arg2], RetryInterval=[arg3], EntryInterval=[arg4].	Informational
FQXSPEM4007I	Alert Recipient Number [arg1] updated: Name=[arg2], DeliveryMethod=[arg3], Address=[arg4], IncludeLog=[arg5], Enabled=[arg6], EnabledAlerts=[arg7], AllowedFilters=[arg8] by user [arg9] from [arg10] at IP address [arg11].	Informational
FQXSPEM4008I	SNMP Traps enabled by user [arg1]: EnabledAlerts=[arg2], AllowedFilters=[arg3] .	Informational

Table 2. Events organized by severity (continued)

Event ID	Message String	Severity
FQXSPPEM4009I	The UEFI Definitions have been changed.	Informational
FQXSPPEM4010I	UEFI Reported: [arg1].	Informational
FQXSPPEM4011I	XCC failed to log previous event [arg1].	Informational
FQXSPPEM4012I	User [arg1] made system [arg2] Encapsulation lite Mode.	Informational
FQXSPPEM4013I	Battery error was detected by RAID controller. The battery unit needs replacement.([arg1],[arg2],[arg3],[arg4],[arg5])	Informational
FQXSPPEM4014I	The RAID controller has problem with the battery. Please contact technical support to resolve this issue.([arg1],[arg2],[arg3],[arg4],[arg5])	Informational
FQXSPPEM4015I	The RAID controller detected unrecoverable error. The controller needs replacement.([arg1],[arg2],[arg3],[arg4],[arg5])	Informational
FQXSPPEM4016I	The RAID controller detected one or more problems. Please contact technical support for additional assistance.([arg1],[arg2],[arg3],[arg4],[arg5])	Informational
FQXSPPEM4017I	The RAID controller detected one or more possible configuration changes within the subsystem. Please check the drive LED status. If necessary, contact technical support for additional assistance.([arg1],[arg2],[arg3],[arg4],[arg5])	Informational
FQXSPPEM4018I	Enclosure/Chassis issue detected with one or more units. Please check the enclosure/chassis units to repair the problem.([arg1],[arg2],[arg3],[arg4],[arg5])	Informational
FQXSPPEM4019I	Connectivity issue detected with the enclosure/chassis. Please check your cable configurations to repair the problem.([arg1],[arg2],[arg3],[arg4],[arg5])	Informational
FQXSPPEM4020I	Fan problem detected with the enclosure/chassis. Please check the enclosure/chassis unit fan for correct operation.([arg1],[arg2],[arg3],[arg4],[arg5])	Informational
FQXSPPEM4022I	Enclosure/Chassis power supply has problem. Please check the enclosure/chassis unit power supply for correct operation.([arg1],[arg2],[arg3],[arg4],[arg5])	Informational
FQXSPPEM4023I	One or more virtual drive are in abnormal status that may cause unavailable virtual drive. Please check the event logs and if events are targeted to the same disk then replace the drive. If necessary, contact technical support for additional assistance.([arg1],[arg2],[arg3],[arg4],[arg5])	Informational
FQXSPPEM4024I	The RAID controller detected one or more possible configuration problem within the subsystem. Please check the event logs and if events are targeted to the same disk then replace the drive. If necessary, contact technical support for additional assistance.([arg1],[arg2],[arg3],[arg4],[arg5])	Informational
FQXSPPEM4025I	One or more virtual drive have problem. Please contact technical support to resolve this issue.([arg1],[arg2],[arg3],[arg4],[arg5])	Informational
FQXSPPEM4026I	Drive error was detected by RAID controller. Please contact technical support to resolve this issue.([arg1],[arg2],[arg3],[arg4],[arg5])	Informational

Table 2. Events organized by severity (continued)

Event ID	Message String	Severity
FQXSPPEM4027I	Drive error was detected by RAID controller. Please check the event logs and if events are targeted to the same disk then replace the drive. If necessary, contact technical support for additional assistance. ([arg1],[arg2],[arg3],[arg4],[arg5])	Informational
FQXSPPEM4028I	The port [arg1] of PCIe device [arg2] at [arg3] has link [arg4].	Informational
FQXSPPEM4029I	All PCIe slots on [arg1] may not be functional based upon your current CPU population.	Informational
FQXSPPEM4030I	A scheduled operation on the RAID controller has encountered an issue. Refer to RAID Logs under Server Management, Local Storage, for details.([arg1],[arg2],[arg3],[arg4],[arg5])	Informational
FQXSPPEM4031I	SSD wear threshold setting is changed from [arg1] to [arg2] by user [arg3] from [arg4] at IP address [arg5].	Informational
FQXSPPEM4032I	Acoustic Mode [arg1] has been engaged. Fan speed limits are in place.	Informational
FQXSPPEM4033I	Acoustic Mode [arg1] has been disengaged to allow adequate cooling.	Informational
FQXSPPEM4036I	Dust filter measurement schedule is configured on server [arg1] by user [arg2] from [arg3] at IP address [arg4].	Informational
FQXSPPEM4037I	Attempting to perform scheduled dust filter measurement on server [arg1].	Informational
FQXSPPEM4038I	Dust filter measurement schedule is disabled on server [arg1] by user [arg2] from [arg3] at IP address [arg4].	Informational
FQXSPPEM4039I	Attempting to perform an immediate dust filter measurement on server [arg1] by user [arg2] from [arg3] at IP address [arg4].	Informational
FQXSPPEM4041I	The SmartNIC in slot [arg1] encountered boot timeout.	Informational
FQXSPPEM4042I	The SmartNIC in slot [arg1] went through a crash dump.	Informational
FQXSPPEM4044I	Dust filter measurement was successfully completed, no action is needed.	Informational
FQXSPFC4000I	The bare metal connection process has been started.	Informational
FQXSPFC4001I	The bare metal update application reports a status of [arg1].	Informational
FQXSPFC4002I	System running in setup.	Informational
FQXSPFC4003I	UEFI deployment boot mode is enabled for NextBoot.	Informational
FQXSPFC4004I	UEFI deployment boot mode is enabled for NextAc.	Informational
FQXSPFC4005I	UEFI deployment boot mode has been disabled.	Informational
FQXSPFW0003I	The System [ComputerSystemElementName] encountered firmware progress.	Informational
FQXSPIO0010I	A Correctable Bus Error has occurred on bus [SensorElementName].	Informational
FQXSPIO2003I	System [ComputerSystemElementName] has recovered from a diagnostic interrupt.	Informational
FQXSPIO2004I	Bus [SensorElementName] has recovered from a bus timeout.	Informational

Table 2. Events organized by severity (continued)

Event ID	Message String	Severity
FQXSPPIO2006I	System [ComputerSystemElementName] has recovered from an NMI.	Informational
FQXSPPIO2007I	A PCI PERR recovery has occurred on system [ComputerSystemElementName].	Informational
FQXSPPIO2008I	A PCI SERR on system [ComputerSystemElementName] has deasserted.	Informational
FQXSPPIO2010I	Bus [SensorElementName] has recovered from a Correctable Bus Error.	Informational
FQXSPPIO4002I	GPU Board Status was recovered by [arg1] of [arg1].	Informational
FQXSPMA0001I	Error Detected and Corrected for [PhysicalMemoryElementName] on Subsystem [MemoryElementName].	Informational
FQXSPMA0022I	Post Package Repair Success for [PhysicalMemoryElementName] on Subsystem [MemoryElementName].	Informational
FQXSPMA0023I	Post Package Repair Failure for [PhysicalMemoryElementName] on Subsystem [MemoryElementName].	Informational
FQXSPMA0025I	Sensor [SensorElementName] has asserted.	Informational
FQXSPMA2007I	Scrub Failure for [PhysicalMemoryElementName] on Subsystem [MemoryElementName] has recovered.	Informational
FQXSPMA2010I	[PhysicalMemoryElementName] on Subsystem [MemoryElementName] is no longer Throttled.	Informational
FQXSPMA2012I	An Over-Temperature Condition has been removed on the [PhysicalMemoryElementName] on Subsystem [MemoryElementName].	Informational
FQXSPMA2024I	Sensor [SensorElementName] has deasserted.	Informational
FQXSPNM4000I	Management Controller [arg1] Network Initialization Complete.	Informational
FQXSPNM4001I	Ethernet Data Rate modified from [arg1] to [arg2] by user [arg3].	Informational
FQXSPNM4002I	Ethernet Duplex setting modified from [arg1] to [arg2] by user [arg3].	Informational
FQXSPNM4003I	Ethernet MTU setting modified from [arg1] to [arg2] by user [arg3].	Informational
FQXSPNM4004I	Ethernet locally administered MAC address modified from [arg1] to [arg2] by user [arg3].	Informational
FQXSPNM4005I	Ethernet interface [arg1] by user [arg2].	Informational
FQXSPNM4006I	Hostname set to [arg1] by user [arg2].	Informational
FQXSPNM4007I	IP address of network interface modified from [arg1] to [arg2] by user [arg3].	Informational
FQXSPNM4008I	IP subnet mask of network interface modified from [arg1] to [arg2] by user [arg3].	Informational
FQXSPNM4009I	IP address of default gateway modified from [arg1] to [arg2] by user [arg3].	Informational
FQXSPNM4011I	ENET[[arg1]] DHCP-HSTN=[arg2], DN=[arg3], IP@[arg4], SN=[arg5], GW@[arg6], DNS1@[arg7] .	Informational
FQXSPNM4012I	ENET[[arg1]] IP-Cfg:HstName=[arg2], IP@[arg3] ,NetMsk=[arg4], GW@[arg5] .	Informational

Table 2. Events organized by severity (continued)

Event ID	Message String	Severity
FQXSPNM4013I	LAN: Ethernet[[arg1]] interface is no longer active.	Informational
FQXSPNM4014I	LAN: Ethernet[[arg1]] interface is now active.	Informational
FQXSPNM4015I	DHCP setting changed to [arg1] by user [arg2].	Informational
FQXSPNM4016I	Domain name set to [arg1] by user [arg2].	Informational
FQXSPNM4017I	Domain Source changed to [arg1] by user [arg2].	Informational
FQXSPNM4018I	DDNS setting changed to [arg1] by user [arg2].	Informational
FQXSPNM4019I	DDNS registration successful. The domain name is [arg1].	Informational
FQXSPNM4020I	IPv6 enabled by user [arg1] .	Informational
FQXSPNM4021I	IPv6 disabled by user [arg1] .	Informational
FQXSPNM4022I	IPv6 static IP configuration enabled by user [arg1].	Informational
FQXSPNM4023I	IPv6 DHCP enabled by user [arg1].	Informational
FQXSPNM4024I	IPv6 stateless auto-configuration enabled by user [arg1].	Informational
FQXSPNM4025I	IPv6 static IP configuration disabled by user [arg1].	Informational
FQXSPNM4026I	IPv6 DHCP disabled by user [arg1].	Informational
FQXSPNM4027I	IPv6 stateless auto-configuration disabled by user [arg1].	Informational
FQXSPNM4028I	ENET[[arg1]] IPv6-LinkLocal:HstName=[arg2], IP@=[arg3] ,Pref=[arg4].	Informational
FQXSPNM4029I	ENET[[arg1]] IPv6-Static:HstName=[arg2], IP@=[arg3] ,Pref=[arg4], GW@=[arg5] .	Informational
FQXSPNM4030I	ENET[[arg1]] DHCPv6-HSTN=[arg2], DN=[arg3], IP@=[arg4], Pref=[arg5], DNS1@=[arg5].	Informational
FQXSPNM4031I	IPv6 static address of network interface modified from [arg1] to [arg2] by user [arg3].	Informational
FQXSPNM4033I	Telnet port number changed from [arg1] to [arg2] by user [arg3].	Informational
FQXSPNM4034I	SSH port number changed from [arg1] to [arg2] by user [arg3].	Informational
FQXSPNM4035I	Web-HTTP port number changed from [arg1] to [arg2] by user [arg3].	Informational
FQXSPNM4036I	Web-HTTPS port number changed from [arg1] to [arg2] by user [arg3].	Informational
FQXSPNM4037I	CIM/XML HTTP port number changed from [arg1] to [arg2] by user [arg3].	Informational
FQXSPNM4038I	CIM/XML HTTPS port number changed from [arg1] to [arg2] by user [arg3].	Informational
FQXSPNM4039I	SNMP Agent port number changed from [arg1] to [arg2] by user [arg3].	Informational
FQXSPNM4040I	SNMP Traps port number changed from [arg1] to [arg2] by user [arg3].	Informational
FQXSPNM4041I	Syslog port number changed from [arg1] to [arg2] by user [arg3].	Informational
FQXSPNM4042I	Remote Presence port number changed from [arg1] to [arg2] by user [arg3].	Informational

Table 2. Events organized by severity (continued)

Event ID	Message String	Severity
FQXSPNM4043I	SMTP Server set by user [arg1] to [arg2]:[arg3].	Informational
FQXSPNM4044I	Telnet [arg1] by user [arg2].	Informational
FQXSPNM4045I	DNS servers set by user [arg1]: UseAdditionalServers=[arg2], PreferredDNStype=[arg3], IPv4Server1=[arg4], IPv4Server2=[arg5], IPv4Server3=[arg6], IPv6Server1=[arg7], IPv6Server2=[arg8], IPv6Server3=[arg9].	Informational
FQXSPNM4046I	LAN over USB [arg1] by user [arg2].	Informational
FQXSPNM4047I	LAN over USB Port Forwarding set by user [arg1]: ExternalPort=[arg2], USB-LAN port=[arg3].	Informational
FQXSPNM4048I	PXE boot requested by user [arg1].	Informational
FQXSPNM4049I	User [arg1] has initiated a TKLM Server Connection Test to check connectivity to server [arg2].	Informational
FQXSPNM4050I	User [arg1] has initiated an SMTP Server Connection Test.	Informational
FQXSPNM4051I	User [arg1] has set the SMTP Server reverse-path to [arg2].	Informational
FQXSPNM4052I	DHCP specified hostname is set to [arg1] by user [arg2].	Informational
FQXSPNM4053I	DNS discovery of Lenovo XClarity Administrator has been [arg1] by user [arg2].	Informational
FQXSPNM4054I	The hostname from DHCP is [arg1] by user [arg2].	Informational
FQXSPNM4055I	The hostname from DHCP is invalid.	Informational
FQXSPNM4056I	The NTP server address [arg1] is invalid.	Informational
FQXSPNM4057I	Security: IP address: [arg1] had [arg2] login failures, it will be blocked to access for [arg3] minutes.	Informational
FQXSPNM4058I	IP address of network interface [arg1] is modified from [arg2] to [arg3] by user [arg4].	Informational
FQXSPNM4059I	IP subnet mask of network interface [arg1] is modified from [arg2] to [arg3] by user [arg4].	Informational
FQXSPNM4060I	IP address of default gateway of network interface [arg1] is modified from [arg2] to [arg3] by user [arg4].	Informational
FQXSPOS4000I	OS Watchdog response [arg1] by [arg2] .	Informational
FQXSPOS4001I	Watchdog [arg1] Screen Capture Occurred .	Informational
FQXSPOS4004I	Operating System status has changed to [arg1].	Informational
FQXSPOS4005I	Host Power-On password changed by user [arg1] from [arg2] at IP address [arg3].	Informational
FQXSPOS4006I	Host Power-On password cleared by user [arg1] from [arg2] at IP address [arg3].	Informational
FQXSPOS4007I	Host Admin password changed by user [arg1] from [arg2] at IP address [arg3].	Informational
FQXSPOS4008I	Host Admin password cleared by user [arg1] from [arg2] at IP address [arg3].	Informational

Table 2. Events organized by severity (continued)

Event ID	Message String	Severity
FQXSPOS4009I	OS Crash Video Captured.	Informational
FQXSPOS4011I	OS failure screen capture with hardware error is [arg1] by user [arg2] from [arg3] at IP address [arg4].	Informational
FQXSPOS4012I	POST watchdog Screen Capture Occurred.	Informational
FQXSPPP4000I	Attempting to [arg1] server [arg2] by user [arg3].	Informational
FQXSPPP4001I	Server Power Off Delay set to [arg1] by user [arg2].	Informational
FQXSPPP4002I	Server [arg1] scheduled for [arg2] at [arg3] by user [arg4].	Informational
FQXSPPP4003I	Server [arg1] scheduled for every [arg2] at [arg3] by user [arg4].	Informational
FQXSPPP4004I	Server [arg1] [arg2] cleared by user [arg3].	Informational
FQXSPPP4005I	The power cap value changed from [arg1] watts to [arg2] watts by user [arg3].	Informational
FQXSPPP4006I	The minimum power cap value changed from [arg1] watts to [arg2] watts.	Informational
FQXSPPP4007I	The maximum power cap value changed from [arg1] watts to [arg2] watts.	Informational
FQXSPPP4008I	The soft minimum power cap value changed from [arg1] watts to [arg2] watts.	Informational
FQXSPPP4011I	Power capping was activated by user [arg1].	Informational
FQXSPPP4012I	Power capping was deactivated by user [arg1].	Informational
FQXSPPP4013I	Static Power Savings mode has been turned on by user [arg1].	Informational
FQXSPPP4014I	Static Power Savings mode has been turned off by user [arg1].	Informational
FQXSPPP4015I	Dynamic Power Savings mode has been turned on by user [arg1].	Informational
FQXSPPP4016I	Dynamic Power Savings mode has been turned off by user [arg1].	Informational
FQXSPPP4017I	Power cap and external throttling occurred.	Informational
FQXSPPP4018I	External throttling occurred .	Informational
FQXSPPP4019I	Power cap throttling occurred.	Informational
FQXSPPP4020I	The measured power value has returned below the power cap value.	Informational
FQXSPPP4021I	The new minimum power cap value has returned below the power cap value.	Informational
FQXSPPP4022I	The server was restarted for an unknown reason.	Informational
FQXSPPP4023I	The server is restarted by chassis control command.	Informational
FQXSPPP4024I	The server was reset via push button.	Informational
FQXSPPP4025I	The server was powered-up via power push button.	Informational
FQXSPPP4026I	The server was restarted when the watchdog expired..	Informational
FQXSPPP4027I	The server was restarted for OEM reason.	Informational
FQXSPPP4028I	The server was automatically powered on because the power restore policy is set to always on.	Informational

Table 2. Events organized by severity (continued)

Event ID	Message String	Severity
FQXSPPP4029I	The server was automatically powered on because the power restore policy is set to restore previous power state..	Informational
FQXSPPP4030I	The server was reset via Platform Event Filter.	Informational
FQXSPPP4031I	The server was power-cycled via Platform Event Filter.	Informational
FQXSPPP4032I	The server was soft reset.	Informational
FQXSPPP4033I	The server was powered up via Real Time Clock (scheduled power on).	Informational
FQXSPPP4034I	The server was powered off for an unknown reason.	Informational
FQXSPPP4035I	The server was powered off by chassis control command.	Informational
FQXSPPP4036I	The server was powered off via push button.	Informational
FQXSPPP4037I	The server was powered off when the watchdog expired.	Informational
FQXSPPP4038I	The server stayed powered off because the power restore policy is set to always off.	Informational
FQXSPPP4039I	The server stayed powered off because the power restore policy is set to restore previous power state..	Informational
FQXSPPP4040I	The server was powered off via Platform Event Filter.	Informational
FQXSPPP4041I	The server was powered off via Real Time Clock (scheduled power off).	Informational
FQXSPPP4042I	Management Controller [arg1] reset was initiated due to Power-On-Reset.	Informational
FQXSPPP4043I	Management Controller [arg1] reset was initiated by PRESET.	Informational
FQXSPPP4044I	Management Controller [arg1] reset was initiated by CMM.	Informational
FQXSPPP4045I	Management Controller [arg1] reset was initiated by XCC firmware.	Informational
FQXSPPP4046I	Remote power permission is [arg1].	Informational
FQXSPPP4047I	Management Controller [arg1] reset was initiated by user [arg2].	Informational
FQXSPPP4048I	Attempting to AC power cycle server [arg1] by user [arg2].	Informational
FQXSPPP4049I	Management Controller [arg1] reset was initiated by Front Panel.	Informational
FQXSPPP4050I	Management Controller [arg1] reset was initiated to activate PFR Firmware.	Informational
FQXSPPP4051I	The programmable GPU total power capping value in slot [arg1] is changed to [arg2] watts by user [arg3] from [arg4] at IP address [arg5].	Informational
FQXSPPP4052I	The programmable GPU peak power capping value in slot [arg1] is changed to [arg2] watts by user [arg3] from [arg4] at IP address [arg5].	Informational
FQXSPPP4053I	This message is reserved.	Informational
FQXSPPP4054I	Unbalanced PSU config is detected, system is using less node PSU capacity.	Informational
FQXSPPU2001I	An Over-Temperature Condition has been removed on [ProcessorElementName].	Informational

Table 2. Events organized by severity (continued)

Event ID	Message String	Severity
FQXSPPU2002I	The Processor [ProcessorElementName] is no longer operating in a Degraded State.	Informational
FQXSPPU2003I	[ProcessorElementName] has Recovered from IERR.	Informational
FQXSPPU2004I	[ProcessorElementName] has Recovered from FRB1/BIST condition.	Informational
FQXSPPW0001I	[PowerSupplyElementName] has been added to container [PhysicalPackageElementName].	Informational
FQXSPPW0005I	[PowerSupplyElementName] is operating in an Input State that is out of range.	Informational
FQXSPPW0008I	[SensorElementName] has been turned off.	Informational
FQXSPPW0009I	[PowerSupplyElementName] has been Power Cycled.	Informational
FQXSPPW2001I	[PowerSupplyElementName] has been removed from container [PhysicalPackageElementName].	Informational
FQXSPPW2002I	[PowerSupplyElementName] has returned to OK status.	Informational
FQXSPPW2003I	Failure no longer predicted on [PowerSupplyElementName].	Informational
FQXSPPW2006I	[PowerSupplyElementName] has returned to a Normal Input State.	Informational
FQXSPPW2007I	[PowerSupplyElementName] Configuration is OK.	Informational
FQXSPPW2008I	[PowerSupplyElementName] has been turned on.	Informational
FQXSPPW2031I	Numeric sensor [NumericSensorElementName] going low (lower non-critical) has deasserted.	Informational
FQXSPPW2035I	Numeric sensor [NumericSensorElementName] going low (lower critical) has deasserted.	Informational
FQXSPPW2057I	Sensor [SensorElementName] has deasserted the transition from normal to non-critical state.	Informational
FQXSPPW2061I	Sensor [SensorElementName] has transitioned to a less severe state from critical.	Informational
FQXSPPW2062I	Sensor [SensorElementName] has transitioned to a less severe state from critical.	Informational
FQXSPPW2063I	Sensor [SensorElementName] has transitioned to a less severe state from critical.	Informational
FQXSPPW4001I	PCIe Power Brake for [arg1] has been [arg2].	Informational
FQXSPPW4003I	The customized total graphics power is within the pre-configured limit.	Informational
FQXSPSD0000I	The [StorageVolumeElementName] has been added.	Informational
FQXSPSD0001I	The [StorageVolumeElementName] Drive [arg1] in the enclosure/chassis(MTM-SN: [arg2]) has been added.	Informational
FQXSPSD0003I	Hot Spare enabled for [ComputerSystemElementName].	Informational
FQXSPSD0005I	Hot Spare enabled for drive [arg1] in the enclosure/chassis (MTM-SN: [arg2]).	Informational
FQXSPSD0007I	Rebuild in progress for Array in system [ComputerSystemElementName].	Informational

Table 2. Events organized by severity (continued)

Event ID	Message String	Severity
FQXSPSD0008I	Array rebuild in progress on drive [arg1] in the enclosure/chassis (MTM-S/N: [arg2]).	Informational
FQXSPSD2000I	The [StorageVolumeElementName] has been removed from unit [PhysicalPackageElementName].	Informational
FQXSPSD2001I	The [StorageVolumeElementName] has recovered from a fault.	Informational
FQXSPSD2002I	Failure no longer Predicted on [StorageVolumeElementName] for array [ComputerSystemElementName].	Informational
FQXSPSD2003I	Hot spare disabled for [ComputerSystemElementName].	Informational
FQXSPSD2005I	Critical Array [ComputerSystemElementName] has deasserted.	Informational
FQXSPSD2006I	Array in system [ComputerSystemElementName] has been restored.	Informational
FQXSPSD2007I	Rebuild completed for Array in system [ComputerSystemElementName].	Informational
FQXSPSD2008I	Drive [arg1] in the enclosure/chassis(MTM-SN: [arg2]) has recovered from a fault.	Informational
FQXSPSD2010I	Drive [arg1] in the enclosure/chassis(MTM-SN: [arg2]) has been removed.	Informational
FQXSPSD2011I	Failure no longer Predicted on drive [arg1] in the enclosure/chassis (MTM-S/N: [arg2]).	Informational
FQXSPSD2012I	Hot Spare disabled for drive [arg1] in the enclosure/chassis (MTM-SN: [arg2]).	Informational
FQXSPSD2013I	Array critical deasserted on drive [arg1] in the enclosure/chassis (MTM-S/N: [arg2]).	Informational
FQXSPSD2014I	Array restored on drive [arg1] in the enclosure/chassis (MTM-S/N: [arg2]).	Informational
FQXSPSD2015I	Array rebuild completed on drive [arg1] in the enclosure/chassis (MTM-S/N: [arg2]).	Informational
FQXSPSE4001I	Remote Login Successful. Login ID: [arg1] using [arg2] from [arg3] at IP address [arg4].	Informational
FQXSPSE4002I	Security: Userid: [arg1] using [arg2] had [arg3] login failures from WEB client at IP address [arg4].	Informational
FQXSPSE4003I	Security: Login ID: [arg1] had [arg2] login failures from CLI at [arg3].	Informational
FQXSPSE4004I	Remote access attempt failed. Invalid userid or password received. Userid is [arg1] from WEB browser at IP address [arg2].	Informational
FQXSPSE4005I	Remote access attempt failed. Invalid userid or password received. Userid is [arg1] from TELNET client at IP address [arg2].	Informational
FQXSPSE4007I	Security: Userid: [arg1] using [arg2] had [arg3] login failures from an SSH client at IP address [arg4].	Informational
FQXSPSE4008I	SNMPv1 [arg1] set by user [arg2]: Name=[arg3], AccessType=[arg4], Address=[arg5], .	Informational
FQXSPSE4009I	LDAP Server configuration set by user [arg1]: SelectionMethod=[arg2], DomainName=[arg3], Server1=[arg4], Server2=[arg5], Server3=[arg6], Server4=[arg7].	Informational

Table 2. Events organized by severity (continued)

Event ID	Message String	Severity
FQXSPSE4010I	LDAP set by user [arg1]: RootDN=[arg2], UIDSearchAttribute=[arg3], BindingMethod=[arg4], EnhancedRBS=[arg5], TargetName=[arg6], GroupFilter=[arg7], GroupAttribute=[arg8], LoginAttribute=[arg9].	Informational
FQXSPSE4011I	Secure Web services (HTTPS) [arg1] by user [arg2].	Informational
FQXSPSE4012I	Secure CIM/XML(HTTPS) [arg1] by user [arg2].	Informational
FQXSPSE4013I	Secure LDAP [arg1] by user [arg2].	Informational
FQXSPSE4014I	SSH [arg1] by user [arg2].	Informational
FQXSPSE4015I	Global Login General Settings set by user [arg1]: AuthenticationMethod=[arg2], LockoutPeriod=[arg3], SessionTimeout=[arg4].	Informational
FQXSPSE4016I	Global Login Account Security set by user [arg1]: PasswordRequired=[arg2], PasswordExpirationPeriod=[arg3], MinimumPasswordReuseCycle=[arg4], MinimumPasswordLength=[arg5], MinimumPasswordChangeInterval=[arg6], MaxmumLoginFailures=[arg7], LockoutAfterMaxFailures=[arg8].	Informational
FQXSPSE4017I	User [arg1] created.	Informational
FQXSPSE4018I	User [arg1] removed.	Informational
FQXSPSE4019I	User [arg1] password modified.	Informational
FQXSPSE4020I	User [arg1] role set to [arg2].	Informational
FQXSPSE4021I	User [arg1] custom privileges set: [arg2][arg3][arg4][arg5][arg6][arg7][arg8][arg9].	Informational
FQXSPSE4022I	User [arg1] for SNMPv3 set: AuthenticationProtocol=[arg2], PrivacyProtocol=[arg3], AccessType=[arg4], HostforTraps=[arg5] by user [arg6] from [arg7] at IP address [arg8].	Informational
FQXSPSE4023I	SSH Client key added for user [arg1] by user [arg2] from [arg3] at IP address [arg4].	Informational
FQXSPSE4024I	SSH Client key imported for user [arg1] from [arg2] by user [arg3] from [arg4] at IP address [arg5].	Informational
FQXSPSE4025I	SSH Client key removed from user [arg1] by user [arg2] from [arg3] at IP address [arg4].	Informational
FQXSPSE4026I	Security: Userid: [arg1] had [arg2] login failures from a CIM client at IP address [arg3].	Informational
FQXSPSE4027I	Remote access attempt failed. Invalid userid or password received. Userid is [arg1] from a CIM client at IP address [arg2].	Informational
FQXSPSE4028I	Security: Userid: [arg1] had [arg2] login failures from IPMI client at IP address [arg3].	Informational
FQXSPSE4029I	Security: Userid: [arg1] had [arg2] login failures from SNMP client at IP address [arg3].	Informational
FQXSPSE4030I	Security: Userid: [arg1] had [arg2] login failures from IPMI serial client.	Informational
FQXSPSE4031I	Remote Login Successful. Login ID: [arg1] from [arg2] serial interface.	Informational
FQXSPSE4032I	Login ID: [arg1] from [arg2] at IP address [arg3] has logged off.	Informational

Table 2. Events organized by severity (continued)

Event ID	Message String	Severity
FQXSPSE4033I	Login ID: [arg1] from [arg2] at IP address [arg3] has been logged off.	Informational
FQXSPSE4034I	User [arg1] has removed a certificate.	Informational
FQXSPSE4035I	A certificate has been revoked .	Informational
FQXSPSE4036I	The [arg1] certificate is expired and has been removed.	Informational
FQXSPSE4037I	Crypto mode modified from [arg1] to [arg2] by user [arg3].	Informational
FQXSPSE4038I	Minimum TLS level modified from [arg1] to [arg2] by user [arg3].	Informational
FQXSPSE4039I	Temporary user account [arg1] is created by inband tool.	Informational
FQXSPSE4040I	Temporary user account [arg1] expires.	Informational
FQXSPSE4041I	Security: Userid: [arg1] had [arg2] login failures from a SFTP client at IP address [arg3].	Informational
FQXSPSE4042I	The third-party password function [arg1] by user [arg2] from [arg3] at IP address [arg4].	Informational
FQXSPSE4043I	Retrieving the third-party password [arg1] by user [arg2] from [arg3] at IP address [arg4].	Informational
FQXSPSE4044I	User [arg1] third-party hashed password has been [arg2] by user [arg3] from [arg4] at IP address [arg5].	Informational
FQXSPSE4045I	The Salt of user [arg1] third-party password has been [arg2] by user [arg3] from [arg4] at IP address [arg5].	Informational
FQXSPSE4046I	The third-party password of the user [arg1] has been retrieved by user [arg2] from [arg3] at IP address [arg4].	Informational
FQXSPSE4047I	Role [arg1] is [arg2] and assigned with custom privileges [arg3][arg4] [arg5][arg6][arg7][arg8][arg9][arg10][arg11] by user [arg12] .	Informational
FQXSPSE4048I	Role [arg1] is removed by user [arg2].	Informational
FQXSPSE4049I	Role [arg1] is assigned to user [arg2] by user [arg3].	Informational
FQXSPSE4050I	[arg1] sent IPMI command from [arg2], raw data: [arg3][arg4][arg5].	Informational
FQXSPSE4051I	Management Controller [arg1] joined the neighbor group [arg2] by user [arg3] at IP address [arg4].	Informational
FQXSPSE4052I	The password of neighbor group [arg1] is modified by [arg2] [arg3] at IP address [arg4].	Informational
FQXSPSE4053I	Management Controller [arg1] left the neighbor group [arg2] by user [arg3] at IP address [arg4].	Informational
FQXSPSE4054I	IPMI SEL wrapping mode is [arg1] by user [arg2] at IP address [arg3].	Informational
FQXSPSE4055I	SED encryption is enabled by user [arg1] at IP address [arg2].	Informational
FQXSPSE4056I	SED AK is [arg1] by user [arg2] at IP address [arg3].	Informational
FQXSPSE4057I	User [arg1] created by user [arg2] from [arg3] at IP address [arg4].	Informational
FQXSPSE4058I	User [arg1] removed by user [arg2] from [arg3] at IP address [arg4].	Informational
FQXSPSE4059I	User [arg1] password modified by user [arg2] from [arg3] at IP address [arg4].	Informational

Table 2. Events organized by severity (continued)

Event ID	Message String	Severity
FQXSPSE4060I	User [arg1] role set to [arg2] by user [arg3] from [arg4] at IP address [arg5].	Informational
FQXSPSE4061I	User [arg1] custom privileges set: [arg2][arg3][arg4][arg5][arg6][arg7][arg8][arg9] by user [arg10] from [arg11] at IP address [arg12].	Informational
FQXSPSE4062I	The system guard snapshot is captured by user [arg1] from [arg2] at IP address [arg3].	Informational
FQXSPSE4063I	The system guard configuration is updated: status=[arg1], hardware inventory=[arg2] and action=[arg3] by user [arg4] from [arg5] at IP address [arg6].	Informational
FQXSPSE4064I	SNMPv3 engine ID is changed from [arg1] to [arg2] by user [arg3] from [arg4] at IP address [arg5].	Informational
FQXSPSE4065I	SFTP [arg1] by user [arg2] from [arg3] at IP address [arg4].	Informational
FQXSPSE4066I	Security mode is modified from [arg1] to [arg2] by user [arg3] from [arg4] at IP address [arg5].	Informational
FQXSPSE4067I	User [arg1] accessible interfaces is set to [arg2][arg3][arg4][arg5][arg6] by user [arg7] from [arg8] at IP address [arg9].	Informational
FQXSPSE4068I	Security: Userid: [arg1] using [arg2] had [arg3] login failures from Redfish client at IP address [arg4].	Informational
FQXSPSE4069I	LDAP set by user [arg1]: RootDN=[arg2], UIDSearchAttribute=[arg3], BindingMethod=[arg4], TargetName=[arg5], GroupFilter=[arg6], GroupAttribute=[arg7], LoginAttribute=[arg8].	Informational
FQXSPSE4070I	Lockdown mode is [arg1] by user [arg2] from [arg3] at IP address [arg4].	Informational
FQXSPSE4071I	Chassis Intrusion detection is [arg1] by user [arg2] from [arg3] at IP address [arg4].	Informational
FQXSPSE4072I	Random SED AK is regenerated by user [arg1] from [arg2] at IP address [arg3].	Informational
FQXSPSE4073I	Motion detection is [arg1] by user [arg2] from [arg3] at IP address [arg4].	Informational
FQXSPSE4074I	Security mode downgrades because the XCC2 Platinum Upgrade key is expired or deleted.	Informational
FQXSPSE4075I	[arg1] by KCS to allow secure boot to be enabled by user [arg2] from [arg3] at IP address [arg4].	Informational
FQXSPSE4076I	[arg1] by KCS to allow secure boot to be disabled by user [arg2] from [arg3] at IP address [arg4].	Informational
FQXSPSE4077I	Bluetooth button on front panel is [arg1] on server [arg2] by user [arg3] from [arg4] at IP address [arg5].	Informational
FQXSPSE4078I	Bluetooth is [arg1] by pressing bluetooth button on front panel.	Informational
FQXSPSE4079I	The Operator role is [arg1] to contain Remote Console Access permission by user [arg2] from [arg3] at IP address [arg4].	Informational
FQXSPSE4080I	The user [arg1] attempts to clear CMOS from [arg2] at IP address [arg4].	Informational

Table 2. Events organized by severity (continued)

Event ID	Message String	Severity
FQXSPSE4081I	BMC returns the valid local cached key to UEFI for SED drives.	Informational
FQXSPSE4082I	Remote key management server is unaccessable.	Informational
FQXSPSE4083I	The local cached key has expired and destroyed it.	Informational
FQXSPSE4084I	Periodic connection to remote key management server succeeded.	Informational
FQXSPSE4085I	Periodic connection to remote key management server failed.	Informational
FQXSPSE4088I	The chassis caretaker node ID is changed from [arg1] to [arg2].	Informational
FQXSPSE4089I	The chassis node with node ID [arg1] is inserted.	Informational
FQXSPSE4090I	The chassis node with node ID [arg1] is removed.	Informational
FQXSPSR2001I	Sensor [SensorElementName] has deasserted the transition to non-recoverable from a less severe state.	Informational
FQXSPSS4000I	Management Controller Test Alert Generated by [arg1].	Informational
FQXSPSS4001I	Server General Settings set by user [arg1]: Name=[arg2], Contact=[arg3], Location=[arg4], Room=[arg5], RackID=[arg6], Rack U-position=[arg7], Address=[arg8].	Informational
FQXSPSS4002I	License key for [arg1] added by user [arg2].	Informational
FQXSPSS4003I	License key for [arg1] removed by user [arg2].	Informational
FQXSPSS4004I	Test Call Home Generated by user [arg1].	Informational
FQXSPSS4005I	Manual Call Home by user [arg1]: [arg2].	Informational
FQXSPSS4006I	Call Home to [arg1] failed to complete: [arg2].	Informational
FQXSPSS4007I	The BMC functionality tier is changed from [arg1] to [arg2].	Informational
FQXSPSS4008I	The [arg1] setting has been changed to [arg2] by user [arg3].	Informational
FQXSPSS4009I	System enters LXPM maintenance mode.	Informational
FQXSPSS4010I	Test Audit Log generated by user [arg1].	Informational
FQXSPSS4011I	Fan speed boost setting is changed from [arg1] to [arg2].	Informational
FQXSPTR4000I	Management Controller [arg1] clock has been set from NTP server [arg2].	Informational
FQXSPTR4001I	Date and Time set by user [arg1]: Date=[arg2], Time=[arg3], DST Auto-adjust=[arg4], Timezone=[arg5].	Informational
FQXSPTR4002I	Synchronize time setting by user [arg1]: Mode=Sync with NTP Server, NTPServerHost1=[arg2]:[arg3],NTPServerHost2=[arg4]:[arg5], NTPServerHost3=[arg6]:[arg7],NTPServerHost4=[arg8]:[arg9], NTPUpdateFrequency=[arg10].	Informational
FQXSPTR4003I	Synchronize time setting by user [arg1]: Mode=Sync with server clock.	Informational
FQXSPUN0017I	Sensor [SensorElementName] has transitioned to normal state.	Informational
FQXSPUN0026I	Device [LogicalDeviceElementName] has been added.	Informational
FQXSPUN0048I	The RAID controller in PCI slot [arg1] in optimal status.	Informational

Table 2. Events organized by severity (continued)

Event ID	Message String	Severity
FQXSPUN2009I	Sensor [SensorElementName] has deasserted.	Informational
FQXSPUN2012I	Sensor [SensorElementName] has deasserted.	Informational
FQXSPUN2018I	Sensor [SensorElementName] has deasserted the transition from normal to non-critical state.	Informational
FQXSPUN2019I	Sensor [SensorElementName] has transitioned to a less severe state from critical.	Informational
FQXSPUN2023I	Sensor [SensorElementName] has deasserted the transition to non-recoverable.	Informational
FQXSPUN2049I	The RAID controller in PCI slot [arg1] is no longer in warning status.	Informational
FQXSPUN2050I	The RAID controller in PCI slot [arg1] is no longer in critical status.	Informational
FQXSPUP0002I	A firmware or software change occurred on system [ComputerSystemElementName].	Informational
FQXSPUP4001I	Flash of [arg1] from [arg2] succeeded for user [arg3] .	Informational
FQXSPUP4002I	Flash of [arg1] from [arg2] failed for user [arg3].	Informational
FQXSPUP4006I	Auto promote primary XCC to backup is [arg1] by user [arg2] from [arg3] at IP address [arg4].	Informational
FQXSPUP4007I	Violation access to XCC SPI flash is detected and isolated.	Informational
FQXSPUP4008I	Violation access to UEFI SPI flash is detected and isolated.	Informational
FQXSPUP4010I	Flash [arg1] of [arg2] from [arg3] succeeded for user [arg4] .	Informational
FQXSPUP4011I	Flash [arg1] of [arg2] from [arg3] failed for user [arg4].	Informational
FQXSPWD0000I	Watchdog Timer expired for [WatchdogElementName].	Informational
FQXSPWD0001I	Reboot of system [ComputerSystemElementName] initiated by watchdog [WatchdogElementName].	Informational
FQXSPWD0002I	Powering off system [ComputerSystemElementName] initiated by watchdog [WatchdogElementName].	Informational
FQXSPWD0003I	Power cycle of system [ComputerSystemElementName] initiated by watchdog [WatchdogElementName].	Informational
FQXSPWD0004I	Watchdog Timer interrupt occurred for [WatchdogElementName].	Informational
FQXSPBR4001I	Running the backup Management Controller [arg1] main application.	Warning
FQXSPCA0007J	Numeric sensor [NumericSensorElementName] going high (upper non-critical) has asserted.	Warning
FQXSPDM4002I	Device [arg1] VPD is not valid.	Warning
FQXSPEA0001J	Sensor [SensorElementName] has transitioned from normal to non-critical state.	Warning
FQXSPEA0003J	Link down is detected on port [arg1] of the PCIe device [arg2].	Warning
FQXSPEM4040I	Dust filter measurement is completed. The airflow pathway is obstructed, check and replace the dust filter, or remove any obstructing object.	Warning
FQXSPEM4043I	A [arg1] failure has been detected and need [arg2] to recover.	Warning

Table 2. Events organized by severity (continued)

Event ID	Message String	Severity
FQXSPPIO0014J	Bus [SensorElementName] is operating in a degraded state.	Warning
FQXSPPIO4001I	GPU Board Status was changed by [arg1] of [arg1].	Warning
FQXSPMA0010J	[PhysicalMemoryElementName] on Subsystem [MemoryElementName] Throttled.	Warning
FQXSPMA0011G	Memory Logging Limit Reached for [PhysicalMemoryElementName] on Subsystem [MemoryElementName].	Warning
FQXSPMA0024G	Sensor [SensorElementName] has asserted.	Warning
FQXSPMA4034G	Health of DIMM [arg1] is in warning state and sub-state is [arg2].	Warning
FQXSPNM4010I	DHCP[[arg1]] failure, no IP address assigned.	Warning
FQXSPNM4032I	DHCPv6 failure, no IP address assigned.	Warning
FQXSPPP4009I	The measured power value exceeded the power cap value.	Warning
FQXSPPP4010I	The new minimum power cap value exceeded the power cap value.	Warning
FQXSPPU0002G	The Processor [ProcessorElementName] is operating in a Degraded State.	Warning
FQXSPPU0010G	The Processor [ProcessorElementName] is operating in a Degraded State due to [ProcessorElementName].	Warning
FQXSPPW0003G	Failure predicted on [PowerSupplyElementName].	Warning
FQXSPPW0006I	[PowerSupplyElementName] has lost input.	Warning
FQXSPPW0031J	Numeric sensor [NumericSensorElementName] going low (lower non-critical) has asserted.	Warning
FQXSPPW0057J	Sensor [SensorElementName] has transitioned from normal to non-critical state.	Warning
FQXSPPW4002I	Total graphics power value has exceeded the pre-configured limit.	Warning
FQXSPSD0002G	Failure Predicted on [StorageVolumeElementName] for array [ComputerSystemElementName].	Warning
FQXSPSD0003G	Failure Predicted on drive [arg1] in the enclosure/chassis (MTM-SN: [arg2]).	Warning
FQXSPSE4006I	XCC detected an invalid SSL certificate in the Management Controller [arg1] .	Warning
FQXSPUN0009G	Sensor [SensorElementName] has asserted.	Warning
FQXSPUN0018J	Sensor [SensorElementName] has transitioned from normal to non-critical state.	Warning
FQXSPBR4003I	Platform Watchdog Timer expired for [arg1].	Error
FQXSPBR4007I	Management Controller [arg1]: Configuration restoration from a file by user [arg2] failed to complete from [arg3] at IP address [arg4].	Error
FQXSPBR4008I	Management Controller [arg1]: Configuration restoration from a file by user [arg2] failed to start from [arg3] at IP address [arg4].	Error
FQXSPCA0002M	Numeric sensor [NumericSensorElementName] going low (lower critical) has asserted.	Error

Table 2. Events organized by severity (continued)

Event ID	Message String	Severity
FQXSPCA0009M	Numeric sensor [NumericSensorElementName] going high (upper critical) has asserted.	Error
FQXSPCA0011N	Numeric sensor [NumericSensorElementName] going high (upper non-recoverable) has asserted.	Error
FQXSPCA0017M	Sensor [SensorElementName] has transitioned to critical from a less severe state.	Error
FQXSPCA0019N	Sensor [SensorElementName] has transitioned to non-recoverable from a less severe state.	Error
FQXSPCR0001N	Sensor [SensorElementName] has transitioned to non-recoverable from a less severe state.	Error
FQXSPEA0002M	Sensor [SensorElementName] has transitioned to critical from a less severe state.	Error
FQXSPFW0000N	The System [ComputerSystemElementName] encountered a POST Error.	Error
FQXSPFW0002N	The System [ComputerSystemElementName] encountered a firmware hang.	Error
FQXSPIO0003N	A diagnostic interrupt has occurred on system [ComputerSystemElementName].	Error
FQXSPIO0004L	A bus timeout has occurred on bus [SensorElementName].	Error
FQXSPIO0006N	A software NMI has occurred on system [ComputerSystemElementName].	Error
FQXSPIO0007N	A PCI PERR has occurred on system [ComputerSystemElementName].	Error
FQXSPIO0008N	A PCI SERR has occurred on system [ComputerSystemElementName].	Error
FQXSPIO0011N	An Uncorrectable Error has occurred on [SensorElementName].	Error
FQXSPIO0013N	A Fatal Bus Error has occurred on bus [SensorElementName].	Error
FQXSPIO0015M	Fault in slot [PhysicalConnectorSystemElementName] on system [ComputerSystemElementName].	Error
FQXSPMA0002N	Configuration Error for [PhysicalMemoryElementName] on Subsystem [MemoryElementName].	Error
FQXSPMA0007L	Scrub Failure for [PhysicalMemoryElementName] on Subsystem [MemoryElementName].	Error
FQXSPMA0008N	Uncorrectable error detected for [PhysicalMemoryElementName] on Subsystem [MemoryElementName].	Error
FQXSPMA0012M	An Over-Temperature Condition has been detected on the [PhysicalMemoryElementName] on Subsystem [MemoryElementName].	Error
FQXSPMA4035M	Health of DIMM [arg1] is in error state and sub-state is [arg2].	Error
FQXSPOS4002I	Watchdog [arg1] Failed to Capture Screen.	Error
FQXSPOS4003I	Platform Watchdog Timer expired for [arg1].	Error

Table 2. Events organized by severity (continued)

Event ID	Message String	Severity
FQXSPOS4010I	OS Crash Video Capture Failed.	Error
FQXSPPU0001N	An Over-Temperature Condition has been detected on [ProcessorElementName].	Error
FQXSPPU0003N	[ProcessorElementName] has Failed with IERR.	Error
FQXSPPU0004M	[ProcessorElementName] has Failed with FRB1/BIST condition.	Error
FQXSPPU0009N	[ProcessorElementName] has a Configuration Mismatch.	Error
FQXSPPU0011N	An SM BIOS Uncorrectable CPU complex error for [ProcessorElementName] has asserted.	Error
FQXSPPW0002L	[PowerSupplyElementName] has Failed.	Error
FQXSPPW0007L	[PowerSupplyElementName] has a Configuration Mismatch.	Error
FQXSPPW0035M	Numeric sensor [NumericSensorElementName] going low (lower critical) has asserted.	Error
FQXSPPW0061M	Sensor [SensorElementName] has transitioned to critical from a less severe state.	Error
FQXSPPW0062M	Sensor [SensorElementName] has transitioned to critical from a less severe state.	Error
FQXSPPW0063M	Sensor [SensorElementName] has transitioned to critical from a less severe state.	Error
FQXSPSD0001L	The [StorageVolumeElementName] has a fault.	Error
FQXSPSD0002L	Drive [arg1] in the enclosure/chassis(MTM-SN: [arg2]) has a fault.	Error
FQXSPSD0005L	Array [ComputerSystemElementName] is in critical condition.	Error
FQXSPSD0006L	Array [ComputerSystemElementName] has failed.	Error
FQXSPSD0007L	Array critical asserted on drive [arg1] in the enclosure/chassis (MTM-S/N: [arg2]).	Error
FQXSPSD0008L	Array failed on drive [arg1] in the enclosure/chassis (MTM-S/N: [arg2]).	Error
FQXSPSE4000I	Certificate Authority [arg1] has detected a [arg2] Certificate Error.	Error
FQXSPSR0001N	Sensor [SensorElementName] has transitioned to non-recoverable from a less severe state.	Error
FQXSPUN0019M	Sensor [SensorElementName] has transitioned to critical from a less severe state.	Error
FQXSPUN0023N	Sensor [SensorElementName] has transitioned to non-recoverable.	Error
FQXSPUP0007L	Invalid or Unsupported firmware or software was detected on system [ComputerSystemElementName].	Error
FQXSPUP4000I	Please ensure that the Management Controller [arg1] is flashed with the correct firmware. The Management Controller is unable to match its firmware to the server.	Error
FQXSPUP4003I	[arg1] firmware mismatch internal to system [arg2]. Please attempt to flash the [arg3] firmware.	Error
FQXSPUP4004I	XCC firmware mismatch between nodes/servers [arg1] and [arg2]. Please attempt to flash the XCC firmware to the same level on all nodes/servers.	Error

Table 2. Events organized by severity (continued)

Event ID	Message String	Severity
FQXSPUP4005I	FPGA firmware mismatch between nodes/servers [arg1] and [arg2]. Please attempt to flash the FPGA firmware to the same level on all nodes/servers.	Error
FQXSPUP4009I	Please ensure that the system is flashed with the correct [arg1] firmware. The Management Controller is unable to match the firmware to the server.	Error

List of XClarity Controller events

This section lists all messages that can be sent from the XClarity Controller.

- **FQXSPBR4000I: Management Controller [arg1]: Configuration restored from a file by user [arg2] from [arg3] at IP address [arg4].**

This message is for the use case where a user restores a Management Controller configuration from a file.

Severity: Info
 Serviceable: No
 Automatically notify Support: No
 Alert Category: System - Other
 SNMP Trap ID:
 CIM Prefix: IMM CIM ID: 0027

User Action:

Information only; no action is required.

- **FQXSPBR4001I: Running the backup Management Controller [arg1] main application.**

This message is for the use case where a Management Controller has resorted to running the backup main application.

Severity: Warning
 Serviceable: No
 Automatically notify Support: No
 Alert Category: System - other
 SNMP Trap ID: 22
 CIM Prefix: IMM CIM ID: 0030

User Action:

Complete the following steps until the problem is solved:

1. Update the BMC firmware.
2. NOTE: Some cluster solutions require specific code levels or coordinated code updates. If the device is part of a cluster solution, verify that the latest level of code is supported for the cluster solution before you update the code.
3. If problem persists, collect Service Data log.
4. Contact Lenovo Support.

- **FQXSPBR4002I: Management Controller [arg1] Reset was caused by restoring default values.**

This message is for the use case where a Management Controller has been reset due to a user restoring the configuration to default values.

Severity: Info

Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0032

User Action:

Information only; no action is required.

- **FQXSPBR4003I: Platform Watchdog Timer expired for [arg1].**

This message is for the use case when an implementation has detected a Platform Watchdog Timer Expired

Severity: Error
Serviceable: No
Automatically notify Support: No
Alert Category: System - OS Timeout
SNMP Trap ID: 21
CIM Prefix: IMM CIM ID: 0039

User Action:

Complete the following steps until the problem is solved:

1. Reconfigure the watchdog timer to a higher value.
2. Make sure that the BMC Ethernet-over-USB interface is enabled.
3. Reinstall the RNDIS or cdc_ether device driver for the operating system.
4. Disable the watchdog timer.
5. Check the integrity of the installed operating system.
6. If problem persists, collect Service Data log.
7. Contact Lenovo Support.

- **FQXSPBR4004I: Server timeouts set by user [arg1]: EnableOSWatchdog=[arg2], OSWatchdogTimeout=[arg3], EnableLoaderWatchdog=[arg4], LoaderTimeout=[arg5].**

A user configures Server Timeouts

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0095

User Action:

Information only; no action is required.

- **FQXSPBR4005I: Management Controller [arg1]: Configuration saved to a file by user [arg2].**

A user saves a Management Controller configuration to a file.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0109

User Action:

Information only; no action is required.

- **FQXSPBR4006I: Management Controller [arg1]: Configuration restoration from a file by user [arg2] completed from [arg3] at IP address [arg4].**

This message is for the use case where a user restores a Management Controller configuration from a file and it completes.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0136

User Action:

Information only; no action is required.

- **FQXSPBR4007I: Management Controller [arg1]: Configuration restoration from a file by user [arg2] failed to complete from [arg3] at IP address [arg4].**

This message is for the use case where a user restores a Management Controller configuration from a file and the restoration fails to complete.

Severity: Error
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0137

User Action:

Complete the following steps until the problem is solved:

1. Retry the operation.
2. AC cycle the system.
3. If Problem persists, collect Service Data log.
4. Contact Lenovo Support.

- **FQXSPBR4008I: Management Controller [arg1]: Configuration restoration from a file by user [arg2] failed to start from [arg3] at IP address [arg4].**

This message is for the use case where a user restores a Management Controller configuration from a file and the restoration fails to start.

Severity: Error
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0138

User Action:

Complete the following steps until the problem is solved:

1. Check if password for encrypted backup config file is correct.

2. Retry the operation.
3. AC cycle the system.
4. If problem persists, collect Service Data log.
5. Contact Lenovo Support.

- **FQXSPBR4009I: Management Controller [arg1]: cloning configuration from neighbor server [arg2] by group name [arg3].**

This message is for the use case where a user synchronizes a Management Controller configuration by Federation.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0255

User Action:

Information only; no action is required.

- **FQXSPBR400AI: Management Controller [arg1]: cloning configuration from neighbor server [arg2] by group name [arg3] completed.**

This message is for the use case where a user synchronizes a Management Controller configuration by Federation and it completes.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0256

User Action:

Information only; no action is required.

- **FQXSPBR400BI: Management Controller [arg1]: cloning configuration from neighbor server [arg2] by group name [arg3] failed to complete.**

This message is for the use case where a user synchronizes a Management Controller configuration by Federation and the restoration fails to complete.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0257

User Action:

Information only; no action is required.

- **FQXSPBR400CI: Management Controller [arg1]: cloning configuration from neighbor server [arg2] by group name [arg3] failed to start.**

This message is for the use case where a user synchronizes a Management Controller configuration by Federation and the restoration fails to start.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0258

User Action:

Information only; no action is required.

- **FQXSPBR400DI: Neighbor group clone configuration was initiated by user [arg1].**

This message is for the user initiated a Federation clone configuration.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0259

User Action:

Information only; no action is required.

- **FQXSPBR400EI: Neighbor group firmware update was initiated by user [arg1].**

This message is for the user started a Federation update.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0260

User Action:

Information only; no action is required.

- **FQXSPBR400FI: The neighbor group management is [arg1] by user [arg2] from [arg3] at IP address [arg4].**

Neighbor group management is enabled or disabled by user

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0272

User Action:

Information only; no action is required.

- **FQXSPBT0007I: No bootable media available for system [ComputerSystemElementName].**

This message is for the use case when an implementation has detected a System with No Bootable Media.

Severity: Info

Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: PLAT CIM ID: 0286

User Action:

Please ensure bootable media be installed correctly.

- **FQXSPCA0002M: Numeric sensor [NumericSensorElementName] going low (lower critical) has asserted.**

This message is for the use case when an implementation has detected a Lower Critical sensor going low has asserted.

Severity: Error
Serviceable: Yes
Automatically notify Support: No
Alert Category: Critical - Fan Failure
SNMP Trap ID: 11
CIM Prefix: PLAT CIM ID: 0480

User Action:

Complete the following steps:

1. Ensure fans are installed correctly.
2. If fan is installed with issue , please reinstall fan.
3. If the problem still exist, then please contact Lenovo support.

- **FQXSPCA0007J: Numeric sensor [NumericSensorElementName] going high (upper non-critical) has asserted.**

This message is for the use case when an implementation has detected an Upper Non-critical sensor going high has asserted.

Severity: Warning
Serviceable: Yes
Automatically notify Support: No
Alert Category: Warning - Temperature
SNMP Trap ID: 12
CIM Prefix: PLAT CIM ID: 0490

User Action:

Complete the following steps:

1. Check the event log of system management module and XClarity Controller for any fan or cooling-related issues or power-related issues.
2. Make sure that the airflow at the front and rear of the chassis is not obstructed and that fillers are in place,clean, and correctly installed.
3. Make sure that the room temperature is within operating specifications.

- **FQXSPCA0009M: Numeric sensor [NumericSensorElementName] going high (upper critical) has asserted.**

This message is for the use case when an implementation has detected an Upper Critical sensor going high has asserted.

Severity: Error

Serviceable: Yes
Automatically notify Support: No
Alert Category: Critical - Temperature
SNMP Trap ID: 0
CIM Prefix: PLAT CIM ID: 0494

User Action:

Complete the following steps:

1. Ensure the room temperature is within server environmental specification to adjust the temperature.
2. If the problem still exists, check XCC Web GUI to check if the temperature value is still higher than system spec.
3. Contact Lenovo support.

- **FQXSPCA0011N: Numeric sensor [NumericSensorElementName] going high (upper non-recoverable) has asserted.**

This message is for the use case when an implementation has detected an Upper Non-recoverable sensor going high has asserted.

Severity: Error
Serviceable: Yes
Automatically notify Support: No
Alert Category: Critical - Temperature
SNMP Trap ID: 0
CIM Prefix: PLAT CIM ID: 0498

User Action:

Complete the following steps:

1. Ensure the room temperature is within server environmental specification to adjust the temperature.
2. If the problem still exists, check XCC Web GUI to check if the temperature value is still higher than system spec.
3. Contact Lenovo support.

- **FQXSPCA0017M: Sensor [SensorElementName] has transitioned to critical from a less severe state.**

This message is for the use case when an implementation has detected a Sensor transitioned to critical from less severe.

Severity: Error
Serviceable: Yes
Automatically notify Support: No
Alert Category: Critical - Temperature
SNMP Trap ID: 0
CIM Prefix: PLAT CIM ID: 0522

User Action:

Complete the following steps:

1. Check the event log of XClarity Controller for any fan or cooling-related issues or power-related issues.
2. Make sure that the airflow at the front and rear of the chassis is not obstructed and that fillers are in place, clean, and correctly installed.
3. Make sure that the room temperature is within operating specifications.

- **FQXSPCA0019N: Sensor [SensorElementName] has transitioned to non-recoverable from a less severe state.**

This message is for the use case when an implementation has detected a Sensor transitioned to non-recoverable from less severe.

Severity: Error
Serviceable: Yes
Automatically notify Support: No
Alert Category: Critical - Temperature
SNMP Trap ID: 0
CIM Prefix: PLAT CIM ID: 0524

User Action:

Complete the following steps:

1. Check the event log of XClarity Controller for any fan or cooling-related issues or power-related issues.
2. Make sure that the airflow at the front and rear of the chassis is not obstructed and that fillers are in place, clean, and correctly installed.
3. Make sure that the room temperature is within operating specifications.

- **FQXSPCA2002I: Numeric sensor [NumericSensorElementName] going low (lower critical) has deasserted.**

This message is for the use case when an implementation has detected a Lower Critical sensor going low has deasserted.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: Critical - Fan Failure
SNMP Trap ID: 11
CIM Prefix: PLAT CIM ID: 0481

User Action:

Information only; no action is required

- **FQXSPCA2007I: Numeric sensor [NumericSensorElementName] going high (upper non-critical) has deasserted.**

This message is for the use case when an implementation has detected an Upper Non-critical sensor going high has deasserted.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: Warning - Temperature
SNMP Trap ID: 12
CIM Prefix: PLAT CIM ID: 0491

User Action:

Information only; no action is required

- **FQXSPCA2009I: Numeric sensor [NumericSensorElementName] going high (upper critical) has deasserted.**

This message is for the use case when an implementation has detected an Upper Critical sensor going high has deasserted.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: Critical - Temperature
SNMP Trap ID: 0
CIM Prefix: PLAT CIM ID: 0495

User Action:

Information only; no action is required

- **FQXSPCA2011I: Numeric sensor [NumericSensorElementName] going high (upper non-recoverable) has deasserted.**

This message is for the use case when an implementation has detected an Upper Non-recoverable sensor going high has deasserted.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: Critical - Temperature
SNMP Trap ID: 0
CIM Prefix: PLAT CIM ID: 0499

User Action:

Information only; no action is required

- **FQXSPCA2017I: Sensor [SensorElementName] has transitioned to a less severe state from critical.**

This message is for the use case when an implementation has detected a Sensor transition to less severe from critical.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: Critical - Temperature
SNMP Trap ID: 0
CIM Prefix: PLAT CIM ID: 0523

User Action:

Information only; no action is required

- **FQXSPCA2019I: Sensor [SensorElementName] has deasserted the transition to non-recoverable from a less severe state.**

This message is for the use case when an implementation has detected that the Sensor transition to non-recoverable from less severe has deasserted.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: Critical - Temperature
SNMP Trap ID: 0
CIM Prefix: PLAT CIM ID: 0525

User Action:

Information only; no action is required

- **FQXSPCN4000I: Serial Redirection set by user [arg1]: Mode=[arg2], BaudRate=[arg3], StopBits=[arg4], Parity=[arg5], SessionTerminateSequence=[arg6].**

A user configured the Serial Port mode

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0078

User Action:

Information only; no action is required.

- **FQXSPCN4001I: Remote Control session started by user [arg1] in [arg2] mode.**

Remote Control session started

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0128

User Action:

Information only; no action is required.

- **FQXSPCN4002I: User [arg1] has terminated an active CLI console session.**

A user has terminated an active CLI console session

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0145

User Action:

Information only; no action is required.

- **FQXSPCN4003I: Remote Control session started by user [arg1] in [arg2] mode has been closed.**

Remote Control session closed

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0194

User Action:

Information only; no action is required.

- **FQXSPCN4004I: User [arg1] has created an active [arg2] console session.**

A user has created an IPMI/CLI console session

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0317

User Action:

Information only; no action is required.

- **FQXSPCN4005I: A [arg1] console session is timeout.**

An IPMI/CLI console session is timeout

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0318

User Action:

Information only; no action is required.

- **FQXSPCN4006I: User [arg1] has terminated an active IPMI console session.**

A user has terminated an active IPMI console session

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0319

User Action:

Information only; no action is required.

- **FQXSPCR0001N: Sensor [SensorElementName] has transitioned to non-recoverable from a less severe state.**

This message is for the use case when an implementation has detected a Sensor transitioned to non-recoverable from less severe.

Severity: Error
Serviceable: Yes
Automatically notify Support: No
Alert Category: Critical - Other
SNMP Trap ID: 50
CIM Prefix: PLAT CIM ID: 0524

User Action:

Complete the following steps:

1. Please flash uEFI image to the latest level.

2. If the problem still exist, please remove and re-install CMOS battery for 30 seconds to clear CMOS contents.
3. If the problem still exist, please contact local service.

- **FQXSPCR2001I: Sensor [SensorElementName] has deasserted the transition to non-recoverable from a less severe state.**

This message is for the use case when an implementation has detected that the Sensor transition to non-recoverable from less severe has deasserted.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: Critical - Other
SNMP Trap ID: 50
CIM Prefix: PLAT CIM ID: 0525

User Action:

Information only; no action is required

- **FQXSPDM4000I: Inventory data changed for device [arg1], new device data hash=[arg2], new master data hash=[arg3] .**

Something has caused the physical inventory to change

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0072

User Action:

Information only; no action is required.

- **FQXSPDM4001I: Storage [arg1] has changed.**

This message is for the use case where an IP address for the Storage Management has changed

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - IMM Network event
SNMP Trap ID: 37
CIM Prefix: IMM CIM ID: 0139

User Action:

Information only; no action is required.

- **FQXSPDM4002I: Device [arg1] VPD is not valid.**

The VPD for a device is invalid

Severity: Warning
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0142

User Action:

Collect Service Data log and contact Lenovo Support.

- **FQXSPDM4003I: TKLM servers set by user [arg1]: TKLMServer1=[arg2] Port=[arg3], TKLMServer2=[arg4] Port=[arg5], TKLMServer3=[arg6] Port=[arg7], TKLMServer4=[arg8] Port=[arg9].**

A user configured the TKLM servers

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0146

User Action:

Information only; no action is required.

- **FQXSPDM4004I: TKLM servers device group set by user [arg1]: TKLMServerDeviceGroup=[arg2] .**

A user configured the TKLM device group

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0147

User Action:

Information only; no action is required.

- **FQXSPDM4005I: User [arg1] has generated a new encryption key pair and installed a self-signed certificate for the TKLM client.**

User generated a new encryption key pair and installed a self-signed certificate for the TKLM client

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0148

User Action:

Information only; no action is required.

- **FQXSPDM4006I: User [arg1] has generated a new encryption key and certificate signing request for the TKLM client.**

User generated a new encryption key and certificate signing request for the TKLM client

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0149

User Action:

Information only; no action is required.

- **FQXSPDM4007I: User [arg1] has imported a signed certificate for the TKLM client from [arg2].**

User imported a signed certificate for the TKLM client

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0150

User Action:

Information only; no action is required.

- **FQXSPDM4008I: User [arg1] has imported a server certificate for the TKLM server.**

User imported a server certificate for the TKLM Server

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0151

User Action:

Information only; no action is required.

- **FQXSPDM4009I: User [arg1] has [arg2] file [arg3] from [arg4].**

User has mounted/unmounted file from URL or server

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0162

User Action:

Information only; no action is required.

- **FQXSPDM4011I: EKMS server protocol set by user [arg1]: TKLMServerProtocol=[arg2] .**

A user configured the EKMS server protocol

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0293

User Action:

Information only; no action is required.

- **FQXSPEA0001J: Sensor [SensorElementName] has transitioned from normal to non-critical state.**

This message is for the use case when an implementation has detected a Sensor transitioned to non-critical from normal.

Severity: Warning
Serviceable: Yes
Automatically notify Support: No
Alert Category: Warning - Other
SNMP Trap ID: 60
CIM Prefix: PLAT CIM ID: 0520

User Action:

Use Storcli or LSA to check if there is any warning or critical RAID event.

- **FQXSPEA0002M: Sensor [SensorElementName] has transitioned to critical from a less severe state.**

This message is for the use case when an implementation has detected a Sensor transitioned to critical from less severe.

Severity: Error
Serviceable: Yes
Automatically notify Support: No
Alert Category: Critical - Other
SNMP Trap ID: 50
CIM Prefix: PLAT CIM ID: 0522

User Action:

Use storcli or LSA software tool to check if there is any warning or critical RAID event.

- **FQXSPEA0003J: Link down is detected on port [arg1] of the PCIe device [arg2].**

This message is for the use case when an implementation has detected a Link down of PCIe device.

Severity: Warning
Serviceable: Yes
Automatically notify Support: No
Alert Category: Warning - Other
SNMP Trap ID: 60
CIM Prefix: PLAT CIM ID: 0520

User Action:

Complete the following steps until the problem is solved:

1. Information only; no action is required.
2. Note: This event will be set to Warning Severity for the LAN on Motherboard (LOM) interface and Informational Severity for all other Network Adapters present where link status can be monitored.

- **FQXSPEA2001I: Sensor [SensorElementName] has deasserted the transition from normal to non-critical state.**

This message is for the use case when an implementation has detected that a Sensor has deasserted a transition to non-critical from normal.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: Warning - Other

SNMP Trap ID: 60
CIM Prefix: PLAT CIM ID: 0521

User Action:

Use storcli or LSA to check if there is any warning or critical RAID event.

- **FQXSPEA2002I: Sensor [SensorElementName] has transitioned to a less severe state from critical.**

This message is for the use case when an implementation has detected a Sensor transition to less severe from critical.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: Critical - Other
SNMP Trap ID: 50
CIM Prefix: PLAT CIM ID: 0523

User Action:

Use Storcli or LSA to check if there is any warning or critical RAID event.

- **FQXSPEM4000I: The [arg1] on system [arg2] cleared by user [arg3].**

This message is for the use case where a Management Controller Event Log on a system is cleared by a user.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0020

User Action:

Information only; no action is required.

- **FQXSPEM4001I: The [arg1] on system [arg2] is 75% full.**

This message is for the use case where a Management Controller Event Log on a system is 75% full.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Event Log Fullness
SNMP Trap ID: 35
CIM Prefix: IMM CIM ID: 0037

User Action:

Information only; no action is required.

- **FQXSPEM4002I: The [arg1] on system [arg2] is 100% full.**

This message is for the use case where a Management Controller Event Log on a system is 100% full.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Event Log Fullness
SNMP Trap ID: 35

CIM Prefix: IMM CIM ID: 0038

User Action:

To avoid losing older log entries, save the log as a text file and clear the log.

- **FQXSPeM4003I: LED [arg1] state changed to [arg2] by [arg3].**

A user has modified the state of an LED

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0071

User Action:

Information only; no action is required.

- **FQXSPeM4004I: SNMP [arg1] enabled by user [arg2] .**

A user enabled SNMPv1 or SNMPv3 or Traps

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0073

User Action:

Information only; no action is required.

- **FQXSPeM4005I: SNMP [arg1] disabled by user [arg2] .**

A user disabled SNMPv1 or SNMPv3 or Traps

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0074

User Action:

Information only; no action is required.

- **FQXSPeM4006I: Alert Configuration Global Event Notification set by user [arg1]: RetryLimit=[arg2], RetryInterval=[arg3], EntryInterval=[arg4].**

A user changes the Global Event Notification settings.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0110

User Action:

Information only; no action is required.

- **FQXSPeM4007I: Alert Recipient Number [arg1] updated: Name=[arg2], DeliveryMethod=[arg3], Address=[arg4], IncludeLog=[arg5], Enabled=[arg6], EnabledAlerts=[arg7], AllowedFilters=[arg8] by user [arg9] from [arg10] at IP address [arg11].**

A user adds or updates an Alert Recipient

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0111

User Action:

Information only; no action is required.

- **FQXSPeM4008I: SNMP Traps enabled by user [arg1]: EnabledAlerts=[arg2], AllowedFilters=[arg3] .**

A user enabled the SNMP Traps configuration

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0112

User Action:

Information only; no action is required.

- **FQXSPeM4009I: The UEFI Definitions have been changed.**

UEFI Definitions change has been detected

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0152

User Action:

Information only; no action is required.

- **FQXSPeM4010I: UEFI Reported: [arg1].**

UEFI audit event logged.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0161

User Action:

Information only; no action is required.

- **FQXSPPEM4011I: XCC failed to log previous event [arg1].**

XCC failed to log a previous event.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0196

User Action:

Information only; no action is required.

- **FQXSPPEM4012I: User [arg1] made system [arg2] Encapsulation lite Mode.**

Encapsulation lite mode status change

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0201

User Action:

Information only; no action is required.

- **FQXSPPEM4013I: Battery error was detected by RAID controller. The battery unit needs replacement.([arg1],[arg2],[arg3],[arg4],[arg5])**

Battery error was detected by RAID controller

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0202

User Action:

Information only; no action is required.

- **FQXSPPEM4014I: The RAID controller has problem with the battery. Please contact technical support to resolve this issue.([arg1],[arg2],[arg3],[arg4],[arg5])**

The RAID controller has problem with the battery

Severity: Info
Serviceable: No
Automatically notify Support: Yes
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0203

User Action:

Information only; no action is required.

- **FQXSPEM4015I: The RAID controller detected unrecoverable error. The controller needs replacement.([arg1],[arg2],[arg3],[arg4],[arg5])**

The RAID controller detected unrecoverable error

Severity: Info
Serviceable: No
Automatically notify Support: Yes
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0204

User Action:

Information only; no action is required.

- **FQXSPEM4016I: The RAID controller detected one or more problems. Please contact technical support for additional assistance.([arg1],[arg2],[arg3],[arg4],[arg5])**

The RAID controller detected one or more problems

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0205

User Action:

Information only; no action is required.

- **FQXSPEM4017I: The RAID controller detected one or more possible configuration changes within the subsystem. Please check the drive LED status. If necessary, contact technical support for additional assistance.([arg1],[arg2],[arg3],[arg4],[arg5])**

The RAID controller detected one or more possible configuration changes within the subsystem

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0206

User Action:

Information only; no action is required.

- **FQXSPEM4018I: Enclosure/Chassis issue detected with one or more units. Please check the enclosure/chassis units to repair the problem.([arg1],[arg2],[arg3],[arg4],[arg5])**

Enclosure/Chassis issue detected with one or more units

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0207

User Action:

Information only; no action is required.

- **FQXSPPEM4019I: Connectivity issue detected with the enclosure/chassis. Please check your cable configurations to repair the problem.([arg1],[arg2],[arg3],[arg4],[arg5])**

Connectivity issue detected with the enclosure/chassis

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0208

User Action:

Information only; no action is required.

- **FQXSPPEM4020I: Fan problem detected with the enclosure/chassis. Please check the enclosure/chassis unit fan for correct operation.([arg1],[arg2],[arg3],[arg4],[arg5])**

Fan problem detected with the enclosure/chassis

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0209

User Action:

Information only; no action is required.

- **FQXSPPEM4022I: Enclosure/Chassis power supply has problem. Please check the enclosure/chassis unit power supply for correct operation.([arg1],[arg2],[arg3],[arg4],[arg5])**

Enclosure/Chassis power supply has problem

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0210

User Action:

Information only; no action is required.

- **FQXSPPEM4023I: One or more virtual drive are in abnormal status that may cause unavailable virtual drive. Please check the event logs and if events are targeted to the same disk then replace the drive. If necessary, contact technical support for additional assistance.([arg1],[arg2],[arg3],[arg4],[arg5])**

One or more virtual drive are in abnormal status that may cause unavailable virtual drive

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22

CIM Prefix: IMM CIM ID: 0211

User Action:

Information only; no action is required.

- **FQXSPEM4024I: The RAID controller detected one or more possible configuration problem within the subsystem. Please check the event logs and if events are targeted to the same disk then replace the drive. If necessary, contact technical support for additional assistance.([arg1],[arg2],[arg3],[arg4],[arg5])**

The RAID controller detected one or more possible configuration problem within the subsystem

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0212

User Action:

Information only; no action is required.

- **FQXSPEM4025I: One or more virtual drive have problem. Please contact technical support to resolve this issue.([arg1],[arg2],[arg3],[arg4],[arg5])**

One or more virtual drive have problem

Severity: Info
Serviceable: No
Automatically notify Support: Yes
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0213

User Action:

Information only; no action is required.

- **FQXSPEM4026I: Drive error was detected by RAID controller. Please contact technical support to resolve this issue.([arg1],[arg2],[arg3],[arg4],[arg5])**

Drive error was detected by RAID controller

Severity: Info
Serviceable: No
Automatically notify Support: Yes
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0214

User Action:

Information only; no action is required.

- **FQXSPEM4027I: Drive error was detected by RAID controller. Please check the event logs and if events are targeted to the same disk then replace the drive. If necessary, contact technical support for additional assistance.([arg1],[arg2],[arg3],[arg4],[arg5])**

Drive error was detected by RAID controller

Severity: Info

Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0215

User Action:

Information only; no action is required.

- **FQXSPeM4028I: The port [arg1] of PCIe device [arg2] at [arg3] has link [arg4].**

PCI device link

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0220

User Action:

Information only; no action is required.

- **FQXSPeM4029I: All PCIe slots on [arg1] may not be functional based upon your current CPU population.**

PCIe not be functional

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0221

User Action:

Information only; no action is required.

- **FQXSPeM4030I: A scheduled operation on the RAID controller has encountered an issue. Refer to RAID Logs under Server Management, Local Storage, for details.([arg1],[arg2],[arg3],[arg4],[arg5])**

The RAID controller has scheduled operation issue

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0223

User Action:

Information only; no action is required.

- **FQXSPeM4031I: SSD wear threshold setting is changed from [arg1] to [arg2] by user [arg3] from [arg4] at IP address [arg5].**

SSD wear threshold setting is changed by user

Severity: Info

Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0273

User Action:

Information only; no action is required.

- **FQXSPEM4032I: Acoustic Mode [arg1] has been engaged. Fan speed limits are in place.**

This message is for the use case where Acoustic Mode is engaged.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0274

User Action:

Information only; no action is required.

- **FQXSPEM4033I: Acoustic Mode [arg1] has been disengaged to allow adequate cooling.**

This message is for the use case where Acoustic Mode is disengaged.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0275

User Action:

Information only; no action is required.

- **FQXSPEM4036I: Dust filter measurement schedule is configured on server [arg1] by user [arg2] from [arg3] at IP address [arg4].**

Dust filter measurement schedule is configured

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0305

User Action:

Information only; no action is required.

- **FQXSPEM4037I: Attempting to perform scheduled dust filter measurement on server [arg1].**

Attempting to perform scheduled dust filter measurement

Severity: Info
Serviceable: No
Automatically notify Support: No

Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0306

User Action:

Information only; no action is required.

- **FQXSPeM4038I: Dust filter measurement schedule is disabled on server [arg1] by user [arg2] from [arg3] at IP address [arg4].**

Dust filter measurement schedule is disabled

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0307

User Action:

Information only; no action is required.

- **FQXSPeM4039I: Attempting to perform an immediate dust filter measurement on server [arg1] by user [arg2] from [arg3] at IP address [arg4].**

Attempting to perform an immediate dust filter measurement

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0308

User Action:

Information only; no action is required.

- **FQXSPeM4040I: Dust filter measurement is completed. The airflow pathway is obstructed, check and replace the dust filter, or remove any obstructing object.**

Alert the user when dust filter measurement fails

Severity: Warning
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0309

User Action:

Information only; no action is required.

- **FQXSPeM4041I: The SmartNIC in slot [arg1] encountered boot timeout.**

SmartNIC in a certain slot encountered boot timeout

Severity: Info
Serviceable: No
Automatically notify Support: No

Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0312

User Action:

Information only; no action is required.

- **FQXSPEM4042I: The SmartNIC in slot [arg1] went through a crash dump.**

SmartNIC in a certain slot went through a crash dump

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0313

User Action:

Information only; no action is required.

- **FQXSPEM4043I: A [arg1] failure has been detected and need [arg2] to recover.**

backplane failure has detected

Severity: Warning
Serviceable: No
Automatically notify Support: No
Alert Category: Warning - Other
SNMP Trap ID: 60
CIM Prefix: IMM CIM ID: 0320

User Action:

Information only; no action is required.

- **FQXSPEM4044I: Dust filter measurement was successfully completed, no action is needed.**

Alert the user when dust filter measurement is completed.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0321

User Action:

Information only; no action is required.

- **FQXSPFC4000I: The bare metal connection process has been started.**

Bare Metal Connection process has been started

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0143

User Action:

Information only; no action is required.

- **FQXSPFC4001I: The bare metal update application reports a status of [arg1].**

Bare Metal Update Application Status

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0144

User Action:

Information only; no action is required.

- **FQXSPFC4002I: System running in setup.**

System running in setup

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0193

User Action:

Information only; no action is required.

- **FQXSPFC4003I: UEFI deployment boot mode is enabled for NextBoot.**

UEFI deployment boot mode is enabled for NextBoot

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0197

User Action:

Information only; no action is required.

- **FQXSPFC4004I: UEFI deployment boot mode is enabled for NextAc.**

UEFI deployment boot mode is enabled for NextAC

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0198

User Action:

Information only; no action is required.

- **FQXSPFC4005I: UEFI deployment boot mode has been disabled.**

UEFI deployment boot mode has been disabled

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0199

User Action:

Information only; no action is required.

- **FQXSPFW0000N: The System [ComputerSystemElementName] encountered a POST Error.**

This message is for the use case when an implementation has detected a Post Error.

Severity: Error
Serviceable: Yes
Automatically notify Support: No
Alert Category: Critical - Other
SNMP Trap ID: 50
CIM Prefix: PLAT CIM ID: 0184

User Action:

Complete the following steps:

1. Original UEFI settings are still present. If customer desires to continue using the original settings, select Save Settings.
2. If User did not intentionally trigger the reboots, check logs for probable cause. For example, if there is a battery fault event, follow the steps to resolve that event.
3. Undo recent system changes (settings or devices added). Verify that the system boots. Then, re-install options one at a time to locate the problem.
4. Check Lenovo support site for an applicable service bulletin or firmware update that applies to this error. Update UEFI firmware if applicable.
5. Remove and re-install CMOS battery on system board for 30 seconds to clear CMOS contents. If it boots successfully, then restore system settings.
6. If problem persists, collect Service Data log.
7. Contact Lenovo Support.

- **FQXSPFW0002N: The System [ComputerSystemElementName] encountered a firmware hang.**

This message is for the use case when an implementation has detected a System Firmware Hang.

Severity: Error
Serviceable: Yes
Automatically notify Support: No
Alert Category: System - Boot failure
SNMP Trap ID: 25
CIM Prefix: PLAT CIM ID: 0186

User Action:

Complete the following steps:

1. Original UEFI settings are still present. If customer desires to continue using the original settings, select Save Settings.

2. If User did not intentionally trigger the reboots, check logs for probable cause. For example, if there is a battery fault event, follow the steps to resolve that event.
3. Undo recent system changes (settings or devices added). Verify that the system boots. Then, re-install options one at a time to locate the problem.
4. Check Lenovo support site for an applicable service bulletin or firmware update that applies to this error. Update UEFI firmware if applicable.
5. Remove and re-install CMOS battery on system board for 30 seconds to clear CMOS contents. If it boots successfully, then restore system settings.
6. If problem persists, collect Service Data log.
7. Contact Lenovo Support.

- **FQXSPIO0003N: A diagnostic interrupt has occurred on system [ComputerSystemElementName].**

This message is for the use case when an implementation has detected a Front Panel NMI / Diagnostic Interrupt.

Severity: Error
 Serviceable: Yes
 Automatically notify Support: No
 Alert Category: Critical - Other
 SNMP Trap ID: 50
 CIM Prefix: PLAT CIM ID: 0222

User Action:

If the NMI button has not been pressed, complete the following steps:

1. Reboot the system.
2. If error still exist, then collect service log and contact Lenovo support.

- **FQXSPIO0004L: A bus timeout has occurred on bus [SensorElementName].**

This message is for the use case when an implementation has detected a Bus Timeout.

Severity: Error
 Serviceable: Yes
 Automatically notify Support: No
 Alert Category: Critical - Other
 SNMP Trap ID: 50
 CIM Prefix: PLAT CIM ID: 0224

User Action:

Complete the following steps:

1. Please reseal the processor and reboot the server.
2. If the problem still exist, (service technician) please replace the system board.
3. If the problem still exist, contact Lenovo support.

- **FQXSPIO0006N: A software NMI has occurred on system [ComputerSystemElementName].**

This message is for the use case when an implementation has detected a Software NMI.

Severity: Error
 Serviceable: Yes
 Automatically notify Support: No
 Alert Category: Critical - Other
 SNMP Trap ID: 50
 CIM Prefix: PLAT CIM ID: 0228

User Action:

Check the event log in system event log to resolve any issues related the NMI.

1. If the problem persists, contact local support.

- **FQXSPIO0007N: A PCI PERR has occurred on system [ComputerSystemElementName].**

This message is for the use case when an implementation has detected a PCI PERR.

Severity: Error
Serviceable: Yes
Automatically notify Support: No
Alert Category: Critical - Other
SNMP Trap ID: 50
CIM Prefix: PLAT CIM ID: 0232

User Action:

Complete the following steps to solve:

1. Reseat the adapter or other slot.
2. If the problem still exist then replace the adapter.
3. If the problem still exist then contact local service.

- **FQXSPIO0008N: A PCI SERR has occurred on system [ComputerSystemElementName].**

This message is for the use case when an implementation has detected a PCI SERR.

Severity: Error
Serviceable: Yes
Automatically notify Support: No
Alert Category: Critical - Other
SNMP Trap ID: 50
CIM Prefix: PLAT CIM ID: 0234

User Action:

Complete the following steps to solve:

1. Reseat the adapter or other slot.
2. If the problem still exist then replace the adapter.
3. If the problem still exist then contact local service.

- **FQXSPIO0010I: A Correctable Bus Error has occurred on bus [SensorElementName].**

This message is for the use case when an implementation has detected a Bus Correctable Error.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: PLAT CIM ID: 0238

User Action:

Information only; please correct the error recorded in system log to resolve the error

- **FQXSPIO0011N: An Uncorrectable Error has occurred on [SensorElementName].**

This message is for the use case when an implementation has detected a Bus Uncorrectable Error.

Severity: Error
Serviceable: Yes
Automatically notify Support: Yes
Alert Category: Critical - Other
SNMP Trap ID: 50
CIM Prefix: PLAT CIM ID: 0240

User Action:

Check <http://support.lenovo.com/> for TECH tips or firmware updates that might correct the error.

1. Make sure that all I/O expansion adapters have correct and matching levels of device drivers and firmware.
2. Check the event log of XClarity Controller for additional information about failing components.
3. If there are no entries related to the error in the event log, contact Lenovo support

- **FQXSPIO0013N: A Fatal Bus Error has occurred on bus [SensorElementName].**

This message is for the use case when an implementation has detected a Bus Fatal Error.

Severity: Error
Serviceable: Yes
Automatically notify Support: No
Alert Category: Critical - Other
SNMP Trap ID: 50
CIM Prefix: PLAT CIM ID: 0244

User Action:

Complete the following steps:

1. Check Lenovo support site for an applicable service bulletin or firmware update for the system or adapter that applies to this error.
2. If problem persists, collect Service Data log.
3. Contact Lenovo Support.

- **FQXSPIO0014J: Bus [SensorElementName] is operating in a degraded state.**

This message is for the use case when an implementation has detected a Bus is Degraded.

Severity: Warning
Serviceable: Yes
Automatically notify Support: No
Alert Category: Warning - Other
SNMP Trap ID: 60
CIM Prefix: PLAT CIM ID: 0246

User Action:

Complete the following steps to solve:

1. Reseat the adapter or other slot.
2. If the problem still exist then replace the adapter.
3. If the problem still exist then contact local service.

- **FQXSPIO0015M: Fault in slot [PhysicalConnectorSystemElementName] on system [ComputerSystemElementName].**

This message is for the use case when an implementation has detected a Fault in a slot.

Severity: Error

Serviceable: Yes
Automatically notify Support: Yes
Alert Category: Critical - Other
SNMP Trap ID: 50
CIM Prefix: PLAT CIM ID: 0330

User Action:

Complete the following steps to fix the error:

1. Make sure that all I/O expansion adapters have correct and matching levels of device drivers and firmware.
2. Check the event log of XClarity Controller for additional information about failing components. Check <http://support.lenovo.com/> for TECH tips or firmware updates that might correct the error.
3. If there are no entries related to the error in the event log, contact Lenovo support

- **FQXSPIO2003I: System [ComputerSystemElementName] has recovered from a diagnostic interrupt.**

This message is for the use case when an implementation has detected a recovery from a Front Panel NMI / Diagnostic Interrupt

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: Critical - Other
SNMP Trap ID: 50
CIM Prefix: PLAT CIM ID: 0223

User Action:

Information only; no action is required

- **FQXSPIO2004I: Bus [SensorElementName] has recovered from a bus timeout.**

This message is for the use case when an implementation has detected that a system has recovered from a Bus Timeout.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: Critical - Other
SNMP Trap ID: 50
CIM Prefix: PLAT CIM ID: 0225

User Action:

Information only; no action is required

- **FQXSPIO2006I: System [ComputerSystemElementName] has recovered from an NMI.**

This message is for the use case when an implementation has detected a Software NMI has been Recovered from.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: Critical - Other
SNMP Trap ID: 50
CIM Prefix: PLAT CIM ID: 0230

User Action:

Information only; no action is required

- **FQXSPIO2007I: A PCI PERR recovery has occurred on system [ComputerSystemElementName].**

This message is for the use case when an implementation has detected a PCI PERR recovered.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: Critical - Other
SNMP Trap ID: 50
CIM Prefix: PLAT CIM ID: 0233

User Action:

Information only; no action is required

- **FQXSPIO2008I: A PCI SERR on system [ComputerSystemElementName] has deasserted.**

This message is for the use case when an implementation has detected a PCI SERR deassertion.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: Critical - Other
SNMP Trap ID: 50
CIM Prefix: PLAT CIM ID: 0235

User Action:

Information only; no action is required

- **FQXSPIO2010I: Bus [SensorElementName] has recovered from a Correctable Bus Error.**

This message is for the use case when an implementation has detected that a system has recovered from a Bus Correctable Error.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: PLAT CIM ID: 0239

User Action:

Information only; no action is required.

- **FQXSPIO4001I: GPU Board Status was changed by [arg1] of [arg1].**

This message is for the use case where GPU Board Status was changed.

Severity: Warning
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0276

User Action:

Information only; no action is required.

- **FQXSPIO4002I: GPU Board Status was recovered by [arg1] of [arg1].**

This message is for the use case where GPU Board Status was changed.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0277

User Action:

Information only; no action is required.

- **FQXSPMA0001I: Error Detected and Corrected for [PhysicalMemoryElementName] on Subsystem [MemoryElementName].**

This message is for the use case when an implementation has detected a Memory corrected error.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: PLAT CIM ID: 0124

User Action:

Information only; no action is required.

- **FQXSPMA0002N: Configuration Error for [PhysicalMemoryElementName] on Subsystem [MemoryElementName].**

This message is for the use case when an implementation has detected a Memory DIMM configuration error has been corrected.

Severity: Error
Serviceable: Yes
Automatically notify Support: No
Alert Category: Critical - Memory
SNMP Trap ID: 41
CIM Prefix: PLAT CIM ID: 0126

User Action:

Complete the following steps:

1. If the DIMM configuration was changed prior to this failure verify that the DIMMs are installed in the correct population sequence.
2. RESEAT the DIMM that failed POST memory test and the DIMMs on adjacent slots if populated. Boot to F1 setup and enable the DIMM. Reboot the system.
3. If the DIMMs have been upgraded just prior to the issue than update uEFI to the latest version.
4. If the problem persists, collect Service Data logs.
5. Contact Lenovo Support.

- **FQXSPMA0007L: Scrub Failure for [PhysicalMemoryElementName] on Subsystem [MemoryElementName].**

This message is for the use case when an implementation has detected a Memory Scrub failure.

Severity: Error
Serviceable: Yes
Automatically notify Support: Yes
Alert Category: Critical - Memory
SNMP Trap ID: 41
CIM Prefix: PLAT CIM ID: 0136

User Action:

Complete the following steps:

1. Ensure one or more DIMMs are installed in the server.
 2. Resolve existing memory errors if they are present.
 3. If no memory fault is recorded in the logs, verify that all DIMM connectors are enabled using the Setup utility or the OneCLI utility.
 4. Reseat all DIMMs ensuring that DIMMs are installed in the correct population sequence, according to the service information for this product.
 5. Clear CMOS memory on system board. Note that all firmware settings will revert to the defaults.
 6. Reflash UEFI firmware.
 7. If problem persists, collect Service Data log.
 8. Contact Lenovo Support.
- **FQXSPMA0008N: Uncorrectable error detected for [PhysicalMemoryElementName] on Subsystem [MemoryElementName].**

This message is for the use case when an implementation has detected a Memory uncorrectable error.

Severity: Error
Serviceable: Yes
Automatically notify Support: Yes
Alert Category: Critical - Memory
SNMP Trap ID: 41
CIM Prefix: PLAT CIM ID: 0138

User Action:

Complete the following steps:

1. If the node has recently been installed, moved, serviced, or upgraded, verify that the DIMM is properly seated and visually verify that there is no foreign material in any DIMM connector on that memory channel. If either of these conditions is found, correct and retry with the same DIMM. (Note: The event Log might contain a recent FQXSFMA0011I event denoting detected change in DIMM population that could be related to this problem.)
2. If no problem is observed on the DIMM connectors or the problem persists, replace the DIMM identified by LightPath and/or event log entry.
3. If problem recurs on the same DIMM connector, replace the other DIMMs on the same memory channel.
4. Check Lenovo support site for an applicable service bulletin or firmware update that applies to this memory error.
5. If problem recurs on the same DIMM connector, inspect connector for damage. If damage found or problem persists, collect Service Data log.
6. Contact Lenovo Support.

- **FQXSPMA0010J: [PhysicalMemoryElementName] on Subsystem [MemoryElementName] Throttled.**

This message is for the use case when an implementation has detected Memory has been Throttled.

Severity: Warning
Serviceable: Yes
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: PLAT CIM ID: 0142

User Action:

Complete the following steps:

1. Check the event log of system management module and XClarity Controller for any fan or cooling related issues.
2. Make sure that the airflow at the front and rear of the chassis is not obstructed and that fillers are in place, clean, and correctly installed.
3. Make sure that the room temperature is within operating specifications.
4. If the problem persists and there are no other DIMMs with the same indication, replace the DIMM.

- **FQXSPMA0011G: Memory Logging Limit Reached for [PhysicalMemoryElementName] on Subsystem [MemoryElementName].**

This message is for the use case when an implementation has detected that the Memory Logging Limit has been Reached.

Severity: Warning
Serviceable: Yes
Automatically notify Support: Yes
Alert Category: Warning - Memory
SNMP Trap ID: 43
CIM Prefix: PLAT CIM ID: 0144

User Action:

Complete the following steps:

1. If the node has recently been installed, moved, serviced, or upgraded, verify that the DIMM is properly seated and visually verify that there is no foreign material in any DIMM connector on that memory channel. If either of these conditions is found, correct and retry with the same DIMM. (Note: The event Log might contain a recent FQXSFMA0011I event denoting detected change in DIMM population that could be related to this problem.)
2. If no problem is observed on the DIMM connectors or the problem persists, replace the DIMM identified by LightPath and/or event log entry.
3. If problem recurs on the same DIMM connector, replace the other DIMMs on the same memory channel.
4. Check Lenovo support site for an applicable service bulletin or firmware update that applies to this memory error.
5. If problem recurs on the same DIMM connector, inspect connector for damage. If damage found or problem persists, collect Service Data log.
6. Contact Lenovo Support.

- **FQXSPMA0012M: An Over-Temperature Condition has been detected on the [PhysicalMemoryElementName] on Subsystem [MemoryElementName].**

This message is for the use case when an implementation has detected an Over Temperature Condition for Memory that has been Detected.

Severity: Error
Serviceable: Yes
Automatically notify Support: No
Alert Category: Critical - Temperature
SNMP Trap ID: 0
CIM Prefix: PLAT CIM ID: 0146

User Action:

Complete the following steps until the problem is solved:

1. Check the event log of XClarity Controller (XCC) for any fan- or cooling-related issues.
2. Make sure that the airflow at the front and rear of the chassis is not obstructed and are in place, clean, and correctly installed.
3. Make sure that the room temperature is within operating specifications.
4. If the problem remains and no other DIMMs have the same indication, replace the DIMM.

- **FQXSPMA0022I: Post Package Repair Success for [PhysicalMemoryElementName] on Subsystem [MemoryElementName].**

This message is for the use case when an implementation has detected that Memory double chip sparing has been initiated.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: PLAT CIM ID: 0140

User Action:

Information only; no action is required.

- **FQXSPMA0023I: Post Package Repair Failure for [PhysicalMemoryElementName] on Subsystem [MemoryElementName].**

This message is for the use case when an implementation has detected that Memory double chip sparing has been initiated.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: PLAT CIM ID: 0140

User Action:

Information only; no action is required.

- **FQXSPMA0024G: Sensor [SensorElementName] has asserted.**

This message is for the use case when an implementation has detected a Sensor has asserted.

Severity: Warning
Serviceable: No
Automatically notify Support: No

Alert Category: Warning - Memory
SNMP Trap ID: 43
CIM Prefix: PLAT CIM ID: 0508

User Action:

Complete the following steps:

1. If the DIMM configuration was changed prior to this failure verify that the DIMMs are installed in the correct population sequence.
2. RESEAT the DIMM that failed POST memory test and the DIMMs on adjacent slots if populated. Boot to F1 setup and enable the DIMM. Reboot the system.
3. If the DIMMs have been upgraded just prior to the issue than update uEFI to the latest version.
4. If the problem persists, collect Service Data logs.
5. Contact Lenovo Support.

- **FQXSPMA0025I: Sensor [SensorElementName] has asserted.**

This message is for the use case when an implementation has detected a Sensor has asserted.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: PLAT CIM ID: 0508

User Action:

Information only; no action is required.

- **FQXSPMA2007I: Scrub Failure for [PhysicalMemoryElementName] on Subsystem [MemoryElementName] has recovered.**

This message is for the use case when an implementation has detected a Memory Scrub failure recovery.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: Critical - Memory
SNMP Trap ID: 41
CIM Prefix: PLAT CIM ID: 0137

User Action:

Information only; no action is required

- **FQXSPMA2010I: [PhysicalMemoryElementName] on Subsystem [MemoryElementName] is no longer Throttled.**

This message is for the use case when an implementation has detected Memory is no longer Throttled.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: PLAT CIM ID: 0143

User Action:

Information only; no action is required

- **FQXSPMA2012I: An Over-Temperature Condition has been removed on the [PhysicalMemoryElementName] on Subsystem [MemoryElementName].**

This message is for the use case when an implementation has detected an Over Temperature Condition for Memory that has been Removed.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: Critical - Temperature
SNMP Trap ID: 0
CIM Prefix: PLAT CIM ID: 0147

User Action:

Information only; no action is required

- **FQXSPMA2024I: Sensor [SensorElementName] has deasserted.**

This message is for the use case when an implementation has detected a Sensor has deasserted.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: Warning - Memory
SNMP Trap ID:
CIM Prefix: PLAT CIM ID: 0509

User Action:

Information only; no action is required

- **FQXSPNM4000I: Management Controller [arg1] Network Initialization Complete.**

This message is for the use case where a Management Controller network has completed initialization.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - IMM Network event
SNMP Trap ID: 37
CIM Prefix: IMM CIM ID: 0001

User Action:

Information only; no action is required.

- **FQXSPNM4001I: Ethernet Data Rate modified from [arg1] to [arg2] by user [arg3].**

This message is for the use case where a user modifies the Ethernet Port data rate.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0003

User Action:

Information only; no action is required.

- **FQXSPNM4002I: Ethernet Duplex setting modified from [arg1] to [arg2] by user [arg3].**

This message is for the use case where A user modifies the Ethernet Port duplex setting.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0004

User Action:

Information only; no action is required.

- **FQXSPNM4003I: Ethernet MTU setting modified from [arg1] to [arg2] by user [arg3].**

This message is for the use case where a user modifies the Ethernet Port MTU setting.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0005

User Action:

Information only; no action is required.

- **FQXSPNM4004I: Ethernet locally administered MAC address modified from [arg1] to [arg2] by user [arg3].**

This message is for the use case where a user modifies the Ethernet Port MAC address setting.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0006

User Action:

Information only; no action is required.

- **FQXSPNM4005I: Ethernet interface [arg1] by user [arg2].**

This message is for the use case where a user enables or disabled the ethernet interface.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0007

User Action:

Information only; no action is required.

- **FQXSPNM4006I: Hostname set to [arg1] by user [arg2].**

This message is for the use case where user modifies the Hostname of a Management Controller.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - IMM Network event
SNMP Trap ID: 37
CIM Prefix: IMM CIM ID: 0008

User Action:

Information only; no action is required.

- **FQXSPNM4007I: IP address of network interface modified from [arg1] to [arg2] by user [arg3].**

This message is for the use case where user modifies the IP address of a Management Controller.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - IMM Network event
SNMP Trap ID: 37
CIM Prefix: IMM CIM ID: 0009

User Action:

Information only; no action is required.

- **FQXSPNM4008I: IP subnet mask of network interface modified from [arg1] to [arg2] by user [arg3].**

This message is for the use case where a user modifies the IP subnet mask of a Management Controller.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0010

User Action:

Information only; no action is required.

- **FQXSPNM4009I: IP address of default gateway modified from [arg1] to [arg2] by user [arg3].**

This message is for the use case where a user modifies the default gateway IP address of a Management Controller.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0011

User Action:

Information only; no action is required.

- **FQXSPNM4010I: DHCP[[arg1]] failure, no IP address assigned.**

This message is for the use case where a DHCP server fails to assign an IP address to a Management Controller.

Severity: Warning
Serviceable: No
Automatically notify Support: No
Alert Category: System - IMM Network event
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0013

User Action:

Complete the following steps until the problem is solved:

1. Make sure that the XCC/BMC management network cable is connected and the network ports is active.
 2. Make sure that there is a DHCP server on the network that can assign an IP address to the XCC/BMC.
 3. If problem persists, collect Service Data log.
 4. Contact Lenovo Support.
- **FQXSPNM4011I: ENET[[arg1]] DHCP-HSTN=[arg2], DN=[arg3], IP@=[arg4], SN=[arg5], GW@[arg6], DNS1@=[arg7] .**

This message is for the use case where a Management Controller IP address and configuration has been assigned by the DHCP server.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - IMM Network event
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0022

User Action:

Information only; no action is required.

- **FQXSPNM4012I: ENET[[arg1]] IP-Cfg:HstName=[arg2], IP@=[arg3] ,NetMsk=[arg4], GW@[arg5] .**

This message is for the use case where a Management Controller IP address and configuration has been assigned statically using user data.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - IMM Network event
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0023

User Action:

Information only; no action is required.

- **FQXSPNM4013I: LAN: Ethernet[[arg1]] interface is no longer active.**

This message is for the use case where a Management Controller ethernet interface is no longer active.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - IMM Network event
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0024

User Action:

Information only; no action is required.

- **FQXSPNM4014I: LAN: Ethernet[[arg1]] interface is now active.**

This message is for the use case where a Management Controller ethernet interface is now active.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - IMM Network event
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0025

User Action:

Information only; no action is required.

- **FQXSPNM4015I: DHCP setting changed to [arg1] by user [arg2].**

This message is for the use case where a user changes the DHCP setting.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0026

User Action:

Information only; no action is required.

- **FQXSPNM4016I: Domain name set to [arg1] by user [arg2].**

Domain name set by user

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0043

User Action:

Information only; no action is required.

- **FQXSPNM4017I: Domain Source changed to [arg1] by user [arg2].**

Domain source changed by user

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0044

User Action:

Information only; no action is required.

- **FQXSPNM4018I: DDNS setting changed to [arg1] by user [arg2].**

DDNS setting changed by user

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0045

User Action:

Information only; no action is required.

- **FQXSPNM4019I: DDNS registration successful. The domain name is [arg1].**

DDNS registration and values

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - IMM Network event
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0046

User Action:

Information only; no action is required.

- **FQXSPNM4020I: IPv6 enabled by user [arg1] .**

IPv6 protocol is enabled by user

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0047

User Action:

Information only; no action is required.

- **FQXSPNM4021I: IPv6 disabled by user [arg1] .**

IPv6 protocol is disabled by user

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0048

User Action:

Information only; no action is required.

- **FQXSPNM4022I: IPv6 static IP configuration enabled by user [arg1].**

IPv6 static address assignment method is enabled by user

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0049

User Action:

Information only; no action is required.

- **FQXSPNM4023I: IPv6 DHCP enabled by user [arg1].**

IPv6 DHCP assignment method is enabled by user

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0050

User Action:

Information only; no action is required.

- **FQXSPNM4024I: IPv6 stateless auto-configuration enabled by user [arg1].**

IPv6 statless auto-assignment method is enabled by user

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0051

User Action:

Information only; no action is required.

- **FQXSPNM4025I: IPv6 static IP configuration disabled by user [arg1].**

IPv6 static assignment method is disabled by user

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0052

User Action:

Information only; no action is required.

- **FQXSPNM4026I: IPv6 DHCP disabled by user [arg1].**

IPv6 DHCP assignment method is disabled by user

Severity: Info
Serviceable: No
Automatically notify Support: No

Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0053

User Action:

Information only; no action is required.

- **FQXSPNM4027I: IPv6 stateless auto-configuration disabled by user [arg1].**

IPv6 statless auto-assignment method is disabled by user

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0054

User Action:

Information only; no action is required.

- **FQXSPNM4028I: ENET[[arg1]] IPv6-LinkLocal:HstName=[arg2], IP@=[arg3] ,Pref=[arg4].**

IPv6 Link Local address is active

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - IMM Network event
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0055

User Action:

Information only; no action is required.

- **FQXSPNM4029I: ENET[[arg1]] IPv6-Static:HstName=[arg2], IP@=[arg3] ,Pref=[arg4], GW@=[arg5] .**

IPv6 Static address is active

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - IMM Network event
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0056

User Action:

Information only; no action is required.

- **FQXSPNM4030I: ENET[[arg1]] DHCPv6-HSTN=[arg2], DN=[arg3], IP@=[arg4], Pref=[arg5], DNS1@=[arg5].**

IPv6 DHCP-assigned address is active

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - IMM Network event
SNMP Trap ID:

CIM Prefix: IMM CIM ID: 0057

User Action:

Information only; no action is required.

- **FQXSPNM4031I: IPv6 static address of network interface modified from [arg1] to [arg2] by user [arg3].**

A user modifies the IPv6 static address of a Management Controller

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0058

User Action:

Information only; no action is required.

- **FQXSPNM4032I: DHCPv6 failure, no IP address assigned.**

S DHCP6 server fails to assign an IP address to a Management Controller.

Severity: Warning
Serviceable: No
Automatically notify Support: No
Alert Category: System - IMM Network event
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0059

User Action:

Complete the following steps until the problem is solved:

1. Make sure that the XCC/BMC management network cable is connected and the network ports is active.
2. Make sure that there is a DHCPv6 server on the network that can assign an IP address to the XCC/BMC.
3. If problem persists, collect Service Data log.
4. Contact Lenovo Support.

- **FQXSPNM4033I: Telnet port number changed from [arg1] to [arg2] by user [arg3].**

A user has modified the telnet port number

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0061

User Action:

Information only; no action is required.

- **FQXSPNM4034I: SSH port number changed from [arg1] to [arg2] by user [arg3].**

A user has modified the SSH port number

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0062

User Action:

Information only; no action is required.

- **FQXSPNM4035I: Web-HTTP port number changed from [arg1] to [arg2] by user [arg3].**

A user has modified the Web HTTP port number

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0063

User Action:

Information only; no action is required.

- **FQXSPNM4036I: Web-HTTPS port number changed from [arg1] to [arg2] by user [arg3].**

A user has modified the Web HTTPS port number

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0064

User Action:

Information only; no action is required.

- **FQXSPNM4037I: CIM/XML HTTP port number changed from [arg1] to [arg2] by user [arg3].**

A user has modified the CIM HTTP port number

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0065

User Action:

Information only; no action is required.

- **FQXSPNM4038I: CIM/XML HTTPS port number changed from [arg1] to [arg2] by user [arg3].**

A user has modified the CIM HTTPS port number

Severity: Info
Serviceable: No
Automatically notify Support: No

Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0066

User Action:

Information only; no action is required.

- **FQXSPNM4039I: SNMP Agent port number changed from [arg1] to [arg2] by user [arg3].**

A user has modified the SNMP Agent port number

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0067

User Action:

Information only; no action is required.

- **FQXSPNM4040I: SNMP Traps port number changed from [arg1] to [arg2] by user [arg3].**

A user has modified the SNMP Traps port number

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0068

User Action:

Information only; no action is required.

- **FQXSPNM4041I: Syslog port number changed from [arg1] to [arg2] by user [arg3].**

A user has modified the Syslog receiver port number

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0069

User Action:

Information only; no action is required.

- **FQXSPNM4042I: Remote Presence port number changed from [arg1] to [arg2] by user [arg3].**

A user has modified the Remote Presence port number

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0070

User Action:

Information only; no action is required.

- **FQXSPNM4043I: SMTP Server set by user [arg1] to [arg2]:[arg3].**

A user configured the SMTP server

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0086

User Action:

Information only; no action is required.

- **FQXSPNM4044I: Telnet [arg1] by user [arg2].**

A user enables or disables Telnet services

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0087

User Action:

Information only; no action is required.

- **FQXSPNM4045I: DNS servers set by user [arg1]: UseAdditionalServers=[arg2], PreferredDNStype=[arg3], IPv4Server1=[arg4], IPv4Server2=[arg5], IPv4Server3=[arg6], IPv6Server1=[arg7], IPv6Server2=[arg8], IPv6Server3=[arg9].**

A user configures the DNS servers

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0088

User Action:

Information only; no action is required.

- **FQXSPNM4046I: LAN over USB [arg1] by user [arg2].**

A user configured USB-LAN

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0089

User Action:

Information only; no action is required.

- **FQXSPNM4047I: LAN over USB Port Forwarding set by user [arg1]: ExternalPort=[arg2], USB-LAN port=[arg3].**

A user configured USB-LAN port forwarding

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0090

User Action:

Information only; no action is required.

- **FQXSPNM4048I: PXE boot requested by user [arg1].**

PXE boot requested

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0129

User Action:

Information only; no action is required.

- **FQXSPNM4049I: User [arg1] has initiated a TKLM Server Connection Test to check connectivity to server [arg2].**

User initiated a TKLM Server Connection test.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0159

User Action:

Information only; no action is required.

- **FQXSPNM4050I: User [arg1] has initiated an SMTP Server Connection Test.**

User initiated an SMTP Server Connection test.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0160

User Action:

Information only; no action is required.

- **FQXSPNM40511: User [arg1] has set the SMTP Server reverse-path to [arg2].**

User set SMTP Server reverse-path address

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0163

User Action:

Information only; no action is required.

- **FQXSPNM40521: DHCP specified hostname is set to [arg1] by user [arg2].**

DHCP specified hostname is set by user

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0216

User Action:

Information only; no action is required.

- **FQXSPNM40531: DNS discovery of Lenovo XClarity Administrator has been [arg1] by user [arg2].**

DNS discovery of Lenovo XClarity Administrator

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0217

User Action:

Information only; no action is required.

- **FQXSPNM40541: The hostname from DHCP is [arg1] by user [arg2].**

This message is for getting hostname from DHCP.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - IMM Network event
SNMP Trap ID: 37
CIM Prefix: IMM CIM ID: 0244

User Action:

Information only; no action is required.

- **FQXSPNM40551: The hostname from DHCP is invalid.**

This message is for hostname from DHCP is invalid.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - IMM Network event
SNMP Trap ID: 37
CIM Prefix: IMM CIM ID: 0245

User Action:

Information only; no action is required.

- **FQXSPNM4056I: The NTP server address [arg1] is invalid.**

Report NTP server invalid

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - IMM Network event
SNMP Trap ID: 37
CIM Prefix: IMM CIM ID: 0249

User Action:

Information only; no action is required.

- **FQXSPNM4057I: Security: IP address: [arg1] had [arg2] login failures, it will be blocked to access for [arg3] minutes.**

This message is for the use case where IP address blocking.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - IMM Network event
SNMP Trap ID: 37
CIM Prefix: IMM CIM ID: 0250

User Action:

Information only; no action is required.

- **FQXSPNM4058I: IP address of network interface [arg1] is modified from [arg2] to [arg3] by user [arg4].**

This message is for the use case where user modifies the IP address of a Management Controller.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - IMM Network event
SNMP Trap ID: 37
CIM Prefix: IMM CIM ID: 0286

User Action:

Information only; no action is required.

- **FQXSPNM4059I: IP subnet mask of network interface [arg1] is modified from [arg2] to [arg3] by user [arg4].**

This message is for the use case where a user modifies the IP subnet mask of a Management Controller.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0287

User Action:

Information only; no action is required.

- **FQXSPNM4060I: IP address of default gateway of network interface [arg1] is modified from [arg2] to [arg3] by user [arg4].**

This message is for the use case where a user modifies the default gateway IP address of a Management Controller.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0288

User Action:

Information only; no action is required.

- **FQXSPOS4000I: OS Watchdog response [arg1] by [arg2] .**

This message is for the use case where an OS Watchdog has been enabled or disabled by a user.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0012

User Action:

Information only; no action is required.

- **FQXSPOS4001I: Watchdog [arg1] Screen Capture Occurred .**

This message is for the use case where an operating system error has occurred and the screen was captured.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0028

User Action:

Complete the following steps until the problem is solved:

1. If there was no operating-system error:
2. Reconfigure the watchdog timer to a higher value.
3. Make sure that the BMC Ethernet-over-USB interface is enabled.

4. Reinstall the RNDIS or cdc_ether device driver for the operating system.
5. Disable the watchdog.
6. If there was an operating-system error, check the integrity of the installed operating system.

- **FQXSPOS4002I: Watchdog [arg1] Failed to Capture Screen.**

This message is for the use case where an operating system error has occurred and the screen capture failed.

Severity: Error
Serviceable: No
Automatically notify Support: No
Alert Category: System - other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0029

User Action:

Complete the following steps until the problem is solved:

1. Reconfigure the watchdog timer to a higher value.
2. Make sure that the BMC Ethernet over USB interface is enabled.
3. Reinstall the RNDIS or cdc_ether device driver for the operating system.
4. Disable the watchdog.
5. Check the integrity of the installed operating system.
6. If problem persists, collect Service Data log.
7. Contact Lenovo Support.

- **FQXSPOS4003I: Platform Watchdog Timer expired for [arg1].**

An implementation has detected an OS Loader Watchdog Timer Expired

Severity: Error
Serviceable: No
Automatically notify Support: No
Alert Category: System - Loader timeout
SNMP Trap ID: 26
CIM Prefix: IMM CIM ID: 0060

User Action:

Complete the following steps until the problem is solved:

1. Reconfigure the watchdog timer to a higher value.
2. Make sure that the BMC Ethernet over USB interface is enabled.
3. Reinstall the RNDIS or cdc_ether device driver for the operating system.
4. Disable the watchdog.
5. If problem persists, collect Service Data log.
6. Contact Lenovo Support. Check the integrity of the installed operating system.

- **FQXSPOS4004I: Operating System status has changed to [arg1].**

Operating System status change

Severity: Info
Serviceable: No
Automatically notify Support: No

Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0191

User Action:

Information only; no action is required.

- **FQXSPOS4005I: Host Power-On password changed by user [arg1] from [arg2] at IP address [arg3].**

This message is for the use case where Host Power-On password changed.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0231

User Action:

Information only; no action is required.

- **FQXSPOS4006I: Host Power-On password cleared by user [arg1] from [arg2] at IP address [arg3].**

This message is for the use case where Host Power-On password cleared.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0232

User Action:

Information only; no action is required.

- **FQXSPOS4007I: Host Admin password changed by user [arg1] from [arg2] at IP address [arg3].**

This message is for the use case where Host Admin password changed.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0233

User Action:

Information only; no action is required.

- **FQXSPOS4008I: Host Admin password cleared by user [arg1] from [arg2] at IP address [arg3].**

This message is for the use case where Host Admin password cleared.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0234

User Action:

Information only; no action is required.

- **FQXSPPOS4009I: OS Crash Video Captured.**

This message is for the use case where OS Crash Video Captured.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0235

User Action:

Information only; no action is required.

- **FQXSPPOS4010I: OS Crash Video Capture Failed.**

This message is for the use case where OS Crash Video Capture Failed.

Severity: Error
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0236

User Action:

Complete the following steps until the problem is solved:

1. Check if the OS watchdog is enabled
2. Check if the crash video recording is enabled
3. If problem persists, collect Service Data log.
4. Contact Lenovo Support.

- **FQXSPPOS4011I: OS failure screen capture with hardware error is [arg1] by user [arg2] from [arg3] at IP address [arg4].**

OS failure screen capture with hardware error is enabled or disabled by user.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0280

User Action:

Information only; no action is required.

- **FQXSPPOS4012I: POST watchdog Screen Capture Occurred.**

This message is for the use case where an operating system error has occurred and the screen was captured.

Severity: Info
Serviceable: No

Automatically notify Support: No
Alert Category: System - other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0302

User Action:

Information only; no action is required.

- **FQXSPPP4000I: Attempting to [arg1] server [arg2] by user [arg3].**

This message is for the use case where a user is using the Management Controller to perform a power function on the system.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0015

User Action:

Information only; no action is required.

- **FQXSPPP4001I: Server Power Off Delay set to [arg1] by user [arg2].**

A user configured the Server Power Off Delay

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0081

User Action:

Information only; no action is required.

- **FQXSPPP4002I: Server [arg1] scheduled for [arg2] at [arg3] by user [arg4].**

A user configured a Server Power action at a specific time

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0082

User Action:

Information only; no action is required.

- **FQXSPPP4003I: Server [arg1] scheduled for every [arg2] at [arg3] by user [arg4].**

A user configured a recurring Server Power Action

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other

SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0083

User Action:

Information only; no action is required.

- **FQXSPPP4004I: Server [arg1] [arg2] cleared by user [arg3].**

A user cleared a Server Power Action.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0084

User Action:

Information only; no action is required.

- **FQXSPPP4005I: The power cap value changed from [arg1] watts to [arg2] watts by user [arg3].**

Power Cap values changed by user

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0113

User Action:

Information only; no action is required.

- **FQXSPPP4006I: The minimum power cap value changed from [arg1] watts to [arg2] watts.**

Minimum Power Cap value changed

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0114

User Action:

Information only; no action is required.

- **FQXSPPP4007I: The maximum power cap value changed from [arg1] watts to [arg2] watts.**

Maximum Power Cap value changed

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0115

User Action:

Information only; no action is required.

- **FQXSPPP4008I: The soft minimum power cap value changed from [arg1] watts to [arg2] watts.**

Soft Minimum Power Cap value changed

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0116

User Action:

Information only; no action is required.

- **FQXSPPP4009I: The measured power value exceeded the power cap value.**

Power exceeded cap

Severity: Warning
Serviceable: No
Automatically notify Support: No
Alert Category: Warning - Power
SNMP Trap ID: 164
CIM Prefix: IMM CIM ID: 0117

User Action:

Information only; no action is required.

- **FQXSPPP4010I: The new minimum power cap value exceeded the power cap value.**

Minimum Power Cap exceeds Power Cap

Severity: Warning
Serviceable: No
Automatically notify Support: No
Alert Category: Warning - Power
SNMP Trap ID: 164
CIM Prefix: IMM CIM ID: 0118

User Action:

Information only; no action is required.

- **FQXSPPP4011I: Power capping was activated by user [arg1].**

Power capping activated by user

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0119

User Action:

Information only; no action is required.

- **FQXSPPP4012I: Power capping was deactivated by user [arg1].**

Power capping deactivated by user

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0120

User Action:

Information only; no action is required.

- **FQXSPPP4013I: Static Power Savings mode has been turned on by user [arg1].**

Static Power Savings mode turned on by user

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0121

User Action:

Information only; no action is required.

- **FQXSPPP4014I: Static Power Savings mode has been turned off by user [arg1].**

Static Power Savings mode turned off by user

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0122

User Action:

Information only; no action is required.

- **FQXSPPP4015I: Dynamic Power Savings mode has been turned on by user [arg1].**

Dynamic Power Savings mode turned on by user

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0123

User Action:

Information only; no action is required.

- **FQXSPPP4016I: Dynamic Power Savings mode has been turned off by user [arg1].**

Dynamic Power Savings mode turned off by user

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0124

User Action:

Information only; no action is required.

- **FQXSPPP4017I: Power cap and external throttling occurred.**

Power cap and external throttling occurred

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0125

User Action:

Information only; no action is required.

- **FQXSPPP4018I: External throttling occurred .**

External throttling occurred

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0126

User Action:

Information only; no action is required.

- **FQXSPPP4019I: Power cap throttling occurred.**

Power cap throttling occurred

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0127

User Action:

Information only; no action is required.

- **FQXSPPP4020I: The measured power value has returned below the power cap value.**

Power exceeded cap recovered

Severity: Info
Serviceable: No
Automatically notify Support: No

Alert Category: Warning - Power
SNMP Trap ID: 164
CIM Prefix: IMM CIM ID: 0130

User Action:

Information only; no action is required.

- **FQXSPPP4021I: The new minimum power cap value has returned below the power cap value.**

Minimum Power Cap exceeds Power Cap recovered

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: Warning - Power
SNMP Trap ID: 164
CIM Prefix: IMM CIM ID: 0131

User Action:

Information only; no action is required.

- **FQXSPPP4022I: The server was restarted for an unknown reason.**

The server was restarted for an unknown reason

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0166

User Action:

Information only; no action is required.

- **FQXSPPP4023I: The server is restarted by chassis control command.**

Server is restarted by chassis control command

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0167

User Action:

Information only; no action is required.

- **FQXSPPP4024I: The server was reset via push button.**

Server was reset via push button

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0168

User Action:

Information only; no action is required.

- **FQXSPPP4025I: The server was powered-up via power push button.**

Server was power-up via power push button

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0169

User Action:

Information only; no action is required.

- **FQXSPPP4026I: The server was restarted when the watchdog expired..**

Server was restarted when the watchdog expired.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0170

User Action:

Information only; no action is required.

- **FQXSPPP4027I: The server was restarted for OEM reason.**

Server was restarted for OEM reason

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0171

User Action:

Information only; no action is required.

- **FQXSPPP4028I: The server was automatically powered on because the power restore policy is set to always on.**

Server was automatically powered on because the power restore policy is set to always on.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0172

User Action:

Information only; no action is required.

- **FQXSPPP4029I: The server was automatically powered on because the power restore policy is set to restore previous power state..**

Server was automatically powered on because the power restore policy is set to restore previous power state.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0173

User Action:

Information only; no action is required.

- **FQXSPPP4030I: The server was reset via Platform Event Filter.**

Server was reset via Platform Event Filter

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0174

User Action:

Information only; no action is required.

- **FQXSPPP4031I: The server was power-cycled via Platform Event Filter.**

Server was power-cycled via Platform Event Filter

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0175

User Action:

Information only; no action is required.

- **FQXSPPP4032I: The server was soft reset.**

Server was soft reset

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0176

User Action:

Information only; no action is required.

- **FQXSPPP4033I: The server was powered up via Real Time Clock (scheduled power on).**

Server was powered up via Real Time Clock (scheduled power on)

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0177

User Action:

Information only; no action is required.

- **FQXSPPP4034I: The server was powered off for an unknown reason.**

Server was powered off for an unknown reason

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0178

User Action:

Information only; no action is required.

- **FQXSPPP4035I: The server was powered off by chassis control command.**

Server was powered off by chassis control command

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0179

User Action:

Information only; no action is required.

- **FQXSPPP4036I: The server was powered off via push button.**

Server was powered off via push button

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0180

User Action:

Information only; no action is required.

- **FQXSPPP4037I: The server was powered off when the watchdog expired.**

Server was powered off when the watchdog expired.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0181

User Action:

Information only; no action is required.

- **FQXSPPP4038I: The server stayed powered off because the power restore policy is set to always off.**

Server stayed powered off because the power restore policy is set to always off.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0182

User Action:

Information only; no action is required.

- **FQXSPPP4039I: The server stayed powered off because the power restore policy is set to restore previous power state..**

Server stayed powered off because the power restore policy is set to restore previous power state.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0183

User Action:

Information only; no action is required.

- **FQXSPPP4040I: The server was powered off via Platform Event Filter.**

Server was power off via Platform Event Filter

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0184

User Action:

Information only; no action is required.

- **FQXSPPP4041I: The server was powered off via Real Time Clock (scheduled power off).**

Server was powered up via Real Time Clock (scheduled power off)

Severity: Info

Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0185

User Action:

Information only; no action is required.

- **FQXSPPP4042I: Management Controller [arg1] reset was initiated due to Power-On-Reset.**

Management Controller reset was initiated due to Power-On-Reset

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0186

User Action:

Information only; no action is required.

- **FQXSPPP4043I: Management Controller [arg1] reset was initiated by PRESET.**

Management Controller reset was initiated by PRESET

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0187

User Action:

Information only; no action is required.

- **FQXSPPP4044I: Management Controller [arg1] reset was initiated by CMM.**

Management Controller reset was initiated by CMM

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0188

User Action:

Information only; no action is required.

- **FQXSPPP4045I: Management Controller [arg1] reset was initiated by XCC firmware.**

Management Controller reset was initiated by XCC firmware

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other

SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0189

User Action:

Information only; no action is required.

- **FQXSPPP4047I: Management Controller [arg1] reset was initiated by user [arg2].**

This message is for the use case where a Management Controller reset is initiated by a user.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0021

User Action:

Information only; no action is required.

- **FQXSPPP4048I: Attempting to AC power cycle server [arg1] by user [arg2].**

AC power cycle server

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0227

User Action:

Information only; no action is required.

- **FQXSPPP4049I: Management Controller [arg1] reset was initiated by Front Panel.**

Management Controller reset was initiated by Front Panel

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0252

User Action:

Information only; no action is required.

- **FQXSPPP4050I: Management Controller [arg1] reset was initiated to activate PFR Firmware.**

Management Controller reset was initiated to activate PFR Firmware.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0253

User Action:

Information only; no action is required.

- **FQXSPPP4051I: The programmable GPU total power capping value in slot [arg1] is changed to [arg2] watts by user [arg3] from [arg4] at IP address [arg5].**

programmable GPU total power capping changed by user

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0296

User Action:

Information only; no action is required.

- **FQXSPPP4052I: The programmable GPU peak power capping value in slot [arg1] is changed to [arg2] watts by user [arg3] from [arg4] at IP address [arg5].**

programmable GPU peak power capping changed by user

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0297

User Action:

Information only; no action is required.

- **FQXSPPP4053I: This message is reserved.**

This message is reserved.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0301

User Action:

Information only; no action is required.

- **FQXSPPP4054I: Unbalanced PSU config is detected, system is using less node PSU capacity.**

This message is for the use case where user installed unbalanced PSU.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0316

User Action:

Information only; no action is required.

- **FQXSPPU0001N: An Over-Temperature Condition has been detected on [ProcessorElementName].**

This message is for the use case when an implementation has detected an Over-Temperature Condition Detected for Processor.

Severity: Error
Serviceable: Yes
Automatically notify Support: No
Alert Category: Critical - Temperature
SNMP Trap ID: 0
CIM Prefix: PLAT CIM ID: 0036

User Action:

Complete the following steps until the problem is solved:

1. Check the event log of XClarity Controller (XCC) for any fan- or cooling-related issues.
2. Make sure that the airflow at the front and rear of the chassis is not obstructed and that fillers are in place, clean, and correctly installed.
3. Make sure that the room temperature is within operating specifications.
4. Make sure that the CPU heat sink is securely installed.
5. Make sure that the CPU heat sink is installed correctly and the thermal interface is correctly applied.
6. (Trained technician only) Replace the system board.

- **FQXSPPU0002G: The Processor [ProcessorElementName] is operating in a Degraded State.**

This message is for the use case when an implementation has detected a Processor is running in the Degraded state.

Severity: Warning
Serviceable: Yes
Automatically notify Support: No
Alert Category: Warning - CPU
SNMP Trap ID: 42
CIM Prefix: PLAT CIM ID: 0038

User Action:

Complete the following steps:

1. Check the XCC event log for any fan, cooling or power related issues.
2. Make sure fan and power supply unit is installed correctly and clean. Go to <https://pubs.lenovo.com/sd530-v3/> and click chassis specifications for power supply configurations.
3. Make sure that the airflow at the front and rear of the chassis is not obstructed
4. Make sure that the room temperature is in the range in the operating specifications.
5. If the problem still exist and XCC event is related to power supply unit, please upgrade power supply unit with supported specification.
6. Once you finish the action above and can't solve issue, please contact Lenovo support.

- **FQXSPPU0003N: [ProcessorElementName] has Failed with IERR.**

This message is for the use case when an implementation has detected a Processor Failed - IERR Condition.

Severity: Error
Serviceable: Yes

Automatically notify Support: No
Alert Category: Critical - CPU
SNMP Trap ID: 40
CIM Prefix: PLAT CIM ID: 0042

User Action:

Complete the following steps:

1. Check Lenovo support site for an applicable service bulletin or UEFI firmware update that applies to this Processor error.
2. Reboot system.
3. If problem persists, collect Service Data log.
4. Contact Lenovo Support.

- **FQXSPPU0004M: [ProcessorElementName] has Failed with FRB1/BIST condition.**

This message is for the use case when an implementation has detected a Processor Failed - FRB1/BIST condition.

Severity: Error
Serviceable: Yes
Automatically notify Support: Yes
Alert Category: Critical - CPU
SNMP Trap ID: 40
CIM Prefix: PLAT CIM ID: 0044

User Action:

Information only; no action is required.

- **FQXSPPU0009N: [ProcessorElementName] has a Configuration Mismatch.**

This message is for the use case when an implementation has detected a Processor Configuration Mismatch has occurred.

Severity: Error
Serviceable: Yes
Automatically notify Support: No
Alert Category: Critical - CPU
SNMP Trap ID: 40
CIM Prefix: PLAT CIM ID: 0062

User Action:

Complete the following steps:

1. Check Lenovo support site for an applicable service bulletin or firmware update that applies to this processor error.
2. If problem persists, collect Service Data log.
3. Contact Lenovo Support.

- **FQXSPPU0010G: The Processor [ProcessorElementName] is operating in a Degraded State due to [ProcessorElementName].**

This message is for the use case when an implementation has detected a Processor is running in the Degraded state.

Severity: Warning
Serviceable: Yes

Automatically notify Support: No
Alert Category: Warning - CPU
SNMP Trap ID: 42
CIM Prefix: PLAT CIM ID: 0038

User Action:

Check the XCC event log for any fan or cooling related issues and address them first.

1. Make sure that the airflow at the front and rear of the chassis is not obstructed and that fillers are correctly installed and are in place.
2. Make sure that the room temperature is within operating specifications.
3. Upgrade all system and chassis (if applicable) firmware to the latest level.
4. If problem persists, collect Service Data log.
5. Contact Lenovo Support.

- **FQXSPPU0011N: An SM BIOS Uncorrectable CPU complex error for [ProcessorElementName] has asserted.**

This message is for the use case when an SM BIOS Uncorrectable CPU complex error has asserted.

Severity: Error
Serviceable: Yes
Automatically notify Support: No
Alert Category: Critical - CPU
SNMP Trap ID: 40
CIM Prefix: PLAT CIM ID: 0816

User Action:

Complete the following steps:

1. Check Lenovo support site for an applicable service bulletin or UEFI firmware update that applies to this error.
2. Reboot system.
3. If problem persists, collect Service Data log.
4. Contact Lenovo Support.

- **FQXSPPU2001I: An Over-Temperature Condition has been removed on [ProcessorElementName].**

This message is for the use case when an implementation has detected a Over-Temperature Condition has been Removed for Processor.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: Critical - Temperature
SNMP Trap ID: 0
CIM Prefix: PLAT CIM ID: 0037

User Action:

Information only; no action is required

- **FQXSPPU2002I: The Processor [ProcessorElementName] is no longer operating in a Degraded State.**

This message is for the use case when an implementation has detected a Processor is no longer running in the Degraded state.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: Warning - CPU
SNMP Trap ID: 42
CIM Prefix: PLAT CIM ID: 0039

User Action:

Information only; no action is required

- **FQXSPPU2003I: [ProcessorElementName] has Recovered from IERR.**

This message is for the use case when an implementation has detected a Processor Recovered - IERR Condition.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: Critical - CPU
SNMP Trap ID: 40
CIM Prefix: PLAT CIM ID: 0043

User Action:

Information only; no action is required.

- **FQXSPPU2004I: [ProcessorElementName] has Recovered from FRB1/BIST condition.**

This message is for the use case when an implementation has detected a Processor Recovered - FRB1/BIST condition.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: Critical - CPU
SNMP Trap ID: 40
CIM Prefix: PLAT CIM ID: 0045

User Action:

Information only; no action is required.

- **FQXSPPW0001I: [PowerSupplyElementName] has been added to container [PhysicalPackageElementName].**

This message is for the use case when an implementation has detected a Power Supply has been added.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: PLAT CIM ID: 0084

User Action:

Information only; no action is required

- **FQXSPPW0002L: [PowerSupplyElementName] has Failed.**

This message is for the use case when an implementation has detected a Power Supply has failed.

Severity: Error
Serviceable: Yes
Automatically notify Support: Yes
Alert Category: Critical - Power
SNMP Trap ID: 4
CIM Prefix: PLAT CIM ID: 0086

User Action:

Check event log in XClarity Controller (XCC) Web GUI to identify the power supply unit or flash power module failure. Check system spec and replace the power supply unit or flash power module of the same specification.

- **FQXSPW0003G: Failure predicted on [PowerSupplyElementName].**

This message is for the use case when an implementation has detected a Power Supply failure is predicted.

Severity: Warning
Serviceable: Yes
Automatically notify Support: No
Alert Category: Warning - Power
SNMP Trap ID: 164
CIM Prefix: PLAT CIM ID: 0088

User Action:

Please check event log in xClarity Controller (XCC) Web GUI to identify the power supply unit failure

- **FQXSPW0005I: [PowerSupplyElementName] is operating in an Input State that is out of range.**

This message is for the use case when an implementation has detected a Power Supply that has input out of range.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: PLAT CIM ID: 0098

User Action:

Information only; no action is required

- **FQXSPW0006I: [PowerSupplyElementName] has lost input.**

This message is for the use case when an implementation has detected a Power Supply that has input that has been lost.

Severity: Warning
Serviceable: No
Automatically notify Support: No
Alert Category: Warning - Power
SNMP Trap ID:
CIM Prefix: PLAT CIM ID: 0100

User Action:

Make sure power cables are connected correctly.

- **FQXSPW0007L: [PowerSupplyElementName] has a Configuration Mismatch.**

This message is for the use case when an implementation has detected a Power Supply with a Configuration Error.

Severity: Error
Serviceable: Yes
Automatically notify Support: No
Alert Category: Critical - Power
SNMP Trap ID: 4
CIM Prefix: PLAT CIM ID: 0104

User Action:

Please check the consistency of PSU models on xClarity Controller (XCC) Web GUI.

- **FQXSPW0008I: [SensorElementName] has been turned off.**

This message is for the use case when an implementation has detected a Power Unit that has been Disabled.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Power Off
SNMP Trap ID: 23
CIM Prefix: PLAT CIM ID: 0106

User Action:

Information only; no action is required.

- **FQXSPW0009I: [PowerSupplyElementName] has been Power Cycled.**

This message is for the use case when an implementation has detected a Power Unit that has been power cycled.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: PLAT CIM ID: 0108

User Action:

Information only; no action is required

- **FQXSPW0031J: Numeric sensor [NumericSensorElementName] going low (lower non-critical) has asserted.**

This message is for the use case when an implementation has detected a Lower Non-critical sensor going low has asserted.

Severity: Warning
Serviceable: Yes
Automatically notify Support: No
Alert Category: Warning - Voltage
SNMP Trap ID: 13
CIM Prefix: PLAT CIM ID: 0476

User Action:

CMOS battery is recommended to replace with new one.

- **FQXSPPW0035M: Numeric sensor [NumericSensorElementName] going low (lower critical) has asserted.**

This message is for the use case when an implementation has detected a Lower Critical sensor going low has asserted.

Severity: Error
Serviceable: Yes
Automatically notify Support: Yes
Alert Category: Critical - Voltage
SNMP Trap ID: 1
CIM Prefix: PLAT CIM ID: 0480

User Action:

Complete the following steps:

1. Check the XClarity Controller event log for power-supply-related issues.
2. If the problem remains, replace (trained technician only) the system board.

- **FQXSPPW0057J: Sensor [SensorElementName] has transitioned from normal to non-critical state.**

This message is for the use case when an implementation has detected a Sensor transitioned to non-critical from normal.

Severity: Warning
Serviceable: Yes
Automatically notify Support: No
Alert Category: Warning - Power
SNMP Trap ID: 164
CIM Prefix: PLAT CIM ID: 0520

User Action:

Please check event log in xClarity Controller web interface.

- **FQXSPPW0061M: Sensor [SensorElementName] has transitioned to critical from a less severe state.**

This message is for the use case when an implementation has detected a Sensor transitioned to critical from less severe.

Severity: Error
Serviceable: Yes
Automatically notify Support: No
Alert Category: Critical - Power
SNMP Trap ID: 4
CIM Prefix: PLAT CIM ID: 0522

User Action:

Complete the following steps:

1. Ensure power supply unit to meet the system spec in wattage, efficiency level and supported list.
2. Check the event log in xClarity Controller (XCC) Web GUI to the detail information to reseal/reinstall/upgrade power supply unit.
3. If the problem still exist, please contact Lenovo support

- **FQXSPPW0062M: Sensor [SensorElementName] has transitioned to critical from a less severe state.**

This message is for the use case when an implementation has detected a Sensor transitioned to critical from less severe.

Severity: Error
Serviceable: Yes
Automatically notify Support: No
Alert Category: Critical - Power
SNMP Trap ID: 4
CIM Prefix: PLAT CIM ID: 0522

User Action:

Complete the following steps:

1. Ensure power supply unit to meet the system spec in wattage, efficiency level and supported list.
2. Check the event log in xClarity Controller (XCC) Web GUI to the detail information to replace matching power supply unit.
3. If the problem still exists, contact Lenovo support.

- **FQXSPW0063M: Sensor [SensorElementName] has transitioned to critical from a less severe state.**

This message is for the use case when an implementation has detected a Sensor transitioned to critical from less severe.

Severity: Error
Serviceable: Yes
Automatically notify Support: No
Alert Category: Critical - Voltage
SNMP Trap ID: 1
CIM Prefix: PLAT CIM ID: 0522

User Action:

Complete the following steps:

1. Check the XClarity Controller event log for power-supply-related issues.
2. If the problem remains, replace (trained technician only) the system board.

- **FQXSPW2001I: [PowerSupplyElementName] has been removed from container [PhysicalPackageElementName].**

This message is for the use case when an implementation has detected a Power Supply has been removed.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: PLAT CIM ID: 0085

User Action:

Information only; no action is required

- **FQXSPW2002I: [PowerSupplyElementName] has returned to OK status.**

This message is for the use case when an implementation has detected a Power Supply return to normal operational status.

Severity: Info

Serviceable: No
Automatically notify Support: No
Alert Category: Critical - Power
SNMP Trap ID: 4
CIM Prefix: PLAT CIM ID: 0087

User Action:

Information only; no action is required

- **FQXSPW2003I: Failure no longer predicted on [PowerSupplyElementName].**

This message is for the use case when an implementation has detected a Power Supply failure is no longer predicted.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: Warning - Power
SNMP Trap ID: 164
CIM Prefix: PLAT CIM ID: 0089

User Action:

Information only; no action is required

- **FQXSPW2006I: [PowerSupplyElementName] has returned to a Normal Input State.**

This message is for the use case when an implementation has detected a Power Supply that has input that has returned to normal.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: PLAT CIM ID: 0099

User Action:

Information only; no action is required

- **FQXSPW2007I: [PowerSupplyElementName] Configuration is OK.**

This message is for the use case when an implementation when a Power Supply configuration is OK.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: Critical - Power
SNMP Trap ID: 4
CIM Prefix: PLAT CIM ID: 0105

User Action:

Information only; no action is required

- **FQXSPW2008I: [PowerSupplyElementName] has been turned on.**

This message is for the use case when an implementation has detected a Power Unit that has been Enabled.

Severity: Info

Serviceable: No
Automatically notify Support: No
Alert Category: System - Power On
SNMP Trap ID: 24
CIM Prefix: PLAT CIM ID: 0107

User Action:

Information only; no action is required

- **FQXSPPW2031I: Numeric sensor [NumericSensorElementName] going low (lower non-critical) has deasserted.**

This message is for the use case when an implementation has detected a Lower Non-critical sensor going low has deasserted.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: Warning - Voltage
SNMP Trap ID: 13
CIM Prefix: PLAT CIM ID: 0477

User Action:

Information only; no action is required

- **FQXSPPW2035I: Numeric sensor [NumericSensorElementName] going low (lower critical) has deasserted.**

This message is for the use case when an implementation has detected a Lower Critical sensor going low has deasserted.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: Critical - Voltage
SNMP Trap ID: 1
CIM Prefix: PLAT CIM ID: 0481

User Action:

Information only; no action is required

- **FQXSPPW2057I: Sensor [SensorElementName] has deasserted the transition from normal to non-critical state.**

This message is for the use case when an implementation has detected that a Sensor has deasserted a transition to non-critical from normal.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: Warning - Power
SNMP Trap ID: 164
CIM Prefix: PLAT CIM ID: 0521

User Action:

Information only; no action is required

- **FQXSPPW2061I: Sensor [SensorElementName] has transitioned to a less severe state from critical.**

This message is for the use case when an implementation has detected a Sensor transition to less severe from critical.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: Critical - Power
SNMP Trap ID: 4
CIM Prefix: PLAT CIM ID: 0523

User Action:

Information only; no action is required

- **FQXSPW2062I: Sensor [SensorElementName] has transitioned to a less severe state from critical.**

This message is for the use case when an implementation has detected a Sensor transition to less severe from critical.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: Critical - Power
SNMP Trap ID: 4
CIM Prefix: PLAT CIM ID: 0523

User Action:

Complete the following steps:

1. Ensure power supply unit to meet the system spec in wattage, efficiency level and supported list.
2. Check the event log in xClarity Controller (XCC) Web GUI to the detail information to replace matching power supply unit.
3. If the problem still exists, contact Lenovo support.

- **FQXSPW2063I: Sensor [SensorElementName] has transitioned to a less severe state from critical.**

This message is for the use case when an implementation has detected a Sensor transition to less severe from critical.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: Critical - Voltage
SNMP Trap ID: 1
CIM Prefix: PLAT CIM ID: 0523

User Action:

Information only; no action is required

- **FQXSPW4001I: PCIe Power Brake for [arg1] has been [arg2].**

This message is for the use case where PCIe Power Brake.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0243

User Action:

Check if system have fan fail error, Raidlink CEM fail occurring or Ambient temperature over 35C, implement the "error" service action to recovery the system and reduce ambient temperature under 35C.

- **FQXSPPW4002I: Total graphics power value has exceeded the pre-configured limit.**

This message is for the use case where total graphics power value value has exceeded the pre-configured limit.

Severity: Warning
Serviceable: No
Automatically notify Support: No
Alert Category: Warning - Other
SNMP Trap ID: 60
CIM Prefix: IMM CIM ID: 0328

User Action:

Information only; no action is required.

- **FQXSPPW4003I: The customized total graphics power is within the pre-configured limit.**

This message is for the use case where the customized total graphics power is within the pre-configured limit.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0329

User Action:

Information only; no action is required.

- **FQXSPSD0000I: The [StorageVolumeElementName] has been added.**

This message is for the use case when an implementation has detected a Drive has been Added.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: PLAT CIM ID: 0162

User Action:

Information only; no action is required

- **FQXSPSD0001I: The [StorageVolumeElementName] Drive [arg1] in the enclosure/chassis(MTM-SN: [arg2]) has been added.**

This message is for the use case when an implementation has detected a Drive has been Added.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: PLAT CIM ID: 0162

User Action:

Information only; no action is required

- **FQXSPSD0001L: The [StorageVolumeElementName] has a fault.**

This message is for the use case when an implementation has detected a Drive was Disabled due to fault.

Severity: Error
Serviceable: Yes
Automatically notify Support: Yes
Alert Category: Critical - Hard Disk drive
SNMP Trap ID: 5
CIM Prefix: PLAT CIM ID: 0164

User Action:

Complete the following steps:

1. Make sure that the reported device is compatible by checking <https://static.lenovo.com/us/en/serverproven/index.shtml>.
2. Collect the service data log from the management controller interface and contact Lenovo Support.

- **FQXSPSD0002G: Failure Predicted on [StorageVolumeElementName] for array [ComputerSystemElementName].**

This message is for the use case when an implementation has detected an Array Failure is Predicted.

Severity: Warning
Serviceable: Yes
Automatically notify Support: Yes
Alert Category: System - Predicted Failure
SNMP Trap ID: 27
CIM Prefix: PLAT CIM ID: 0168

User Action:

Complete the following steps:

1. Replace the identified drive at the next maintenance period.
2. If the problem persists after replacement, collect the service data log from the XCC WebGUI and contact Lenovo Support.

- **FQXSPSD0002L: Drive [arg1] in the enclosure/chassis(MTM-SN: [arg2]) has a fault.**

This message is for the use case when an implementation has detected a Drive was Disabled due to fault.

Severity: Error
Serviceable: Yes
Automatically notify Support: Yes
Alert Category: Critical - Hard Disk drive
SNMP Trap ID: 5
CIM Prefix: PLAT CIM ID: 0164

User Action:

Complete the following steps:

1. Check the Support Portal(<http://support.lenovo.com/>)for service bulletins and TECH tips and firmware update related to your drive.
2. Check for any other RAID-related error.
3. Replace the drive.

- **FQXSPSD0003G: Failure Predicted on drive [arg1] in the enclosure/chassis (MTM-SN: [arg2]).**

This message is for the use case when an implementation has detected an Array Failure is Predicted.

Severity: Warning
Serviceable: Yes
Automatically notify Support: Yes
Alert Category: System - Predicted Failure
SNMP Trap ID: 27
CIM Prefix: PLAT CIM ID: 0168

User Action:

Replace the faulty drive at the next maintenance period.

- **FQXSPSD0003I: Hot Spare enabled for [ComputerSystemElementName].**

This message is for the use case when an implementation has detected a Hot Spare has been Enabled.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: PLAT CIM ID: 0170

User Action:

Information only; no action is required

- **FQXSPSD0005I: Hot Spare enabled for drive [arg1] in the enclosure/chassis (MTM-SN: [arg2]).**

This message is for the use case when an implementation has detected a Hot Spare has been Enabled.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: PLAT CIM ID: 0170

User Action:

Information only; no action is required

- **FQXSPSD0005L: Array [ComputerSystemElementName] is in critical condition.**

This message is for the use case when an implementation has detected that an Array is Critical.

Severity: Error
Serviceable: Yes
Automatically notify Support: No
Alert Category: Critical - Hard Disk drive
SNMP Trap ID: 5
CIM Prefix: PLAT CIM ID: 0174

User Action:

Replace the hard disk drive that is indicated by a lit status LED.

- **FQXSPSD0006L: Array [ComputerSystemElementName] has failed.**

This message is for the use case when an implementation has detected that an Array Failed.

Severity: Error
Serviceable: Yes
Automatically notify Support: Yes
Alert Category: Critical - Hard Disk drive
SNMP Trap ID: 5
CIM Prefix: PLAT CIM ID: 0176

User Action:

Complete the following steps:

1. Replace any hard disk drive that is indicated by a lit status LED.
2. Re-create the array.
3. Restore the data from a backup.

- **FQXSPSD0007I: Rebuild in progress for Array in system [ComputerSystemElementName].**

This message is for the use case when an implementation has detected that an Array Rebuild is in Progress.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: PLAT CIM ID: 0178

User Action:

Information only; no action is required

- **FQXSPSD0007L: Array critical asserted on drive [arg1] in the enclosure/chassis (MTM-S/N: [arg2]).**

This message is for the use case when an implementation has detected that an Array is Critical.

Severity: Error
Serviceable: Yes
Automatically notify Support: No
Alert Category: Critical - Hard Disk drive
SNMP Trap ID: 5
CIM Prefix: PLAT CIM ID: 0174

User Action:

Replace the hard disk drive that is indicated by a lit status LED.

- **FQXSPSD0008I: Array rebuild in progress on drive [arg1] in the enclosure/chassis (MTM-S/N: [arg2]).**

This message is for the use case when an implementation has detected that an Array Rebuild is in Progress.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: PLAT CIM ID: 0178

User Action:

Information only; no action is required

- **FQXSPSD0008L: Array failed on drive [arg1] in the enclosure/chassis (MTM-S/N: [arg2]).**

This message is for the use case when an implementation has detected that an Array Failed.

Severity: Error
Serviceable: Yes
Automatically notify Support: Yes
Alert Category: Critical - Hard Disk drive
SNMP Trap ID: 5
CIM Prefix: PLAT CIM ID: 0176

User Action:

Complete the following steps:

1. Replace any hard disk drive that is indicated by a lit status LED.
2. Re-create the array.
3. Restore the data from a backup.

- **FQXSPSD2000I: The [StorageVolumeElementName] has been removed from unit [PhysicalPackageElementName].**

This message is for the use case when an implementation has detected a Drive has been Removed.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: PLAT CIM ID: 0163

User Action:

Complete the following steps until the problem is solved:

1. If drive was intentionally removed, make sure that there is a filler in the drive bay.
2. Make sure that the drive is correctly seated.
3. If drive is correctly seated, replace the drive.

- **FQXSPSD2001I: The [StorageVolumeElementName] has recovered from a fault.**

This message is for the use case when an implementation has detected a Drive was Enabled.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: Critical - Hard Disk drive
SNMP Trap ID: 5
CIM Prefix: PLAT CIM ID: 0167

User Action:

Information only; no action is required

- **FQXSPSD2002I: Failure no longer Predicted on [StorageVolumeElementName] for array [ComputerSystemElementName].**

This message is for the use case when an implementation has detected an Array Failure is no longer Predicted.

Severity: Info
Serviceable: No

Automatically notify Support: No
Alert Category: System - Predicted Failure
SNMP Trap ID: 27
CIM Prefix: PLAT CIM ID: 0169

User Action:

Information only; no action is required

- **FQXSPSD2003I: Hot spare disabled for [ComputerSystemElementName].**

This message is for the use case when an implementation has detected a Hot Spare has been Disabled.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: PLAT CIM ID: 0171

User Action:

Information only; no action is required

- **FQXSPSD2005I: Critical Array [ComputerSystemElementName] has deasserted.**

This message is for the use case when an implementation has detected that an Critical Array has deasserted.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: Critical - Hard Disk drive
SNMP Trap ID: 5
CIM Prefix: PLAT CIM ID: 0175

User Action:

Information only; no action is required

- **FQXSPSD2006I: Array in system [ComputerSystemElementName] has been restored.**

This message is for the use case when an implementation has detected that a Failed Array has been Restored.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: Critical - Hard Disk drive
SNMP Trap ID: 5
CIM Prefix: PLAT CIM ID: 0177

User Action:

Information only; no action is required

- **FQXSPSD2007I: Rebuild completed for Array in system [ComputerSystemElementName].**

This message is for the use case when an implementation has detected that an Array Rebuild has Completed.

Severity: Info
Serviceable: No

Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: PLAT CIM ID: 0179

User Action:

Information only; no action is required

- **FQXSPSD2008I: Drive [arg1] in the enclosure/chassis(MTM-SN: [arg2]) has recovered from a fault.**

This message is for the use case when an implementation has detected a Drive was Enabled.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: Critical - Hard Disk drive
SNMP Trap ID: 5
CIM Prefix: PLAT CIM ID: 0167

User Action:

Information only; no action is required

- **FQXSPSD2010I: Drive [arg1] in the enclosure/chassis(MTM-SN: [arg2]) has been removed.**

This message is for the use case when an implementation has detected a Drive has been Removed.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: PLAT CIM ID: 0163

User Action:

Complete the following steps until the problem is solved:

1. If drive was intentionally removed, make sure that there is a filler in the drive bay.
2. Make sure that the drive is correctly seated.
3. If drive is correctly seated, replace the drive.

- **FQXSPSD2011I: Failure no longer Predicted on drive [arg1] in the enclosure/chassis (MTM-S/N: [arg2]).**

This message is for the use case when an implementation has detected an Array Failure is no longer Predicted.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Predicted Failure
SNMP Trap ID: 27
CIM Prefix: PLAT CIM ID: 0169

User Action:

Information only; no action is required

- **FQXSPSD2012I: Hot Spare disabled for drive [arg1] in the enclosure/chassis (MTM-SN: [arg2]).**

This message is for the use case when an implementation has detected a Hot Spare has been Disabled.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: PLAT CIM ID: 0171

User Action:

Information only; no action is required

- **FQXSPSD2013I: Array critical deasserted on drive [arg1] in the enclosure/chassis (MTM-S/N: [arg2]).**

This message is for the use case when an implementation has detected that an Critical Array has deasserted.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: Critical - Hard Disk drive
SNMP Trap ID: 5
CIM Prefix: PLAT CIM ID: 0175

User Action:

Information only; no action is required

- **FQXSPSD2014I: Array restored on drive [arg1] in the enclosure/chassis (MTM-S/N: [arg2]).**

This message is for the use case when an implementation has detected that a Failed Array has been Restored.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: Critical - Hard Disk drive
SNMP Trap ID: 5
CIM Prefix: PLAT CIM ID: 0177

User Action:

Information only; no action is required

- **FQXSPSD2015I: Array rebuild completed on drive [arg1] in the enclosure/chassis (MTM-S/N: [arg2]).**

This message is for the use case when an implementation has detected that an Array Rebuild has Completed.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: PLAT CIM ID: 0179

User Action:

Information only; no action is required

- **FQXSPSE4000I: Certificate Authority [arg1] has detected a [arg2] Certificate Error.**

This message is for the use case when there is an error with an SSL Server, SSL Client, or SSL Trusted CA Certificate.

Severity: Error
Serviceable: No
Automatically notify Support: No
Alert Category: System - other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0002

User Action:

Complete the following steps until the problem is solved:

1. Make sure that the certificate that you are importing is correct and properly generated.
2. If problem persists, collect Service Data log.
3. Contact Lenovo Support.

- **FQXSPSE4001I: Remote Login Successful. Login ID: [arg1] using [arg2] from [arg3] at IP address [arg4].**

This message is for the use case where a user successfully logs in to a Management Controller.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Remote Login
SNMP Trap ID: 30
CIM Prefix: IMM CIM ID: 0014

User Action:

Information only; no action is required.

- **FQXSPSE4002I: Security: Userid: [arg1] using [arg2] had [arg3] login failures from WEB client at IP address [arg4].**

This message is for the use case where a user has failed to log in to a Management Controller from a web browser.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Remote Login
SNMP Trap ID: 30
CIM Prefix: IMM CIM ID: 0016

User Action:

Complete the following steps until the problem is solved:

1. Make sure that the correct login ID and password are being used.
2. Have the system administrator reset the login ID or password.

- **FQXSPSE4003I: Security: Login ID: [arg1] had [arg2] login failures from CLI at [arg3].**

This message is for the use case where a user has failed to log in to a Management Controller from the Legacy CLI.

Severity: Info

Serviceable: No
Automatically notify Support: No
Alert Category: System - Remote Login
SNMP Trap ID: 30
CIM Prefix: IMM CIM ID: 0017

User Action:

Complete the following steps until the problem is solved:

1. Make sure that the correct login ID and password are being used.
2. Have the system administrator reset the login ID or password.

- **FQXSPSE4004I: Remote access attempt failed. Invalid userid or password received. Userid is [arg1] from WEB browser at IP address [arg2].**

This message is for the use case where a remote user has failed to establish a remote control session from a Web browser session.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Remote Login
SNMP Trap ID: 30
CIM Prefix: IMM CIM ID: 0018

User Action:

Make sure that the correct login ID and password are being used.

- **FQXSPSE4005I: Remote access attempt failed. Invalid userid or password received. Userid is [arg1] from TELNET client at IP address [arg2].**

This message is for the use case where a user has failed to log in to a Management Controller from a telnet session.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Remote Login
SNMP Trap ID: 30
CIM Prefix: IMM CIM ID: 0019

User Action:

Make sure that the correct login ID and password are being used.

- **FQXSPSE4006I: XCC detected an invalid SSL certificate in the Management Controller [arg1] .**

This message is for the use case where a Management Controller has detected invalid SSL data in the configuration data and is clearing the configuration data region and disabling the SSL.

Severity: Warning
Serviceable: No
Automatically notify Support: No
Alert Category: System - other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0034

User Action:

Complete the following steps until the problem is solved:

1. Make sure that the certificate that you are importing is correct and properly generated / certificate CSR is correct
2. If problem persists, collect Service Data log.
3. Contact Lenovo Support.

- **FQXSPSE4007I: Security: Userid: [arg1] using [arg2] had [arg3] login failures from an SSH client at IP address [arg4].**

This message is for the use case where a user has failed to log in to a Management Controller from SSH.

Severity: Info
 Serviceable: No
 Automatically notify Support: No
 Alert Category: System - Remote Login
 SNMP Trap ID: 30
 CIM Prefix: IMM CIM ID: 0041

User Action:

Complete the following steps until the problem is solved:

1. Make sure that the correct login ID and password are being used.
2. Have the system administrator reset the login ID or password.

- **FQXSPSE4008I: SNMPv1 [arg1] set by user [arg2]: Name=[arg3], AccessType=[arg4], Address=[arg5], .**

A user changed the SNMP community string

Severity: Info
 Serviceable: No
 Automatically notify Support: No
 Alert Category: System - Other
 SNMP Trap ID:
 CIM Prefix: IMM CIM ID: 0075

User Action:

Information only; no action is required.

- **FQXSPSE4009I: LDAP Server configuration set by user [arg1]: SelectionMethod=[arg2], DomainName=[arg3], Server1=[arg4], Server2=[arg5], Server3=[arg6], Server4=[arg7].**

A user changed the LDAP server configuration

Severity: Info
 Serviceable: No
 Automatically notify Support: No
 Alert Category: System - Other
 SNMP Trap ID:
 CIM Prefix: IMM CIM ID: 0076

User Action:

Information only; no action is required.

- **FQXSPSE4010I: LDAP set by user [arg1]: RootDN=[arg2], UIDSearchAttribute=[arg3], BindingMethod=[arg4], EnhancedRBS=[arg5], TargetName=[arg6], GroupFilter=[arg7], GroupAttribute=[arg8], LoginAttribute=[arg9].**

A user configured an LDAP Miscellaneous setting

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0077

User Action:

Information only; no action is required.

- **FQXSPSE4011I: Secure Web services (HTTPS) [arg1] by user [arg2].**

A user enables or disables Secure web services

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0091

User Action:

Information only; no action is required.

- **FQXSPSE4012I: Secure CIM/XML(HTTPS) [arg1] by user [arg2].**

A user enables or disables Secure CIM/XML services

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0092

User Action:

Information only; no action is required.

- **FQXSPSE4013I: Secure LDAP [arg1] by user [arg2].**

A user enables or disables Secure LDAP services

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0093

User Action:

Information only; no action is required.

- **FQXSPSE4014I: SSH [arg1] by user [arg2].**

A user enables or disables SSH services

Severity: Info
Serviceable: No
Automatically notify Support: No

Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0094

User Action:

Information only; no action is required.

- **FQXSPSE4015: Global Login General Settings set by user [arg1]: AuthenticationMethod=[arg2], LockoutPeriod=[arg3], SessionTimeout=[arg4].**

A user changes the Global Login General Settings

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0098

User Action:

Information only; no action is required.

- **FQXSPSE4016: Global Login Account Security set by user [arg1]: PasswordRequired=[arg2], PasswordExpirationPeriod=[arg3], MinimumPasswordReuseCycle=[arg4], MinimumPasswordLength=[arg5], MinimumPasswordChangeInterval=[arg6], MaxmumLoginFailures=[arg7], LockoutAfterMaxFailures=[arg8].**

A user changes the Global Login Account Security Settings to Legacy

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0099

User Action:

Information only; no action is required.

- **FQXSPSE4017: User [arg1] created.**

A user account was created

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0100

User Action:

Information only; no action is required.

- **FQXSPSE4018: User [arg1] removed.**

A user account was deleted

Severity: Info
Serviceable: No

Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0101

User Action:

Information only; no action is required.

- **FQXSPSE4019I: User [arg1] password modified.**

A user account was changed

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0102

User Action:

Information only; no action is required.

- **FQXSPSE4020I: User [arg1] role set to [arg2].**

A user account role assigned

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0103

User Action:

Information only; no action is required.

- **FQXSPSE4021I: User [arg1] custom privileges set: [arg2][arg3][arg4][arg5][arg6][arg7][arg8][arg9].**

User account privileges assigned

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0104

User Action:

Information only; no action is required.

- **FQXSPSE4022I: User [arg1] for SNMPv3 set: AuthenticationProtocol=[arg2], PrivacyProtocol=[arg3], AccessType=[arg4], HostforTraps=[arg5] by user [arg6] from [arg7] at IP address [arg8].**

User account SNMPv3 settings changed

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other

SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0105

User Action:

Information only; no action is required.

- **FQXSPSE4023I: SSH Client key added for user [arg1] by user [arg2] from [arg3] at IP address [arg4].**

User locally defined an SSH Client key

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0106

User Action:

Information only; no action is required.

- **FQXSPSE4024I: SSH Client key imported for user [arg1] from [arg2] by user [arg3] from [arg4] at IP address [arg5].**

User imported an SSH Client key

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0107

User Action:

Information only; no action is required.

- **FQXSPSE4025I: SSH Client key removed from user [arg1] by user [arg2] from [arg3] at IP address [arg4].**

User removed an SSH Client key

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0108

User Action:

Information only; no action is required.

- **FQXSPSE4026I: Security: Userid: [arg1] had [arg2] login failures from a CIM client at IP address [arg3].**

This message is for the use case where a user has failed to log in to a Management Controller from CIM.

Severity: Info
Serviceable: No
Automatically notify Support: No

Alert Category: System - Remote Login
SNMP Trap ID: 30
CIM Prefix: IMM CIM ID: 0140

User Action:

Information only; no action is required.

- **FQXSPSE4027I: Remote access attempt failed. Invalid userid or password received. Userid is [arg1] from a CIM client at IP address [arg2].**

This message is for the use case where a remote user has failed to establish a remote control session from CIM.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Remote Login
SNMP Trap ID: 30
CIM Prefix: IMM CIM ID: 0141

User Action:

Information only; no action is required.

- **FQXSPSE4028I: Security: Userid: [arg1] had [arg2] login failures from IPMI client at IP address [arg3].**

This message is for the use case where a user has failed to log in to a Management Controller from IPMI.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Remote Login
SNMP Trap ID: 30
CIM Prefix: IMM CIM ID: 0153

User Action:

Information only; no action is required.

- **FQXSPSE4029I: Security: Userid: [arg1] had [arg2] login failures from SNMP client at IP address [arg3].**

This message is for the use case where a user has failed to access a Management Controller from SNMP.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Remote Login
SNMP Trap ID: 30
CIM Prefix: IMM CIM ID: 0154

User Action:

Information only; no action is required.

- **FQXSPSE4030I: Security: Userid: [arg1] had [arg2] login failures from IPMI serial client.**

This message is for the use case where a user has failed to log in to a Management Controller from IPMI serial client

Severity: Info

Serviceable: No
Automatically notify Support: No
Alert Category: System - Remote Login
SNMP Trap ID: 30
CIM Prefix: IMM CIM ID: 0155

User Action:

Information only; no action is required.

- **FQXSPSE4031I: Remote Login Successful. Login ID: [arg1] from [arg2] serial interface.**

This message is for the use case where a user successfully logs in to a Management Controller.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Remote Login
SNMP Trap ID: 30
CIM Prefix: IMM CIM ID: 0156

User Action:

Information only; no action is required.

- **FQXSPSE4032I: Login ID: [arg1] from [arg2] at IP address [arg3] has logged off.**

This message is for the use case where a user has logged off of a Management Controller.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Remote Login
SNMP Trap ID: 30
CIM Prefix: IMM CIM ID: 0157

User Action:

Information only; no action is required.

- **FQXSPSE4033I: Login ID: [arg1] from [arg2] at IP address [arg3] has been logged off.**

This message is for the use case where a user has been logged off of a Management Controller.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Remote Login
SNMP Trap ID: 30
CIM Prefix: IMM CIM ID: 0158

User Action:

Information only; no action is required.

- **FQXSPSE4034I: User [arg1] has removed a certificate.**

User removed certificate

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other

SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0164

User Action:

Information only; no action is required.

- **FQXSPSE4035I: A certificate has been revoked .**

A certificate has been revoked

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0165

User Action:

Information only; no action is required.

- **FQXSPSE4036I: The [arg1] certificate is expired and has been removed.**

Expired certificate has been removed

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0190

User Action:

Information only; no action is required.

- **FQXSPSE4037I: Crypto mode modified from [arg1] to [arg2] by user [arg3].**

Crypto mode modified

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0218

User Action:

Information only; no action is required.

- **FQXSPSE4038I: Minimum TLS level modified from [arg1] to [arg2] by user [arg3].**

Minimum TLS level modified

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0219

User Action:

Information only; no action is required.

- **FQXSPSE4039I: Temporary user account [arg1] is created by inband tool.**

Temporary user account create

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0228

User Action:

Information only; no action is required.

- **FQXSPSE4040I: Temporary user account [arg1] expires.**

Temporary user account expire

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0229

User Action:

The user account you input has expired.

- **FQXSPSE4041I: Security: Userid: [arg1] had [arg2] login failures from a SFTP client at IP address [arg3].**

This message is for the use case where a user has failed to log in to a Management Controller from SFTP.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Remote Login
SNMP Trap ID: 30
CIM Prefix: IMM CIM ID: 0230

User Action:

Information only; no action is required.

- **FQXSPSE4042I: The third-party password function [arg1] by user [arg2] from [arg3] at IP address [arg4].**

This message is for the use case where a user successfully switch the third-party password function.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0238

User Action:

Information only; no action is required.

- **FQXSPSE4043I: Retrieving the third-party password [arg1] by user [arg2] from [arg3] at IP address [arg4].**

This message is for the use case where a user successfully switch the retrieving the third-party password.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0239

User Action:

Information only; no action is required.

- **FQXSPSE4044I: User [arg1] third-party hashed password has been [arg2] by user [arg3] from [arg4] at IP address [arg5].**

This message is for the use case where a user successfully manage the third-party hashed password.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0240

User Action:

Information only; no action is required.

- **FQXSPSE4045I: The Salt of user [arg1] third-party password has been [arg2] by user [arg3] from [arg4] at IP address [arg5].**

This message is for the use case where a user successfully manage the third-party password salt.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0241

User Action:

Information only; no action is required.

- **FQXSPSE4046I: The third-party password of the user [arg1] has been retrieved by user [arg2] from [arg3] at IP address [arg4].**

This message is for the use case where a user successfully retrieving the third-party password.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0242

User Action:

Information only; no action is required.

- **FQXSPSE4047I: Role [arg1] is [arg2] and assigned with custom privileges [arg3][arg4][arg5][arg6][arg7][arg8][arg9][arg10][arg11] by user [arg12] .**

Role create modify and assign

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0246

User Action:

Information only; no action is required.

- **FQXSPSE4048I: Role [arg1] is removed by user [arg2].**

Role is removed

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0247

User Action:

Information only; no action is required.

- **FQXSPSE4049I: Role [arg1] is assigned to user [arg2] by user [arg3].**

Role is assigned

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0248

User Action:

Information only; no action is required.

- **FQXSPSE4050I: [arg1] sent IPMI command from [arg2], raw data: [arg3][arg4][arg5].**

This message is for the use case where IPMI command to be sent.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0251

User Action:

Information only; no action is required.

- **FQXSPSE4051I: Management Controller [arg1] joined the neighbor group [arg2] by user [arg3] at IP address [arg4].**

This message is for the use case where MC joins a group.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0261

User Action:

Information only; no action is required.

- **FQXSPSE4052I: The password of neighbor group [arg1] is modified by [arg2] [arg3] at IP address [arg4].**

This message is for the use case where the group user password is modified.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0262

User Action:

Information only; no action is required.

- **FQXSPSE4053I: Management Controller [arg1] left the neighbor group [arg2] by user [arg3] at IP address [arg4].**

This message is for the use case where MC leaves a group.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0263

User Action:

Information only; no action is required.

- **FQXSPSE4054I: IPMI SEL wrapping mode is [arg1] by user [arg2] at IP address [arg3].**

IPMI SEL wrapping mode is changed.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0264

User Action:

Information only; no action is required.

- **FQXSPSE4055I: SED encryption is enabled by user [arg1] at IP address [arg2].**

SED encryption is enabled.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0265

User Action:

Information only; no action is required.

- **FQXSPSE4056I: SED AK is [arg1] by user [arg2] at IP address [arg3].**

SED AK is regenerated or recovered.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0266

User Action:

Information only; no action is required.

- **FQXSPSE4057I: User [arg1] created by user [arg2] from [arg3] at IP address [arg4].**

A user account was created by user

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0267

User Action:

Information only; no action is required.

- **FQXSPSE4058I: User [arg1] removed by user [arg2] from [arg3] at IP address [arg4].**

A user account was deleted by user

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0268

User Action:

Information only; no action is required.

- **FQXSPSE4059I: User [arg1] password modified by user [arg2] from [arg3] at IP address [arg4].**

A user account was changed by user

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0269

User Action:

Information only; no action is required.

- **FQXSPSE4060I: User [arg1] role set to [arg2] by user [arg3] from [arg4] at IP address [arg5].**

A user account role assigned by user

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0270

User Action:

Information only; no action is required.

- **FQXSPSE4061I: User [arg1] custom privileges set: [arg2][arg3][arg4][arg5][arg6][arg7][arg8][arg9] by user [arg10] from [arg11] at IP address [arg12].**

User account priveleges assigned by user

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0271

User Action:

Information only; no action is required.

- **FQXSPSE4062I: The system guard snapshot is captured by user [arg1] from [arg2] at IP address [arg3].**

The system guard snapshot is captured by user.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0278

User Action:

Information only; no action is required.

- **FQXSPSE4063I: The system guard configuration is updated: status=[arg1], hardware inventory=[arg2] and action=[arg3] by user [arg4] from [arg5] at IP address [arg6].**

The system guard configuration is updated by user.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0279

User Action:

Information only; no action is required.

- **FQXSPSE4064I: SNMPv3 engine ID is changed from [arg1] to [arg2] by user [arg3] from [arg4] at IP address [arg5].**

SNMPv3 engine ID changed

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0282

User Action:

Information only; no action is required.

- **FQXSPSE4065I: SFTP [arg1] by user [arg2] from [arg3] at IP address [arg4].**

A user enables and disables SFTP service

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0283

User Action:

Information only; no action is required.

- **FQXSPSE4066I: Security mode is modified from [arg1] to [arg2] by user [arg3] from [arg4] at IP address [arg5].**

Security mode modified by user

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0284

User Action:

Information only; no action is required.

- **FQXSPSE4067I: User [arg1] accessible interfaces is set to [arg2][arg3][arg4][arg5][arg6] by user [arg7] from [arg8] at IP address [arg9].**

User account accessible interfaces assigned by user

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0285

User Action:

Information only; no action is required.

- **FQXSPSE4068I: Security: Userid: [arg1] using [arg2] had [arg3] login failures from Redfish client at IP address [arg4].**

This message is for the use case where a user has failed to log in to a Management Controller from Redfish.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Remote Login
SNMP Trap ID: 30
CIM Prefix: IMM CIM ID: 0289

User Action:

Information only; no action is required.

- **FQXSPSE4069I: LDAP set by user [arg1]: RootDN=[arg2], UIDSearchAttribute=[arg3], BindingMethod=[arg4], TargetName=[arg5], GroupFilter=[arg6], GroupAttribute=[arg7], LoginAttribute=[arg8].**

A user configured an LDAP Miscellaneous setting

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0290

User Action:

Information only; no action is required.

- **FQXSPSE4070I: Lockdown mode is [arg1] by user [arg2] from [arg3] at IP address [arg4].**

A user enables or disables Lockdown mode

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0291

User Action:

Information only; no action is required.

- **FQXSPSE4071I: Chassis Intrusion detection is [arg1] by user [arg2] from [arg3] at IP address [arg4].**

A user enables or disables Chassis Intrusion detection

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0292

User Action:

Information only; no action is required.

- **FQXSPSE4072I: Random SED AK is regenerated by user [arg1] from [arg2] at IP address [arg3].**

A user regenerates a random SED AK

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0294

User Action:

Information only; no action is required.

- **FQXSPSE4073I: Motion detection is [arg1] by user [arg2] from [arg3] at IP address [arg4].**

Motion detection is enabled or disabled by user

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0295

User Action:

Information only; no action is required.

- **FQXSPSE4074I: Security mode downgrades because the XCC2 Platinum Upgrade key is expired or deleted.**

This message is for the use case where security mode downgrades because XCC2 Platinum Upgrade key is expired or deleted.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0300

User Action:

Information only; no action is required.

- **FQXSPSE4075I: [arg1] by KCS to allow secure boot to be enabled by user [arg2] from [arg3] at IP address [arg4].**

Allow Secure boot to be enabled over KCS

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0310

User Action:

Information only; no action is required.

- **FQXSPSE4076I: [arg1] by KCS to allow secure boot to be disabled by user [arg2] from [arg3] at IP address [arg4].**

Allow Secure boot to be disabled over KCS

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0311

User Action:

Information only; no action is required.

- **FQXSPSE4077I: Bluetooth button on front panel is [arg1] on server [arg2] by user [arg3] from [arg4] at IP address [arg5].**

Bluetooth button on front panel is enabled/disabled by user

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0314

User Action:

Information only; no action is required.

- **FQXSPSE4078I: Bluetooth is [arg1] by pressing bluetooth button on front panel.**

Bluetooth is enabled/disabled by pressing bluetooth button on front panel

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0315

User Action:

Information only; no action is required.

- **FQXSPSE4079I: The Operator role is [arg1] to contain Remote Console Access permission by user [arg2] from [arg3] at IP address [arg4].**

Update privilege to enable/disable Operator to access Remote Console

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0322

User Action:

Information only; no action is required.

- **FQXSPSE4080I: The user [arg1] attempts to clear CMOS from [arg2] at IP address [arg4].**

User attempts to clear CMOS

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0323

User Action:

Information only; no action is required.

- **FQXSPSE4081I: BMC returns the valid local cached key to UEFI for SED drives.**

This message is for the use case where BMC returns the local cached key to UEFI for SED drives.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0327

User Action:

Information only; no action is required.

- **FQXSPSE4082I: Remote key management server is unaccessible.**

This message is for the use case where remote key management server is unaccessible.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0330

User Action:

Information only; no action is required.

- **FQXSPSE4083I: The local cached key has expired and destroyed it.**

This message is for the use case where the local cached key has expired and destroyed it.

Severity: Info
Serviceable: No

Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0331

User Action:

Information only; no action is required.

- **FQXSPSE4084I: Periodic connection to remote key management server succeeded.**

This message is for the use case where the remote key management server poll function has succeeded.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0332

User Action:

Information only; no action is required.

- **FQXSPSE4085I: Periodic connection to remote key management server failed.**

This message is for the use case where the remote key management server poll function has failed.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0333

User Action:

Information only; no action is required.

- **FQXSPSE4088I: The chassis caretaker node ID is changed from [arg1] to [arg2].**

This message is for the use case where chassis caretaker node is changed.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0336

User Action:

Information only; no action is required.

- **FQXSPSE4089I: The chassis node with node ID [arg1] is inserted.**

This message is for the use case where node is inserted into the chassis.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22

CIM Prefix: IMM CIM ID: 0337

User Action:

Information only; no action is required.

- **FQXSPSE4090I: The chassis node with node ID [arg1] is removed.**

This message is for the use case where node is removed from the chassis.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0338

User Action:

Information only; no action is required.

- **FQXSPSR0001N: Sensor [SensorElementName] has transitioned to non-recoverable from a less severe state.**

This message is for the use case when an implementation has detected a Sensor transitioned to non-recoverable from less severe.

Severity: Error
Serviceable: Yes
Automatically notify Support: No
Alert Category: Critical - Hard Disk drive
SNMP Trap ID: 5
CIM Prefix: PLAT CIM ID: 0524

User Action:

Using XCC web or LSA or Storcli to check the status of every virtual disk on your system, resolve the problem on the problematic virtual disk(s).

- **FQXSPSR2001I: Sensor [SensorElementName] has deasserted the transition to non-recoverable from a less severe state.**

This message is for the use case when an implementation has detected that the Sensor transition to non-recoverable from less severe has deasserted.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: Critical - Hard Disk drive
SNMP Trap ID: 5
CIM Prefix: PLAT CIM ID: 0525

User Action:

Information only; no action is required

- **FQXSPSS4000I: Management Controller Test Alert Generated by [arg1].**

This message is for the use case where a user has generated a Test Alert.

Severity: Info
Serviceable: No
Automatically notify Support: No

Alert Category: System - other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0040

User Action:

Information only; no action is required.

- **FQXSPSS4001I: Server General Settings set by user [arg1]: Name=[arg2], Contact=[arg3], Location=[arg4], Room=[arg5], RackID=[arg6], Rack U-position=[arg7], Address=[arg8].**

A user configured the Location setting

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0080

User Action:

Information only; no action is required.

- **FQXSPSS4002I: License key for [arg1] added by user [arg2].**

A user installs License Key

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0096

User Action:

Information only; no action is required.

- **FQXSPSS4003I: License key for [arg1] removed by user [arg2].**

A user removes a License Key

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0097

User Action:

Information only; no action is required.

- **FQXSPSS4004I: Test Call Home Generated by user [arg1].**

Test Call Home generated by user.

Severity: Info
Serviceable: No
Automatically notify Support: Yes
Alert Category: System - Other
SNMP Trap ID:

CIM Prefix: IMM CIM ID: 0134

User Action:

Information only; no action is required.

- **FQXSPSS4005I: Manual Call Home by user [arg1]: [arg2].**

Manual Call Home by user.

Severity: Info

Serviceable: No

Automatically notify Support: Yes

Alert Category: System - Other

SNMP Trap ID:

CIM Prefix: IMM CIM ID: 0135

User Action:

Information only; no action is required.

- **FQXSPSS4006I: Call Home to [arg1] failed to complete: [arg2].**

Call Home failed to complete.

Severity: Info

Serviceable: No

Automatically notify Support: No

Alert Category: System - Other

SNMP Trap ID: 22

CIM Prefix: IMM CIM ID: 0195

User Action:

Information only; no action is required.

- **FQXSPSS4007I: The BMC functionality tier is changed from [arg1] to [arg2].**

Tier Change

Severity: Info

Serviceable: No

Automatically notify Support: No

Alert Category: System - Other

SNMP Trap ID: 22

CIM Prefix: IMM CIM ID: 0222

User Action:

Information only; no action is required.

- **FQXSPSS4008I: The [arg1] setting has been changed to [arg2] by user [arg3].**

The setting has been changed by user

Severity: Info

Serviceable: No

Automatically notify Support: No

Alert Category: System - Other

SNMP Trap ID: 22

CIM Prefix: IMM CIM ID: 0225

User Action:

Information only; no action is required.

- **FQXSPSS4009I: System enters LXPM maintenance mode.**

The system enters maintenance mode

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0226

User Action:

Information only; no action is required.

- **FQXSPSS4010I: Test Audit Log generated by user [arg1].**

This message is for the use case where OS Crash Video Capture Failed.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0237

User Action:

Information only; no action is required.

- **FQXSPSS4011I: Fan speed boost setting is changed from [arg1] to [arg2].**

The setting of fan speed boost is changed.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0254

User Action:

Information only; no action is required.

- **FQXSPTR4000I: Management Controller [arg1] clock has been set from NTP server [arg2].**

This message is for the use case where a Management Controller clock has been set from the Network Time Protocol server.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0033

User Action:

Complete the following steps until the problem is solved:

1. Make sure that the certificate that you are importing is correct.

2. Try to import the certificate again.

- **FQXSPTR4001I: Date and Time set by user [arg1]: Date=[arg2], Time=[arg3], DST Auto-adjust=[arg4], Timezone=[arg5].**

A user configured the Date and Time settings

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0079

User Action:

Information only; no action is required.

- **FQXSPTR4002I: Synchronize time setting by user [arg1]: Mode=Sync with NTP Server, NTPServerHost1=[arg2]:[arg3],NTPServerHost2=[arg4]:[arg5],NTPServerHost3=[arg6]:[arg7], NTPServerHost4=[arg8]:[arg9],NTPUpdateFrequency=[arg10].**

A user configured the Date and Time synchronize settings

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0085

User Action:

Information only; no action is required.

- **FQXSPTR4003I: Synchronize time setting by user [arg1]: Mode=Sync with server clock.**

A user configured the Date and Time synchronize settings

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0224

User Action:

Information only; no action is required.

- **FQXSPUN0009G: Sensor [SensorElementName] has asserted.**

This message is for the use case when an implementation has detected a Sensor has asserted.

Severity: Warning
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: PLAT CIM ID: 0508

User Action:

Reboot the system. If the problem still exist, press F1 or use LXPM to do XCC FW update.

- **FQXSPUN0017I: Sensor [SensorElementName] has transitioned to normal state.**

This message is for the use case when an implementation has detected a Sensor transition to the normal state.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: Warning - Other
SNMP Trap ID: 60
CIM Prefix: PLAT CIM ID: 0518

User Action:

Information only; no action is required

- **FQXSPUN0018J: Sensor [SensorElementName] has transitioned from normal to non-critical state.**

This message is for the use case when an implementation has detected a Sensor transitioned to non-critical from normal.

Severity: Warning
Serviceable: Yes
Automatically notify Support: No
Alert Category: Warning - Other
SNMP Trap ID: 60
CIM Prefix: PLAT CIM ID: 0520

User Action:

Please check event log of XClarity Controller to investigate the identified device for enhancement.

- **FQXSPUN0019M: Sensor [SensorElementName] has transitioned to critical from a less severe state.**

This message is for the use case when an implementation has detected a Sensor transitioned to critical from less severe.

Severity: Error
Serviceable: Yes
Automatically notify Support: No
Alert Category: Critical - Other
SNMP Trap ID: 50
CIM Prefix: PLAT CIM ID: 0522

User Action:

Complete the following steps:

1. Please check XCC web GUI to see the identified error.
2. Check system event log to fix the error.
3. If the problem still exist, please contact local service.

- **FQXSPUN0023N: Sensor [SensorElementName] has transitioned to non-recoverable.**

This message is for the use case when an implementation has detected a Sensor transitioned to non-recoverable.

Severity: Error
Serviceable: Yes

Automatically notify Support: No
Alert Category: Critical - Other
SNMP Trap ID: 50
CIM Prefix: PLAT CIM ID: 0530

User Action:

Complete the following steps:

1. Check the Lenovo support site for an applicable service bulletin or firmware update that applies to this error.
2. Reboot the system.
3. If the error continues, replace the system-board assembly (see hardware maintenance manual).

- **FQXSPUN0026I: Device [LogicalDeviceElementName] has been added.**

This message is for the use case when an implementation has detected a Device was inserted.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: PLAT CIM ID: 0536

User Action:

Information only; no action is required

- **FQXSPUN0048I: The RAID controller in PCI slot [arg1] in optimal status.**

This message is for the use case when an implementation has detected a Sensor transition to the normal state.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: PLAT CIM ID: 0518

User Action:

Information only; no action is required

- **FQXSPUN2009I: Sensor [SensorElementName] has deasserted.**

This message is for the use case when an implementation has detected a Sensor has deasserted.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: PLAT CIM ID: 0509

User Action:

Information only; no action is required

- **FQXSPUN2012I: Sensor [SensorElementName] has deasserted.**

This message is for the use case when an implementation has detected a Sensor has deasserted.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: PLAT CIM ID: 0509

User Action:

Information only; no action is required

- **FQXSPUN2018: Sensor [SensorElementName] has deasserted the transition from normal to non-critical state.**

This message is for the use case when an implementation has detected that a Sensor has deasserted a transition to non-critical from normal.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: Warning - Other
SNMP Trap ID: 60
CIM Prefix: PLAT CIM ID: 0521

User Action:

Information only; no action is required

- **FQXSPUN2019: Sensor [SensorElementName] has transitioned to a less severe state from critical.**

This message is for the use case when an implementation has detected a Sensor transition to less severe from critical.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: Critical - Other
SNMP Trap ID: 50
CIM Prefix: PLAT CIM ID: 0523

User Action:

Information only; no action is required

- **FQXSPUN2023: Sensor [SensorElementName] has deasserted the transition to non-recoverable.**

This message is for the use case when an implementation has detected that the Sensor transition to non-recoverable has deasserted.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: Critical - Other
SNMP Trap ID: 50
CIM Prefix: PLAT CIM ID: 0531

User Action:

Information only; no action is required

- **FQXSPUN2049I: The RAID controller in PCI slot [arg1] is no longer in warning status.**

This message is for the use case when an implementation has detected that a Sensor has deasserted a transition to non-critical from normal.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: Warning - Other
SNMP Trap ID: 60
CIM Prefix: PLAT CIM ID: 0521

User Action:

Information only; no action is required.

- **FQXSPUN2050I: The RAID controller in PCI slot [arg1] is no longer in critical status.**

This message is for the use case when an implementation has detected a Sensor transition to less severe from critical.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: Critical - Other
SNMP Trap ID: 50
CIM Prefix: PLAT CIM ID: 0523

User Action:

Information only; no action is required

- **FQXSPUP0002I: A firmware or software change occurred on system [ComputerSystemElementName].**

This message is for the use case when an implementation has detected that the Firmware or Software Changed.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: PLAT CIM ID: 0438

User Action:

Information only; no action is required

- **FQXSPUP0007L: Invalid or Unsupported firmware or software was detected on system [ComputerSystemElementName].**

This message is for the use case when an implementation has detected an Invalid/Unsupported Firmware/Software Version.

Severity: Error
Serviceable: Yes
Automatically notify Support: No
Alert Category: Critical - Other
SNMP Trap ID: 50
CIM Prefix: PLAT CIM ID: 0446

User Action:

Reflash or update XCC firmware

- **FQXSPUP4000I: Please ensure that the Management Controller [arg1] is flashed with the correct firmware. The Management Controller is unable to match its firmware to the server.**

This message is for the use case where a Management Controller firmware version does not match the server.

Severity: Error
Serviceable: No
Automatically notify Support: No
Alert Category: System - other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0031

User Action:

Complete the following steps until the problem is solved:

1. Update the BMC firmware.
2. NOTE: Some cluster solutions require specific code levels or coordinated code updates. If the device is part of a cluster solution, verify that the latest level of code is supported for the cluster solution before you update the code.
3. If problem persists, collect Service Data log.
4. Contact Lenovo Support.

- **FQXSPUP4001I: Flash of [arg1] from [arg2] succeeded for user [arg3] .**

This message is for the use case where a user has successfully flashed the firmware component (MC Main Application, MC Boot ROM, BIOS, Diagnostics, System Power Backplane, Remote Expansion Enclosure Power Backplane, Integrated System Management).

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0035

User Action:

Information only; no action is required.

- **FQXSPUP4002I: Flash of [arg1] from [arg2] failed for user [arg3].**

This message is for the use case where a user has not flashed the firmware component from the interface and IP address due to a failure.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0036

User Action:

Information only; no action is required.

- **FQXSPUP4003I: [arg1] firmware mismatch internal to system [arg2]. Please attempt to flash the [arg3] firmware.**

This message is for the use case where a specific type of firmware mismatch has been detected.

Severity: Error
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0042

User Action:

Complete the following steps until the problem is solved:

1. AC cycle the system.
2. Reflash XCC/BMC firmware to the latest version.
3. NOTE: Some cluster solutions require specific code levels or coordinated code updates. If the device is part of a cluster solution, verify that the latest level of code is supported for the cluster solution before you update the code.
4. If problem persists, collect Service Data log.
5. Contact Lenovo Support.

- **FQXSPUP4004I: XCC firmware mismatch between nodes/servers [arg1] and [arg2]. Please attempt to flash the XCC firmware to the same level on all nodes/servers.**

A mismatch of XCC firmware has been detected between nodes/servers

Severity: Error
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0132

User Action:

Complete the following steps until the problem is solved:

1. Reflash XCC/BMC firmware to the latest version on all servers.
2. NOTE: Some cluster solutions require specific code levels or coordinated code updates. If the device is part of a cluster solution, verify that the latest level of code is supported for the cluster solution before you update the code.
3. If problem persists, collect Service Data log.
4. Contact Lenovo Support.

- **FQXSPUP4005I: FPGA firmware mismatch between nodes/servers [arg1] and [arg2]. Please attempt to flash the FPGA firmware to the same level on all nodes/servers.**

A mismatch of FPGA firmware has been detected between nodes/servers

Severity: Error
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0133

User Action:

Complete the following steps until the problem is solved:

1. Reflash XCC/BMC firmware to the latest version on all servers.
 2. NOTE: Some cluster solutions require specific code levels or coordinated code updates. If the device is part of a cluster solution, verify that the latest level of code is supported for the cluster solution before you update the code.
 3. If problem persists, collect Service Data log.
 4. Contact Lenovo Support.
- **FQXSPUP4006I: Auto promote primary XCC to backup is [arg1] by user [arg2] from [arg3] at IP address [arg4].**

Auto promote primary XCC to backup is enabled or disabled.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0281

User Action:

Information only; no action is required.

- **FQXSPUP4007I: Violation access to XCC SPI flash is detected and isolated.**

This message is for the use case where violation access to XCC SPI flash is detected and isolated.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0298

User Action:

Information only; no action is required.

- **FQXSPUP4008I: Violation access to UEFI SPI flash is detected and isolated.**

This message is for the use case where violation access to UEFI SPI flash is detected and isolated.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0299

User Action:

Information only; no action is required.

- **FQXSPUP4009I: Please ensure that the system is flashed with the correct [arg1] firmware. The Management Controller is unable to match the firmware to the server.**

This message is for the use case where a firmware version does not match the server.

Severity: Error
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0324

User Action:

Information only; no action is required.

- **FQXSPUP4010I: Flash [arg1] of [arg2] from [arg3] succeeded for user [arg4] .**

This message is for the use case where a user has successfully flashed the firmware component (MC Main Application, MC Boot ROM, BIOS, Diagnostics, System Power Backplane, Remote Expansion Enclosure Power Backplane, Integrated System Management).

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: IMM CIM ID: 0325

User Action:

Information only; no action is required.

- **FQXSPUP4011I: Flash [arg1] of [arg2] from [arg3] failed for user [arg4].**

This message is for the use case where a user has not flashed the firmware component from the interface and IP address due to a failure.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID: 22
CIM Prefix: IMM CIM ID: 0326

User Action:

Information only; no action is required.

- **FQXSPWD0000I: Watchdog Timer expired for [WatchdogElementName].**

This message is for the use case when an implementation has detected a Watchdog Timer Expired.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: PLAT CIM ID: 0368

User Action:

Information only; no action is required

- **FQXSPWD0001I: Reboot of system [ComputerSystemElementName] initiated by watchdog [WatchdogElementName].**

This message is for the use case when an implementation has detected a Reboot by a Watchdog occurred.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: PLAT CIM ID: 0370

User Action:

Information only; no action is required

- **FQXSPWD0002I: Powering off system [ComputerSystemElementName] initiated by watchdog [WatchdogElementName].**

This message is for the use case when an implementation has detected a Poweroff by Watchdog has occurred.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: PLAT CIM ID: 0372

User Action:

Information only; no action is required

- **FQXSPWD0003I: Power cycle of system [ComputerSystemElementName] initiated by watchdog [WatchdogElementName].**

This message is for the use case when an implementation has detected a Power Cycle by Watchdog occurred.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: PLAT CIM ID: 0374

User Action:

Information only; no action is required

- **FQXSPWD0004I: Watchdog Timer interrupt occurred for [WatchdogElementName].**

This message is for the use case when an implementation has detected a Watchdog Timer interrupt occurred.

Severity: Info
Serviceable: No
Automatically notify Support: No
Alert Category: System - Other
SNMP Trap ID:
CIM Prefix: PLAT CIM ID: 0376

User Action:

Information only; no action is required

Chapter 3. UEFI events

UEFI error messages can be generated when the server starts up (POST) or while the server is running. UEFI error messages are logged in the Lenovo XClarity Controller event log in the server.

For each event code, the following fields are displayed:

Event identifier

An identifier that uniquely identifies an event.

Event description

The logged message string that appears for an event.

Explanation

Provides additional information to explain why the event occurred.

Severity

An indication of the level of concern for the condition. The severity is abbreviated in the event log to the first character. The following severities can be displayed:

- **Informational.** The event was recorded for audit purposes, usually a user action or a change of states that is normal behavior.
- **Warning.** The event is not as severe as an error, but if possible, the condition should be corrected before it becomes an error. It might also be a condition that requires additional monitoring or maintenance.
- **Error.** The event is a failure or critical condition that impairs service or an expected function.

User Action

Indicates what actions you should perform to solve the event. Perform the steps listed in this section in the order shown until the problem is solved. If you cannot solve the problem after performing all steps, contact Lenovo Support.

UEFI events organized by severity

The following table lists all UEFI events, organized by severity (Information, Error, and Warning).

Table 3. Events organized by severity

Event ID	Message String	Severity
FQXSFIO0021J	PCIe LER has occurred in PCIe slot [arg1]. The adapter may not operate correctly.	Informational
FQXSFIO0022J	PCIe Link Width has degraded from [arg1] to [arg2] in PCIe slot [arg3].	Informational
FQXSFIO0023J	PCIe Link Speed has degraded from [arg1] to [arg2] in PCIe slot [arg3].	Informational
FQXSFIO0027I	The Bus:[arg1] Device:[arg2] Fun:[arg3] is attempted to boot PXE.	Informational
FQXSFMA0001I	DIMM [arg1] Disable has been recovered. [arg2]	Informational
FQXSFMA0002I	The uncorrectable memory error state has been cleared.	Informational
FQXSFMA0006I	[arg1] DIMM [arg2] has been detected, the DIMM serial number is [arg3].	Informational

Table 3. Events organized by severity (continued)

Event ID	Message String	Severity
FQXSFMA0007I	[arg1] DIMM number [arg2] has been replaced. [arg3]	Informational
FQXSFMA0008I	DIMM [arg1] POST memory test failure has been recovered. [arg2]	Informational
FQXSFMA0026I	DIMM [arg1] Self-healing attempt at Rank [arg2] Sub Rank [arg3] Bank [arg4] Row [arg5] in Device [arg6]. [arg7]	Informational
FQXSFMA0029I	The PFA of DIMM [arg1] has been deasserted after applying PPR for this DIMM. [arg2]	Informational
FQXSFMA0030I	A correctable memory error has been detected on DIMM [arg1]. [arg2]	Informational
FQXSFPFU0021I	The TPM physical presence state has been cleared.	Informational
FQXSFPFU0023I	Secure Boot Image Verification Failure has been cleared as no failure in this round boot.	Informational
FQXSFPFU0025I	The default system settings have been restored.	Informational
FQXSFPFU4034I	TPM Firmware recovery is finished, rebooting system to take effect.	Informational
FQXSFPFU4037I	TPM Firmware recovery is finished.	Informational
FQXSFPFU4038I	TPM Firmware recovery successful.	Informational
FQXSFPFU4041I	TPM Firmware update is in progress. Please DO NOT power off or reset system.	Informational
FQXSFPFU4042I	TPM Firmware update is finished, rebooting system to take effect.	Informational
FQXSFPFU4044I	The current TPM firmware version could not support TPM version toggling.	Informational
FQXSFPFU4046I	TPM Firmware will be updated from TPM1.2 to TPM2.0.	Informational
FQXSFPFU4047I	TPM Firmware will be updated from TPM2.0 to TPM1.2.	Informational
FQXSFPFU4049I	TPM Firmware update successful.	Informational
FQXSFPFU4080I	Host Power-On password has been changed.	Informational
FQXSFPFU4081I	Host Power-On password has been cleared.	Informational
FQXSFPFU4082I	Host Admin password has been changed.	Informational
FQXSFPFU4083I	Host Admin password has been cleared.	Informational
FQXSFPFU4084I	Host boot order has been changed.	Informational
FQXSFPFU4085I	Host WOL boot order has been changed.	Informational
FQXSFSM0007I	The XCC System Event log (SEL) is full.	Informational
FQXSFD0001G	DRIVER HEALTH PROTOCOL: Missing Configuration. Requires Change Settings From F1.	Warning
FQXSFD0002M	DRIVER HEALTH PROTOCOL: Reports 'Failed' Status Controller.	Warning
FQXSFD0003I	DRIVER HEALTH PROTOCOL: Reports 'Reboot' Required Controller.	Warning
FQXSFD0005M	DRIVER HEALTH PROTOCOL: Disconnect Controller Failed. Requires 'Reboot'.	Warning
FQXSFD0006M	DRIVER HEALTH PROTOCOL: Reports Invalid Health Status Driver.	Warning
FQXSFD0007G	Security Key Lifecycle Manager (SKLM) IPMI Error.	Warning

Table 3. Events organized by severity (continued)

Event ID	Message String	Severity
FQXSFO0008M	An intra-board UPI dynamic link width reduction has been detected on the link between processor [arg1] port [arg2] and processor [arg3] port [arg4].	Warning
FQXSFO0013I	The device found at Bus [arg1] Device [arg2] Function [arg3] could not be configured due to resource constraints. The Vendor ID for the device is [arg4] and the Device ID is [arg5]. The physical slot number is [arg6].	Warning
FQXSFO0024M	PCIe Correctable Error PFA Threshold limit has been exceeded at Bus [arg1] Device [arg2] Function [arg3]. The Vendor ID for the device is [arg4] and the Device ID is [arg5]. The physical slot number is [arg6].	Warning
FQXSFO0026L	Boot failure: No bootable device.	Warning
FQXSFO0027L	Boot failure: PXE server not found.	Warning
FQXSFO0028L	Boot failure: Invalid boot sector.	Warning
FQXSFO0029G	Correctable CPU link error has been detected on processor [arg1].	Warning
FQXSFMA0012L	The [arg1] PFA Threshold limit has been exceeded on DIMM [arg2] at address [arg3]. [arg4]	Warning
FQXSFMA0027M	DIMM [arg1] Self-healing fail at Rank [arg2] Sub Rank [arg3] Bank [arg4] Row [arg5] in Device [arg6]. [arg7]	Warning
FQXSFMA0028M	DIMM [arg1] Self-healing attempt number over DIMM level threshold [arg2] at Rank [arg3] Sub Rank [arg4] Bank [arg5] Row [arg6] in Device [arg7]. [arg8]	Warning
FQXSFP0021G	Hardware physical presence is in asserted state.	Warning
FQXSFP0022G	The TPM configuration is not locked.	Warning
FQXSFP0023G	Secure Boot Image Verification Failure Warning.	Warning
FQXSFP0024G	Intel UEFI ACM startup failed, make sure TPM is enabled.	Warning
FQXSFP0032G	A boot configuration error has been detected.	Warning
FQXSFP0038G	A correctable error (Type [arg1]) has been detected by processor [arg2].	Warning
FQXSFP04033F	TPM Firmware recovery is in progress. Please DO NOT power off or reset system.	Warning
FQXSFP04035M	TPM Firmware recovery failed. TPM chip may be damaged.	Warning
FQXSFP04036F	TPM Firmware recovery is starting. Please DO NOT power off or reset system.	Warning
FQXSFP04040M	TPM selftest has failed.	Warning
FQXSFP04043G	TPM Firmware update aborted. System is rebooting...	Warning
FQXSFP04045G	Physical Presence is not asserted, abort TPM Firmware upgrade.	Warning
FQXSFP04050G	Failed to update TPM Firmware.	Warning
FQXSFP04051G	Undefined TPM_POLICY found	Warning
FQXSFP04052G	TPM_POLICY is not locked	Warning

Table 3. Events organized by severity (continued)

Event ID	Message String	Severity
FQXSFP4053G	System TPM_POLICY does not match the planar.	Warning
FQXSFP4054G	TPM card logical binding has failed.	Warning
FQXSFSM0002N	Boot Permission denied by Management Module: System Halted.	Warning
FQXSFSM0003N	Timed Out waiting on boot permission from Management Module: System Halted.	Warning
FQXSFSM0004M	An XCC communication failure has occurred.	Warning
FQXSFSM0006M	Unable to retrieve the system configuration from the XCC.	Warning
FQXSFSR0003G	The number of boot attempts has been exceeded. No bootable device found.	Warning
FQXSFT0001L	An invalid date and time have been detected.	Warning
FQXSFI0005M	An intra-board UPI failure has been detected on the link between processor [arg1] port [arg2] and processor [arg3] port [arg4].	Error
FQXSFI0007M	An error has been detected by the IIO on Bus [arg1]. The value of Global Fatal Error Status register is [arg2]. The value of Global Non-Fatal Error Status register is [arg3]. Please check error logs for additional downstream device error data, the physical slot number is [arg4]	Error
FQXSFI0010M	An Uncorrectable PCIe Error has Occurred at Bus [arg1] Device [arg2] Function [arg3]. The Vendor ID for the device is [arg4] and the Device ID is [arg5]. The Physical slot number is [arg6].	Error
FQXSFI0011M	A PCIe parity error has occurred on Bus [arg1] Device [arg2] Function [arg3]. The Vendor ID for the device is [arg4] and the Device ID is [arg5]. The Physical slot number is [arg6].	Error
FQXSFI0012M	A PCIe system error has occurred on Bus [arg1] Device [arg2] Function [arg3]. The Vendor ID for the device is [arg4] and the Device ID is [arg5]. The Physical slot number is [arg6].	Error
FQXSFI0014J	A bad option ROM checksum was detected for the device found at Bus [arg1] Device [arg2] Function [arg3]. The Vendor ID for the device is [arg4] and the Device ID is [arg5]. The physical slot number is [arg6].	Error
FQXSFI0017M	IFM: Error communicating with the XCC - IFM may not be deployed correctly.	Error
FQXSFI0019J	PCIe Resource Conflict [arg1].	Error
FQXSFI0030M	Uncorrectable CPU link error has been detected on processor [arg1].	Error
FQXSFMA0001M	DIMM [arg1] has been disabled due to an error detected during POST. [arg2]	Error
FQXSFMA0002M	An uncorrectable memory error has been detected on DIMM [arg1] at address [arg2]. [arg3]	Error
FQXSFMA0008M	DIMM [arg1] has failed the POST memory test. [arg2]	Error
FQXSFMA0029L	The [arg1] PFA Threshold limit has been exceeded on DIMM [arg2]. [arg3]	Error
FQXSFP0018N	CATERR(IERR) has asserted on processor [arg1].	Error

Table 3. Events organized by severity (continued)

Event ID	Message String	Severity
FQXSFP0019N	An uncorrectable error has been detected on processor [arg1].	Error
FQXSFP00030N	A firmware fault has been detected in the UEFI image.	Error
FQXSFP00031N	The number of POST attempts has reached the value configured in F1 setup. The system has booted with default UEFI settings. User specified settings have been preserved and will be used on subsequent boots unless modified before rebooting.	Error
FQXSFP00034L	The TPM could not be initialized properly.	Error
FQXSFP04056M	TPM card is changed, need install back the original TPM card which shipped with the system.	Error
FQXSFSM0008M	Boot permission timeout detected.	Error
FQXSFD0004M	DRIVER HEALTH PROTOCOL: Reports 'System Shutdown' Required Controller.	TEST

List of UEFI events

This section lists all messages that can be sent from UEFI.

- **FQXSFD0001G: DRIVER HEALTH PROTOCOL: Missing Configuration. Requires Change Settings From F1.**

DRIVER HEALTH PROTOCOL: Missing Configuration. Requires Change Settings From F1.

Severity: Warning

User Response:

Complete the following steps:

1. Go to F1 Setup > System Settings > Settings > Driver Health Status List and find a driver/controller reporting Configuration Required status.
2. Search for the driver menu from System Settings and change settings appropriately.
3. Save settings and restart the system.
4. If the problem persists, collect Service Data logs.
5. Contact Lenovo Support.

- **FQXSFD0002M: DRIVER HEALTH PROTOCOL: Reports 'Failed' Status Controller.**

DRIVER HEALTH PROTOCOL: Reports 'Failed' Status Controller.

Severity: Warning

User Response:

Complete the following steps:

1. Reboot the system.
2. Reflash the adapter firmware.
3. If the problem persists, collect Service Data logs.
4. Contact Lenovo Support.

- **FQXSFD0003I: DRIVER HEALTH PROTOCOL: Reports 'Reboot' Required Controller.**

DRIVER HEALTH PROTOCOL: Reports 'Reboot' Required Controller.

Severity: Warning

User Response:

Complete the following steps:

1. No action required - system will reboot at the end of POST.
2. Reflash the adapter firmware.
3. If the problem persists, collect Service Data logs.
4. Contact Lenovo Support.

- **FQXSFDD0004M: DRIVER HEALTH PROTOCOL: Reports 'System Shutdown' Required Controller.**

DRIVER HEALTH PROTOCOL: Reports 'System Shutdown' Required Controller.

Severity: Fatal

User Response:

Complete the following steps:

1. Reboot the system.
2. Reflash the adapter firmware.
3. If the problem persists, collect Service Data logs.
4. Contact Lenovo Support.

- **FQXSFDD0005M: DRIVER HEALTH PROTOCOL: Disconnect Controller Failed. Requires 'Reboot'.**

DRIVER HEALTH PROTOCOL: Disconnect Controller Failed. Requires 'Reboot'.

Severity: Warning

User Response:

Complete the following steps:

1. Reboot the system to reconnect the controller.
2. Reflash the adapter firmware.
3. If the problem persists, collect Service Data logs.
4. Contact Lenovo Support.

- **FQXSFDD0006M: DRIVER HEALTH PROTOCOL: Reports Invalid Health Status Driver.**

DRIVER HEALTH PROTOCOL: Reports Invalid Health Status Driver.

Severity: Warning

User Response:

Complete the following steps:

1. Reboot the system.
2. Reflash the adapter firmware.
3. If the problem persists, collect Service Data logs.
4. Contact Lenovo Support.

- **FQXSFDD0007G: Security Key Lifecycle Manager (SKLM) IPMI Error.**

Security Key Lifecycle Manager (SKLM) IPMI Error.

Severity: Warning

User Response:

Complete the following steps:

1. Check Lenovo support site for an applicable service bulletin or UEFI firmware update that applies to this error.
2. A/C cycle the system.
3. If the problem persists, collect Service Data logs.
4. Contact Lenovo Support.

- **FQXSFIO0005M: An intra-board UPI failure has been detected on the link between processor [arg1] port [arg2] and processor [arg3] port [arg4].**

An intra-board UPI failure has been detected on the link between processor [arg1] port [arg2] and processor [arg3] port [arg4].

Severity: Error

User Response:

Complete the following steps:

1. Check Lenovo support site for an applicable service bulletin or firmware update that applies to this error.
2. If the problem persists, collect Service Data logs.
3. If the problem persists, collect Service Data logs.
4. Contact Lenovo Support.

- **FQXSFIO0007M: An error has been detected by the IIO on Bus [arg1]. The value of Global Fatal Error Status register is [arg2]. The value of Global Non-Fatal Error Status register is [arg3]. Please check error logs for additional downstream device error data, the physical slot number is [arg4]**

An error has been detected by the IIO on Bus [arg1]. The value of Global Fatal Error Status register is [arg2]. The value of Global Non-Fatal Error Status register is [arg3]. Please check error logs for additional downstream device error data, the physical slot number is [arg4]

Severity: Error

User Response:

Complete the following steps:

1. Check Lenovo support site for an applicable service bulletin or firmware update for the system or adapter that applies to this error.
2. If the problem persists, collect Service Data logs.
3. Contact Lenovo Support.

- **FQXSFIO0008M: An intra-board UPI dynamic link width reduction has been detected on the link between processor [arg1] port [arg2] and processor [arg3] port [arg4].**

An intra-board UPI dynamic link width reduction has been detected on the link between processor [arg1] port [arg2] and processor [arg3] port [arg4].

Severity: Warning

User Response:

Complete the following steps:

1. Reboot the system.
2. If the problem persists, collect Service Data logs.
3. Contact Lenovo Support.

- **FQXSFIO0010M: An Uncorrectable PCIe Error has Occurred at Bus [arg1] Device [arg2] Function [arg3]. The Vendor ID for the device is [arg4] and the Device ID is [arg5]. The Physical slot number is [arg6].**

An Uncorrectable PCIe Error has Occurred at Bus [arg1] Device [arg2] Function [arg3]. The Vendor ID for the device is [arg4] and the Device ID is [arg5]. The Physical slot number is [arg6].

Severity: Error

User Response:

Complete the following steps:

1. Check Lenovo support site for an applicable device driver, firmware update, version of service information for this product or other information that applies to this error. Load new device driver and any required firmware updates.
2. If this node and/or any attached cables were recently installed, moved, serviced or upgraded.
3. If the problem persists, collect Service Data logs.
4. Contact Lenovo Support.

- **FQXSFIO0011M: A PCIe parity error has occurred on Bus [arg1] Device [arg2] Function [arg3]. The Vendor ID for the device is [arg4] and the Device ID is [arg5]. The Physical slot number is [arg6].**

A PCIe parity error has occurred on Bus [arg1] Device [arg2] Function [arg3]. The Vendor ID for the device is [arg4] and the Device ID is [arg5]. The Physical slot number is [arg6].

Severity: Error

User Response:

Complete the following steps:

1. Check Lenovo support site for an applicable device driver, firmware update, version of service information for this product or other information that applies to this error. Load new device driver and any required firmware updates.
2. If this node and/or any attached cables were recently installed, moved, serviced or upgraded.
3. If the problem persists, collect Service Data logs.
4. Contact Lenovo Support.

- **FQXSFIO0012M: A PCIe system error has occurred on Bus [arg1] Device [arg2] Function [arg3]. The Vendor ID for the device is [arg4] and the Device ID is [arg5]. The Physical slot number is [arg6].**

A PCIe system error has occurred on Bus [arg1] Device [arg2] Function [arg3]. The Vendor ID for the device is [arg4] and the Device ID is [arg5]. The Physical slot number is [arg6].

Severity: Error

User Response:

Complete the following steps:

1. Check Lenovo support site for an applicable device driver, firmware update, version of service information for this product or other information that applies to this error. Load new device driver and any required firmware updates.
2. If this node and/or any attached cables were recently installed, moved, serviced or upgraded.
3. If the problem persists, collect Service Data logs.
4. Contact Lenovo Support.

- **FQXSFIO0013I: The device found at Bus [arg1] Device [arg2] Function [arg3] could not be configured due to resource constraints. The Vendor ID for the device is [arg4] and the Device ID is [arg5]. The physical slot number is [arg6].**

The device found at Bus [arg1] Device [arg2] Function [arg3] could not be configured due to resource constraints. The Vendor ID for the device is [arg4] and the Device ID is [arg5]. The physical slot number is [arg6].

Severity: Warning

User Response:

Complete the following steps:

1. If this PCIe device and/or any attached cables were recently installed, moved, serviced or upgraded, reseal adapter and any attached cables.
2. Check Lenovo support site for any applicable service bulletin or UEFI or adapter firmware update that applies to this error.(NOTE: It may be necessary to disable unused option ROMs from UEFI F1 setup, OneCLI utility, or using adapter manufacturer utilities so that adapter firmware can be updated.)
3. Move the adapter to a different slot. If a slot is not available or error recurs, replace the adapter.
4. If the problem persists, collect Service Data logs.
5. Contact Lenovo Support.

- **FQXSFIO0014J: A bad option ROM checksum was detected for the device found at Bus [arg1] Device [arg2] Function [arg3]. The Vendor ID for the device is [arg4] and the Device ID is [arg5]. The physical slot number is [arg6].**

A bad option ROM checksum was detected for the device found at Bus [arg1] Device [arg2] Function [arg3]. The Vendor ID for the device is [arg4] and the Device ID is [arg5]. The physical slot number is [arg6].

Severity: Error

User Response:

Complete the following steps:

1. If this PCIe device and/or any attached cables were recently installed, moved, serviced or upgraded. Reseat adapter and any attached cables.
2. Move adapter to a different system slot, if available.
3. Check Lenovo support site for any applicable service bulletin or UEFI or adapter firmware update that applies to this error.

Note: It may be necessary to configure slot to Gen1 or to use special utility software so that adapter firmware can be upgraded. Gen1/Gen2 settings can be configured via F1 Setup -> System Settings -> Devices and I/O Ports -> PCIe Gen1/Gen2/Gen3 Speed Selection, or the OneCLI utility.

4. If the problem persists, collect Service Data logs.
5. Contact Lenovo Support.

- **FQXSFIO0017M: IFM: Error communicating with the XCC - IFM may not be deployed correctly.**

IFM: Error communicating with the XCC - IFM may not be deployed correctly.

Severity: Error

User Response:

Complete the following steps:

1. Update all system firmware (including adapter firmware) to the latest levels.

Note: If the device is part of a cluster solution, verify that the latest level of code is supported for the cluster solution before the update.

2. If the problem persists, collect Service Data logs.
3. Contact Lenovo Support.

- **FQXSFIO0019J: PCIe Resource Conflict [arg1].**

PCIe Resource Conflict [arg1].

Severity: Error

User Response:

Complete the following steps:

1. If this PCIe device and/or any attached cables were recently installed, moved, serviced or upgraded, reseat the adapter and any attached cables.
2. Move the adapter to a different system slot, if available.
3. Check Lenovo support site for any applicable service bulletin or UEFI or adapter firmware update that applies to this error.

Note: It may be necessary to configure slot to Gen1 or to use special utility software so that adapter firmware can be upgraded. Gen1/Gen2 settings can be configured via F1 Setup -> System Settings -> Devices and I/O Ports -> PCIe Gen1/Gen2/Gen3 Speed Selection, or the OneCLI utility.

4. If the problem persists, collect Service Data logs.

- **FQXSFI00021J: PCIe LER has occurred in PCIe slot [arg1]. The adapter may not operate correctly.**

PCIe LER has occurred in PCIe slot [arg1]. The adapter may not operate correctly.

Severity: Info

User Response:

Complete the following steps:

1. Check the log for a separate error related to an associated PCIe device and resolve that error.
2. Check the Lenovo support site for an applicable service bulletin or firmware update for the system or adapter that applies to this error.
3. Check the system spec to make sure that the PCIe device is installed in the compatible PCIe slot and a compatible cable is used. If not, performance of this device might be impacted.
4. If the problem persists, collect Service Data logs.
5. Contact Lenovo Support.

- **FQXSFI00022J: PCIe Link Width has degraded from [arg1] to [arg2] in PCIe slot [arg3].**

PCIe Link Width has degraded from [arg1] to [arg2] in PCIe slot [arg3].

Severity: Info

User Response:

Complete the following steps:

1. Check the log for a separate error related to an associated PCIe device and resolve that error.
2. Check the Lenovo support site for an applicable service bulletin or firmware update for the system or adapter that applies to this error.
3. Check the system spec to make sure that the PCIe device is installed in the compatible PCIe slot and a compatible cable is used. If not, performance of this device might be impacted.
4. If the problem persists, collect Service Data logs.
5. Contact Lenovo Support.

- **FQXSFI00023J: PCIe Link Speed has degraded from [arg1] to [arg2] in PCIe slot [arg3].**

PCIe Link Speed has degraded from [arg1] to [arg2] in PCIe slot [arg3].

Severity: Info

User Response:

Complete the following steps:

1. Check the log for a separate error related to an associated PCIe device and resolve that error.
2. Check the Lenovo support site for an applicable service bulletin or firmware update for the system or adapter that applies to this error.
3. Check the system spec to make sure that the PCIe device is installed in the compatible PCIe slot and a compatible cable is used. If not, performance of this device might be impacted.
4. If the problem persists, collect Service Data logs.
5. Contact Lenovo Support.

- **FQXSFIO0024M: PCIe Correctable Error PFA Threshold limit has been exceeded at Bus [arg1] Device [arg2] Function [arg3]. The Vendor ID for the device is [arg4] and the Device ID is [arg5]. The physical slot number is [arg6].**

PCIe Correctable Error PFA Threshold limit has been exceeded at Bus [arg1] Device [arg2] Function [arg3]. The Vendor ID for the device is [arg4] and the Device ID is [arg5]. The physical slot number is [arg6].

Severity: Warning

User Response:

- **FQXSFIO0026L: Boot failure: No bootable device.**

Boot failure: No bootable device.

Severity: Warning

User Response:

Complete the following steps:

1. Check if there is any connection problems with boot device and if any OS installed in boot device, then Reboot the system.
2. If the problem persists, collect Service Data logs.
3. Contact Lenovo Support.

- **FQXSFIO0027I: The Bus:[arg1] Device:[arg2] Fun:[arg3] is attempted to boot PXE.**

The Bus:[arg1] Device:[arg2] Fun:[arg3] is attempted to boot PXE.

Severity: Info

User Response:

- **FQXSFIO0027L: Boot failure: PXE server not found.**

Boot failure: PXE server not found.

Severity: Warning

User Response:

Complete the following steps:

1. Check if there is any connection problems with PXE sever and check PXE sever status, then Reboot the system.
2. If the problem persists, collect Service Data logs.
3. Contact Lenovo Support.

- **FQXSFIO0028L: Boot failure: Invalid boot sector.**

Boot failure: Invalid boot sector.

Severity: Warning

User Response:

Complete the following steps:

1. Replace the device with another good device, then Reboot the system.
2. If the problem persists, collect Service Data logs.
3. Contact Lenovo Support.

- **FQXSFIO0029G: Correctable CPU link error has been detected on processor [arg1].**

Correctable CPU link error has been detected on processor [arg1].

Severity: Warning

User Response:

Complete the following steps:

1. Reboot the system.
2. If the problem persists, collect Service Data logs.
3. Contact Lenovo Support.

- **FQXSFIO0030M: Uncorrectable CPU link error has been detected on processor [arg1].**

Uncorrectable CPU link error has been detected on processor [arg1].

Severity: Error

User Response:

Complete the following steps:

1. Check Lenovo support site for an applicable service bulletin or firmware update that applies to this error.
2. If the problem persists, collect Service Data logs.
3. Contact Lenovo Support.

- **FQXSFMA0001I: DIMM [arg1] Disable has been recovered. [arg2]**

DIMM [arg1] Disable has been recovered. [arg2]

Severity: Info

User Response:

This is an information event, no user action is required.

- **FQXSFMA0001M: DIMM [arg1] has been disabled due to an error detected during POST. [arg2]**

DIMM [arg1] has been disabled due to an error detected during POST. [arg2]

Severity: Error

User Response:

Complete the following steps:

1. Reseat the affected DIMM (Note: The event Log might contain a recent FQXSFMA0011I event denoting detected change in DIMM population that could be related to this problem.)
2. Boot to F1 setup and enable the DIMM (For AMD, do not need to enable DIMM in Setup). Reboot the system.
3. Update UEFI firmware to the latest version.
4. If the problem persists, collect Service Data logs.
5. Contact Lenovo Support.

- **FQXSFMA0002I: The uncorrectable memory error state has been cleared.**

The uncorrectable memory error state has been cleared.

Severity: Info

User Response:

This is an information event, no user action is required.

- **FQXSFMA0002M: An uncorrectable memory error has been detected on DIMM [arg1] at address [arg2]. [arg3]**

An uncorrectable memory error has been detected on DIMM [arg1] at address [arg2]. [arg3]

Severity: Error

User Response:

Complete the following steps:

1. Reseat the affected DIMM (Note: The event Log might contain a recent FQXSFMA0011I event denoting detected change in DIMM population that could be related to this problem.)
2. Check Lenovo support site for an applicable service bulletin or firmware update that applies to this memory error.
3. If problem recurs collect Service Data log.
4. Contact Lenovo Support.

- **FQXSFMA0006I: [arg1] DIMM [arg2] has been detected, the DIMM serial number is [arg3].**

[arg1] DIMM [arg2] has been detected, the DIMM serial number is [arg3].

Severity: Info

User Response:

Complete the following steps:

1. If this information event is logged in the XCC event log, the server does not have qualified memory installed.
2. The memory installed may not be covered under warranty.
3. Without qualified memory, speeds supported above industry standards will not be enabled.
4. Please contact your Local Sales Representative or Authorized Business Partner to order qualified memory to replace the unqualified DIMM(s).
5. After you install qualified memory and power up the server, check to ensure this informational event is not logged again.

- **FQXSFMA0007I: [arg1] DIMM number [arg2] has been replaced. [arg3]**

[arg1] DIMM number [arg2] has been replaced. [arg3]

Severity: Info

User Response:

Complete the following steps:

1. If this information event is logged in the XCC event log, the server does not have qualified memory installed.
2. The memory installed may not be covered under warranty.
3. Without qualified memory, speeds supported above industry standards will not be enabled.
4. Please contact your Local Sales Representative or Authorized Business Partner to order qualified memory to replace the unqualified DIMM(s).

5. After you install qualified memory and power up the server, check to ensure this informational event is not logged again.

- **FQXSFMA0008I: DIMM [arg1] POST memory test failure has been recovered. [arg2]**

DIMM [arg1] POST memory test failure has been recovered. [arg2]

Severity: Info

User Response:

This is an information event, no user action is required.

- **FQXSFMA0008M: DIMM [arg1] has failed the POST memory test. [arg2]**

DIMM [arg1] has failed the POST memory test. [arg2]

Severity: Error

User Response:

Complete the following steps:

1. If the DIMM configuration was changed prior to this failure verify that the DIMMs are installed in the correct population sequence.
2. RESEAT the DIMM that failed POST memory test and the DIMMs on adjacent slots if populated. Boot to F1 setup and enable the DIMM. Reboot the system.
3. If the DIMMs have been upgraded just prior to the issue than update uEFI to the latest version.
4. If the problem persists, collect Service Data logs.
5. Contact Lenovo Support.

- **FQXSFMA0012L: The [arg1] PFA Threshold limit has been exceeded on DIMM [arg2] at address [arg3]. [arg4]**

The [arg1] PFA Threshold limit has been exceeded on DIMM [arg2] at address [arg3]. [arg4]

Severity: Warning

User Response:

Complete the following steps:

1. Reseat affected DIMM (Note: The event Log might contain a recent FQXSFMA0011I event denoting detected change in DIMM population that could be related to this problem.)
2. Check Lenovo support site for an applicable service bulletin or firmware update that applies to this memory error.
3. If the problem persists, collect Service Data logs.
4. Contact Lenovo Support.

- **FQXSFMA0026I: DIMM [arg1] Self-healing attempt at Rank [arg2] Sub Rank [arg3] Bank [arg4] Row [arg5] in Device [arg6]. [arg7]**

DIMM [arg1] Self-healing attempt at Rank [arg2] Sub Rank [arg3] Bank [arg4] Row [arg5] in Device [arg6]. [arg7]

Severity: Info

User Response:

This is an information event, no user action is required.

- **FQXSFMA0027M: DIMM [arg1] Self-healing fail at Rank [arg2] Sub Rank [arg3] Bank [arg4] Row [arg5] in Device [arg6]. [arg7]**

DIMM [arg1] Self-healing fail at Rank [arg2] Sub Rank [arg3] Bank [arg4] Row [arg5] in Device [arg6]. [arg7]

Severity: Warning

User Response:

Complete the following steps:

1. Reseat the affected DIMM (Note: The event Log might contain a recent FQXSFMA0011I event denoting detected change in DIMM population that could be related to this problem.)
2. Boot to F1 setup and enable the DIMM. Reboot the system.
3. Update UEFI firmware to the latest version.
4. If the problem persists, collect Service Data logs.
5. Contact Lenovo Support.

- **FQXSFMA0028M: DIMM [arg1] Self-healing attempt number over DIMM level threshold [arg2] at Rank [arg3] Sub Rank [arg4] Bank [arg5] Row [arg6] in Device [arg7]. [arg8]**

DIMM [arg1] Self-healing attempt number over DIMM level threshold [arg2] at Rank [arg3] Sub Rank [arg4] Bank [arg5] Row [arg6] in Device [arg7]. [arg8]

Severity: Warning

User Response:

Complete the following steps:

1. Reseat the affected DIMM (Note: The event Log might contain a recent FQXSFMA0011I event denoting detected change in DIMM population that could be related to this problem.)
2. Boot to F1 setup and re-enable the DIMM. Reboot the system.
3. Update UEFI firmware to the latest version.
4. If the problem persists, collect Service Data logs.
5. Contact Lenovo Support.

- **FQXSFMA0029I: The PFA of DIMM [arg1] has been deasserted after applying PPR for this DIMM. [arg2]**

The PFA of DIMM [arg1] has been deasserted after applying PPR for this DIMM. [arg2]

Severity: Info

User Response:

This is an information event, no user action is required.

- **FQXSFMA0029L: The [arg1] PFA Threshold limit has been exceeded on DIMM [arg2]. [arg3]**

The [arg1] PFA Threshold limit has been exceeded on DIMM [arg2]. [arg3]

Severity: Error

User Response:

Complete the following steps:

1. Reseat the affected DIMM (Note: The event Log might contain a recent FQXSFMA0011I event denoting detected change in DIMM population that could be related to this problem.)
2. Check Lenovo support site for an applicable service bulletin or firmware update that applies to this memory error.
3. If the problem persists, collect Service Data logs.
4. Contact Lenovo Support.

- **FQXSFMA0030I: A correctable memory error has been detected on DIMM [arg1]. [arg2]**

A correctable memory error has been detected on DIMM [arg1]. [arg2]

Severity: Info

User Response:

- **FQXSFPU0018N: CATERR(IERR) has asserted on processor [arg1].**

CATERR(IERR) has asserted on processor [arg1].

Severity: Error

User Response:

Complete the following steps:

1. Check Lenovo support site for an applicable service bulletin or UEFI firmware update that applies to this Processor error.
2. Reboot the system.
3. If the problem persists, collect Service Data logs.
4. Contact Lenovo Support.

- **FQXSFPU0019N: An uncorrectable error has been detected on processor [arg1].**

An uncorrectable error has been detected on processor [arg1].

Severity: Error

User Response:

Complete the following steps:

1. Check Lenovo support site for an applicable service bulletin or UEFI firmware update that applies to this error.
2. Reboot the system.
3. If the problem persists, collect Service Data logs.
4. Contact Lenovo Support.

- **FQXSFPU0021G: Hardware physical presence is in asserted state.**

Hardware physical presence is in asserted state.

Severity: Warning

User Response:

Complete the following steps:

1. Complete any administrative tasks requiring the TPM physical presence switch to be in the "ON" position.
2. Restore the physical presence switch to the "OFF" position and reboot the system.
3. If the problem persists, collect Service Data logs.
4. Contact Lenovo Support.

- **FQXSFPU0021I: The TPM physical presence state has been cleared.**

The TPM physical presence state has been cleared.

Severity: Info

User Response:

This is an information event, no user action is required.

- **FQXSFPU0022G: The TPM configuration is not locked.**

The TPM configuration is not locked.

Severity: Warning

User Response:

Complete the following steps:

1. Reboot the system.
2. If the problem persists, collect Service Data logs.
3. Contact Lenovo Support.

- **FQXSFP0023G: Secure Boot Image Verification Failure Warning.**

Secure Boot Image Verification Failure Warning.

Severity: Warning

User Response:

Complete the following steps:

1. It's a security warning message when user want to boot from an unauthorized UEFI image or OS while Secure Boot is enabled and Secure Boot Mode is in User Mode. If customer does not want to boot any unauthorized UEFI image or OS, please remove that bootable device.
2. If customer does want to boot this unauthorized UEFI image or OS, there're two ways to allow system boot from this unauthorized image, the first is to disable Secure Boot, the second is to enroll the unauthorized image into DB(Authorized Signature Database).b.Enroll the unauthorized UEFI Image. assert the Physical Presence and then change Secure Boot Policy to Custom Policy (in Setup -> System Settings -> Security -> Security Boot Configuration -> Security Boot Policy), then enter into "Security Boot Custom Policy" Menu, press the "Enroll Efi Image" button, select the unauthorized UEFI Image in the popup box. (NOTE: There're two ways to assert Physical Presence. 1) switch Physical Presence Jumper to ON ; 2) If the Physical Presence Policy has been set to enabled (F1 Setup -> System Settings -> Security -> Physical Presence Policy Configuration), user is allowed to assert remote Physical Presence via IPMI tool.)
3. If the problem persists, collect Service Data logs.
4. Contact Lenovo Support.

- **FQXSFP0023I: Secure Boot Image Verification Failure has been cleared as no failure in this round boot.**

Secure Boot Image Verification Failure has been cleared as no failure in this round boot.

Severity: Info

User Response:

This is an information event, no user action is required.

- **FQXSFP0024G: Intel UEFI ACM startup failed, make sure TPM is enabled.**

Intel UEFI ACM startup failed, make sure TPM is enabled.

Severity: Warning

User Response:

Complete the following steps:

1. Assert Physical Presence via the Physical Presence Jumper or Remote Physical Presence:

Note: There are two methods to assert Physical Presence.

- a. Move the Physical Presence Jumper to the "ON" position.

- b. If the "Physical Presence Policy" has been set to "Enable" in F1 Setup the user is allowed to assert remote Physical Presence via the IPMI tool. The setting can be found in F1 Setup at "System Settings -> Security -> Physical Presence Policy Configuration".
2. Enable and activate the TPM. The setting can be found in F1 at "System Settings -> Security -> Trusted Platform Module -> TPM2".
 - a. Change [TPM Device] to "Enable".
 - b. Change [TPM State] to "Activate".
3. Reboot the system.
4. If the problem persists, collect Service Data logs.
5. Contact Lenovo Support.

- **FQXSFPU0025I: The default system settings have been restored.**

The default system settings have been restored.

Severity: Info

User Response:

This is an information event, no user action is required.

- **FQXSFPU0030N: A firmware fault has been detected in the UEFI image.**

A firmware fault has been detected in the UEFI image.

Severity: Error

User Response:

Complete the following steps:

1. Check Lenovo support site for an applicable service bulletin or firmware update that applies to this error.
2. Reflash UEFI image.
3. Undo recent system changes (settings or devices added). Verify that the system boots. Then, re-install options one at a time to locate the problem.
4. If problem persists, save customer's UEFI configurations, then remove and re-install CMOS battery for 30 seconds to clear CMOS contents. If it boots successfully, then restore system settings.
5. If the problem persists, collect Service Data logs.
6. Contact Lenovo Support.

- **FQXSFPU0031N: The number of POST attempts has reached the value configured in F1 setup. The system has booted with default UEFI settings. User specified settings have been preserved and will be used on subsequent boots unless modified before rebooting.**

The number of POST attempts has reached the value configured in F1 setup. The system has booted with default UEFI settings. User specified settings have been preserved and will be used on subsequent boots unless modified before rebooting.

Severity: Error

User Response:

Complete the following steps:

1. Original UEFI settings are still present. If customer desires to continue using the original settings, select Save Settings.
2. If User did not intentionally trigger the reboots, check logs for probable cause. For example, if there is a battery fault event, follow the steps to resolve that event.

3. Undo recent system changes (settings or devices added). Verify that the system boots. Then, re-install options one at a time to locate the problem.
4. Check Lenovo support site for an applicable service bulletin or firmware update that applies to this error. Update UEFI firmware if applicable.
5. Save customer's UEFI configurations, then remove and re-install CMOS battery for 30 seconds to clear CMOS contents. If it boots successfully, then restore system settings.
6. If the problem persists, collect Service Data logs.
7. Contact Lenovo Support.

- **FQXSFP0032G: A boot configuration error has been detected.**

A boot configuration error has been detected.

Severity: Warning

User Response:

Complete the following steps:

1. F1 Setup -> Save Settings
2. Retry OOB config update.
3. If the problem persists, collect Service Data logs.
4. Contact Lenovo Support.

- **FQXSFP0034L: The TPM could not be initialized properly.**

The TPM could not be initialized properly.

Severity: Error

User Response:

Complete the following steps:

1. Reboot the system. Reflash UEFI image.
2. If the problem persists, collect Service Data logs.
3. Contact Lenovo Support.

- **FQXSFP0038G: A correctable error (Type [arg1]) has been detected by processor [arg2].**

A correctable error (Type [arg1]) has been detected by processor [arg2].

Severity: Warning

User Response:

- **FQXSFP04033F: TPM Firmware recovery is in progress. Please DO NOT power off or reset system.**

TPM Firmware recovery is in progress. Please DO NOT power off or reset system.

Severity: Warning

User Response:

This is an information event, no user action is required.

Note: The system will not respond to power off signal (FQXSFP04034I) while TPM firmware recovery in progress.

- **FQXSFP04034I: TPM Firmware recovery is finished, rebooting system to take effect.**

TPM Firmware recovery is finished, rebooting system to take effect.

Severity: Info

User Response:

No user required for this event. This is for informational purposes only.

- **FQXSFP4035M: TPM Firmware recovery failed. TPM chip may be damaged.**

TPM Firmware recovery failed. TPM chip may be damaged.

Severity: Warning

User Response:

1. Reboot the system.
2. If the error recurs TPM related features will not work.
3. If the problem persists, collect Service Data logs.
4. Contact Lenovo Support.

- **FQXSFP4036F: TPM Firmware recovery is starting. Please DO NOT power off or reset system.**

TPM Firmware recovery is starting. Please DO NOT power off or reset system.

Severity: Warning

User Response:

This is an information event, no user action is required.

- **FQXSFP4037I: TPM Firmware recovery is finished.**

TPM Firmware recovery is finished.

Severity: Info

User Response:

No user required for this event. This is for informational purposes only.

- **FQXSFP4038I: TPM Firmware recovery successful.**

TPM Firmware recovery successful.

Severity: Info

User Response:

No user required for this event. This is for informational purposes only.

- **FQXSFP4040M: TPM selftest has failed.**

TPM selftest has failed.

Severity: Warning

User Response:

1. Reboot the system.
2. If the error recurs TPM related features will not work.
3. If the problem persists, collect Service Data logs.
4. Contact Lenovo Support.

- **FQXSFP4041I: TPM Firmware update is in progress. Please DO NOT power off or reset system.**

TPM Firmware update is in progress. Please DO NOT power off or reset system.

Severity: Info

User Response:

No user required for this event. This is for informational purposes only.

- **FQXSFP4042I: TPM Firmware update is finished, rebooting system to take effect.**

TPM Firmware update is finished, rebooting system to take effect.

Severity: Info

User Response:

No user required for this event. This is for informational purposes only.

- **FQXSFP4043G: TPM Firmware update aborted. System is rebooting...**

TPM Firmware update aborted. System is rebooting...

Severity: Warning

User Response:

This is an information event, no user action is required.

- **FQXSFP4044I: The current TPM firmware version could not support TPM version toggling.**

The current TPM firmware version could not support TPM version toggling.

Severity: Info

User Response:

No user required for this event. This is for informational purposes only.

- **FQXSFP4045G: Physical Presence is not asserted, abort TPM Firmware upgrade.**

Physical Presence is not asserted, abort TPM Firmware upgrade.

Severity: Warning

User Response:

This is an information event, no user action is required.

- **FQXSFP4046I: TPM Firmware will be updated from TPM1.2 to TPM2.0.**

TPM Firmware will be updated from TPM1.2 to TPM2.0.

Severity: Info

User Response:

No user required for this event. This is for informational purposes only.

- **FQXSFP4047I: TPM Firmware will be updated from TPM2.0 to TPM1.2.**

TPM Firmware will be updated from TPM2.0 to TPM1.2.

Severity: Info

User Response:

No user required for this event. This is for informational purposes only.

- **FQXSFP4049I: TPM Firmware update successful.**

TPM Firmware update successful.

Severity: Info

User Response:

No user required for this event. This is for informational purposes only.

- **FQXSFP4050G: Failed to update TPM Firmware.**

Failed to update TPM Firmware.

Severity: Warning

User Response:

This is an information event, no user action is required.

- **FQXSFP4051G: Undefined TPM_POLICY found**

Undefined TPM_POLICY found

Severity: Warning

User Response:

1. Reboot the system.
2. If the problem persists, collect Service Data logs.
3. Contact Lenovo Support.

- **FQXSFP4052G: TPM_POLICY is not locked**

TPM_POLICY is not locked

Severity: Warning

User Response:

1. Reboot the system.
2. If the problem persists, collect Service Data logs.
3. Contact Lenovo Support.

- **FQXSFP4053G: System TPM_POLICY does not match the planar.**

System TPM_POLICY does not match the planar.

Severity: Warning

User Response:

1. Remove any newly added TPM card from the planar or re-install the original TPM card that shipped with the system.
2. Reboot the system.
3. If the problem persists, collect Service Data logs.
4. Contact Lenovo Support.

- **FQXSFP4054G: TPM card logical binding has failed.**

TPM card logical binding has failed.

Severity: Warning

User Response:

1. Reboot the system.
2. If the problem persists, collect Service Data logs.
3. Contact Lenovo Support.

- **FQXSFP4056M: TPM card is changed, need install back the original TPM card which shipped with the system.**

TPM card is changed, need install back the original TPM card which shipped with the system.

Severity: Error

User Response:

1. Re-install the original TPM card that shipped with the system.
2. Reboot the system.
3. If the problem persists, collect Service Data logs.
4. Contact Lenovo Support.

- **FQXSFP4080I: Host Power-On password has been changed.**

Host Power-On password has been changed.

Severity: Info

User Response:

No user required for this event. This is for informational purposes only.

- **FQXSFP4081I: Host Power-On password has been cleared.**

Host Power-On password has been cleared.

Severity: Info

User Response:

No user required for this event. This is for informational purposes only.

- **FQXSFP4082I: Host Admin password has been changed.**

Host Admin password has been changed.

Severity: Info

User Response:

No user required for this event. This is for informational purposes only.

- **FQXSFP4083I: Host Admin password has been cleared.**

Host Admin password has been cleared.

Severity: Info

User Response:

No user required for this event. This is for informational purposes only.

- **FQXSFP4084I: Host boot order has been changed.**

Host boot order has been changed.

Severity: Info

User Response:

No user required for this event. This is for informational purposes only.

- **FQXSFP4085I: Host WOL boot order has been changed.**

Host WOL boot order has been changed.

Severity: Info

User Response:

No user required for this event. This is for informational purposes only.

- **FQXSFSM0002N: Boot Permission denied by Management Module: System Halted.**

Boot Permission denied by Management Module: System Halted.

Severity: Warning

User Response:

Complete the following steps:

1. Check XCC logs.
2. Review power policies and system configuration settings in the XCC GUI.
3. If the problem persists, collect Service Data logs.
4. Contact Lenovo Support.

- **FQXSFSM0003N: Timed Out waiting on boot permission from Management Module: System Halted.**

Timed Out waiting on boot permission from Management Module: System Halted.

Severity: Warning

User Response:

Complete the following steps:

1. Check XCC logs.
2. Review power policies and system configuration settings in the XCC GUI.
3. If the problem persists, collect Service Data logs.
4. Contact Lenovo Support.

- **FQXSFSM0004M: An XCC communication failure has occurred.**

An XCC communication failure has occurred.

Severity: Warning

User Response:

Complete the following steps:

1. Check the XCC network cables and configuration.
2. AC cycle the system.
3. Check Lenovo support site for an applicable service bulletin or firmware update that applies to this error.
4. Reflash XCC Firmware.
5. If the problem persists, collect Service Data logs.
6. Contact Lenovo Support.

- **FQXSFSM0006M: Unable to retrieve the system configuration from the XCC.**

Unable to retrieve the system configuration from the XCC.

Severity: Warning

User Response:

Complete the following steps:

1. Check Lenovo support site for an applicable service bulletin or firmware update that applies to this error.
2. AC cycle the system.

3. if problem persists, check if UEFI firmware version and XCC firmware version are matched with one Lenovo firmware official release. if not, please update UEFI and XCC firmware to the supported combination.
4. Remove and re-install CMOS battery for 30 seconds to clear CMOS contents.
5. If the problem persists, collect Service Data logs.
6. Contact Lenovo Support.

- **FQXSFSM0007I: The XCC System Event log (SEL) is full.**

The XCC System Event log (SEL) is full.

Severity: Info

User Response:

1. Use BMC Web Interface to clear event logs.
2. If BMC communication is unavailable, use F1 Setup to access System Event Logs Menu and Choose Clear BMC System Event Logs and Restart Server.

- **FQXSFSM0008M: Boot permission timeout detected.**

Boot permission timeout detected.

Severity: Error

User Response:

Complete the following steps:

1. Review XCC logs for communication errors and resolve.
2. AC cycle the system.
3. If the problem persists, collect Service Data logs.
4. Contact Lenovo Support.

- **FQXSFSR0003G: The number of boot attempts has been exceeded. No bootable device found.**

The number of boot attempts has been exceeded. No bootable device found.

Severity: Warning

User Response:

Complete the following steps:

1. Remove AC power from the system.
2. Connect at least one bootable device of the system.
3. Connect AC power to the system.
4. Power on system and retry.
5. If the problem persists, collect Service Data logs.
6. Contact Lenovo Support.

- **FQXSFTTR0001L: An invalid date and time have been detected.**

An invalid date and time have been detected.

Severity: Warning

User Response:

Complete the following steps:

1. Check the XCC event logs. This event should immediately precede an FQXSFPW0001L error. Resolve that event or any other battery related errors.

2. Use F1 Setup to reset date and time.
3. If the problem persists, collect Service Data logs.
4. Contact Lenovo Support.

Chapter 4. Lenovo XClarity Provisioning Manager V3 events

The following events can be generated by the Lenovo XClarity Provisioning Manager.

For each event code, the following fields are displayed:

Event identifier

An identifier that uniquely identifies an event.

Event description

The logged message string that appears for an event.

Explanation

Provides additional information to explain why the event occurred.

Severity

An indication of the level of concern for the condition. The severity is abbreviated in the event log to the first character. The following severities can be displayed:

- **Informational.** The event was recorded for audit purposes, usually a user action or a change of states that is normal behavior.
- **Warning.** The event is not as severe as an error, but if possible, the condition should be corrected before it becomes an error. It might also be a condition that requires additional monitoring or maintenance.
- **Error.** The event is a failure or critical condition that impairs service or an expected function.

User Action

Indicates what actions you should perform to solve the event. Perform the steps listed in this section in the order shown until the problem is solved. If you cannot solve the problem after performing all steps, contact Lenovo Support.

LXPM V3 events organized by severity

The following table lists all LXPM V3 events, organized by severity (Information, Error, and Warning).

Table 4. Events organized by severity

Event ID	Message String	Severity
FQXPMCL0005I	Start to install OS.	Informational
FQXPMCL0006I	Export raid config successfully.	Informational
FQXPMCL0007I	Import raid config successfully.	Informational
FQXPMCL0008I	Export uefi settings successfully.	Informational
FQXPMCL0009I	Import uefi settings successfully.	Informational
FQXPMCL0010I	Export bmc settings successfully.	Informational
FQXPMCL0011I	Import bmc settings successfully.	Informational
FQXPMEM0002I	LXPM firmware image found. Starting LXPM	Informational
FQXPMEM0003I	LXPM has exited. Control returned to UEFI	Informational

Table 4. Events organized by severity (continued)

Event ID	Message String	Severity
FQXPMEM0004I	Launching diagnostic program	Informational
FQXPMEM0005I	boot diagnostic program success	Informational
FQXPMER0002I	Clearing RAID configuration and internal storage	Informational
FQXPMER0003I	RAID configuration cleared successfully	Informational
FQXPMER0004I	Internal storage drives erased successfully	Informational
FQXPMER0005I	All system logs cleared successfully	Informational
FQXPMER0006I	UEFI factory default settings loaded successfully	Informational
FQXPMER0007I	BMC factory default settings loaded successfully	Informational
FQXPMNM0002I	Set BMC network parameters to new values.	Informational
FQXPMOS0028I	[arg1] OS installed	Informational
FQXPMSR0012I	Change disk drives' state successfully.	Informational
FQXPMSR0022I	Create new virtual disk successfully.	Informational
FQXPMSR0032I	Removed existing virtual disk successfully.	Informational
FQXPMUP0101I	Start to update LXPM	Informational
FQXPMUP0102I	Start to update window driver	Informational
FQXPMUP0103I	Start to update linux driver	Informational
FQXPMUP0104I	Start to update UEFI	Informational
FQXPMUP0105I	Start to update BMC	Informational
FQXPMUP0106I	Successfully updated the firmware	Informational
FQXPMVD0003I	Update VPD data successfully.	Informational
FQXPMCL0001K	Bootx64.efi is not found. Failed to Boot OS.	Warning
FQXPMCL0002K	Failed to read Deployment Manager Signature from USB.	Warning
FQXPMCL0003K	BMC communication failed: DRIVER Mount Failure.	Warning
FQXPMCL0004K	BMC communication succeeded. Volume Name MISMATCHED.	Warning
FQXPMCL0005K	Current System Boot Mode is Legacy. OS Clone only support UEFI Mode.	Warning
FQXPMCL0006K	Failed to export raid config.	Warning
FQXPMCL0007K	Failed to import raid config.	Warning
FQXPMCL0008K	Failed to export uefi settings.	Warning
FQXPMCL0009K	Failed to import uefi settings.	Warning
FQXPMCL0010K	Failed to export bmc settings.	Warning
FQXPMCL0011K	Failed import bmc settings.	Warning
FQXPMNM0001G	Failed to set new BMC network parameters.	Warning
FQXPMOS0001K	Bootx64.efi is not found. Failed to Boot OS.	Warning

Table 4. Events organized by severity (continued)

Event ID	Message String	Severity
FQXPMOS0002K	Failed to read Deployment Manager Signature from USB.	Warning
FQXPMOS0003K	Failed to copy Windows boot files to target	Warning
FQXPMOS0004K	BMC Communication Failed: EMMC2USB Mount Failure.	Warning
FQXPMOS0005K	BMC communication failed: DRIVER Mount Failure.	Warning
FQXPMOS0006K	BMC communication succeeded. Volume Name MISMATCHED.	Warning
FQXPMOS0007K	Failed to read License RTF file.	Warning
FQXPMOS0008K	Please make sure the Ethernet cable has been plugged into your computer and your network settings are correct.	Warning
FQXPMOS0009K	Current System Boot Mode is Legacy. LXPM OS installation only support UEFI Mode.	Warning
FQXPMSR0001K	Found unsupported RAID adapter.	Warning
FQXPMSR0011K	Failed to change disk drives' state.	Warning
FQXPMSR0021L	Failed to create new virtual disk.	Warning
FQXPMSR0031L	Failed to remove existing virtual disk	Warning
FQXPMUP0001K	The system configuration does not meet the prerequisite	Warning
FQXPMUP0002K	The selected packages are not compatible	Warning
FQXPMUP0003K	Unable to obtain the minimum level of UEFI	Warning
FQXPMUP0004K	Unable to obtain the installed version of UEFI	Warning
FQXPMUP0005K	Unable to obtain the installed version of BMC	Warning
FQXPMUP0006K	Unable to obtain the installed version of LXPM	Warning
FQXPMUP0007K	Unable to obtain the installed version of linux driver	Warning
FQXPMUP0008K	Unable to obtain the installed version of windows driver	Warning
FQXPMVD0001H	Failed to get VPD data.	Warning
FQXPMVD0002H	Failed to update the VPD data.	Warning
FQXPMVD0011K	Failed to get the TPM/TPM card/TCM policy status	Warning
FQXPMVD0012K	Failed to set the TPM/TPM card/TCM policy	Warning
FQXPMEM0001M	Unable to locate LXPM firmware image	Error
FQXPMEM0006M	Unable to locate diagnostic firmware image	Error
FQXPMEM0007M	Diagnostic image cannot be launched as "Console Redirection" is enabled	Error
FQXPMEM0008M	Diagnostic image cannot be launched as the image may be corrupt	Error
FQXPMER0002M	Failed to clear RAID configuration	Error
FQXPMER0003M	Failed to erase internal storage drives	Error
FQXPMER0004M	Failed to clear system logs	Error
FQXPMER0005M	Failed to load UEFI factory default settings	Error

Table 4. Events organized by severity (continued)

Event ID	Message String	Severity
FQXPMER0006M	Failed to load XCC factory default settings	Error
FQXPMSD0001M	HDD Test was interrupted by the host with a hardware or software reset	Error
FQXPMSD0002M	A fatal error or unknown test error occurred while the device was executing its self-test	Error
FQXPMSD0003M	self-test completed having a test element that failed and the test element that failed is not known.	Error
FQXPMSD0004M	self-test completed having the electrical element of the test failed.	Error
FQXPMSD0005M	self-test completed having the servo (and/or seek) test element of the test failed.	Error
FQXPMSD0006M	self-test completed having the read element of the test failed.	Error
FQXPMSD0007M	Hard Drive(s) not found	Error
FQXPMSD0008M	UEFI is not ready for LXPM to send command to test hard drive.	Error
FQXPMSD0009M	Device error is occurred when LXPM send command to test hard drive.	Error
FQXPMSD0010M	uEFI is timeout while LXPM send command to test hard drive.	Error
FQXPMSD0011M	The hard drive is not supported by uEFI while LXPM send command to test hard drive.	Error
FQXPMUP0201M	BMC communication failed: EMMC2USB mount failure. Failed to update the firmware	Error
FQXPMUP0202M	Transfer the update package error. Failed to update the firmware	Error
FQXPMUP0203M	BMC communication failed: EMMC2USB unmount failure. Failed to update the firmware	Error
FQXPMUP0204M	BMC communication failed: Execute the update cmd failure. Failed to update the firmware	Error
FQXPMUP0205M	BMC communication failed: Get the update status failure. Failed to update the firmware	Error
FQXPMUP0206M	The level of the update package is too old. Failed to update the firmware.	Error
FQXPMUP0207M	The update package is invalid. Failed to update the firmware.	Error
FQXPMUP0208M	Failed to execute reboot BMC command	Error

List of Lenovo XClarity Provisioning Manager V3 events

This section lists all messages that can be sent from the Lenovo XClarity Provisioning Manager V3.

- **FQXPMCL0001K: Bootx64.efi is not found. Failed to Boot OS.**

Severity: Warning

Audit Log: TRUE

Automatically notify Support:

User Response:

1. Restart BMC via supported method and reboot the system.

2. If the problem persists, reflash BMC firmware.
3. Reboot system and retry OS booting.
4. Perform AC reset or virtual reseal.

Note: When performing AC reset, after powering off AC, wait several seconds before powering on AC. After AC power is restored, power on the host system.

5. If the problem persists, please contact technical support.

- **FQXPMCL0002K: Failed to read Deployment Manager Signature from USB.**

Severity: Warning
Audit Log: TRUE
Automatically notify Support:

User Response:

1. Ensure proper operation of the virtual USB connection.
2. Restart BMC via BMC setting under uEFI setup on LXPM left panel. Restart BMC via supported method and reboot the system.
3. Reflash BMC firmware.
4. Clone the image over and retry the operation.
5. Perform AC reset or virtual reseal.

Note: When performing AC reset, after powering off AC, wait several seconds before powering on AC. After AC power is restored, power on the host system.

6. If the problem persists, please contact technical support.

- **FQXPMCL0003K: BMC communication failed: DRIVER Mount Failure.**

Severity: Warning
Audit Log: TRUE
Automatically notify Support:

User Response:

1. Ensure proper operation of the virtual USB connection.
2. Restart BMC via supported method and reboot the system.
3. Reflash BMC firmware.
4. Clone the image over and retry the operation.
5. Perform AC reset or virtual reseal.

Note: When performing AC reset, after powering off AC, wait several seconds before powering on AC. After AC power is restored, power on the host system.

6. If the problem persists, please contact technical support.

- **FQXPMCL0004K: BMC communication succeeded. Volume Name MISMATCHED.**

Severity: Warning
Audit Log: TRUE
Automatically notify Support:

User Response:

1. Restart BMC via supported method and reboot the system.
2. Reflash BMC firmware.
3. Clone the image over and retry the operation.

4. Perform AC reset or virtual reseal.

Note: When performing AC reset, after powering off AC, wait several seconds before powering on AC. After AC power is restored, power on the host system.

5. If the problem persists, please contact technical support.

- **FQXPMCL0005I: Start to install OS.**

Severity: Info
Audit Log: TRUE
Automatically notify Support:

User Response:

Information only; no action is required.

- **FQXPMCL0005K: Current System Boot Mode is Legacy. OS Clone only support UEFI Mode.**

Severity: Warning
Audit Log: TRUE
Automatically notify Support:

User Response:

1. Change Boot mode to UEFI mode (UEFI Setup -> Boot Manager -> Boot Modes -> System Boot Mode and select UEFI Mode.)
2. Clone the image over and retry the operation.

- **FQXPMCL0006I: Export raid config successfully.**

Severity: Info
Audit Log: TRUE
Automatically notify Support:

User Response:

Information only; no action is required.

- **FQXPMCL0006K: Failed to export raid config.**

Severity: Warning
Audit Log: TRUE
Automatically notify Support:

User Response:

1. Check the following Lenovo support site for information on supported RAID adapters. <http://www.lenovo.com/us/en/serverproven/index.shtml>
2. Ensure RAID adapter, LXPM, and UEFI firmware are at the latest levels.
3. Ensure the state of the RAID adapter and disk drives are normal.
4. Verify proper physical connection of the disk drive, SAS expander (if applicable) and RAID adapter.
5. Reboot the machine and retry the export of the RAID configuration.
6. If the problem persists, please contact technical support.

- **FQXPMCL0007I: Import raid config successfully.**

Severity: Info
Audit Log: TRUE
Automatically notify Support:

User Response:

Information only; no action is required.

- **FQXPMCL0007K: Failed to import raid config.**

Severity: Warning
Audit Log: TRUE
Automatically notify Support:

User Response:

1. Check the following Lenovo support site for information on supported RAID adapters. <http://www.lenovo.com/us/en/serverproven/index.shtml>
2. Ensure RAID adapter, LXPM, and UEFI firmware are at the latest levels.
3. Ensure the state of RAID adapter and disk drives are healthy.
4. Ensure good physical connection between the disk drives and RAID adapter.
5. Ensure the platform and RAID config is identical to original configuration.
6. Reboot the machine and retry the import of the RAID configuration.
7. If the problem persists, please contact technical support.

- **FQXPMCL0008I: Export uefi settings successfully.**

Severity: Info
Audit Log: TRUE
Automatically notify Support:

User Response:

Information only; no action is required.

- **FQXPMCL0008K: Failed to export uefi settings.**

Severity: Warning
Audit Log: TRUE
Automatically notify Support:

User Response:

1. Ensure proper connection to USB/network drive and retry to export uEFI setting.
2. Reboot and try the uEFI setting export again.
3. Reflash UEFI firmware.
4. If the problem persists, please contact technical support.

- **FQXPMCL0009I: Import uefi settings successfully.**

Severity: Info
Audit Log: TRUE
Automatically notify Support:

User Response:

Information only; no action is required.

- **FQXPMCL0009K: Failed to import uefi settings.**

Severity: Warning
Audit Log: TRUE
Automatically notify Support:

User Response:

1. Ensure proper connection to USB/network drive and retry the uEFI setting import.
2. Ensure that same system model type to import the uEFI setting and UEFI version should be the same.
3. Reboot and try to import a new clone of the UEFI settings.
4. Reflash UEFI firmware.
5. If the problem persists, please contact technical support.

- **FQXPMCL0010I: Export bmc settings successfully.**

Severity: Info
Audit Log: TRUE
Automatically notify Support:

User Response:

Information only; no action is required.

- **FQXPMCL0010K: Failed to export bmc settings.**

Severity: Warning
Audit Log: TRUE
Automatically notify Support:

User Response:

1. Restart BMC via supported method and reboot the system.
2. Perform AC reset.

Note: When performing AC reset, after powering off AC, wait several seconds before powering on AC. After AC power is restored, power on the host system.

3. Retry the export of BMC setting.
4. If the problem persists, please contact technical support.

- **FQXPMCL0011I: Import bmc settings successfully.**

Severity: Info
Audit Log: TRUE
Automatically notify Support:

User Response:

Information only; no action is required.

- **FQXPMCL0011K: Failed import bmc settings.**

Severity: Warning
Audit Log: TRUE
Automatically notify Support:

User Response:

1. Ensure BMC version is the same between source and target.
2. Restart BMC via supported method and reboot the system.
3. Perform AC reset or virtual reseal.

Note: When performing AC reset, after powering off AC, wait several seconds before powering on AC. After AC power is restored, power on the host system.

4. Retry the import of BMC setting.
5. If the problem persists, please contact technical support.

- **FQXPMEM0001M: Unable to locate LXPM firmware image**

Severity: Error
Audit Log: TRUE
Automatically notify Support:

User Response:

1. Restart BMC via supported method and reboot the system.
2. Reflash the LXPM.
3. Perform AC reset or virtual reseal.

Note: When performing AC reset, after powering off AC, wait several seconds before powering on AC. After AC power is restored, power on the host system.

4. If the problem persists, please contact technical support.

- **FQXPMEM0002I: LXPM firmware image found. Starting LXPM**

Severity: Info
Audit Log: TRUE
Automatically notify Support:

User Response:

Information only; no action is required.

- **FQXPMEM0003I: LXPM has exited. Control returned to UEFI**

Severity: Info
Audit Log: TRUE
Automatically notify Support:

User Response:

Information only; no action is required.

- **FQXPMEM0004I: Launching diagnostic program**

Severity: Info
Audit Log: TRUE
Automatically notify Support:

User Response:

Information only; no action is required.

- **FQXPMEM0005I: boot diagnostic program success**

Severity: Info
Audit Log: TRUE
Automatically notify Support:

User Response:

Information only; no action is required.

- **FQXPMEM0006M: Unable to locate diagnostic firmware image**

Severity: Error
Audit Log: TRUE
Automatically notify Support:

User Response:

1. Restart BMC via supported method and reboot the system.
2. Perform AC reset or virtual reseal.

Note: When performing AC reset, after powering off AC, wait several seconds before powering on AC. After AC power is restored, power on the host system.

3. If the problem persists, please contact technical support.

- **FQXPMEM0007M: Diagnostic image cannot be launched as "Console Redirection" is enabled**

Severity: Error

Audit Log: TRUE

Automatically notify Support:

User Response:

1. Disable "Configure Console Redirection" in UEFI Setup by following below steps: - Go to F1 Setup -> System Settings -> Devices and I/O Ports-> Console Redirection Settings -> - Select "Console Redirection" - Change the setting to "Disable" and save - Next reboot the system.
2. Perform AC reset or virtual reseal.

Note: When performing AC reset, after powering off AC, wait several seconds before powering on AC. After AC power is restored, power on the host system.

3. If the problem persists, please contact technical support.

- **FQXPMEM0008M: Diagnostic image cannot be launched as the image may be corrupt**

Severity: Error

Audit Log: TRUE

Automatically notify Support:

User Response:

1. Restart BMC via supported method and reboot the system.
2. Perform AC reset or virtual reseal.

Note: When performing AC reset, after powering off AC, wait several seconds before powering on AC. After AC power is restored, power on the host system.

3. Reflash the LXPM.
4. If the problem persists, please contact technical support.

- **FQXPMER0002I: Clearing RAID configuration and internal storage**

Severity: Info

Audit Log: TRUE

Automatically notify Support:

User Response:

Information only; no action is required.

- **FQXPMER0002M: Failed to clear RAID configuration**

Severity: Error

Audit Log: TRUE

Automatically notify Support:

User Response:

1. Restart the system and retry the operation again.
2. If the problem persists, contact technical support.

- **FQXPMER0003I: RAID configuration cleared successfully**

Severity: Info
Audit Log: TRUE
Automatically notify Support:

User Response:

Information only; no action is required.

- **FQXPMER0003M: Failed to erase internal storage drives**

Severity: Error
Audit Log: TRUE
Automatically notify Support:

User Response:

1. Ensure the proper connection of hard drives, backplane, and related cables.
2. Check if security function is enabled for the hard disk drives, if yes, disable that and retry the operation.
3. Ensure device firmware is at the latest level.
4. Restart the system and retry the operation again.
5. If the problem persists, contact technical support.

- **FQXPMER0004I: Internal storage drives erased successfully**

Severity: Info
Audit Log: TRUE
Automatically notify Support:

User Response:

Information only; no action is required.

- **FQXPMER0004M: Failed to clear system logs**

Severity: Error
Audit Log: TRUE
Automatically notify Support:

User Response:

1. Restart BMC via supported method and reboot the system.
2. Retry this operation again.
3. If the problem persists, contact technical support.

- **FQXPMER0005I: All system logs cleared successfully**

Severity: Info
Audit Log: TRUE
Automatically notify Support:

User Response:

Information only; no action is required.

- **FQXPMER0005M: Failed to load UEFI factory default settings**

Severity: Error
Audit Log: TRUE
Automatically notify Support:

User Response:

1. Restart BMC via supported method and reboot the system.
2. Retry this operation again.
3. If the problem persists, contact technical support.

- **FQXPME0006I: UEFI factory default settings loaded successfully**

Severity: Info
Audit Log: TRUE
Automatically notify Support:

User Response:

Information only; no action is required.

- **FQXPME0006M: Failed to load XCC factory default settings**

Severity: Error
Audit Log: TRUE
Automatically notify Support:

User Response:

1. Restart BMC via supported method and reboot the system.
2. Retry this operation again.
3. If the problem persists, perform AC power cycle. (wait several seconds between AC power is off and on)
4. Retry this operation again.
5. If the problem persists, contact technical support.

- **FQXPME0007I: BMC factory default settings loaded successfully**

Severity: Info
Audit Log: TRUE
Automatically notify Support:

User Response:

Information only; no action is required.

- **FQXPMNM0001G: Failed to set new BMC network parameters.**

Severity: Warning
Audit Log: TRUE
Automatically notify Support:

User Response:

1. Ensure input parameters are valid.
2. Wait for one minute and retry the setting.
3. Restart BMC via supported method and reboot the system.
4. Retry the setting change.
5. Use UEFI setup to change parameters (optional).

- **FQXPMNM0002I: Set BMC network parameters to new values.**

Severity: Info
Audit Log: TRUE
Automatically notify Support:

User Response:

Information only; no action is required.

- **FQXPMOS0001K: Bootx64.efi is not found. Failed to Boot OS.**

Severity: Warning

Audit Log: TRUE

Automatically notify Support:

User Response:

1. Restart BMC via supported method and reboot the system.
2. Reflash BMC firmware.
3. Reboot system and retry OS booting.
4. Perform AC reset or virtual reseal.

Note: When performing AC reset, after powering off AC, wait several seconds before powering on AC. After AC power is restored, power on the host system.

5. If the problem persists, please contact technical support.

- **FQXPMOS0002K: Failed to read Deployment Manager Signature from USB.**

Severity: Warning

Audit Log: TRUE

Automatically notify Support:

User Response:

1. Ensure proper operation of the virtual USB connection.
2. Restart BMC via supported method and reboot the system.
3. If the problem persists, reflash BMC firmware.
4. Retry OS deployment.
5. If the problem persists, perform AC reset or virtual reseal.

Note: When performing AC reset, after powering off AC, wait several seconds before powering on AC. After AC power is restored, power on the host system.

6. If the problem persists, please contact technical support.

- **FQXPMOS0003K: Failed to copy Windows boot files to target**

Severity: Warning

Audit Log: TRUE

Automatically notify Support:

User Response:

1. Ensure proper operation of the virtual USB connection.
2. Restart BMC via supported method and reboot the system.
3. Reflash BMC firmware.
4. Retry OS deployment.
5. Perform AC reset or virtual reseal.

Note: When performing AC reset, after powering off AC, wait several seconds before powering on AC. After AC power is restored, power on the host system.

6. If the problem persists, please contact technical support.

- **FQXPMS0004K: BMC Communication Failed: EMMC2USB Mount Failure.**

Severity: Warning

Audit Log: TRUE

Automatically notify Support:

User Response:

1. Ensure proper operation of the virtual USB connection.
2. Restart BMC via supported method and reboot the system.
3. Reflash BMC firmware.
4. Retry OS deployment.
5. Perform AC reset or virtual reseal.

Note: When performing AC reset, after powering off AC, wait several seconds before powering on AC. After AC power is restored, power on the host system.

6. If the problem persists, please contact technical support.

- **FQXPMS0005K: BMC communication failed: DRIVER Mount Failure.**

Severity: Warning

Audit Log: TRUE

Automatically notify Support:

User Response:

1. Ensure proper operation of the virtual USB connection.
2. Restart BMC via supported method and reboot the system.
3. Reflash BMC firmware.
4. Retry OS deployment.
5. Perform AC reset or virtual reseal.

Note: When performing AC reset, after powering off AC, wait several seconds before powering on AC. After AC power is restored, power on the host system.

6. If the problem persists, please contact technical support.

- **FQXPMS0006K: BMC communication succeeded. Volume Name MISMATCHED.**

Severity: Warning

Audit Log: TRUE

Automatically notify Support:

User Response:

1. Restart BMC via supported method and reboot the system.
2. If the problem persists, reflash BMC firmware.
3. Retry OS deployment.
4. Perform AC reset or virtual reseal.

Note: When performing AC reset, after powering off AC, wait several seconds before powering on AC. After AC power is restored, power on the host system.

5. If the problem persists, please contact technical support.

- **FQXPMS0007K: Failed to read License RTF file.**

Severity: Warning

Audit Log: TRUE
Automatically notify Support:

User Response:

1. Restart BMC via supported method and reboot the system.
2. If the problem persists, reflash BMC firmware.
3. Use another OS media (USB DVD or USB key).
4. Retry OS deployment.
5. Perform AC reset or virtual reseal.

Note: When performing AC reset, after powering off AC, wait several seconds before powering on AC. After AC power is restored, power on the host system.

6. If the problem persists, please contact technical support.

- **FQXPMOS0008K: Please make sure the Ethernet cable has been plugged into your computer and your network settings are correct.**

Severity: Warning
Audit Log: TRUE
Automatically notify Support:

User Response:

1. Ensure proper operation of SMB/CIFS and NFS communications (make sure the Ethernet cable has been plugged and network settings are correct.).
2. Make sure the OS version and folder path are correct.
3. Retry CIFS and NFS installation.
4. If the problem persists, please contact technical support.

- **FQXPMOS0009K: Current System Boot Mode is Legacy. LXPM OS installation only support UEFI Mode.**

Severity: Warning
Audit Log: TRUE
Automatically notify Support:

User Response:

1. Change boot mode to UEFI mode
2. Retry OS deployment.

- **FQXPMOS0028I: [arg1] OS installed**

Severity: Info
Audit Log: TRUE
Automatically notify Support:

User Response:

Information only; no action is required.

- **FQXPMOS0001M: HDD Test was interrupted by the host with a hardware or software reset**

Severity: Error
Audit Log: TRUE
Automatically notify Support:

User Response:

1. Remove A/C from the server and reseal all drives, backplanes, RAID adapters, expanders (if any), and cables.
2. Ensure device firmware is at the latest level.
3. Retry the test.
4. If the problem persists, please contact technical support.

- **FQXPMSD0002M: A fatal error or unknown test error occurred while the device was executing its self-test**

Severity: Error
Audit Log: TRUE
Automatically notify Support:

User Response:

1. Remove A/C from the server and reseal all drives, backplanes, RAID adapters, expanders (if any), and cables.
2. Ensure device firmware is at the latest level.
3. Retry the test.
4. If the problem persists, please contact technical support.

- **FQXPMSD0003M: self-test completed having a test element that failed and the test element that failed is not known.**

Severity: Error
Audit Log: TRUE
Automatically notify Support:

User Response:

1. Remove A/C from the server and reseal all drives, backplanes, RAID adapters, expanders (if any), and cables.
2. Ensure device firmware is at the latest level.
3. Retry the test.
4. If the problem persists, please contact technical support.

- **FQXPMSD0004M: self-test completed having the electrical element of the test failed.**

Severity: Error
Audit Log: TRUE
Automatically notify Support:

User Response:

1. Remove A/C from the server and reseal all drives, backplanes, RAID adapters, expanders (if any), and cables.
2. Ensure device firmware is at the latest level.
3. Retry the test.
4. If the problem persists, please contact technical support.

- **FQXPMSD0005M: self-test completed having the servo (and/or seek) test element of the test failed.**

Severity: Error
Audit Log: TRUE
Automatically notify Support:

User Response:

1. Remove A/C from the server and reseal all drives, backplanes, RAID adapters, expanders (if any), and cables.
2. Ensure device firmware is at the latest level.
3. Retry the test.
4. If the problem persists, please contact technical support.

- **FQXPMSD0006M: self-test completed having the read element of the test failed.**

Severity: Error
Audit Log: TRUE
Automatically notify Support:

User Response:

1. Remove A/C from the server and reseal all drives, backplanes, RAID adapters, expanders (if any), and cables.
2. Ensure device firmware is at the latest level.
3. Retry the test.
4. If the problem persists, please contact technical support.

- **FQXPMSD0007M: Hard Drive(s) not found**

Severity: Error
Audit Log: TRUE
Automatically notify Support:

User Response:

1. Remove A/C from the server and reseal all drives, backplanes, RAID adapters, expanders (if any), and cables.
2. Ensure device firmware is at the latest level.
3. Verify that the same Error is present in BMC or OneCLI inventory log.
4. Retry the test.
5. If the problem persists, please contact technical support.

- **FQXPMSD0008M: UEFI is not ready for LXPM to send command to test hard drive.**

Severity: Error
Audit Log: TRUE
Automatically notify Support:

User Response:

1. Reboot system and run the test again.
2. If this message is still reported, please run the latest version of SMART tool on OS which is open source tool and could be downloaded from website to check hard drive status.
3. If the problem persists, please contact technical support.

- **FQXPMSD0009M: Device error is occurred when LXPM send command to test hard drive.**

Severity: Error
Audit Log: TRUE
Automatically notify Support:

User Response:

1. Reboot system and run the test again later.

2. If this message is still reported, please run the latest version of SMART tool on OS which is open source tool and could be downloaded from website to check hard drive status.
3. If the problem persists, please contact technical support.

- **FQXPMSD0010M: uEFI is timeout while LXPM send command to test hard drive.**

Severity: Error
Audit Log: TRUE
Automatically notify Support:

User Response:

1. Reboot system and run the test again later.
2. If this message is still reported, please run the latest version of SMART tool on OS which is open source tool and could be downloaded from website to check hard drive status.
3. If the problem persists, please contact technical support.

- **FQXPMSD0011M: The hard drive is not supported by uEFI while LXPM send command to test hard drive.**

Severity: Error
Audit Log: TRUE
Automatically notify Support:

User Response:

1. Please check hard drive specification to see if the hard drive support ATA self-test feature.
2. If the problem persists, please contact technical support.

- **FQXPMSR0001K: Found unsupported RAID adapter.**

Severity: Warning
Audit Log: TRUE
Automatically notify Support:

User Response:

1. Check the following Lenovo support site for information on supported RAID adapters. <http://www.lenovo.com/us/en/serverproven/index.shtml>
2. Ensure RAID adapter, LXPM, and UEFI firmware are at the latest levels.
3. If the problem persists, please contact technical support.

- **FQXPMSR0011K: Failed to change disk drives' state.**

Severity: Warning
Audit Log: TRUE
Automatically notify Support:

User Response:

1. Ensure LXPM and RAID adapter firmware are at the latest levels.
2. Ensure the state of the RAID adapter and disk drives are both healthy.
3. Verify proper physical connection of the disk drive, SAS expander (if applicable) and RAID adapter.
4. Ensure the operation to the special drive is legal or logical. (For example, you cannot change Unconfigured BAD to Online status)
5. Reboot the machine and retry to change disk drives' state.
6. If the problem persists, please contact technical support.

- **FQXPMSR0012I: Change disk drives' state successfully.**

Severity: Info
Audit Log: TRUE
Automatically notify Support:

User Response:

Information only; no action is required.

- **FQXPMSR0021L: Failed to create new virtual disk.**

Severity: Warning
Audit Log: TRUE
Automatically notify Support:

User Response:

1. Ensure LXPM and RAID adapter firmware are at the latest levels.
2. Ensure the state of RAID adapter and disk drives are both healthy.
3. Verify proper physical connection of the disk drive, SAS expander (if applicable)and RAID adapter.
4. Ensure the drive status is correct (Unconfigured Good).
5. Reboot the machine and retry to create new virtual disk.
6. If the problem persists, please contact technical support.

- **FQXPMSR0022I: Create new virtual disk successfully.**

Severity: Info
Audit Log: TRUE
Automatically notify Support:

User Response:

Information only; no action is required.

- **FQXPMSR0031L: Failed to remove existing virtual disk**

Severity: Warning
Audit Log: TRUE
Automatically notify Support:

User Response:

1. Ensure LXPM and RAID adapter firmware are at the latest levels.
2. Ensure the state of RAID adapter and disk drives are both healthy.
3. Verify proper physical connection of the disk drive, SAS expander (if applicable)and RAID adapter.
4. Reboot the machine and retry to remove the existing virtual disk.
5. If the problem persists, please contact technical support.

- **FQXPMSR0032I: Removed existing virtual disk successfully.**

Severity: Info
Audit Log: TRUE
Automatically notify Support:

User Response:

Information only; no action is required.

- **FQXPMUP0001K: The system configuration does not meet the prerequisite**

Severity: Warning

Audit Log: TRUE
Automatically notify Support:

User Response:

1. Follow prompts to update the firmware and retry the update.
2. If the problem persists, please contact technical support.

- **FQXPMUP0002K: The selected packages are not compatible**

Severity: Warning
Audit Log: TRUE
Automatically notify Support:

User Response:

1. Follow prompts to update each individual firmware package.
2. If the problem persists, please contact technical support.

- **FQXPMUP0003K: Unable to obtain the minimum level of UEFI**

Severity: Warning
Audit Log: TRUE
Automatically notify Support:

User Response:

1. Restart BMC via supported method and reboot the system.
2. Reflash BMC firmware.
3. Perform AC reset or virtual reseal.

Note: When performing AC reset, after powering off AC, wait several seconds before powering on AC. After AC power is restored, power on the host system.

4. If the problem persists, please contact technical support.

- **FQXPMUP0004K: Unable to obtain the installed version of UEFI**

Severity: Warning
Audit Log: TRUE
Automatically notify Support:

User Response:

1. Restart BMC via supported method and reboot the system.
2. Reflash BMC firmware.
3. Perform AC reset or virtual reseal.

Note: When performing AC reset, after powering off AC, wait several seconds before powering on AC. After AC power is restored, power on the host system.

4. If the problem persists, please contact technical support.

- **FQXPMUP0005K: Unable to obtain the installed version of BMC**

Severity: Warning
Audit Log: TRUE
Automatically notify Support:

User Response:

1. Restart BMC via supported method and reboot the system.
2. Reflash BMC firmware.

3. Perform AC reset or virtual reseal.

Note: When performing AC reset, after powering off AC, wait several seconds before powering on AC. After AC power is restored, power on the host system.

4. If the problem persists, please contact technical support.

- **FQXPMUP0006K: Unable to obtain the installed version of LXPM**

Severity: Warning

Audit Log: TRUE

Automatically notify Support:

User Response:

1. Restart BMC via supported method and reboot the system.
2. Reflash BMC firmware.
3. Perform AC reset or virtual reseal.

Note: When performing AC reset, after powering off AC, wait several seconds before powering on AC. After AC power is restored, power on the host system.

4. If the problem persists, please contact technical support.

- **FQXPMUP0007K: Unable to obtain the installed version of linux driver**

Severity: Warning

Audit Log: TRUE

Automatically notify Support:

User Response:

1. Restart BMC via supported method and reboot the system.
2. Perform AC reset or virtual reseal.

Note: When performing AC reset, after powering off AC, wait several seconds before powering on AC. After AC power is restored, power on the host system.

3. If the problem persists, please contact technical support.

- **FQXPMUP0008K: Unable to obtain the installed version of windows driver**

Severity: Warning

Audit Log: TRUE

Automatically notify Support:

User Response:

1. Restart BMC via supported method and reboot the system.
2. Reflash BMC firmware.
3. Perform AC reset or virtual reseal.

Note: When performing AC reset, after powering off AC, wait several seconds before powering on AC. After AC power is restored, power on the host system.

4. If the problem persists, please contact technical support.

- **FQXPMUP0101I: Start to update LXPM**

Severity: Info

Audit Log: TRUE

Automatically notify Support:

User Response:

Information only; no action is required.

- **FQXPMUP0102I: Start to update window driver**

Severity: Info

Audit Log: TRUE

Automatically notify Support:

User Response:

Information only; no action is required.

- **FQXPMUP0103I: Start to update linux driver**

Severity: Info

Audit Log: TRUE

Automatically notify Support:

User Response:

Information only; no action is required.

- **FQXPMUP0104I: Start to update UEFI**

Severity: Info

Audit Log: TRUE

Automatically notify Support:

User Response:

Information only; no action is required.

- **FQXPMUP0105I: Start to update BMC**

Severity: Info

Audit Log: TRUE

Automatically notify Support:

User Response:

Information only; no action is required.

- **FQXPMUP0106I: Successfully updated the firmware**

Severity: Info

Audit Log: TRUE

Automatically notify Support:

User Response:

Information only; no action is required.

- **FQXPMUP0201M: BMC communication failed: EMMC2USB mount failure. Failed to update the firmware**

Severity: Error

Audit Log: TRUE

Automatically notify Support:

User Response:

1. Restart BMC via supported method and BMC setting via uEFI setup or "Restart Management Controller" in BMC web UI. Then, reboot the system.

2. If the problem persists, reflash the BMC firmware.
3. If the problem persists, perform AC reset or virtual reseal.

Note: When performing AC reset, after powering off AC, wait several seconds before powering on AC. After AC power is restored, power on the host system.

4. If the problem persists, try a different Lenovo tool to perform the update (eg. XClarity Administrator, XClarity Controller, or XClarity Essential OneCLI).
5. If the problem persists, please contact technical support.

- **FQXPMUP0202M: Transfer the update package error. Failed to update the firmware**

Severity: Error
Audit Log: TRUE
Automatically notify Support:

User Response:

1. Ensure the update package is not corrupt undamaged and then retry the update.
2. Ensure proper connection to USB/network drive and retry the update.
3. Restart BMC via supported method and BMC setting via uEFI setup or "Restart Management Controller" in BMC web UI. Then, reboot the system.
4. If the problem persists, reflash the BMC firmware.
5. If the problem persists, perform AC reset or virtual reseal.

Note: When performing AC reset, after powering off AC, wait several seconds before powering on AC. After AC power is restored, power on the host system.

6. If the problem persists, try a different Lenovo tool to perform the update (eg. XClarity Administrator, XClarity Controller, or XClarity Essential OneCLI).
7. If the problem persists, please contact technical support.

- **FQXPMUP0203M: BMC communication failed: EMMC2USB unmount failure. Failed to update the firmware**

Severity: Error
Audit Log: TRUE
Automatically notify Support:

User Response:

1. Restart BMC via supported method and reboot the system.
2. Reflash the BMC firmware
3. If the problem persists, perform AC reset or virtual reseal.

Note: When performing AC reset, after powering off AC, wait several seconds before powering on AC. After AC power is restored, power on the host system.

4. If the problem persists, try a different Lenovo tool to perform the update (eg. XClarity Administrator, XClarity Controller, or XClarity Essential OneCLI).
5. If the problem persists, please contact technical support.

- **FQXPMUP0204M: BMC communication failed: Execute the update cmd failure. Failed to update the firmware**

Severity: Error
Audit Log: TRUE
Automatically notify Support:

User Response:

1. Restart BMC via supported method.
2. Reflash BMC firmware.
3. Perform AC reset or virtual reseal.

Note: When performing AC reset, after powering off AC, wait several seconds before powering on AC. After AC power is restored, power on the host system.

4. If the problem persists, try a different Lenovo tool to perform the update (eg. XClarity Administrator, XClarity Controller, or XClarity Essential OneCLI).
5. If the problem persists, please contact technical support.

- **FQXPMUP0205M: BMC communication failed: Get the update status failure. Failed to update the firmware**

Severity: Error

Audit Log: TRUE

Automatically notify Support:

User Response:

1. Restart BMC via supported method and reboot the system.
2. Reflash BMC firmware.
3. Perform AC reset or virtual reseal.

Note: When performing AC reset, after powering off AC, wait several seconds before powering on AC. After AC power is restored, power on the host system.

4. If the problem persists, try a different Lenovo tool to perform the update (eg. XClarity Administrator, XClarity Controller, or XClarity Essential OneCLI).
5. If the problem persists, please contact technical support.

- **FQXPMUP0206M: The level of the update package is too old. Failed to update the firmware.**

Severity: Error

Audit Log: TRUE

Automatically notify Support:

User Response:

1. Follow prompts to select a newer version of the update package and retry the update.
2. Restart BMC via supported method and reboot the system.
3. Perform AC reset or virtual reseal.

Note: When performing AC reset, after powering off AC, wait several seconds before powering on AC. After AC power is restored, power on the host system.

4. If the problem persists, try a different Lenovo tool to perform the update (eg. XClarity Administrator, XClarity Controller, or XClarity Essential OneCLI).
5. If the problem persists, please contact technical support.

- **FQXPMUP0207M: The update package is invalid. Failed to update the firmware.**

Severity: Error

Audit Log: TRUE

Automatically notify Support:

User Response:

1. Ensure the update package is not corrupt and retry the update.
2. Ensure proper connection to USB/network drive and retry the update.
3. Restart BMC via supported method and BMC setting via uEFI setup or "Restart Management Controller" in BMC web UI. Then, reboot the system.
4. Reflash the BMC firmware.
5. Perform AC reset or virtual reseal.

Note: When performing AC reset, after powering off AC, wait several seconds before powering on AC. After AC power is restored, power on the host system.

6. If the problem persists, try a different Lenovo tool to perform the update (eg. XClarity Administrator, XClarity Controller, or XClarity Essential OneCLI).
7. If the problem persists, please contact technical support.

- **FQXPMUP0208M: Failed to execute reboot BMC command**

Severity: Error
Audit Log: TRUE
Automatically notify Support:

User Response:

1. Restart BMC via supported method and reboot the system.
2. Reflash BMC firmware.
3. If the problem persists, perform AC reset or virtual reseal.

Note: When performing AC reset, after powering off AC, wait several seconds before powering on AC. After AC power is restored, power on the host system.

4. If the problem persists, please contact technical support.

- **FQXPMVD0001H: Failed to get VPD data.**

Severity: Warning
Audit Log: TRUE
Automatically notify Support:

User Response:

1. Press "Back" button and press "Update VPD..." button again.
2. Perform AC reset or virtual reseal if step 1 failed.

Note: When performing AC reset, after powering off AC, wait several seconds before powering on AC. After AC power is restored, power on the host system.

3. If the problem persists, please contact technical support.

- **FQXPMVD0002H: Failed to update the VPD data.**

Severity: Warning
Audit Log: TRUE
Automatically notify Support:

User Response:

1. Press "Update" button on VPD update page.
2. Perform AC reset or virtual reseal if step 1 failed.

Note: When performing AC reset, after powering off AC, wait several seconds before powering on AC. After AC power is restored, power on the host system.

3. If the problem persists, please contact technical support.

- **FQXPMVD0003I: Update VPD data successfully.**

Severity: Info

Audit Log: TRUE

Automatically notify Support:

User Response:

Information only; no action is required.

- **FQXPMVD0011K: Failed to get the TPM/TPM card/TCM policy status**

Severity: Warning

Audit Log: TRUE

Automatically notify Support:

User Response:

1. Press "Back" button and press "Update VPD..." button again.
2. Perform AC reset or virtual reseal if step 1 failed.

Note: When performing AC reset, after powering off AC, wait several seconds before powering on AC. After AC power is restored, power on the host system.

3. If the problem persists, please contact technical support.

- **FQXPMVD0012K: Failed to set the TPM/TPM card/TCM policy**

Severity: Warning

Audit Log: TRUE

Automatically notify Support:

User Response:

1. Press "Apply" button on VPD update page.
2. Reboot the system if step 1 failed.
3. If the problem persists, please contact technical support.

Appendix A. Getting help and technical assistance

If you need help, service, or technical assistance or just want more information about Lenovo products, you will find a wide variety of sources available from Lenovo to assist you.

On the World Wide Web, up-to-date information about Lenovo systems, optional devices, services, and support are available at:

<http://datacentersupport.lenovo.com>

Note: IBM is Lenovo's preferred service provider for ThinkSystem.

Before you call

Before you call, there are several steps that you can take to try and solve the problem yourself. If you decide that you do need to call for assistance, gather the information that will be needed by the service technician to more quickly resolve your problem.

Attempt to resolve the problem yourself

You can solve many problems without outside assistance by following the troubleshooting procedures that Lenovo provides in the online help or in the Lenovo product documentation. The online help also describes the diagnostic tests that you can perform. The documentation for most systems, operating systems, and programs contains troubleshooting procedures and explanations of error messages and error codes. If you suspect a software problem, see the documentation for the operating system or program.

You can find the product documentation for your ThinkSystem products at the following location:

<https://pubs.lenovo.com/>

You can take these steps to try to solve the problem yourself:

- Check all cables to make sure that they are connected.
- Check the power switches to make sure that the system and any optional devices are turned on.
- Check for updated software, firmware, and operating-system device drivers for your Lenovo product. (See the following links) The Lenovo Warranty terms and conditions state that you, the owner of the Lenovo product, are responsible for maintaining and updating all software and firmware for the product (unless it is covered by an additional maintenance contract). Your service technician will request that you upgrade your software and firmware if the problem has a documented solution within a software upgrade.
 - Drivers and software downloads
 - <https://datacentersupport.lenovo.com/products/servers/thinksystem/sd530v3/7dd3/downloads/driver-list>
 - Operating system support center
 - <https://datacentersupport.lenovo.com/solutions/server-os>
 - Operating system installing instructions
 - <https://pubs.lenovo.com/thinksystem#os-installation>
- If you have installed new hardware or software in your environment, check <https://serverproven.lenovo.com> to make sure that the hardware and software are supported by your product.
- Refer to “Problem Determination” in *User Guide* or *Hardware Maintenance Guide* for instructions on isolating and solving issues.

- Go to <http://datacentersupport.lenovo.com> and check for information to help you solve the problem.

To find the Tech Tips available for your server:

1. Go to <http://datacentersupport.lenovo.com> and navigate to the support page for your server.
2. Click on **How To's** from the navigation pane.
3. Click **Article Type** → **Solution** from the drop-down menu.

Follow the on-screen instructions to choose the category for the problem that you are having.

- Check Lenovo Data Center Forum at https://forums.lenovo.com/t5/Datacenter-Systems/ct-p/sv_eg to see if someone else has encountered a similar problem.

Gathering information needed to call Support

If you require warranty service for your Lenovo product, the service technicians will be able to assist you more efficiently if you prepare the appropriate information before you call. You can also go to <http://datacentersupport.lenovo.com/warrantylookup> for more information about your product warranty.

Gather the following information to provide to the service technician. This data will help the service technician quickly provide a solution to your problem and ensure that you receive the level of service for which you might have contracted.

- Hardware and Software Maintenance agreement contract numbers, if applicable
- Machine type number (Lenovo 4-digit machine identifier). Machine type number can be found on the ID label, see “Identifying the server and access the Lenovo XClarity Controller” in *User Guide* or *System Configuration Guide*.
- Model number
- Serial number
- Current system UEFI and firmware levels
- Other pertinent information such as error messages and logs

As an alternative to calling Lenovo Support, you can go to <https://support.lenovo.com/servicerequest> to submit an Electronic Service Request. Submitting an Electronic Service Request will start the process of determining a solution to your problem by making the pertinent information available to the service technicians. The Lenovo service technicians can start working on your solution as soon as you have completed and submitted an Electronic Service Request.

Collecting service data

To clearly identify the root cause of a server issue or at the request of Lenovo Support, you might need collect service data that can be used for further analysis. Service data includes information such as event logs and hardware inventory.

Service data can be collected through the following tools:

- **Lenovo XClarity Provisioning Manager**

Use the Collect Service Data function of Lenovo XClarity Provisioning Manager to collect system service data. You can collect existing system log data or run a new diagnostic to collect new data.

- **Lenovo XClarity Controller**

You can use the Lenovo XClarity Controller web interface or the CLI to collect service data for the server. The file can be saved and sent to Lenovo Support.

- For more information about using the web interface to collect service data, see the “Backing up the BMC configuration” section in the XCC documentation compatible with your server at <https://pubs.lenovo.com/lxcc-overview/>.
- For more information about using the CLI to collect service data, see the “XCC `ffdc` command” section in the XCC documentation compatible with your server at <https://pubs.lenovo.com/lxcc-overview/>.

- **Lenovo XClarity Administrator**

Lenovo XClarity Administrator can be set up to collect and send diagnostic files automatically to Lenovo Support when certain serviceable events occur in Lenovo XClarity Administrator and the managed endpoints. You can choose to send diagnostic files to Lenovo Support using Call Home or to another service provider using SFTP. You can also manually collect diagnostic files, open a problem record, and send diagnostic files to the Lenovo Support.

You can find more information about setting up automatic problem notification within the Lenovo XClarity Administrator at https://pubs.lenovo.com/lxca/admin_setupcallhome.

- **Lenovo XClarity Essentials OneCLI**

Lenovo XClarity Essentials OneCLI has inventory application to collect service data. It can run both in-band and out-of-band. When running in-band within the host operating system on the server, OneCLI can collect information about the operating system, such as the operating system event log, in addition to the hardware service data.

To obtain service data, you can run the `getinfor` command. For more information about running the `getinfor`, see https://pubs.lenovo.com/lxce-onecli/onecli_r_getinfor_command.

Contacting Support

You can contact Support to obtain help for your issue.

You can receive hardware service through a Lenovo Authorized Service Provider. To locate a service provider authorized by Lenovo to provide warranty service, go to <https://datacentersupport.lenovo.com/serviceprovider> and use filter searching for different countries. For Lenovo support telephone numbers, see <https://datacentersupport.lenovo.com/supportphonenumber> for your region support details.

Lenovo