



ThinkSystem SR645 V3 Hardware Maintenance Guide



Machine Types: 7D9C, 7D9D

Note

Before using this information and the product it supports, be sure to read and understand the safety information and the safety instructions, which are available at:

https://pubs.lenovo.com/safety_documentation/

In addition, be sure that you are familiar with the terms and conditions of the Lenovo warranty for your server, which can be found at:

<http://datacentersupport.lenovo.com/warrantylookup>

Sixth Edition (February 2024)

© Copyright Lenovo 2022, 2024.

LIMITED AND RESTRICTED RIGHTS NOTICE: If data or software is delivered pursuant to a General Services Administration (GSA) contract, use, reproduction, or disclosure is subject to restrictions set forth in Contract No. GS-35F-05925.

Contents

Contents	i
---------------------------	----------

Safety	v
-------------------------	----------

Safety inspection checklist	vi
---------------------------------------	----

Chapter 1. Hardware replacement procedures. **1**

Installation Guidelines	1
-----------------------------------	---

Safety inspection checklist.	2
--------------------------------------	---

System reliability guidelines	3
---	---

Working inside the server with the power on	3
---	---

Handling static-sensitive devices	4
---	---

Technical rules	4
---------------------------	---

Memory module installation rules and order	4
--	---

PCIe slots and adapters.	6
----------------------------------	---

Drive installation rules	9
------------------------------------	---

Thermal rules	10
-------------------------	----

Power on and power off the server	15
---	----

Power on the server	15
-------------------------------	----

Power off the server	15
--------------------------------	----

Server replacement	15
------------------------------	----

Remove the server from rack.	16
--------------------------------------	----

Install the server to rack.	19
-------------------------------------	----

CMOS battery (CR2032) replacement	24
---	----

Remove the CMOS battery	24
-----------------------------------	----

Install the CMOS battery	27
------------------------------------	----

EDSFF cage replacement	28
----------------------------------	----

Remove an EDSFF cage	28
--------------------------------	----

Install an EDSFF cage	30
---------------------------------	----

Front drive backplane replacement	31
---	----

Remove the front 2.5" drive backplane	31
---	----

Install the front 2.5" drive backplane	33
--	----

Remove the front 3.5" drive backplane	34
---	----

Install the front 3.5" drive backplane	35
--	----

Remove the front 16-EDSFF drive

backplane	36
---------------------	----

Install the front 16-EDSFF drive backplane	38
--	----

Front riser assembly replacement	39
--	----

Front riser cage replacement	39
--	----

Front riser card and PCIe adapter

replacement	42
-----------------------	----

Front OCP module and OCP interposer card
--

replacement	47
-----------------------	----

Front OCP module replacement.	47
---------------------------------------	----

OCP interposer card replacement	49
---	----

Front I/O module replacement	54
--	----

Remove the front I/O module.	54
--------------------------------------	----

Install the front I/O module.	55
---------------------------------------	----

Remove the integrated diagnostics panel

assembly	56
--------------------	----

Install the integrated diagnostics panel
--

assembly	58
--------------------	----

Remove the external LCD cable (4 x 3.5"

chassis)	60
--------------------	----

Install the external LCD cable (4 x 3.5"
--

chassis)	62
--------------------	----

GPU replacement	64
---------------------------	----

Remove a GPU adapter	64
--------------------------------	----

Install a GPU adapter	66
---------------------------------	----

Hot-swap drive replacement	68
--------------------------------------	----

Remove a 2.5"/3.5" hot-swap drive	69
---	----

Install a 2.5"/3.5" hot-swap drive	70
--	----

Remove an EDSFF drive	72
---------------------------------	----

Install an EDSFF drive	74
----------------------------------	----

Internal CFF HBA/RAID adapter replacement	76
---	----

Remove the internal CFF HBA/RAID

adapter	76
-------------------	----

Install the internal CFF HBA/RAID adapter.	77
--	----

Intrusion switch replacement	78
--	----

Remove an intrusion switch	79
--------------------------------------	----

Install an intrusion switch	81
---------------------------------------	----

The Lenovo Neptune Liquid to Air Module

replacement (trained technicians only)	83
--	----

Remove the Lenovo Neptune Liquid to Air

Module	83
------------------	----

Install the Lenovo Neptune Liquid to Air
--

Module	87
------------------	----

Management NIC adapter replacement	91
--	----

Remove the management NIC adapter	91
---	----

Install the management NIC adapter	93
--	----

Memory module replacement	94
-------------------------------------	----

Remove a memory module	94
----------------------------------	----

Install a memory module	96
-----------------------------------	----

MicroSD card replacement	97
------------------------------------	----

Remove the MicroSD card.	98
----------------------------------	----

Install the MicroSD card.	99
-----------------------------------	----

M.2 backplane and M.2 drive replacement	101
---	-----

Remove the M.2 backplane and M.2 drive.	101
---	-----

Adjust the retainer on the M.2 backplane	104
--	-----

Install the M.2 backplane and M.2 drive.	105
--	-----

Remove the M.2 cage and M.2 backplane (16-
--

EDSFF chassis)	109
--------------------------	-----

Install the M.2 cage and M.2 backplane (16-

EDSFF chassis)	110
--------------------------	-----

OCP module replacement.	112
---------------------------------	-----

Remove the OCP module	112
Install the OCP module	113
PCIe adapter replacement	115
Remove a PCIe adapter	115
Install a PCIe adapter	117
Power supply unit replacement	118
Remove a power supply unit	118
Install a power supply unit	123
Processor and heat sink replacement (trained technicians only)	129
Remove a heat sink	130
Remove a processor	132
Install a processor	133
Install a heat sink	135
Rack latches replacement	137
Remove the rack latches	137
Install the rack latches	138
RAID flash power module replacement	139
Remove the RAID flash power module on the chassis	140
Install the RAID flash power module on the chassis	142
Remove the RAID flash power module on the riser	144
Install the RAID flash power module on the riser	145
Rear drive assembly replacement	146
Remove the rear 2.5" drive assembly	147
Install the rear 2.5" drive assembly	148
Remove the 7mm rear drive assembly	150
Install the 7mm rear drive assembly	151
Rear drive backplane replacement	152
Remove the rear 2.5" drive backplane	153
Install the rear 2.5" drive backplane	154
Remove the 7mm drive backplanes	156
Install the 7mm drive backplanes	157
Rear riser assembly replacement	159
Rear riser bracket replacement	163
Rear riser card replacement	166
Security bezel replacement	169
Remove the security bezel	169
Install the security bezel	171
Serial port module replacement	173
Remove a serial port module	173
Install a serial port module	175
System board (system board assembly) replacement (trained technicians only)	177
Remove the firmware and RoT security module	179
Install the firmware and RoT security module	180

Remove the system I/O board or processor board	184
Install the system I/O board or processor board	189
System fan replacement	194
Remove a system fan	194
Install a system fan	196
Top cover replacement	197
Remove the top cover	197
Install the top cover	199
Complete the parts replacement	201

Chapter 2. Internal cable routing . . .203

Identifying connectors	203
Drive backplane connectors	203
Backplane power cable routing	207
CFF RAID adapter	210
Front I/O module	211
Front riser assembly	212
GPU adapter (optional)	215
Intrusion switch	216
Management NIC adapter	217
M.2 drive backplane	218
OCP interposer	223
RAID flash power modules	224
Rear NVMe/SAS/SATA drive backplane	227
7mm drive backplane	229
The Lenovo Neptune Liquid to Air Module	234
4 x 2.5" front drives (liquid cooling)	235
8 x 2.5" front drives (liquid cooling)	241
10 x 2.5" front drives (liquid cooling)	243
Cable routing for backplane signals (one processor)	259
4 x 3.5" front drives (one processor)	259
4 x 2.5" front drives (one processor)	267
8 x 2.5" front drives (one processor)	273
10 x 2.5" front drives (one processor)	277
Cable routing for backplane signals (two processors)	294
4 x 3.5" front drives (two processors)	295
4 x 2.5" front drives (two processors)	303
8x 2.5" front drives (two processors)	316
10 x 2.5" front drives (two processors)	320
16-EDSFF drive backplane	355

Chapter 3. Problem determination357

Event logs	357
Specifications	359
Technical specifications	359
Mechanical specifications	364

Environmental specifications	364
System-board-assembly connectors	367
Troubleshooting by system LEDs and diagnostics display	369
External diagnostics handset	369
Integrated Diagnostics Panel	375
LEDs and buttons on the front operator panel	380
LEDs on drives	382
LEDs on the firmware and RoT security module	383
LEDs on the power supply unit	385
LEDs on the system board assembly	386
LEDs on the XCC system management port	389
LED on the leak detection sensor module	389
General problem determination procedures	390
Resolving suspected power problems	390
Resolving suspected Ethernet controller problems	391
Troubleshooting by symptom	391
Coolant leak problems (Liquid to Air Module)	392
Storage drive problems	393
Intermittent problems	395
Keyboard, mouse, KVM switch or USB-device problems	396
Memory problems	397
Monitor and video problems	398

Observable problems	400
Optional-device problems	402
Performance problems	403
Power on and power off problems	404
Power problems	405
Serial-device problems	405
Software problems	406
Storage drive problems	406

Appendix A. Getting help and technical assistance409

Before you call	409
Collecting service data	410
Contacting Support	411

Appendix B. Documents and supports413

Documents download	413
Support websites	413

Appendix C. Notices.415

Trademarks	416
Important notes	416
Electronic emission notices	416
Taiwan Region BSMI RoHS declaration	417
Taiwan Region import and export contact information	417

Safety

Before installing this product, read the Safety Information.

قبل تركيب هذا المنتج، يجب قراءة الملاحظات الأمنية

Antes de instalar este produto, leia as Informações de Segurança.

在安装本产品之前，请仔细阅读 Safety Information（安全信息）。

安裝本產品之前，請先閱讀「安全資訊」。

Prije instalacije ovog produkta obavezno pročitajte Sigurnosne Upute.

Před instalací tohoto produktu si přečtěte příručku bezpečnostních instrukcí.

Læs sikkerhedsforskrifterne, før du installerer dette produkt.

Lees voordat u dit product installeert eerst de veiligheidsvoorschriften.

Ennen kuin asennat tämän tuotteen, lue turvaohjeet kohdasta Safety Information.

Avant d'installer ce produit, lisez les consignes de sécurité.

Vor der Installation dieses Produkts die Sicherheitshinweise lesen.

Πριν εγκαταστήσετε το προϊόν αυτό, διαβάστε τις πληροφορίες ασφάλειας (safety information).

לפני שתתקינו מוצר זה, קראו את הוראות הבטיחות.


A termék telepítése előtt olvassa el a Biztonsági előírásokat!

Prima di installare questo prodotto, leggere le Informazioni sulla Sicurezza.

製品の設置の前に、安全情報をお読みください。

본 제품을 설치하기 전에 안전 정보를 읽으십시오.

Пред да се инсталира овој продукт, прочитајте информацијата за безбедност.

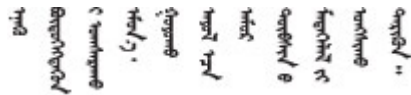

Les sikkerhetsinformasjonen (Safety Information) før du installerer dette produktet.

Przed zainstalowaniem tego produktu, należy zapoznać się z książką "Informacje dotyczące bezpieczeństwa" (Safety Information).

Antes de instalar este produto, leia as Informações sobre Segurança.

Перед установкой продукта прочтите инструкции по технике безопасности.

Pred inštaláciou tohto zariadenia si pečítajte Bezpečnostné predpisy.

Pred namestitvijo tega proizvoda preberite Varnostne informacije.

Antes de instalar este producto, lea la información de seguridad.

Läs säkerhetsinformationen innan du installerar den här produkten.

ཐོན་ཐུང་འདི་བདེ་སྤྱད་མ་བྱས་གོང་། སྐྱོར་གྱི་ཡིད་གཟབ་
བྱ་འདྲ་མིན་ཡིད་པའི་འོད་ཟེར་བལྟ་དགོས།

Bu ürünü kurmadan önce güvenlik bilgilerini okuyun.

مەزكۇر مەھسۇلاتنى ئورنىتىشتىن بۇرۇن بىخەتەرلىك ئۇچۇرلىرىنى ئوقۇپ چىقىڭ.

Youq mwngz yungh canjbinj neix gaxgonq, itdingh aeu doeg aen
canjbinj soengq cungj vahgangj ancien siusik.

Safety inspection checklist

Use the information in this section to identify potentially unsafe conditions with your server. As each machine was designed and built, required safety items were installed to protect users and service technicians from injury.

Note: The product is not suitable for use at visual display workplaces according to §2 of the Workplace Regulations.

Note: The set-up of the server is made in the server room only.

CAUTION:


This equipment must be installed or serviced by trained personnel, as defined by the NEC, IEC 62368-1 & IEC 60950-1, the standard for Safety of Electronic Equipment within the Field of Audio/Video, Information Technology and Communication Technology. Lenovo assumes that you are qualified in the servicing of equipment and trained in recognizing hazards energy levels in products. Access to the equipment is by the use of a tool, lock and key, or other means of security, and is controlled by the authority responsible for the location.

Important: Electrical grounding of the server is required for operator safety and correct system function. Proper grounding of the electrical outlet can be verified by a certified electrician.

Use the following checklist to verify that there are no potentially unsafe conditions:

1. If your working condition necessitates the server being powered off or you intend to power off, make sure that the power cord is disconnected.

S002

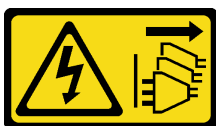

CAUTION:

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

Note: Under certain circumstances, powering off the server is not a prerequisite. Refer to the precautions before conducting any tasks.

2. Check the power cord.

- Make sure that the third-wire ground connector is in good condition. Use a meter to measure third-wire ground continuity for 0.1 ohm or less between the external ground pin and the frame ground.
- Make sure that the power cord is the correct type.

To view the power cords that are available for the server:

a. Go to:

<http://dcsc.lenovo.com/#/>

b. Click **Preconfigured Model** or **Configure to order**.

c. Enter the machine type and model for your server to display the configurator page.

d. Click **Power → Power Cables** to see all line cords.

- Make sure that the insulation is not frayed or worn.

3. Check for any obvious non-Lenovo alterations. Use good judgment as to the safety of any non-Lenovo alterations.
4. Check inside the server for any obvious unsafe conditions, such as metal filings, contamination, water or other liquid, or signs of fire or smoke damage.
5. Check for worn, frayed, or pinched cables.
6. Make sure that the power-supply cover fasteners (screws or rivets) have not been removed or tampered with.

Chapter 1. Hardware replacement procedures

This section provides installation and removal procedures for all serviceable system components. Each component replacement procedure references any tasks that need to be performed to gain access to the component being replaced.

Installation Guidelines

Before installing components in your server, read the installation guidelines.

Before installing optional devices, read the following notices carefully:

Attention: Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

- Read the safety information and guidelines to ensure your safety at work:
 - A complete list of safety information for all products is available at:
https://pubs.lenovo.com/safety_documentation/
 - The following guidelines are available as well: “Working inside the server with the power on” on page 3 and “Handling static-sensitive devices” on page 4.
- Make sure the components you are installing are supported by your server.
 - For a list of supported optional components for the server, see <https://serverproven.lenovo.com/>.
 - For the option package contents, see <https://serveroption.lenovo.com/>.
- For more information about ordering parts:
 1. Go to <http://datacentersupport.lenovo.com> and navigate to the support page for your server.
 2. Click **Parts**.
 3. Enter the serial number to view a listing of parts for your server.
- When you install a new server, download and apply the latest firmware. This will help ensure that any known issues are addressed, and that your server is ready to work with optimal performance. Go to <https://datacentersupport.lenovo.com/tw/en/products/servers/thinksystem/sr645v3/7d9c/downloads/driver-list/> (to be updated) to download firmware updates for your server.

Important: Some cluster solutions require specific code levels or coordinated code updates. If the component is part of a cluster solution, verify that the latest Best Recipe code level menu for cluster supported for the cluster solution before you update the code.

- If you replace a part, such as an adapter, that contains firmware, you might also need to update the firmware for that part. For more information about updating firmware, see “Update the firmware” in *User Guide*.
- It is good practice to make sure that the server is working correctly before you install an optional component.
- Keep the working area clean, and place removed components on a flat and smooth surface that does not shake or tilt.
- Do not attempt to lift an object that might be too heavy for you. If you have to lift a heavy object, read the following precautions carefully:
 - Make sure that you can stand steadily without slipping.
 - Distribute the weight of the object equally between your feet.
 - Use a slow lifting force. Never move suddenly or twist when you lift a heavy object.
 - To avoid straining the muscles in your back, lift by standing or by pushing up with your leg muscles.
- Back up all important data before you make changes related to the disk drives.
- Have a small flat-blade screwdriver, a small Phillips screwdriver, and a T20 torx screwdriver available.
- To view the error LEDs on the system board (system board assembly) and internal components, leave the power on.

- You do not have to turn off the server to remove or install hot-swap power supplies, hot swap fans, or hot-plug USB devices. However, you must turn off the server before you perform any steps that involve removing or installing adapter cables, and you must disconnect the power source from the server before you perform any steps that involve removing or installing a riser card.
- When replacing power supply units or fans, make sure to refer to redundancy rules for these components.
- Blue on a component indicates touch points, where you can grip to remove a component from or install it in the server, open or close a latch, and so on.
- Orange on a component or an orange label on or near a component indicates that the component can be hot-swapped if the server and operating system support hot-swap capability, which means that you can remove or install the component while the server is still running. (Orange can also indicate touch points on hot-swap components.) See the instructions for removing or installing a specific hot-swap component for any additional procedures that you might have to perform before you remove or install the component.
- The Red strip on the drives, adjacent to the release latch, indicates that the drive can be hot-swapped if the server and operating system support hot-swap capability. This means that you can remove or install the drive while the server is still running.

Note: See the system specific instructions for removing or installing a hot-swap drive for any additional procedures that you might need to perform before you remove or install the drive.

- After finishing working on the server, make sure you reinstall all safety shields, guards, labels, and ground wires.

Safety inspection checklist

Use the information in this section to identify potentially unsafe conditions with your server. As each machine was designed and built, required safety items were installed to protect users and service technicians from injury.

Note: The product is not suitable for use at visual display workplaces according to §2 of the Workplace Regulations.

Note: The set-up of the server is made in the server room only.

CAUTION:

This equipment must be installed or serviced by trained personnel, as defined by the NEC, IEC 62368-1 & IEC 60950-1, the standard for Safety of Electronic Equipment within the Field of Audio/Video, Information Technology and Communication Technology. Lenovo assumes that you are qualified in the servicing of equipment and trained in recognizing hazards energy levels in products. Access to the equipment is by the use of a tool, lock and key, or other means of security, and is controlled by the authority responsible for the location.

Important: Electrical grounding of the server is required for operator safety and correct system function. Proper grounding of the electrical outlet can be verified by a certified electrician.

Use the following checklist to verify that there are no potentially unsafe conditions:

1. If your working condition necessitates the server being powered off or you intend to power off, make sure that the power cord is disconnected.

S002



CAUTION:

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power

cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

Note: Under certain circumstances, powering off the server is not a prerequisite. Refer to the precautions before conducting any tasks.

2. Check the power cord.

- Make sure that the third-wire ground connector is in good condition. Use a meter to measure third-wire ground continuity for 0.1 ohm or less between the external ground pin and the frame ground.
- Make sure that the power cord is the correct type.

To view the power cords that are available for the server:

a. Go to:

<http://dcsc.lenovo.com/#/>

b. Click **Preconfigured Model** or **Configure to order**.

c. Enter the machine type and model for your server to display the configurator page.

d. Click **Power → Power Cables** to see all line cords.

- Make sure that the insulation is not frayed or worn.

3. Check for any obvious non-Lenovo alterations. Use good judgment as to the safety of any non-Lenovo alterations.

4. Check inside the server for any obvious unsafe conditions, such as metal filings, contamination, water or other liquid, or signs of fire or smoke damage.

5. Check for worn, frayed, or pinched cables.

6. Make sure that the power-supply cover fasteners (screws or rivets) have not been removed or tampered with.

System reliability guidelines

Review the system reliability guidelines to ensure proper system cooling and reliability.

Make sure the following requirements are met:

- When the server comes with redundant power, a power supply must be installed in each power-supply bay.
- Adequate space around the server must be spared to allow server cooling system to work properly. Leave approximately 50 mm (2.0 in.) of open space around the front and rear of the server. Do not place any object in front of the fans.
- For proper cooling and airflow, refit the server cover before you turn the power on. Do not operate the server for more than 30 minutes with the server cover removed, for it might damage server components.
- Cabling instructions that come with optional components must be followed.
- A failed fan must be replaced within 48 hours after malfunction.
- A removed hot-swap fan must be replaced within 30 seconds after removal.
- A removed hot-swap drive must be replaced within two minutes after removal.
- A removed hot-swap power supply must be replaced within two minutes after removal.
- Every air baffle that comes with the server must be installed when the server starts (some servers might come with more than one air baffle). Operating the server with a missing air baffle might damage the processor.
- All processor sockets must contain either a socket cover or a processor with heat sink.
- When more than one processor is installed, fan population rules for each server must be strictly followed.

Working inside the server with the power on

You might need to keep the power on with the server cover removed to look at system information on the display panel or to replace hot-swap components. Review these guidelines before doing so.

Attention: The server might stop and data loss might occur when internal server components are exposed to static electricity. To avoid this potential problem, always use an electrostatic-discharge wrist strap or other grounding systems when working inside the server with the power on.

- Avoid loose-fitting clothing, particularly around your forearms. Button or roll up long sleeves before working inside the server.
- Prevent your necktie, scarf, badge rope, or hair from dangling into the server.
- Remove jewelry, such as bracelets, necklaces, rings, cuff links, and wrist watches.
- Remove items from your shirt pocket, such as pens and pencils, in case they fall into the server as you lean over it.
- Avoid dropping any metallic objects, such as paper clips, hairpins, and screws, into the server.

Handling static-sensitive devices

Review these guidelines before you handle static-sensitive devices to reduce the possibility of damage from electrostatic discharge.

Attention: Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

- Limit your movement to prevent building up static electricity around you.
- Take additional care when handling devices during cold weather, for heating would reduce indoor humidity and increase static electricity.
- Always use an electrostatic-discharge wrist strap or other grounding system, particularly when working inside the server with the power on.
- While the device is still in its static-protective package, touch it to an unpainted metal surface on the outside of the server for at least two seconds. This drains static electricity from the package and from your body.
- Remove the device from the package and install it directly into the server without putting it down. If it is necessary to put the device down, put it back into the static-protective package. Never place the device on the server or on any metal surface.
- When handling a device, carefully hold it by the edges or the frame.
- Do not touch solder joints, pins, or exposed circuitry.
- Keep the device from others' reach to prevent possible damages.

Technical rules

Refer to the below technical rules and limitations when you install the related server components.

Memory module installation rules and order

Memory modules must be installed in a specific order based on the memory configuration that you implement and the number of processors and memory modules installed in the server.

Supported memory types

For information on the types of memory module supported by this server, see “Memory” section in [“Technical specifications” on page 359](#).

Your server has 24 memory slots with 24 channels. For a list of supported memory options, see:

<https://serverproven.lenovo.com/>.

Information about optimizing memory performance and configuring memory is available at the Lenovo Press website:

<https://lenovopress.com/servers/options/memory>

In addition, you can take advantage of a memory configurator, which is available at the following site:

https://dcsc.lenovo.com/#/memory_configuration

Specific information about the required installation order of memory modules in your server based on the system configuration and memory mode that you are implementing is shown below.

General DIMM mixing rules

DIMMs	Coexist in a system
3DS RDIMMs and other DIMM types	X
128 GB 3DS RDIMMs and 256 GB 3DS RDIMMs	X
ECC DIMMs and Non-ECC DIMMs	X ¹
EC4 DIMMs and EC8 DIMMs	X
x4 DIMMs and x8 DIMMs	X
16 Gbit (16 GB/32 GB/64 GB) DIMMs and 24 Gbit (96 GB) DIMMs	X
ThinkSystem 128GB TruDDR5 4800MHz (4Rx4) 3DS RDIMM-A v1 and ThinkSystem 128GB TruDDR5 4800MHz (4Rx4) 3DS RDIMM-A v2	X
DIMMs manufactured by different vendors	√
DIMMs of different rank	√ ²
DIMMs of different capacity	√ ³
DIMMs of different frequency/speed	√ ⁴
1. Only support ECC DIMMs. 2. Install the DIMM with the higher rank first. 3. Install the DIMM with the higher capacity first following the population sequence. 4. DIMMs should run at the supported frequency/speed on the system. (Maximum frequency: 4800 MT/s).	

Memory module installation order

Notes: In the following tables:

- S1–S24 indicate DIMM slots 1–24.
- 1–24 indicate the installation order.

For example, when 12 DIMMs are installed for two processors, the installation order is slot 7, 19, 6, 18, 9, 21, 4, 16, 8, 20, 5, 17.

Server model with one processor

The following table shows the DIMM population sequence when one processor is installed.

Table 1. DIMM population sequence for one processor

Total DIMMs	Processor 1											
	S12	S11	S10	S9	S8	S7	S6	S5	S4	S3	S2	S1
1 DIMM						1						
2 DIMMs						1	2					
4 DIMMs				3		1	2		4			

Table 1. DIMM population sequence for one processor (continued)

6 DIMMs				3	5	1	2	6	4			
8 DIMMs		7		3	5	1	2	6	4		8	
10 DIMMs		7	9	3	5	1	2	6	4	10	8	
12 DIMMs	11	7	9	3	5	1	2	6	4	10	8	12

Server model with two processors

The following table shows the DIMM population sequence when two processors are installed.

Table 2. DIMM population sequence for two processors

Total DIMMs	Processor 1											
	S12	S11	S10	S9	S8	S7	S6	S5	S4	S3	S2	S1
2 DIMMs						1						
4 DIMMs						1	3					
8 DIMMs				5		1	3		7			
12 DIMMs				5	9	1	3	11	7			
16 DIMMs		13		5	9	1	3	11	7		15	
20 DIMMs		13	17	5	9	1	3	11	7	19	15	
24 DIMMs	21	13	17	5	9	1	3	11	7	19	15	23
Total DIMMs	Processor 2											
	S24	S23	S22	S21	S20	S19	S18	S17	S16	S15	S14	S13
2 DIMMs						2						
4 DIMMs						2	4					
8 DIMMs				6		2	4		8			
12 DIMMs				6	10	2	4	12	8			
16 DIMMs		14		6	10	2	4	12	8		16	
20 DIMMs		14	18	6	10	2	4	12	8	20	16	
24 DIMMs	22	14	18	6	10	2	4	12	8	20	16	24

PCIe slots and adapters

Understanding the technical rules for PCIe adapters helps you correctly install and configure PCIe adapters in the system.

PCIe adapters supported for different models

Table 3. Rear PCIe adapters supported and their locations

Notes:

- For the type of expansion slots, refer to [“Technical specifications” on page 359](#).
- To locate the PCIe slots, see “Rear view” in *User Guide* or *System Configuration Guide*

Table 3. Rear PCIe adapters supported and their locations (continued)

 
 
 
 
 
 
Server rear view	Supported types and slot location	Number of processors
	Riser 1 assembly 1 Slot 1: PCIe x16 (x8, x4, x1), low-profile 2 Slot 2: PCIe x16 (x8, x4, x1), low-profile	1 or 2
	Riser 2 assembly 3 Slot 3: PCIe x16 (x8, x4, x1), low-profile	2
	Riser 1 assembly 1 Slot 1: PCIe x16 (x8, x4, x1), low-profile	1 or 2
	Riser 2 assembly 2 Slot 3: PCIe x16 (x8, x4), full-height	2
	Riser 1 assembly 1 Slot 1: PCIe x16 (x8, x4, x1), low-profile 2 Slot 2: PCIe x16 (x8, x4, x1), full-height Note: One rear wall bracket must be installed next to the two PCIe slots.	1 or 2
	Riser 1 assembly 1 Slot 1: PCIe x16 (x8, x4, x1), low-profile 2 Slot 2: PCIe x16 (x8, x4, x1), low-profile	1 or 2
	Riser 1 assembly 1 Slot 1: PCIe x16 (x8, x4, x1), low-profile	1 or 2
	Riser 1 assembly 1 Slot 1: PCIe x16 (x8, x4, x1), low-profile	1 or 2

Table 4. Front PCIe adapters supported and their locations

Notes:

- For the type of expansion slots, refer to [“Technical specifications” on page 359](#).
- To locate the PCIe slots, see “Front view” in *User Guide* or *System Configuration Guide*

Table 4. Front PCIe adapters supported and their locations (continued)

Server front view	Supported types and slot location	Number of processors
	Riser 3 assembly 1 Slot 4: PCIe x8, low-profile, 25W ^{Note 1} Riser 4 assembly 2 Slot 5: PCIe x16 (x16, x8), full-height, 75W ^{Note 2}	2
Notes: 1. The thermal design power of slot 4 in riser 3 assembly is limited to 25W or lower. 2. The thermal design power of slot 5 in riser 4 assembly is limited to 75W or lower.		

PCIe adapter installation rules and order

When installing different types of PCIe adapters, refer to the following suggested installation priority:

Table 5. Recommended installation priority for different types of PCIe adapters

Installation priority	
1. OCP card	2. Custom form factor (CFF) internal HBA/RAID adapter
3. Standard form factor (SFF) RAID adapter, M.2/7mm RAID adapter	4. Non-raid controller
5. Re-timer adapter	6. GPU adapter
7. InfiniBand adapter	8. Fiber channel adapter
9. Network adapter	10. External storage adapter
11. COM port bracket	

When installing a specific PCIe adapter, refer to the following suggested slot installation priority:

Table 6. Recommended slot installation priority for PCIe adapters

Recommended slot installation priority	PCIe adapters	Maximum supported number
Must be installed in slot 1	<ul style="list-style-type: none"> SFF RAID/HBA adapter Non-raid controller Re-timer adapter 	1
Must be installed in slot 2	<ul style="list-style-type: none"> SFF RAID/HBA adapter Network adapter 	1
	<ul style="list-style-type: none"> M.2/7mm RAID adapter 	2
Slot 1 > Slot 2 > Slot 3	<ul style="list-style-type: none"> Network adapter 	3
Slot 1 > Slot 3	<ul style="list-style-type: none"> InfiniBand adapter GPU adapter 	2
Slot 1 > Slot 3 > Slot 2	This rule is applicable to performance heat sink configuration. <ul style="list-style-type: none"> InfiniBand adapter Network adapter (size > 100 GB) GPU adapter 	3

Table 6. Recommended slot installation priority for PCIe adapters (continued)

Recommended slot installation priority	PCIe adapters	Maximum supported number
Slot 2 > Slot 3 > Slot 1	This rule is applicable to liquid cooling configuration. <ul style="list-style-type: none"> • Network adapter • COM port bracket 	1
Slot 5 > Slot 1 > Slot 2 > Slot 3	<ul style="list-style-type: none"> • GPU adapter • InfiniBand adapter • Network adapter 	4
Slot 5 > Slot 4 > Slot 1 > Slot 2 > Slot 3	<ul style="list-style-type: none"> • Fiber channel adapter • Network adapter • External storage adapter 	5
<p>Notes:</p> <ul style="list-style-type: none"> • RAID 940 series or 9350 series adapters require a RAID flash power module. • Mixing of RAID/HBA 4350/5350/9350 adapters (Gen 3) and RAID/HBA 440/540/940 adapters (Gen 4) in the same system is not allowed. • RAID/HBA adapters belonged to the same generation (Gen 3 or Gen 4) are allowed to be mixed in the same system. • Most adapters support one or two processors. However, two processors should be installed when using the following adapters: <ul style="list-style-type: none"> – ThinkSystem Mellanox ConnectX-6 HDR IB/200GbE Single Port x16 PCIe Adapter – ThinkSystem Mellanox HDR/200GbE 2x PCIe Aux Kit • Mixing rules for adapters: <ul style="list-style-type: none"> – When processor 9124/9224/9254/9334/9734/9754 is installed, Broadcom 5719 1GbE RJ45 4-port OCP/PCIe Ethernet Adapter cannot be installed. – ThinkSystem 4350-8i SAS/SATA 12Gb HBA and ThinkSystem Intel E810-DA2 10/25GbE SFP28 2-Port PCIe Ethernet Adapter cannot be mixed. – ThinkSystem Intel E810-DA4 10/25GbE SFP28 4-port/2-Port PCIe/OCP Ethernet Adapter cannot be used with the following adapters: <ul style="list-style-type: none"> – ThinkSystem 4350-8i SAS/SATA 12Gb HBA – ThinkSystem 4350-16i SAS/SATA 12Gb HBA – ThinkSystem RAID 5350-8i PCIe 12Gb Adapter – ThinkSystem RAID 5350-8i PCIe 12Gb Internal Adapter(new card) – ThinkSystem RAID 9350-8i 2GB Flash PCIe 12Gb Adapter – ThinkSystem RAID 9350-8i 2GB Flash PCIe 12Gb Internal Adapter – ThinkSystem RAID 9350-16i 4GB Flash PCIe 12Gb Adapter – ThinkSystem RAID 9350-16i 4GB Flash PCIe 12Gb Internal Adapter • The following adapter cannot be installed into slot 4 or slot 5: <ul style="list-style-type: none"> – ThinkSystem Broadcom 57454 10GBASE-T 4-port PCIe Ethernet Adapter • The following adapters cannot be installed into rear LP-FH riser cage: <ul style="list-style-type: none"> – ThinkSystem NetXtreme/I350-T4 PCIe 1Gb 4-Port RJ45 Ethernet Adapter – ThinkSystem QLogic QL41134 PCIe 10Gb 4-Port Base-T Ethernet Adapter – ThinkSystem Intel I350-T4 ML2 1Gb 4-Port RJ45 Ethernet Adapter – ThinkSystem Broadcom 57454 10GBASE-T 4-port PCIe Ethernet Adapter – ThinkSystem Intel I710-T4L 1G 4-Port RJ45 PCIe Ethernet Adapter • The following adapter can <i>only</i> be installed into FH riser cage: <ul style="list-style-type: none"> – ThinkSystem Broadcom 57454 10/25GbE SFP28 4-port PCIe Ethernet Adapter – ThinkSystem Broadcom 57504 10/25GbE SFP28 4-Port PCIe Ethernet Adapter • Only one adapter can be supported for the following InfiniBand adapter: <ul style="list-style-type: none"> – ThinkSystem Mellanox HDR/200GbE 2x PCIe Aux Kit 		

Drive installation rules

Understanding the technical rules for drives helps you correctly install and configure drives in the system.

General rules

1. The drive bays are numbered to indicate the installation order (starting from number “0”). Follow the installation order when you install a drive. See “Front view” in *User Guide* or *System Configuration Guide*.
2. The drives in a single RAID array must be of the same type (as in hard disk drives, solid-state drives, and so on), same size, and same capacity.
3. If your server comes with rear drives, always install the rear backplane first. The drive installation should be rear drive bay 16 → 17, and then front drive bay 0 → 1 → 2 → 3 → 4 → 5 → 6 → 7 → 8 → 9.
4. The installation order of different drive interface types: NVMe SSD → SAS SSD → SATA SSD → SAS HDD → SATA HDD.
5. For EDSFF drives, follow the numerical order of the drive bay sequence. Do not skip bays when installing EDSFF drives.

Mixing rules

1. You can use drives from different vendors.
2. You can mix drives of different types and different capacities in one system, but not in one RAID array. And when you deploy a drive mix, install drives of lower capacity first.
3. You can install a 2.5-inch solid-state/SAS/SATA drive in a 3.5-inch hard disk drive bay.
4. When mixing NVMe/SAS/SATA drives in one system, install NVMe drives in a descending bay sequence order, 9 → 8 → 7...; and SAS/SATA drives in an ascending bay sequence order, 0 → 1 → 2....
5. Mixing EDSFF, U.2 or U.3 drives in one RAID array is not supported.

Special notes

1. For the server models with a single type or mixed types of drives, take 10 x 2.5" AnyBay drives for instance:
 - The installation order of a single type of drives (SAS/SATA/NVMe) should be: front drive bay 0 → 1 → 2 → 3 → 4 → 5 → 6 → 7 → 8 → 9.
 - The installation order of mixed types of drives should be: SAS/SATA installed from front drive bay 0 → 1 → 2..., and NVMe installed from front drive bay 9 → 8 → 7 → 6 → 5 → 4 → 3 → 2 → 1 → 0.
2. For the server models with rear drives installed, take 8 x 2.5" SAS/SATA front drives and 2 x 2.5" SAS/SATA rear drives for instance:

Drives can be installed to rear drive bay 16 → 17 first, and then front drive bay 0 → 1 → 2 → 3 → 4 → 5 → 6 → 7.
3. When ThinkSystem M.2 NVMe 2-Bay RAID Enablement Kit is installed, the 7mm SATA drive cannot be installed.
4. ThinkSystem M.2 NVMe 2-Bay RAID Enablement Kit cannot be installed into the 4 x 3.5" chassis.
5. Tri-mode RAID cards support U.3 NVMe SSDs but do not support U.2 NVMe SSDs
6. When 7mm drives are installed, two PCIe adapters can be installed on the rear at most.
7. When a Gen 3 M.2 SATA 2-Bay Enablement Kit is selected, at least one M.2 disk needs to be installed.
8. When rear 2x2.5 SSDs are installed, only one PCIe adapter can be installed on the rear.

Thermal rules

This topic provides thermal rules for the server.

- [“Server models with front drive bays only” on page 11](#)
- [“Server models with rear drive bays” on page 12](#)
- [“Server models with GPUs” on page 14](#)

Notes: When ThinkSystem 256GB TruDDR5 4800MHz (8Rx4) 3DS RDIMM-A v1 is used, the following requirements should be met:

- Ambient temperature at sea level ≤ 25°C
- CPU power ≤ 300W
- AOC ≤ 25 GB
- The performance fan and performance heat sink are installed.
- The front backplane, rear backplane, rear GPU are *not* installed.

Abbreviations used in tables below are defined as follows:

- Max.Temp.: Maximum ambient temperature at sea level
- TDP: Thermal design power
- P: Performance
- S: Standard
- A: The Lenovo Neptune Liquid to Air Module
- Y1: Yes
- Y2: Yes when the maximum ambient temperature is less than 30 °C
- Y3: Yes when the maximum ambient temperature is less than 25 °C
- Y4: Yes when using the performance fan
- Y5: Yes except for ThinkSystem 128GB TruDDR5 4800MHz (4Rx4) 3DS RDIMM-A v1 and ThinkSystem 256GB TruDDR5 4800MHz (8Rx4) 3DS RDIMM-A v1
- Y6: Yes except for ThinkSystem 256GB TruDDR5 4800MHz (8Rx4) 3DS RDIMM-A v1
- Y7: Yes when the maximum ambient temperature is less than 30 °C and the performance fan is installed.
- Y8: Yes when the maximum ambient temperature is less than 35 °C and the performance fan is installed.
- NA: Not applicable

Server models with front drive bays only

This section provides thermal information for server models with front drive bays only.

Front bays	Max. Temp.	Processor TDP (watts)	Heat sink	Fan type	Processor Qty	Support DIMMs ≥ 96 GB
4 x 3.5"	25°C ^{Note 1}	320 ≤ TDP ≤ 400	P	P	1 or 2	Y1
	30°C	200 ≤ TDP ≤ 240	P	S or P	1 or 2	Y4
	35°C	200 < TDP ≤ 300	P	P	1 or 2	Y2
	45°C	200 ≤ TDP ≤ 240	P	P	1 or 2	Y2
4 x 2.5"	25°C ^{Note 2}	320 ≤ TDP ≤ 400	P	P	1 or 2	Y1
	25°C	320 ≤ TDP ≤ 400	A	P	2	Y1
	30°C	320 ≤ TDP ≤ 400	A	P	2	Y3
	30°C	200 ≤ TDP ≤ 240	P	S or P	1 or 2	Y4
	35°C	200 ≤ TDP ≤ 300	A	P	2	Y3
	35°C	200 ≤ TDP ≤ 300	P	P	1 or 2	Y2
	45°C	200 ≤ TDP ≤ 240	P	P	1 or 2	Y2
8 x 2.5"	25°C ^{Note 2}	320 ≤ TDP ≤ 400	P	P	1 or 2	Y1
	30°C	320 ≤ TDP ≤ 400	A	P	2	Y1
	30°C	200 ≤ TDP ≤ 240	P	S or P	1 or 2	Y4
	35°C	200 ≤ TDP ≤ 300	P	P	1 or 2	Y2
	35°C	200 ≤ TDP ≤ 300	A	P	2	Y2
	45°C	200 ≤ TDP ≤ 240	P	P	1 or 2	Y2
10 x 2.5"	25°C ^{Note 1}	320 ≤ TDP ≤ 400	P	P	1 or 2	Y1
	35°C	200 ≤ TDP ≤ 300	P	P	1 or 2	Y2
	45°C	200 ≤ TDP ≤ 240	P	P	1 or 2	Y2

Front bays	Max. Temp.	Processor TDP (watts)	Heat sink	Fan type	Processor Qty	Support DIMMs ≥ 96 GB
10 x 2.5" NVMe (Gen 4)	30°C	320 ≤ TDP ≤ 400	A	P	2	Y1
10 x 2.5" (Gen 4)	35°C	200 ≤ TDP ≤ 300	A	P	2	Y2
16-EDSFF	35°C	200 ≤ TDP ≤ 300	P	P	1 or 2	Y1

Notes:

1. This line of thermal rule is applicable for the front bays without the front I/O module and installed with the processors 9174F, 9554, 9654, and 9654P.
2. This line of thermal rule is applicable for the front bays without the front I/O module and installed with the processors 9174F, 9554, 9654, 9654P, 9684X, 9734, and 9754.
3. *ThinkSystem 256GB TruDDR5 4800MHz (8Rx4) 3DS RDIMM-A v1* can only be used when the performance fan is installed.

Server models with rear drive bays

This section provides thermal information for server models with middle or rear drive bays.

Front bays	Rear bays	Max. Temp.	Processor TDP (watts)	Heat sink	Fan type	Processor Qty	Support DIMMs ≥ 96 GB
4 x 3.5"	2 x 7mm NVMe	25°C ^{Note 1}	320 ≤ TDP ≤ 400	P	P	1 or 2	Y1
		30°C	200 ≤ TDP ≤ 300	P	P	1 or 2	Y1
	2 x 7mm SATA	30°C	200 ≤ TDP ≤ 240	P	S	1 or 2	Y1
		30°C	200 ≤ TDP ≤ 300	P	P	1 or 2	Y1
	2 x 2.5" SAS/ SATA/ NVMe/ U.2/U.3	30°C	200 ≤ TDP ≤ 300	P	P	1 or 2	Y5
4 x 2.5"	2 x 7mm NVMe	25°C ^{Note 2}	320 ≤ TDP ≤ 400	P	P	1 or 2	Y1
		25°C	320 ≤ TDP ≤ 400	A	P	2	Y1
		30°C	200 ≤ TDP ≤ 300	A	P	2	Y3
		35°C	200 ≤ TDP ≤ 300	P	P	1 or 2	Y2

Front bays	Rear bays	Max. Temp.	Processor TDP (watts)	Heat sink	Fan type	Processor Qty	Support DIMMs ≥ 96 GB
	2 x 7mm SATA	30°C	200 ≤ TDP ≤ 300	P	S	1 or 2	Y5
		35°C	200 ≤ TDP ≤ 300	P	P	1 or 2	Y2
	2 x 2.5" NVMe/ U.2/U.3	25°C	320 ≤ TDP ≤ 400	A	P	2	Y5
	2 x 2.5" SAS/ SATA/ NVMe/ U.2/U.3	30°C	200 ≤ TDP ≤ 300	P	P	1 or 2	Y5
8 x 2.5"	2 x 7mm NVMe	25°C ^{Note 2}	320 ≤ TDP ≤ 400	P	P	1 or 2	Y1
		25°C	320 ≤ TDP ≤ 400	A	P	2	Y1
		30°C	200 ≤ TDP ≤ 300	P	P	1 or 2	Y1
		30°C	200 ≤ TDP ≤ 300	A	P	2	Y3
	2 x 7mm SATA	30°C	200 ≤ TDP ≤ 240	P	S	1 or 2	Y2
		30°C	200 ≤ TDP ≤ 300	P	P	1 or 2	Y1
	2 x 2.5" SAS/ SATA/ NVMe/ U.2/U.3	30°C	200 ≤ TDP ≤ 300	P	P	1 or 2	Y5
	10 x 2.5"	2 x 7mm NVMe	25°C ^{Note 1}	320 ≤ TDP ≤ 400	P	P	1 or 2
30°C			200 ≤ TDP ≤ 300	P	P	1 or 2	Y1
2 x 7mm SATA		30°C	200 ≤ TDP ≤ 300	P	P	1 or 2	Y1
2 x 2.5" SAS/ SATA/ NVMe/ U.2/U.3		30°C	200 ≤ TDP ≤ 300	P	P	1 or 2	Y5

Front bays	Rear bays	Max. Temp.	Processor TDP (watts)	Heat sink	Fan type	Processor Qty	Support DIMMs ≥ 96 GB
10 x 2.5" (Gen 4)	2 x 7mm NVMe	25°C	320 ≤ TDP ≤ 400	A	P	2	Y1
		30°C	200 ≤ TDP ≤ 300	A	P	2	Y3
16-EDSFF	2 x 7mm NVMe	30°C	200 ≤ TDP ≤ 300	P	P	1 or 2	Y1
	2 x 7mm SATA	30°C	200 ≤ TDP ≤ 300	P	P	1 or 2	Y1

Notes:

1. This line of thermal rule is applicable for the front bays without the front I/O module and installed with the processors 9174F, 9554, 9654, and 9654P.
2. This line of thermal rule is applicable for the front bays without the front I/O module and installed with the processors 9174F, 9554, 9654, 9654P, 9684X, 9734, and 9754.

Server models with GPUs

This section provides thermal information for server models with GPUs.

Your server supports the following GPU:

- NVIDIA® A2
- NVIDIA® L4

Front bays	Max. Temp.	Process- or TDP (watts)	Heat sink	Fan type	Max. GPU Qty.		Processor Qty.	Support DIMMs ≥ 96 GB
					Front	Rear		
4 x 3.5"	30°C	200 ≤ TDP ≤ 300	P	P	NA	3	1 or 2	Y5
	35°C	200 ≤ TDP ≤ 240	P	P	NA	2	1 or 2	Y5
4 x 2.5"	25°C	320 ≤ TDP ≤ 400	A	P	NA	2	2	Y1
	30°C	240 < TDP ≤ 300	P	P	1	3	1 or 2	Y5
	35°C	200 ≤ TDP ≤ 240	P	P	1	3	1 or 2	Y5
8 x 2.5"	30°C	200 ≤ TDP ≤ 300	P	P	NA	3	1 or 2	Y5
	35°C	200 ≤ TDP ≤ 240	P	P	NA	2	1 or 2	Y5
10 x 2.5"	30°C	200 ≤ TDP ≤ 300	P	P	NA	3	1 or 2	Y5
	35°C	200 ≤ TDP ≤ 240	P	P	NA	2	1 or 2	Y5
16-EDSFF	30°C	200 ≤ TDP ≤ 300	P	P	NA	2	1 or 2	Y5

Power on and power off the server

Follow the instructions in this section to power on and power off the server.

Power on the server

After the server performs a short self-test (power status LED flashes quickly) when connected to input power, it enters a standby state (power status LED flashes once per second).

Power button location and power LED locations are specified in:

- “Server components” in *User Guide* or *System Configuration Guide*
- “[Troubleshooting by system LEDs and diagnostics display](#)” on page 369

The server can be turned on (power LED on) in any of the following ways:

- You can press the power button.
- The server can restart automatically after a power interruption.
- The server can respond to remote power-on requests sent to the Lenovo XClarity Controller.

Important: Lenovo XClarity Controller (XCC) supported version varies by product. All versions of Lenovo XClarity Controller are referred to as Lenovo XClarity Controller and XCC in this document, unless specified otherwise. To see the XCC version supported by your server, go to https://sysmgt.lenovofiles.com/help/topic/lxcc_frontend/lxcc_overview.html.

For information about powering off the server, see “[Power off the server](#)” on page 15.

Power off the server

The server remains in a standby state when it is connected to a power source, allowing the Lenovo XClarity Controller to respond to remote power-on requests. To remove all power from the server (power status LED off), you must disconnect all power cables.

Power button location and power LED locations are specified in:

- “Server components” in *User Guide* or *System Configuration Guide*
- “[Troubleshooting by system LEDs and diagnostics display](#)” on page 369

To place the server in a standby state (power status LED flashes once per second):

Note: The Lenovo XClarity Controller can place the server in a standby state as an automatic response to a critical system failure.

- Start an orderly shutdown using the operating system (if supported by your operating system).
- Press the power button to start an orderly shutdown (if supported by your operating system).
- Press and hold the power button for more than 4 seconds to force a shutdown.

When in a standby state, the server can respond to remote power-on requests sent to the Lenovo XClarity Controller. For information about powering on the server, see “[Power on the server](#)” on page 15.

Server replacement

Follow instructions in this section to remove and install the server.

- “[Remove the server from rack](#)” on page 16
- “[Install the server to rack](#)” on page 19

Remove the server from rack

Follow instructions in this section to remove the server from the rack.

S036



18 - 32 kg (39 - 70 lb)



32 - 55 kg (70 - 121 lb)

CAUTION:

Use safe practices when lifting.

S006



CAUTION:

When laser products (such as CD-ROMs, DVD drives, fiber optic devices, or transmitters) are installed, note the following:

- **Do not remove the covers. Removing the covers of the laser product could result in exposure to hazardous laser radiation. There are no serviceable parts inside the device.**
- **Use of controls or adjustments or performance of procedures other than those specified herein might result in hazardous radiation exposure.**

About this task

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 15](#).

CAUTION:

Make sure to have three people operate the server removal procedures to prevent injury.

Procedure

Step 1. Loosen the two **2** screws located on the **1** rack latches to disengage it from the rack.

Rack front

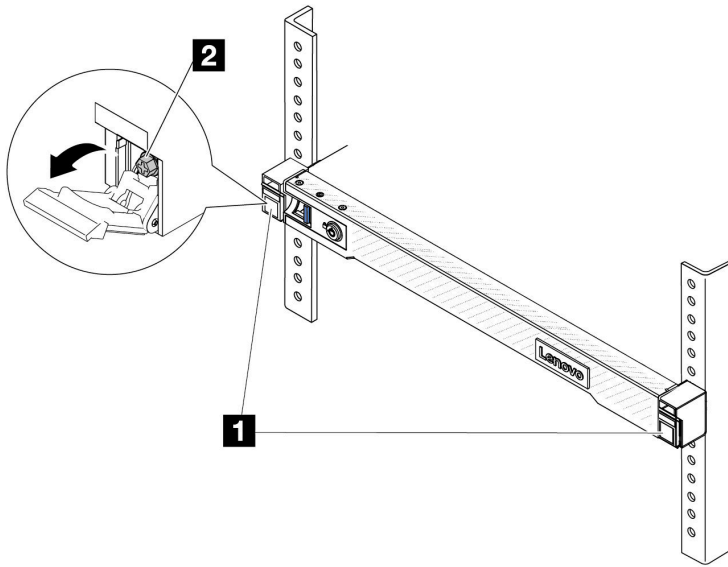


Figure 1. Disengaging server from the rack

Step 2. Hold the mounting ears on the front of the server; then, slide the server all the way out until it stops.

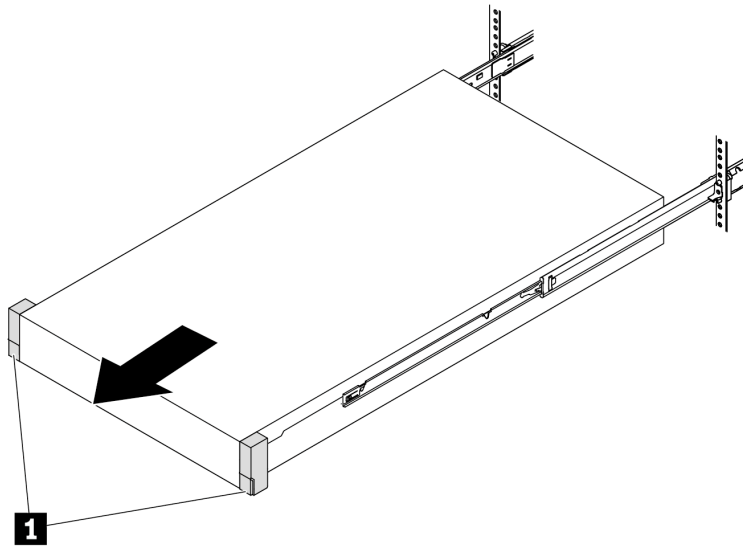


Figure 2. Pulling out the server

1	Mounting ears
----------	---------------

Step 3. Remove the server from the rack.

CAUTION:

Make sure three people are lifting the sever by holding the lift points

Rack front

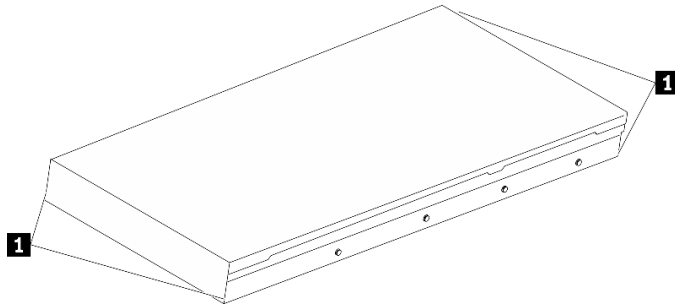


Figure 3. Lifting up the server

1	Lift points
----------	-------------

Rack Front

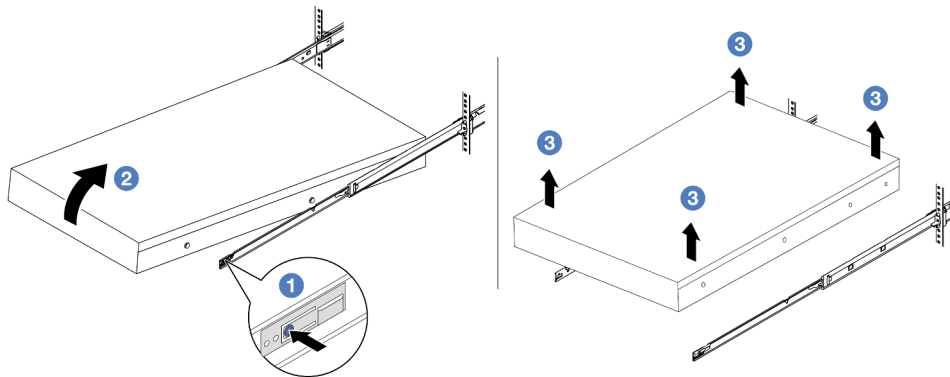


Figure 4. Removing the server from the rack.

- 1** Press the release tabs to disengage the rails from the server.
- 2** Carefully lift up the front end of the server slightly to detach the nailheads from the slots on the rails.
- 3** With three people, lift up the server to remove it from the rails completely. Place the server on a flat and sturdy surface.

After you finish

Carefully lay the server on a flat, static-protective surface.

Demo video

<https://www.youtube.com/watch?v=fo2RyxINIDg>

Install the server to rack

Follow instructions in this section to install the server to the rack.

S036



18 - 32 kg (39 - 70 lb)



32 - 55 kg (70 - 121 lb)

CAUTION:

Use safe practices when lifting.

S006



CAUTION:

When laser products (such as CD-ROMs, DVD drives, fiber optic devices, or transmitters) are installed, note the following:

- **Do not remove the covers. Removing the covers of the laser product could result in exposure to hazardous laser radiation. There are no serviceable parts inside the device.**
- **Use of controls or adjustments or performance of procedures other than those specified herein might result in hazardous radiation exposure.**

About this task

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See “[Power off the server](#)” on page 15.

CAUTION:

Make sure to have three people operate the server installation procedures to prevent injury.

Firmware and driver download: You might need to update the firmware or driver after replacing a component.

- Go to <https://datacentersupport.lenovo.com/tw/en/products/servers/thinksystem/sr645v3/7d9c/downloads/driver-list/> to see the latest firmware and driver updates for your server.
- Go to “Update the firmware” in *User Guide* or *System Configuration Guide* for more information on firmware updating tools.

Procedure

Step 1. From the front of the rack, pull the rails all the way out until they stop

Attention: You can only install the server successfully when the rails are fully extended.

Rack front

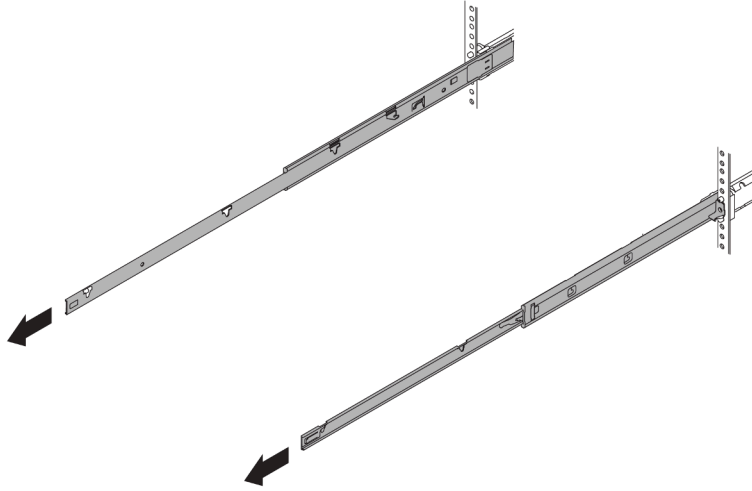


Figure 5. Pulling out the rails

Step 2. Carefully lift up the server with three people.

CAUTION:

Make sure three people are lifting the sever by holding the lift points

Rack front


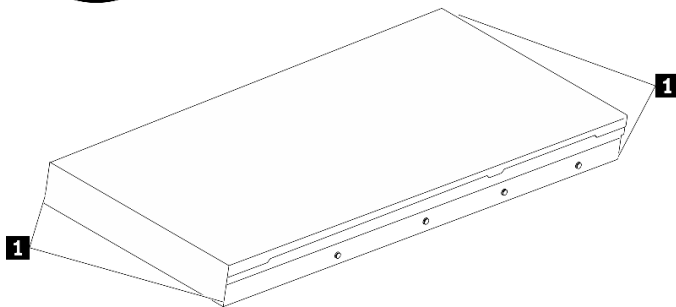


Figure 6. Lifting up the server

1	Lift points
----------	-------------

Step 3. From the front of the rack, install server into the rails.

Attention: You can only install the server successfully when the rails are fully extended.

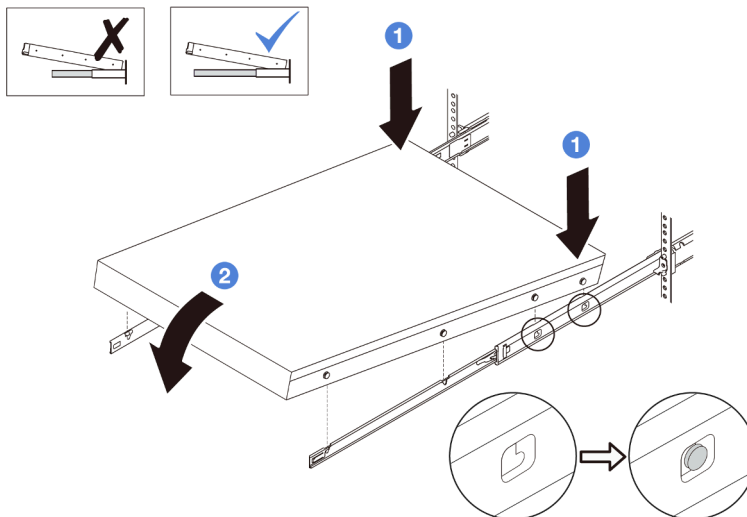

- 1** Tilt the server and slowly lower its rear end; then, push the rails toward the server and make sure the farthest nailheads on server's left and right side go into the slots on the rail.
- 2** Slowly lower the server down and make sure the other 3 nailheads on server's left and right side slip into corresponding slots.

Step 4. Slide the server into rack.

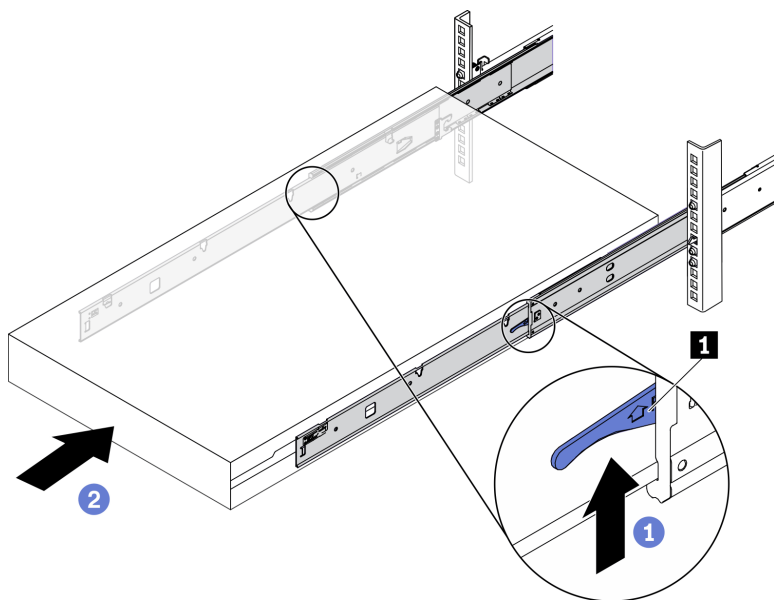


Figure 7. Installing the server into the rack

1	Latch
----------	-------

- a. **1** Push up the latches on the rails.
- b. **2** Push the server all the way into the rack until both latches lock into position with a click.

Step 5. (Optional) Secure the server to the rack.

- a. Install one M6 screw to each of the rails to secure the server to the rear of the rack.

Rack rear

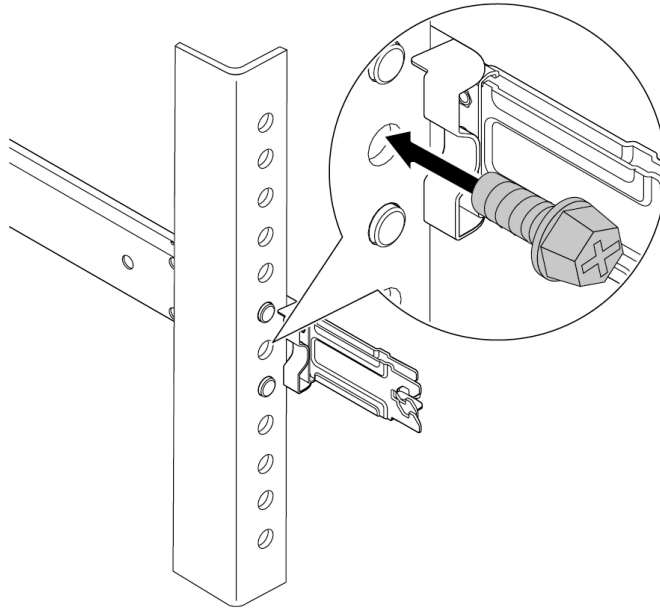


Figure 8. Securing the server to the rear of the rack

- b. Secure the server to the front of the rack. Fasten the two screws located on the front of the server.

Rack front

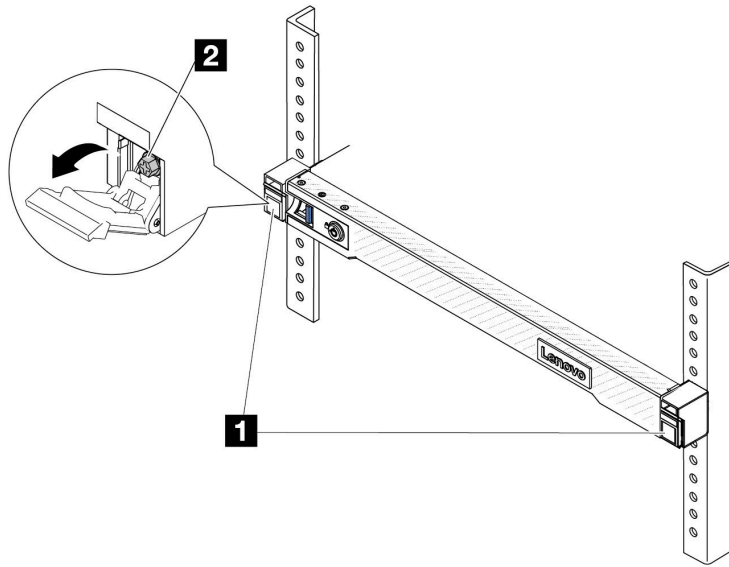


Figure 9. Securing the server to the front of the rack

1	Latches
2	Screw

After you finish

1. Reconnect the power cords and any cables that you removed.
2. Power on the server and any peripheral devices. See [“Power on the server” on page 15](#).
3. Update the server configuration. See [“Complete the parts replacement” on page 201](#).

Demo video

<https://www.youtube.com/watch?v=H7tTLsPmPG0>

CMOS battery (CR2032) replacement

Use this information to remove and install the CMOS battery.

- [“Remove the CMOS battery” on page 24](#)
- [“Install the CMOS battery” on page 27](#)

Remove the CMOS battery

Use this information to remove the CMOS battery.

About this task

The following tips describe information that you must consider when removing the CMOS battery.

- Lenovo has designed this product with your safety in mind. The lithium CMOS battery must be handled correctly to avoid possible danger. If you replace the CMOS battery, you must adhere to local ordinances or regulations for battery disposal.

- If you replace the original lithium battery with a heavy-metal battery or a battery with heavy-metal components, be aware of the following environmental consideration. Batteries and accumulators that contain heavy metals must not be disposed of with normal domestic waste. They will be taken back free of charge by the manufacturer, distributor, or representative, to be recycled or disposed of in a proper manner.
- To order replacement batteries, call your support center or business partner. For Lenovo support telephone numbers, see <https://datacentersupport.lenovo.com/supportphonenumberlist> for your region support details.

Note: After you replace the CMOS battery, you must reconfigure the server and reset the system date and time.

S004



CAUTION:

When replacing the lithium battery, use only Lenovo specified part number or an equivalent type battery recommended by the manufacturer. If your system has a module containing a lithium battery, replace it only with the same module type made by the same manufacturer. The battery contains lithium and can explode if not properly used, handled, or disposed of.

Do not:

- **Throw or immerse into water**
- **Heat to more than 100°C (212°F)**
- **Repair or disassemble**

Dispose of the battery as required by local ordinances or regulations.

S002



CAUTION:

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 15](#).
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

- Step 1. Remove the top cover. See “Remove the top cover” on page 197.
- Step 2. Remove any parts and disconnect any cables that might impede your access to the CMOS battery.
- Step 3. Locate the CMOS battery. See “System-board-assembly connectors” on page 367.
- Step 4. Open the battery clip as shown and carefully take the CMOS battery out of the socket.

Attention:

- Failing to remove the CMOS battery properly might damage the socket on the processor board. Any damage to the socket might require replacing the processor board.
- Do not tilt or push the CMOS battery by using excessive force.

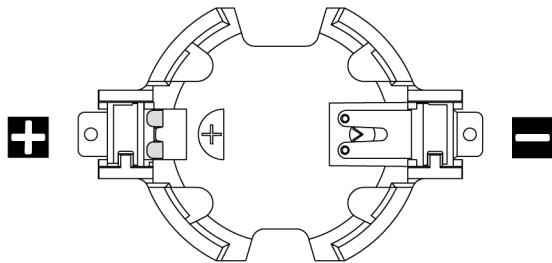


Figure 10. The positive and negative end on the CMOS battery socket

Note: Before you remove or install the CMOS battery from or into the socket, differentiate between the positive and negative ends. Use the illustration above for guidance.

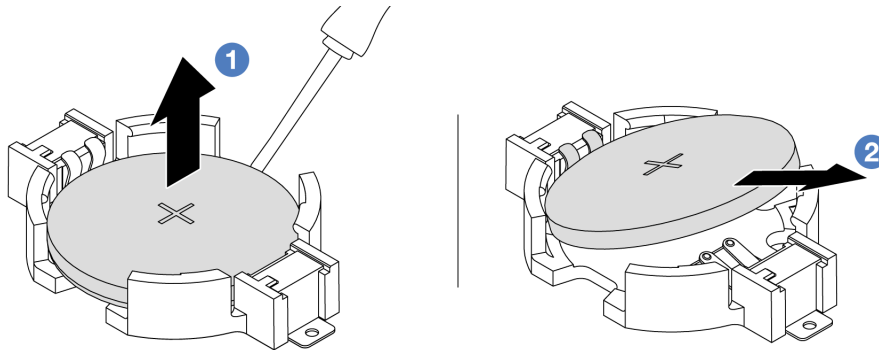


Figure 11. CMOS battery removal

1. 1 Pry the CMOS battery from the socket with a flat-blade screwdriver.
2. 2 Remove the CMOS battery.

After you finish

1. Install a new one. See “Install the CMOS battery” on page 27.
2. If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.
3. Dispose of the CMOS battery as required by local ordinances or regulations.

Demo video

<https://www.youtube.com/watch?v=qfMZxUL-Mhc>

Install the CMOS battery

Use this information to install the CMOS battery.

About this task

The following tips describe information that you must consider when installing the CMOS battery.

- Lenovo has designed this product with your safety in mind. The lithium CMOS battery must be handled correctly to avoid possible danger. If you replace the CMOS battery, you must adhere to local ordinances or regulations for battery disposal.
- If you replace the original lithium battery with a heavy-metal battery or a battery with heavy-metal components, be aware of the following environmental consideration. Batteries and accumulators that contain heavy metals must not be disposed of with normal domestic waste. They will be taken back free of charge by the manufacturer, distributor, or representative, to be recycled or disposed of in a proper manner.
- To order replacement batteries, call your support center or business partner. For Lenovo support telephone numbers, see <https://datacentersupport.lenovo.com/supportphonenumber> for your region support details.

Note: After you replace the CMOS battery, you must reconfigure the server and reset the system date and time.

S004



CAUTION:

When replacing the lithium battery, use only Lenovo specified part number or an equivalent type battery recommended by the manufacturer. If your system has a module containing a lithium battery, replace it only with the same module type made by the same manufacturer. The battery contains lithium and can explode if not properly used, handled, or disposed of.

Do not:

- Throw or immerse into water
- Heat to more than 100°C (212°F)
- Repair or disassemble

Dispose of the battery as required by local ordinances or regulations.

S002



CAUTION:


The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See “[Power off the server](#)” on page 15.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

- Step 1. Touch the static-protective package that contains the CMOS battery to any unpainted surface on the outside of the server. Then, take the CMOS battery out of the package.
- Step 2. Install the CMOS battery. Ensure that the CMOS battery is seated in place.

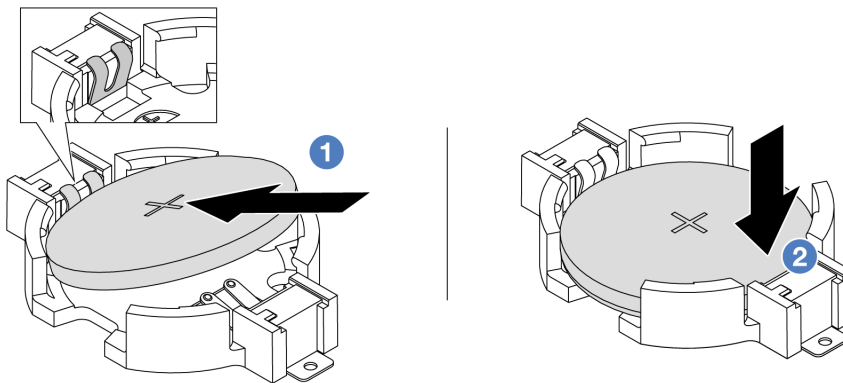

Note: Before you install the battery into the socket, make sure that the positive side faces upward.

1. **1** Tilt the battery and insert it to the positive end on the socket, and make sure that the battery goes tight to the metal clip.
2. **2** Press the battery down until it clicks into the socket.

Figure 12. CMOS battery installation

After you finish

1. Complete the parts replacement. See “[Complete the parts replacement](#)” on page 201.
2. Use the Setup utility to set the date, time, and any passwords.

Demo video

<https://www.youtube.com/watch?v=SiVSDzQ6LC8>

EDSFF cage replacement

Use this information to remove and install an EDSFF cage

- “[Remove an EDSFF cage](#)” on page 28
- “[Install an EDSFF cage](#)” on page 30

Remove an EDSFF cage

Use this information to remove an EDSFF cage.

About this task

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See “[Power off the server](#)” on page 15.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

- Step 1. If the security bezel is installed, remove it first. See “[Remove the security bezel](#)” on page 169.
- Step 2. Locate the EDSFF cage you need to remove, and then remove all the EDSFF drives installed in it. See “[Remove an EDSFF drive](#)” on page 72.
- Step 3. Remove the top cover. See “[Remove the top cover](#)” on page 197.
- Step 4. Remove the EDSFF cage from the chassis.

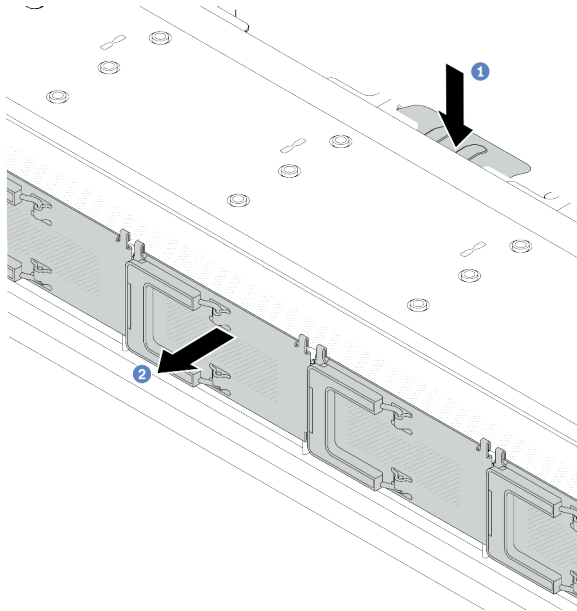


Figure 13. EDSFF cage removal

- a. **1** Press down the extended tab on the other side of the front chassis.
- b. **2** Slide the EDSFF cage out of the front chassis.

After you finish

1. Install a new EDSFF cage. See “[Install an EDSFF cage](#)” on page 30.
2. If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Demo video

<https://www.youtube.com/watch?v=aj1BMZukolc>

Install an EDSFF cage

Use this information to install an EDSFF cage.

About this task

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 15](#).
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

- Step 1. Touch the static-protective package that contains the EDSFF cage to any unpainted surface on the outside of the server. And then, take the EDSFF cage out of the package and place it on a static-protective surface.
- Step 2. Slide the diagnostics panel assembly into the front chassis as shown. And ensure that it is seated in place.

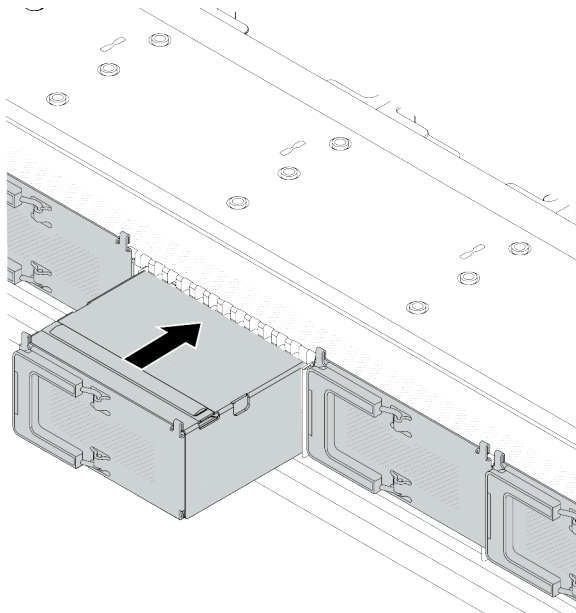


Figure 14. EDSFF cage installation

Step 3. Remove the EDSFF drive cage cover.

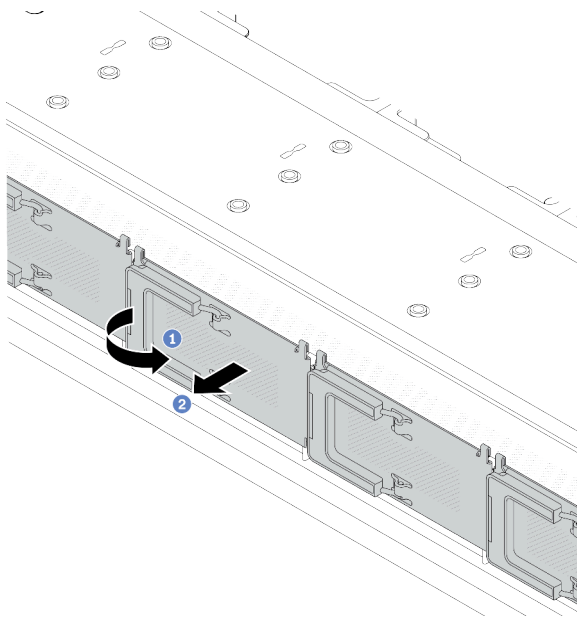


Figure 15. EDSFF drive cage cover removal

- a. ① Open the handle as shown.
- b. ② Grasp the handle and remove the drive cage cover.

Step 4. Install EDSFF drives into the EDSFF cage. See “Install an EDSFF drive” on page 74.

Step 5. Install the drive cage cover.

After you finish

Complete the parts replacement. See “Complete the parts replacement” on page 201.

Demo video

<https://www.youtube.com/watch?v=-qJwO-OuzRA>

Front drive backplane replacement

Use this information to remove and install a front drive backplane.

- “Remove the front 2.5" drive backplane” on page 31
- “Install the front 2.5" drive backplane” on page 33
- “Remove the front 3.5" drive backplane” on page 34
- “Install the front 3.5" drive backplane” on page 35
- “Remove the front 16-EDSFF drive backplane” on page 36
- “Install the front 16-EDSFF drive backplane” on page 38

Remove the front 2.5" drive backplane

Use this information to remove the backplane for four, eight, or ten 2.5" hot-swap drives.

About this task

The following describes how to remove the backplane for ten 2.5" hot-swap drives. You can remove the backplane for four or eight 2.5" hot-swap drives in the same way.

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See “[Power off the server](#)” on page 15.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

- Step 1. Remove the top cover. See “[Remove the top cover](#)” on page 197.
- Step 2. Remove all the installed drives and drive fillers from the drive bays. See “[Remove a 2.5"/3.5" hot-swap drive](#)” on page 69.
- Step 3. Disconnect the cables from the backplane. See [Chapter 2 “Internal cable routing”](#) on page 203. If the cable connectors come with protective dust caps, make sure to put them back on.
- Step 4. Grasp the backplane and carefully lift it out of the chassis.

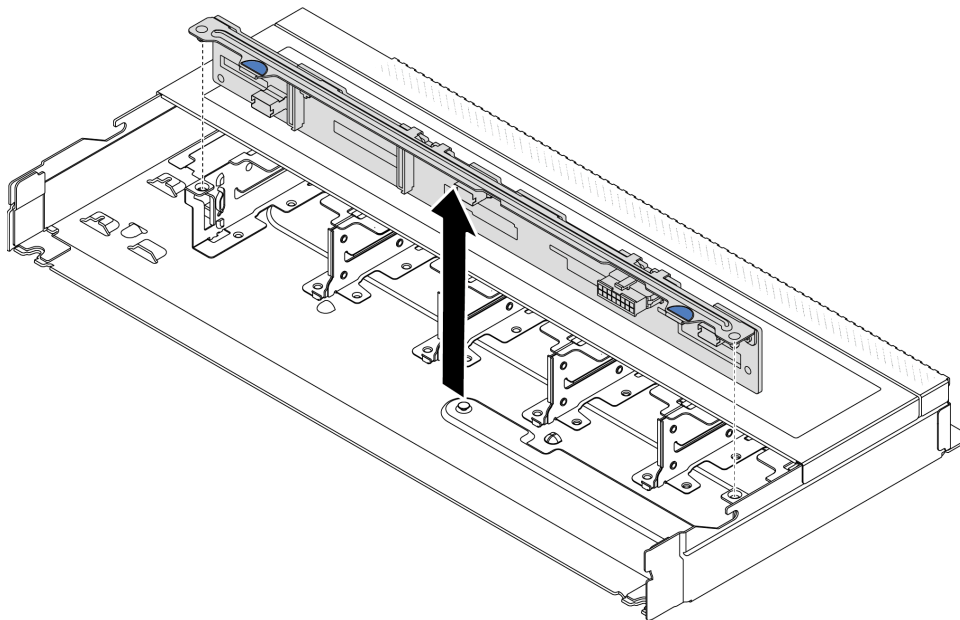


Figure 16. Removal of backplane for ten 2.5" hot-swap drives

After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Demo video

https://www.youtube.com/watch?v=rOkbOyP_BEc

Install the front 2.5" drive backplane

Use this information to install the backplane for four, eight, or ten 2.5" hot-swap drives.

About this task

The following describes how to install the backplane for ten 2.5" hot-swap drives. You can install the backplane for four or eight 2.5" hot-swap drives in the same way.

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 15](#).
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

- Step 1. Touch the static-protective package that contains the backplane to any unpainted surface on the outside of the server. And then, take the backplane out of the package and place it on a static-protective surface.
- Step 2. Align the two pins on the backplane with the corresponding holes in the chassis.

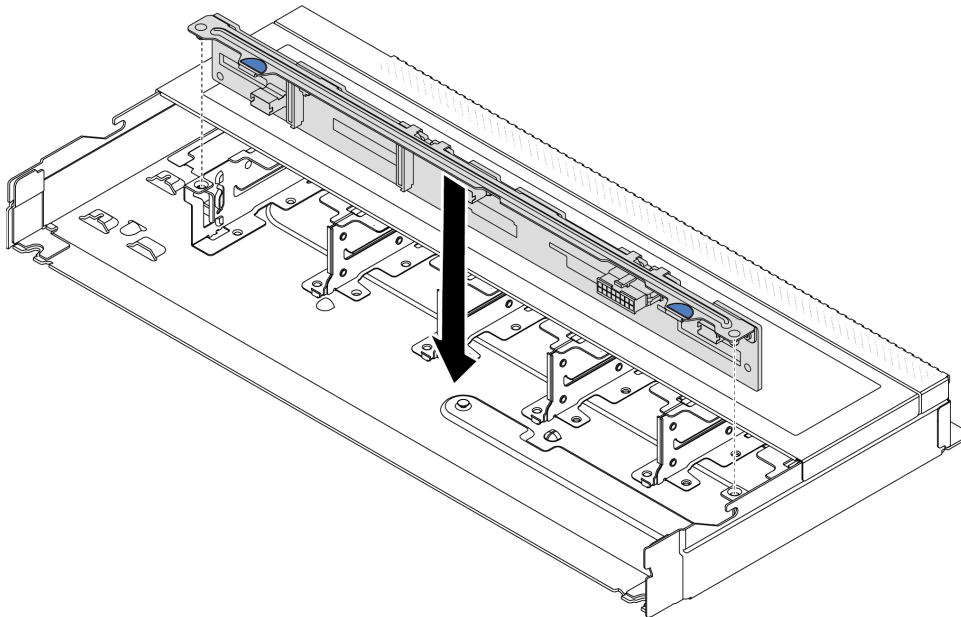


Figure 17. Installation of backplane for ten 2.5" hot-swap drives

- Step 3. Lower the backplane into the chassis. Ensure that the pins pass through the holes and the backplane is fully seated in place.
- Step 4. Connect the cables to the backplane. See [Chapter 2 “Internal cable routing” on page 203](#). If the cable connectors come with protective dust caps, make sure to remove them before plugging in.

After you finish

1. Reinstall all the drives and drive fillers into the drive bays. See [“Install a 2.5"/3.5" hot-swap drive” on page 70.](#)
2. Complete the parts replacement. See [“Complete the parts replacement” on page 201.](#)

Demo video

<https://www.youtube.com/watch?v=4EOmEG4oIHU>

Remove the front 3.5" drive backplane

Use this information to remove the front 3.5" drive backplane.

About this task

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 15.](#)
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

Note: Depending on the specific type, your backplane might look different from the illustration in this topic.

Step 1. Prepare your server.

- a. Remove the top cover. See [“Remove the top cover” on page 197.](#)
- b. Remove all installed drives and fillers (if any) from the drive bays. See [“Remove a 2.5"/3.5" hot-swap drive” on page 69.](#)

Step 2. Record the cable connections on the backplane and then disconnect all cables from the backplane. See [Chapter 2 “Internal cable routing” on page 203.](#) If the cable connectors come with protective dust caps, make sure to put them back on.

Step 3. Remove the backplane from the chassis.

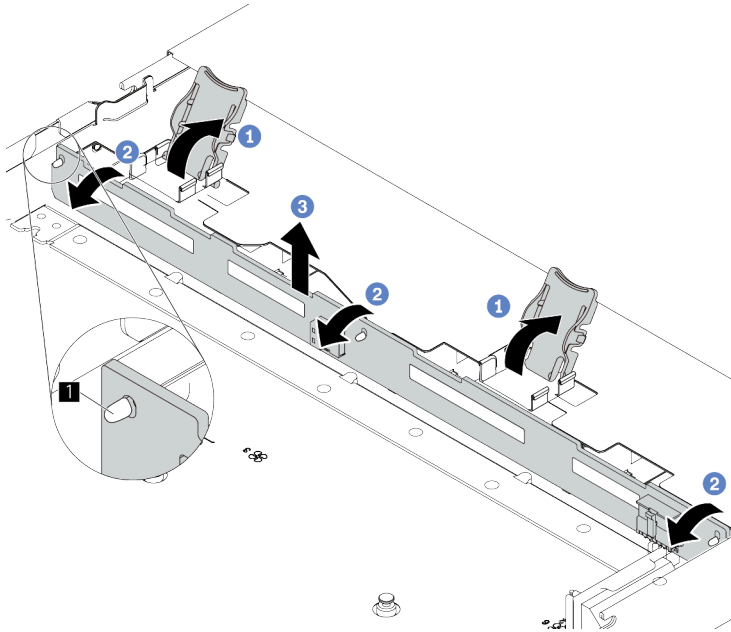


Figure 18. 3.5" drive backplane removal

- a. 1 Open the release latches that secure the backplane.
- b. 2 Pivot the backplane backward slightly to release it from the three pins 1 on the chassis.
- c. 3 Carefully remove the backplane out of the chassis.

After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Demo video

<https://www.youtube.com/watch?v=WHksE5iSFIA>

Install the front 3.5" drive backplane

Use this information to install the front 3.5" drive backplane.

About this task

Attention:

- Read “Installation Guidelines” on page 1 and “Safety inspection checklist” on page 2 to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See “Power off the server” on page 15.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

- Step 1. Touch the static-protective package that contains the backplane to any unpainted surface on the outside of the server. Then, take the backplane out of the package and place it on a static-protective surface.
- Step 2. Put the backplane down into place.

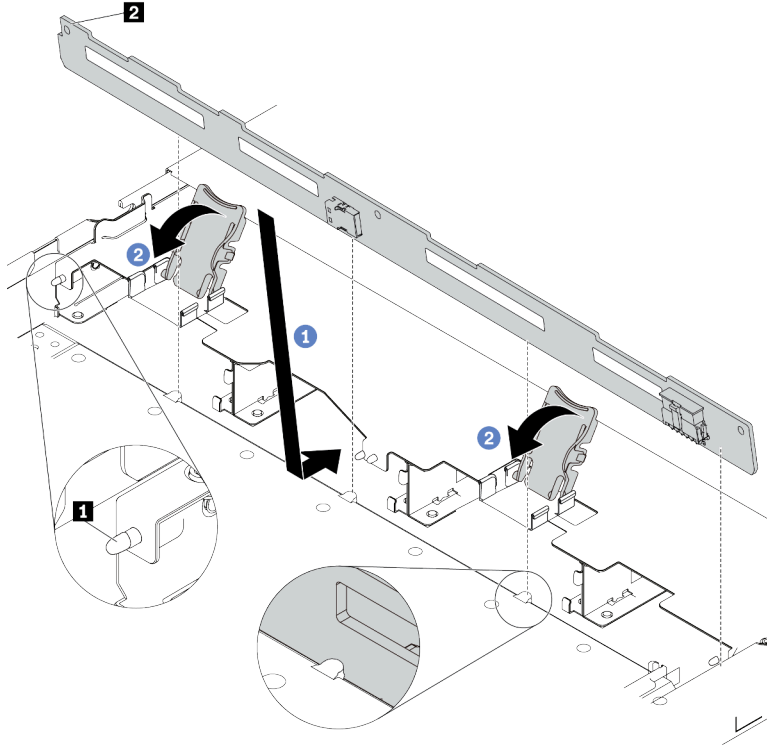


Figure 19. Installation of backplane for four 3.5" hot-swap drives

- 1 Put the backplane under the front I/O assembly cables, align it with the chassis, and lower it into the chassis. Put the backplane into place with it leaning backward slightly so that the three pins 1 on the chassis pass through the three holes 2 in the backplane.
 - 2 Close the release latches to secure the backplane in place.
- Step 3. Connect the cables to the system board assembly and the backplane. See [Chapter 2 “Internal cable routing” on page 203](#). If the cable connectors come with protective dust caps, make sure to remove them before plugging in.

After you finish

1. Reinstall all the drives and drive fillers into the drive bays. See [“Install a 2.5"/3.5" hot-swap drive” on page 70](#).
2. Complete the parts replacement. See [“Complete the parts replacement” on page 201](#).

Demo video

<https://www.youtube.com/watch?v=HTJXVxL3YgQ>

Remove the front 16-EDSFF drive backplane

Use this information to remove the backplane for front 16 EDSFF drives.

About this task

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See “[Power off the server](#)” on page 15.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

- Step 1. Remove the top cover. See “[Remove the top cover](#)” on page 197.
- Step 2. Remove all the installed drives and drive cages from the drive bays. See “[Remove an EDSFF drive](#)” on page 72.
- Step 3. Disconnect the cables from the backplane. See “[16-EDSFF drive backplane](#)” on page 355. If the cable connectors come with protective dust caps, make sure to put them back on.
- Step 4. Remove the backplane from the chassis.

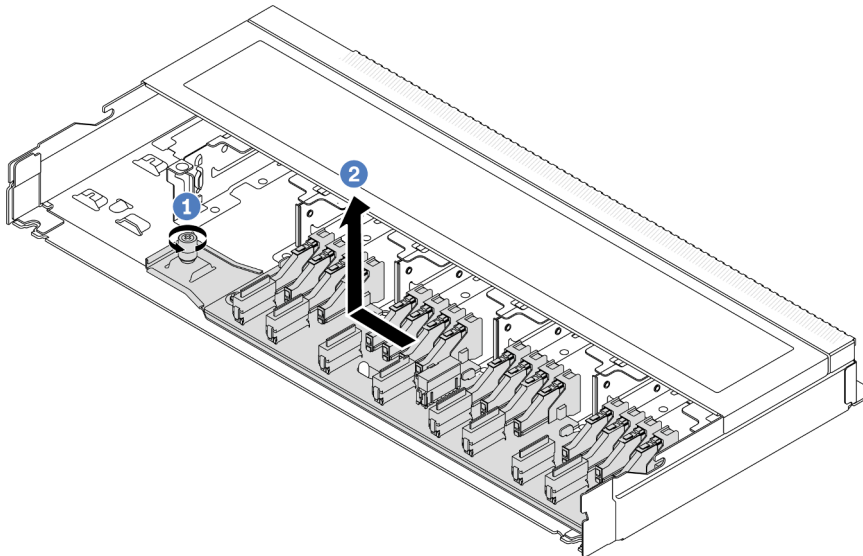


Figure 20. Removal of backplane for 16 EDSFF drives

- 1 Loosen the screw.
- 2 Slightly slide the backplane as shown and then lift it up.

After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Demo video

<https://www.youtube.com/watch?v=y9z8O6rwFDk>

Install the front 16-EDSFF drive backplane

Use this information to install the backplane for front 16 EDSFF drives.

About this task

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 15](#).
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

- Step 1. Touch the static-protective package that contains the backplane to any unpainted surface on the outside of the server. And then, take the backplane out of the package and place it on a static-protective surface.
- Step 2. Connect the cables to the backplane. See [Chapter 2 “Internal cable routing” on page 203](#).
- Step 3. Put the backplane down into place.

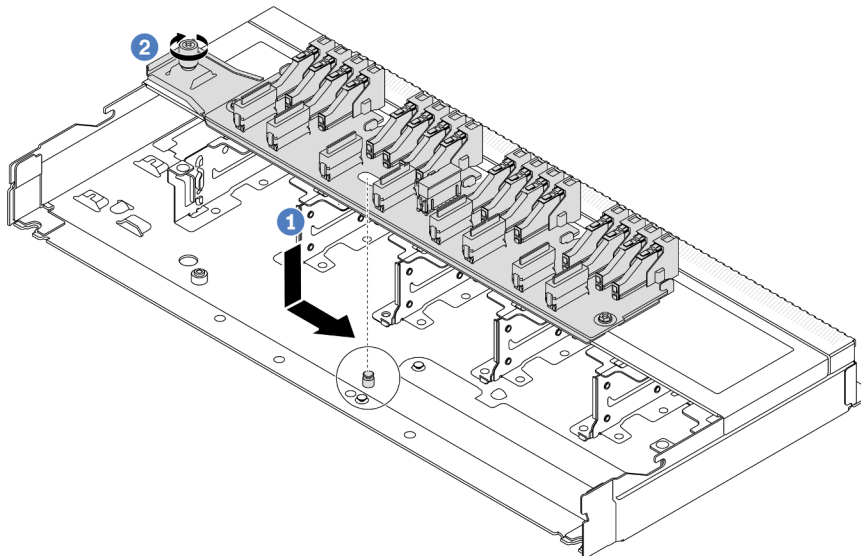


Figure 21. Installation of backplane for 16 EDSFF drives

- a. **1** Align the hole on the backplane with the pin on the chassis, place it down, and slightly slide it as shown.
 - b. **2** Tighten the screw to secure the backplane.
- Step 4. Connect the cables to the system board assembly and the backplane. See [Chapter 2 “Internal cable routing” on page 203](#). If the cable connectors come with protective dust caps, make sure to remove them before plugging in.

After you finish

1. Reinstall all the drives and drive cages into the drive bays. See [“Install an EDSFF drive” on page 74](#).

2. Complete the parts replacement. See [“Complete the parts replacement”](#) on page 201.

Demo video

<https://www.youtube.com/watch?v=bB8sKxHTuHU>






Front riser assembly replacement

A complete front riser assembly consists of two front riser cages, two front riser cards and two PCIe adapters. See this topic to understand how to remove and assemble a front riser assembly.

Server front configuration and riser assemblies

See this section to identify the correlations between the front configuration and riser assemblies.

 Table 7. Server front configuration and riser assemblies

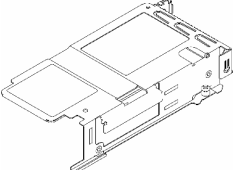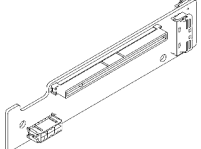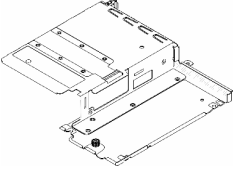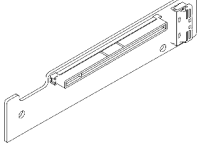Server front configuration	Riser 3 assembly	Riser 4 assembly
 <p>Figure 22. Two front PCIe slots</p>	 <p>Figure 23. Riser 3 LP bracket</p>  <p>Figure 24. Riser 3 card</p>	 <p>Figure 25. Riser 4 FH bracket</p>  <p>Figure 26. Riser 4 card</p>

- [“Front riser cage replacement”](#) on page 39
- [“Front riser card and PCIe adapter replacement”](#) on page 42

Front riser cage replacement

Follow instructions in this section to remove and install the front riser cage.

- [“Remove the front riser cage”](#) on page 39
- [“Install the front riser cage”](#) on page 41

Remove the front riser cage

Follow the instructions in this section to remove the front riser cage.

About this task

Attention:

- Read [“Installation Guidelines”](#) on page 1 and [“Safety inspection checklist”](#) on page 2 to ensure that you work safely.

- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 15](#).
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

- Step 1. Remove the top cover, see [“Remove the top cover” on page 197](#).
- Step 2. Remove the cables connected to the processor board, see [“Front riser assembly” on page 212](#).
- Step 3. Remove the front riser cage.

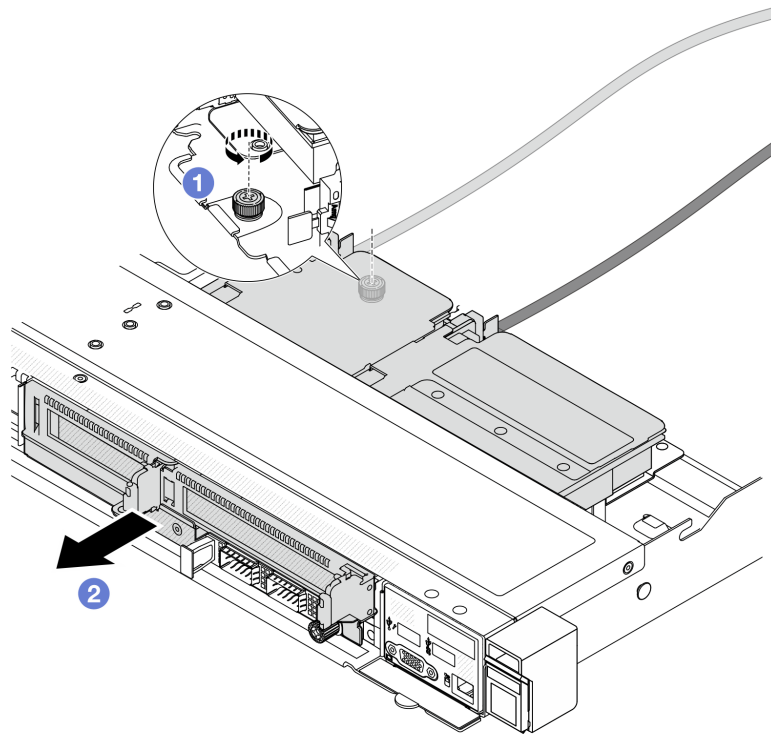


Figure 27. Removing the front riser cage

- 1 Loosen the screw on the rear of the front riser cage.
 - 2 Pull the front riser cage out of the chassis.
- Step 4. Remove the front riser assembly and PCIe adapter from the front riser cage, see [“Remove the front riser card and PCIe adapter” on page 42](#).

After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Demo video

[Watch the procedure on YouTube](#)

Install the front riser cage

Follow the instructions in this section to install the front riser cage.

About this task

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 15](#).
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

- Step 1. Install the front riser assembly and PCIe adapter to the front riser cage, see [“Install the front riser card and PCIe adapter” on page 44](#).
- Step 2. Remove the top cover. See [“Remove the top cover” on page 197](#).
- Step 3. Install the front riser cage.

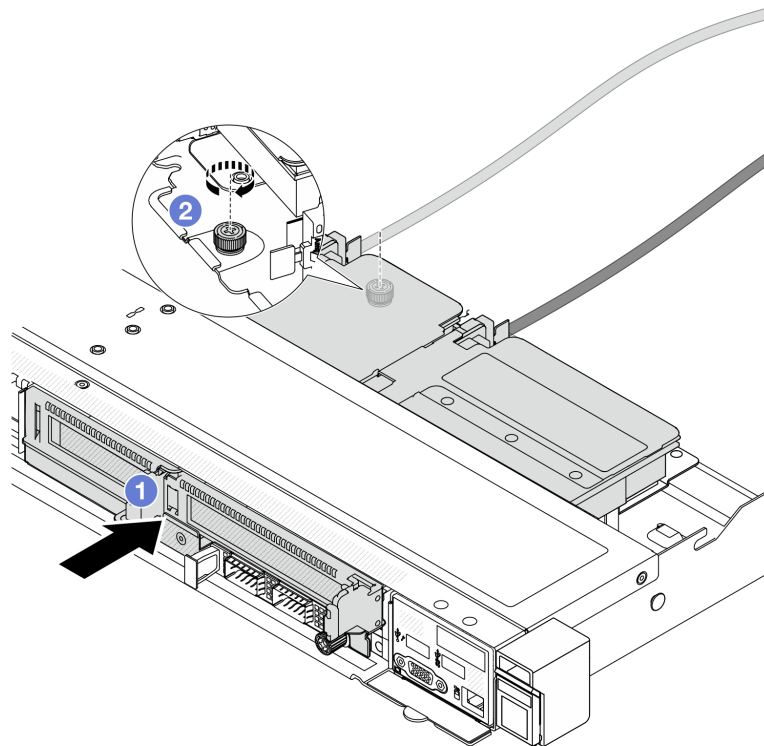


Figure 28. Installing the front riser cage

- a. ① Push the front riser cage into the chassis.

- b. **2** Tighten the screw on the rear of the front riser cage to secure it to the chassis.

After you finish

Complete the parts replacement. See [“Complete the parts replacement” on page 201](#).

Demo video

[Watch the procedure on YouTube](#)

Front riser card and PCIe adapter replacement

Follow instructions in this section to remove and install a front riser assembly and PCIe adapter.

- [“Remove the front riser card and PCIe adapter” on page 42](#)
- [“Install the front riser card and PCIe adapter” on page 44](#)

Remove the front riser card and PCIe adapter

Follow the instructions in this section to remove the front riser card and PCIe adapter.

About this task

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 15](#).
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

- Step 1. Remove the front riser cage, see [“Remove the front riser cage” on page 39](#).
- Step 2. Separate the low-profile riser cage from the full-height riser cage.

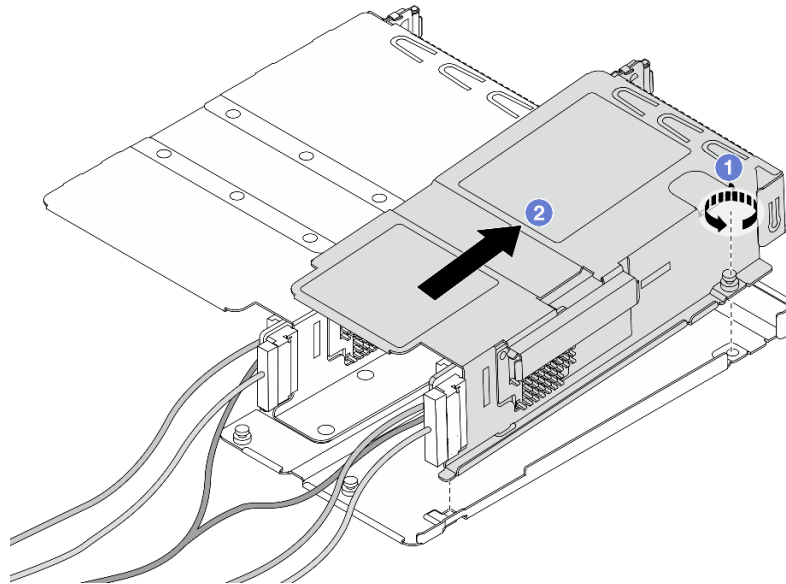


Figure 29. Separating the two cages

- a. ① Loosen the screw that secures the low-profile cage to full-height one.
- b. ② Tilt the cage and lift it out.

Step 3. Remove the PCIe adapter from the riser cage.

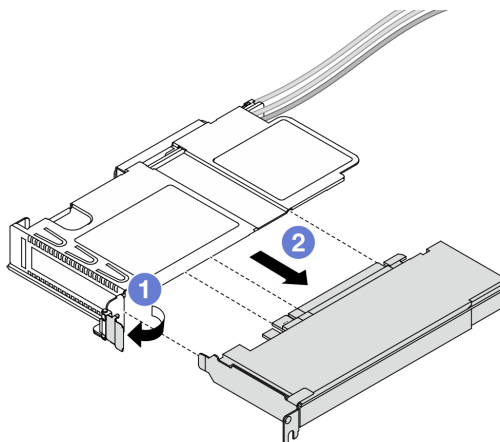


Figure 30. Removing the PCIe adapter

- a. ① Rotate the latch on the riser cage to open position.
- b. ② Disengage the PCIe adapter from the cage.

Step 4. Disconnect the cables from the riser card. For more details, see [“Front riser assembly” on page 212](#).

Step 5. Repeat the previous two steps on the full-height cage.

Step 6. Remove the riser cards from both riser cages.

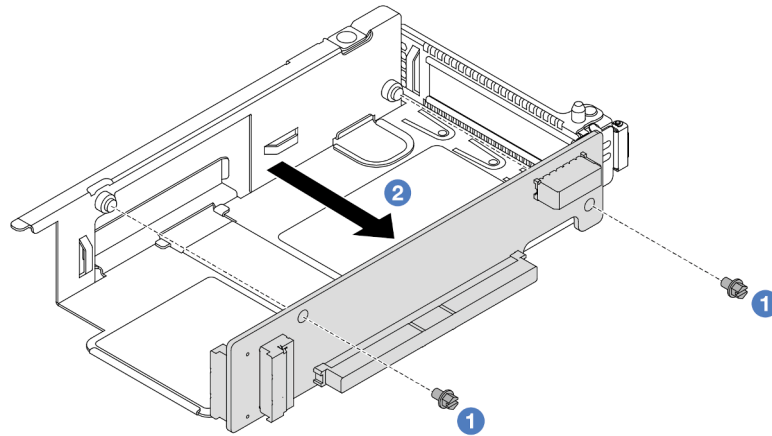


Figure 31. Removing the riser card from low-profile cage

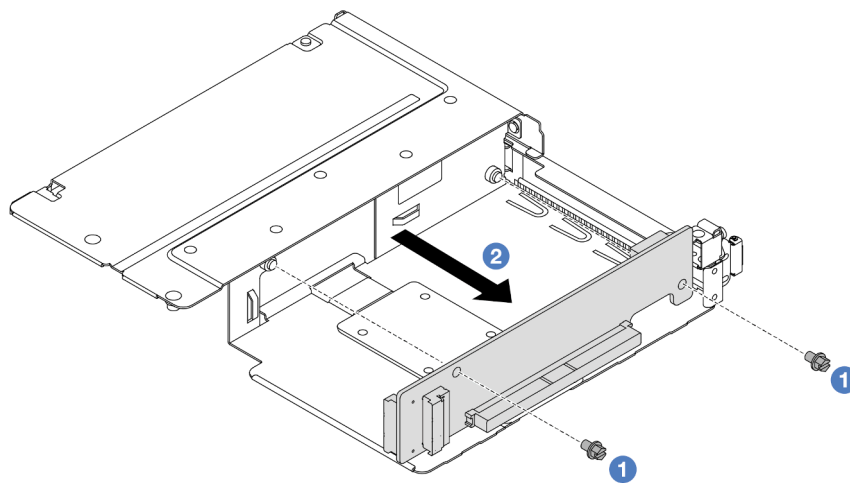


Figure 32. Removing the riser card from full-height cage

- a. 1 Remove the two screws that secure the riser card to the cage.
- b. 2 Remove the riser card.

After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Demo video

[Watch the procedure on YouTube](#)

Install the front riser card and PCIe adapter

Follow the instructions in this section to install the front riser card and PCIe adapter.

About this task

Attention:

- Read “Installation Guidelines” on page 1 and “Safety inspection checklist” on page 2 to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See “Power off the server” on page 15.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

- Step 1. Touch the static-protective package that contains the front riser card and PCIe adapter to any unpainted surface on the outside of the server. Then, take the front riser card and PCIe adapter out of the package and place it on a static-protective surface.
- Step 2. Install the front riser cards to both cages.

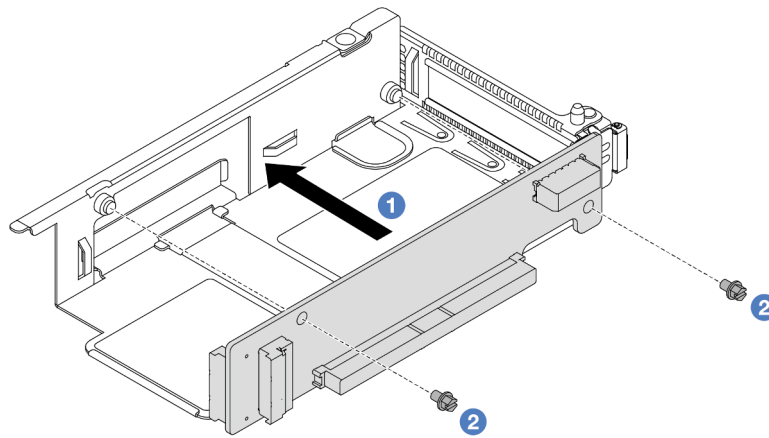


Figure 33. Installing the riser card to low-profile cage

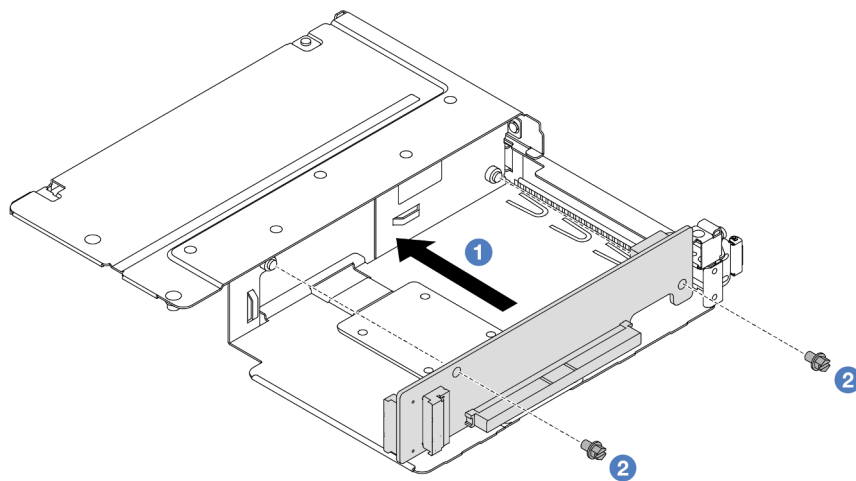


Figure 34. Installing the riser card to full-height cage

- a. ① Align the screw holes on the riser cards with the corresponding ones on the cages.

- b. ② Install the two screws to secure the riser cards to the cages.

Step 3. Connect the cables to the riser cards. For more details, see “Front riser assembly” on page 212.

Step 4. Install the PCIe adapter to the riser cage.

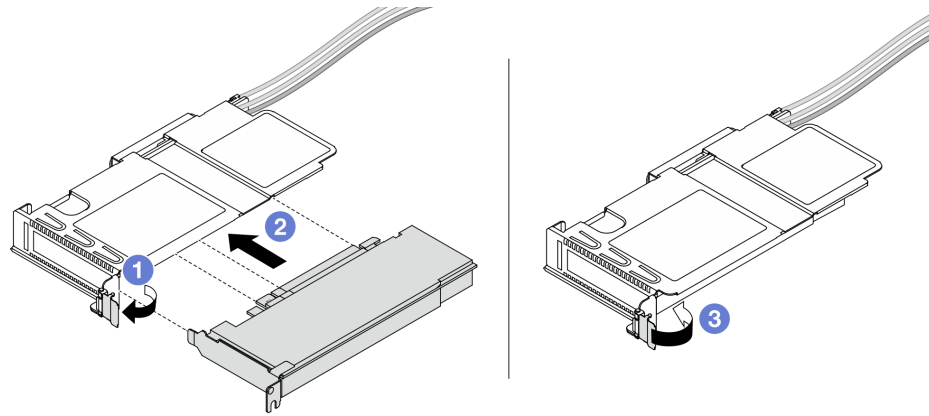


Figure 35. Installing the PCIe adapter

- a. ① Rotate the latch on the riser cage to open position.
- b. ② Align the PCIe adapter with the PCIe slot on the riser card. Then, carefully press the PCIe adapter straight into the slot until it is securely seated.
- c. ③ Rotate the latch on the riser cage to close position.

Step 5. Repeat the previous step on the full-height cage.

Step 6. Assemble the low-profile riser cage and the full-height riser cage.

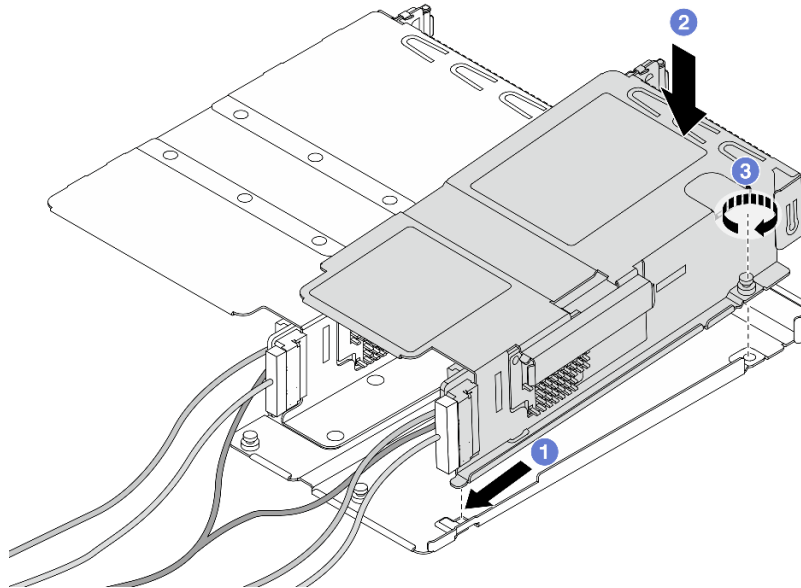


Figure 36. Assembling the two riser cages

- a. ① Tilt the low-profile cage and insert it to the latch on the full-height one.
- b. ② Place the low-profile cage down and align the screw holes.
- c. ③ Tighten the screw and make sure the low-profile cage is secured.

After you finish

Complete the parts replacement. See [“Complete the parts replacement” on page 201](#).

Demo video

[Watch the procedure on YouTube](#)

Front OCP module and OCP interposer card replacement

Some server models support the front OCP module. The front OCP module and the front and rear OCP interposer cards are codependent. Follow instructions in this section to remove and install the front OCP module and the front and rear OCP interposer cards.

- [“Front OCP module replacement” on page 47](#)
- [“OCP interposer card replacement” on page 49](#)

Front OCP module replacement

Follow the instructions in this section to remove or install a front OCP module.

- [“Remove the front OCP module” on page 47](#)
- [“Install the front OCP module” on page 48](#)

Note: The OCP module is available only on some models.

Remove the front OCP module

Follow the steps in this section to remove a front OCP module.

About this task

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 15](#).
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

Step 1. Remove the front OCP module.

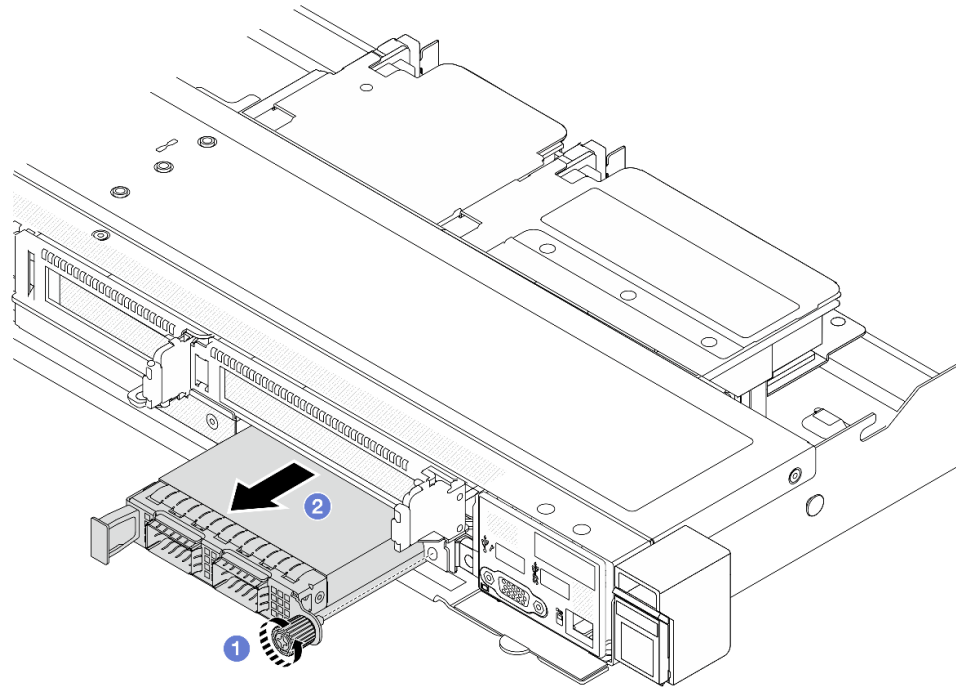


Figure 37. Removing the front OCP module

- a. 1 Loosen the thumbscrew that secures the OCP module. Use a screwdriver if needed.
- b. 2 Pull out the OCP module.

After you finish

1. Install a new front OCP module or a module filler. See [“Install the front OCP module” on page 48](#).
2. If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Demo video

[Watch the procedure on YouTube](#)

Install the front OCP module

Follow the steps in this section to install a front OCP module.

About this task

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 15](#).
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

Step 1. Touch the static-protective package that contains the OCP module to any unpainted surface on the outside of the server. Then, take the OCP module out of the package and place it on a static-protective surface.

Step 2. Install a front OCP module.

Note: Ensure that the Ethernet adapter is fully seated and the thumbscrew is securely tightened. Otherwise, the OCP module will not get full connection and may not function.

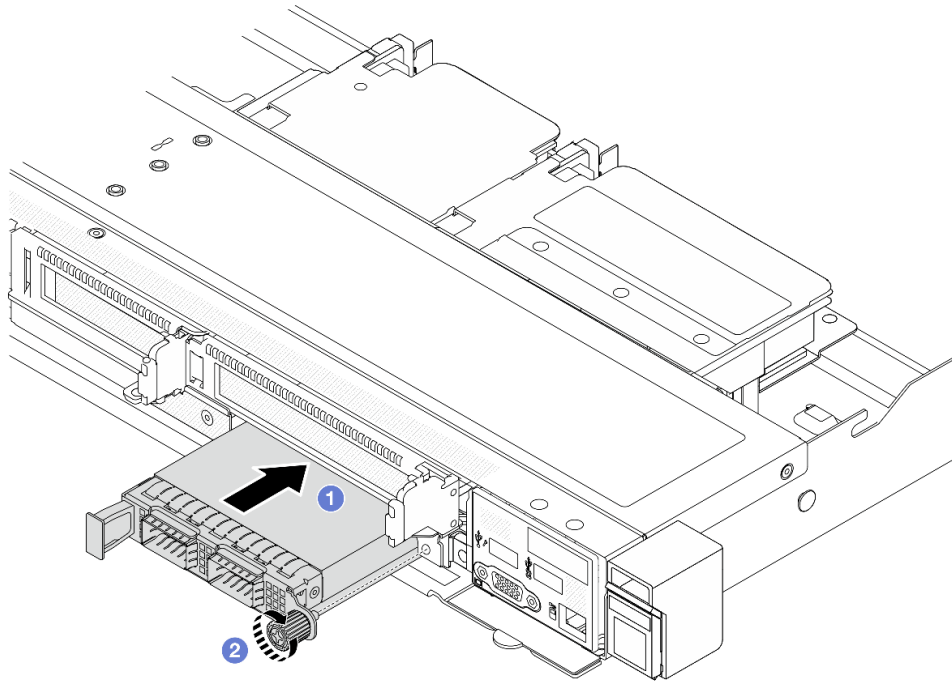


Figure 38. Installing the front OCP module

- a. 1 Push the OCP module by its handle on the left until it is fully inserted into the connector on the front OCP interposer card.
- b. 2 Fully tighten the thumbscrew to secure the adapter. Use a screwdriver if needed.

After you finish

Complete the parts replacement. See [“Complete the parts replacement” on page 201](#).

Demo video

[Watch the procedure on YouTube](#)

OCP interposer card replacement

Follow the instructions in this section to remove or install the front and rear OCP interposer cards.

- [“Remove the front OCP interposer card” on page 50](#)
- [“Install the front OCP interposer card” on page 51](#)

- [“Remove the rear OCP interposer card” on page 52](#)
- [“Install the rear OCP interposer card” on page 53](#)

Remove the front OCP interposer card

Follow the steps in this section to remove a front OCP interposer card.

About this task

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 15](#).
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

- Step 1. Remove the top cover. See [“Remove the top cover” on page 197](#).
- Step 2. Remove the front riser cage. See [“Remove the front riser cage” on page 39](#).
- Step 3. Remove the front OCP module. See [“Remove the front OCP module” on page 47](#).
- Step 4. Remove the front OCP interposer card.

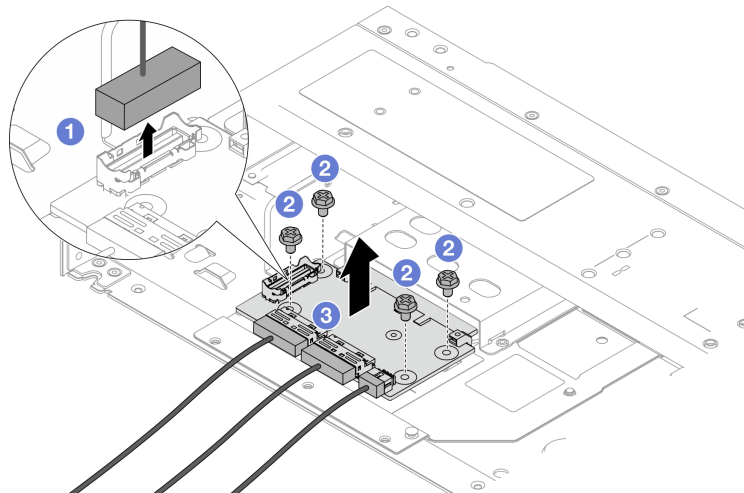


Figure 39. Removing the front OCP interposer card

- 1 Disconnect the sideband connector to gain access to the screw underneath.
 - 2 Loosen four screws.
 - 3 Lift the front OCP interposer card out of the chassis.
- Step 5. Disconnect the cables on the front OCP interposer card. For more details, see [“OCP interposer” on page 223](#).

After you finish

1. Install a new front OCP interposer card. See [“Install the front OCP interposer card” on page 51](#).
2. If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Demo video

[Watch the procedure on YouTube](#)

Install the front OCP interposer card

Follow the steps in this section to install a front OCP interposer card.

About this task

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 15](#).
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

- Step 1. Touch the static-protective package that contains the front OCP interposer card to any unpainted surface on the outside of the server. Then, take the front OCP interposer card out of the package and place it on a static-protective surface.
- Step 2. Remove the top cover. See [“Remove the top cover” on page 197](#).
- Step 3. Connect the cables to the front OCP interposer card. For more details, see [“OCP interposer” on page 223](#).
- Step 4. Install the front OCP interposer card to the chassis.

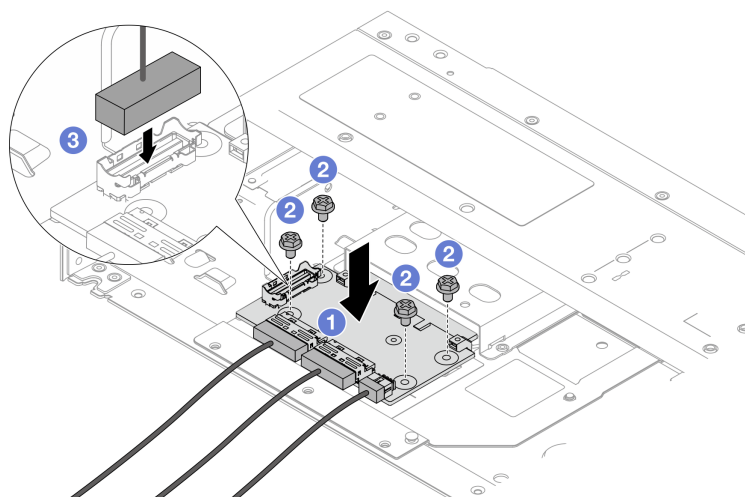


Figure 40. Installing the front OCP interposer card

- a. **1** Place the front OCP interposer card on the chassis, and align the screw holes.

- b. 2 Tighten four screws.
- c. 3 Connect the sideband connector.

After you finish

Complete the parts replacement. See [“Complete the parts replacement” on page 201](#).

Demo video

[Watch the procedure on YouTube](#)

Remove the rear OCP interposer card

Follow the steps in this section to remove a rear OCP interposer card.

About this task

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 15](#).
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

- Step 1. Remove the top cover. See [“Remove the top cover” on page 197](#).
- Step 2. Disconnect the cables on the rear OCP interposer card. For more details, see [“OCP interposer” on page 223](#).
- Step 3. Remove the rear OCP interposer card.

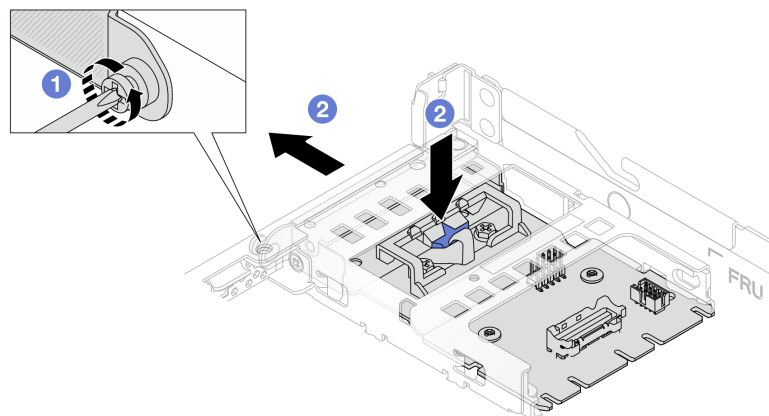


Figure 41. Removing the rear OCP interposer card

- a. 1 Loosen the screw that secures the rear OCP interposer card.

- b. 2 Press and hold the blue latch. And pull the rear OCP interposer card by the latch out from the chassis.

After you finish

1. Install a new rear OCP interposer card. See [“Install the rear OCP interposer card” on page 53](#).
2. If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Demo video

[Watch the procedure on YouTube](#)

Install the rear OCP interposer card

Follow the steps in this section to install a rear OCP interposer card.

About this task

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 15](#).
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

- Step 1. Touch the static-protective package that contains the rear OCP interposer card to any unpainted surface on the outside of the server. Then, take the rear OCP interposer card out of the package and place it on a static-protective surface.
- Step 2. Remove the top cover. See [“Remove the top cover” on page 197](#).
- Step 3. Install the rear OCP interposer card.

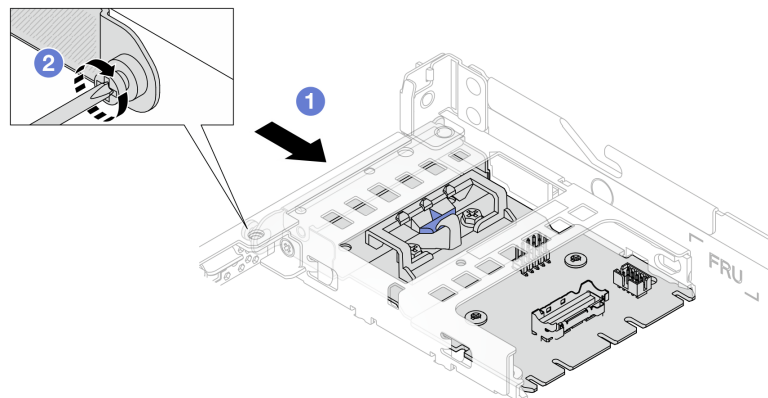


Figure 42. Installing the rear OCP interposer

- a. 1 Slide the rear OCP interposer into the slot until it is fully seated.
- b. 2 Tighten the screw to secure the rear OCP interposer.

Step 4. Connect the cables to the rear OCP interposer card. For more details, see [“OCP interposer” on page 223](#).

After you finish

Complete the parts replacement. See [“Complete the parts replacement” on page 201](#).

Demo video

[Watch the procedure on YouTube](#)

Front I/O module replacement

Use this information to remove and install the front I/O module.

- [“Remove the front I/O module” on page 54](#)
- [“Install the front I/O module” on page 55](#)
- [“Remove the integrated diagnostics panel assembly” on page 56](#)
- [“Install the integrated diagnostics panel assembly” on page 58](#)
- [“Remove the external LCD cable \(4 x 3.5" chassis\)” on page 60](#)
- [“Install the external LCD cable \(4 x 3.5" chassis\)” on page 62](#)

Remove the front I/O module

Use this information to remove the front I/O module.

About this task

The following illustrates how to remove the front I/O module with front operator panel. You can remove other front I/O modules in the same way.

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 15](#).
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

Step 1. Remove the top cover. See [“Remove the top cover” on page 197](#).

Step 2. If the security bezel is installed, remove it. See [“Remove the security bezel” on page 169](#).

Step 3. Disconnect the front I/O cables from the processor board.

Step 4. Remove the front I/O module.

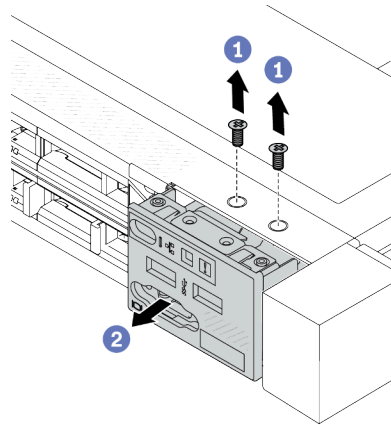


Figure 43. Remove a front I/O module on 2.5" chassis

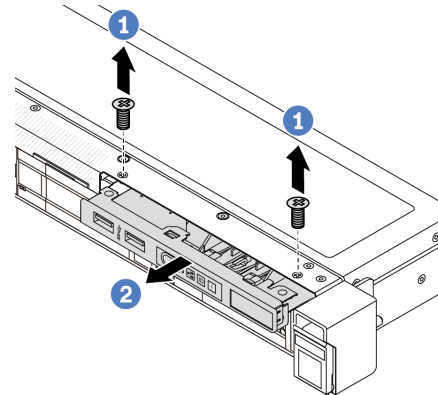


Figure 44. Remove a front I/O module on 3.5" chassis

- a. 1 Remove the screws that secure the front I/O module.
- b. 2 Slide the front I/O module out of the front chassis.

After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Demo video

<https://www.youtube.com/watch?v=GByjJMV6FvU>

Install the front I/O module

Use this information to install the front I/O module.

About this task

The following illustrates how to install the front I/O module with front operator panel. You can install other front I/O modules in the same way.

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See “[Power off the server](#)” on page 15.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

- Step 1. Touch the static-protective package that contains the front I/O module to any unpainted surface on the outside of the server. Then, take the front I/O module out of the package and place it on a static-protective surface.

Step 2. Install the front I/O module.

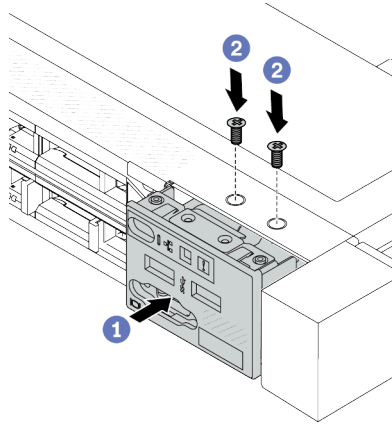


Figure 45. Install a front I/O module on 2.5" chassis

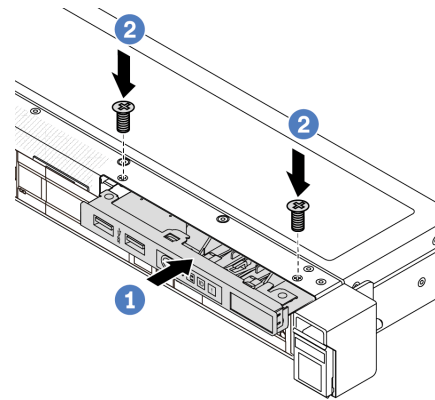


Figure 46. Install a front I/O module on 3.5" chassis

- a. 1 Insert the front I/O module into the front chassis.
- b. 2 Install the screws to secure the front I/O module in place.

After you finish

1. Install the front VGA filler or connect the front I/O cables to the system board (system board assembly). See [Chapter 2 “Internal cable routing” on page 203](#).
2. Complete the parts replacement. See [“Complete the parts replacement” on page 201](#).

Demo video

<https://www.youtube.com/watch?v=hXXPBqeBIGI>

Remove the integrated diagnostics panel assembly

Use this information to remove the integrated diagnostics panel assembly.

About this task

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 15](#).
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

- Step 1. Remove the top cover. See [“Remove the top cover” on page 197](#).
- Step 2. If the security bezel is installed, remove it. See [“Remove the security bezel” on page 169](#).
- Step 3. Disconnect cables from the processor board.

Step 4. Remove the integrated diagnostics panel assembly from the chassis.

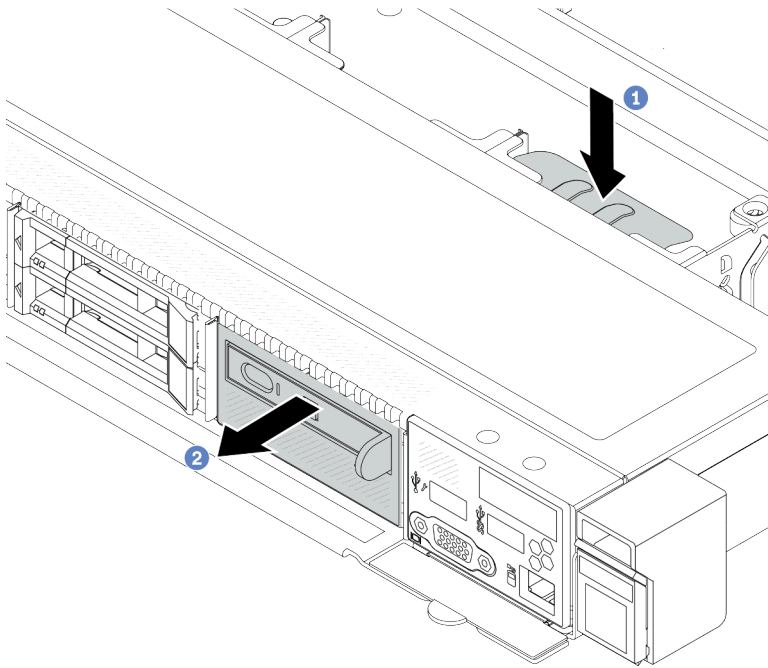


Figure 47. Integrated diagnostics panel assembly removal

- a. 1 Press down the extended tab on the other side of the front chassis.
- b. 2 Slide the assembly out of the front chassis.

Step 5. Remove the integrated diagnostics panel assembly from its assembly.

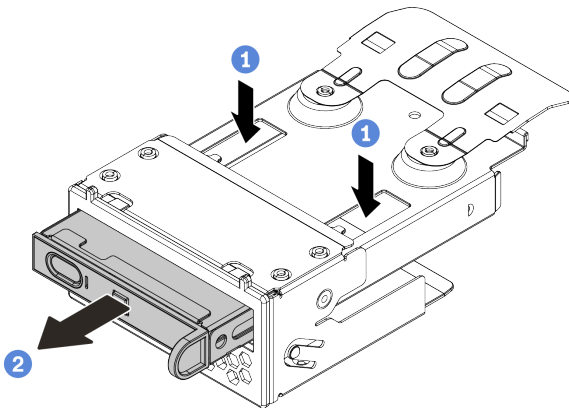


Figure 48. Integrated diagnostics panel assembly removal

- a. 1 Press down the clips as shown.
- b. 2 Pull the integrated diagnostics panel assembly by its handle to get it out of its assembly.

After you finish

1. Install a new integrated diagnostics panel assembly or filler. See [“Install the integrated diagnostics panel assembly”](#) on page 58.

2. If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Demo video

<https://www.youtube.com/watch?v=pUbarvYYBaQ>

Install the integrated diagnostics panel assembly

Use this information to install the diagnostics panel assembly.

About this task

Attention:

- Read “Installation Guidelines” on page 1 and “Safety inspection checklist” on page 2 to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See “Power off the server” on page 15.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

- Step 1. Touch the static-protective package that contains the diagnostics panel assembly to any unpainted surface on the outside of the server. And then, take the assembly out of the package and place it on a static-protective surface.
- Step 2. If there is a filler installed on the front chassis, remove it as shown.

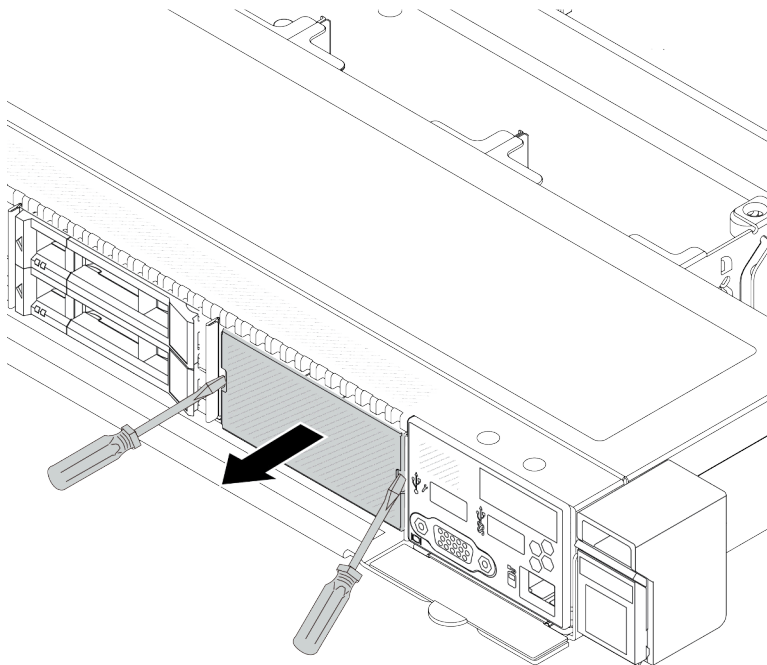


Figure 49. Filler removal

Step 3. Insert the integrated diagnostics panel assembly into its assembly. Ensure that the panel is fully seated into its assembly.

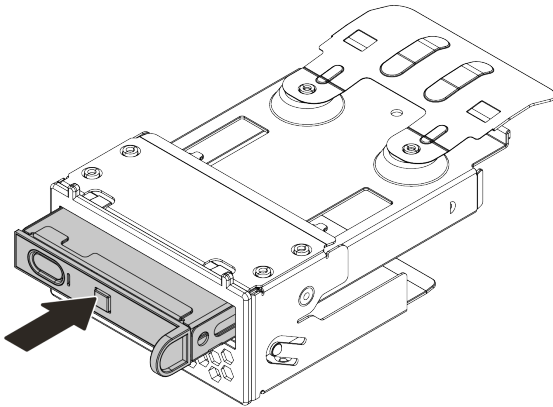


Figure 50. Integrated diagnostics panel assembly installation into its assembly

Step 4. Slide the diagnostics panel assembly into the front chassis as shown. And ensure that it is seated in place.

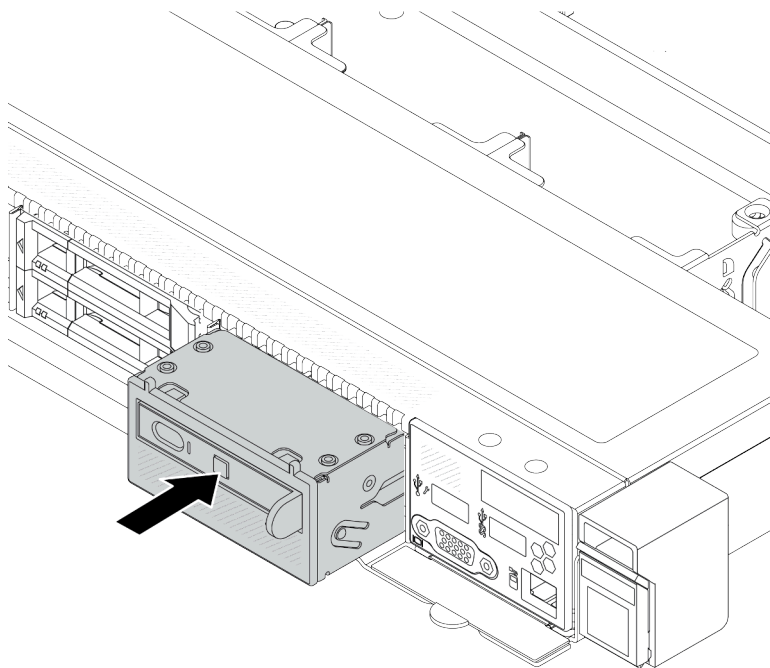


Figure 51. Diagnostics panel assembly installation

After you finish

Complete the parts replacement. See [“Complete the parts replacement”](#) on page 201.


Demo video

<https://www.youtube.com/watch?v=7rFLkeZ8geA>

Remove the external LCD cable (4 x 3.5" chassis)


Use this information to remove the external LCD cable.

In the 4 x 3.5" chassis configuration, the external LCD cable is an optional part. You can choose either install or remove the cable according to your actual needs. Refer to the location of external LCD cable from the front view as below:

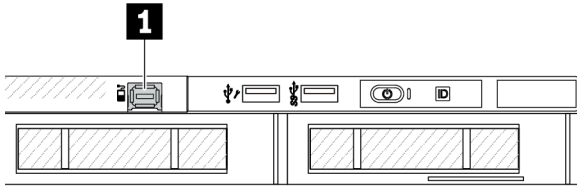

1 The external LCD cable connector

Figure 52. A front view with the cable installed

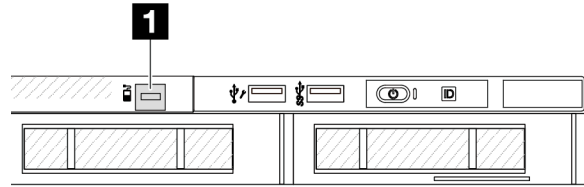

1 A filler for external LCD cable connector

Figure 53. A front view with a filler installed

Note: Before installing the cable, remove the filler first; after removing the cable, install the filler afterwards.

About this task

The following illustrates how to remove the external LCD cable from the chassis.

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 15](#).
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

- Step 1. Remove the top cover. See [“Remove the top cover” on page 197](#).
- Step 2. If the security bezel is installed, remove it. See [“Remove the security bezel” on page 169](#).
- Step 3. Disconnect the external LCD cable, the front I/O cable, and the USB cable from the processor board.

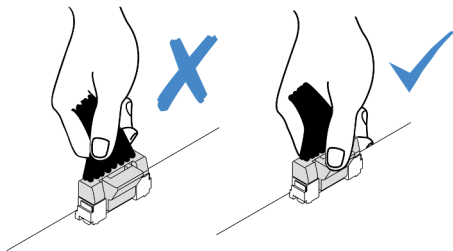


Figure 54. Disconnecting cable from the system board assembly

- Step 4. To get a better view of the cable connector latch inside the chassis, remove the front I/O module first.

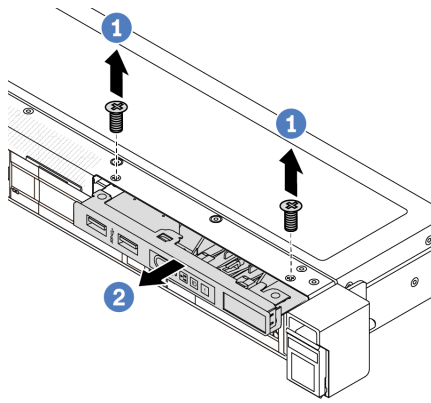


Figure 55. Front I/O module removal

- a. 1 Remove the screws that secure the front I/O module.
- b. 2 Slide the front I/O module out of the front chassis.

Step 5. Remove the external LCD cable.

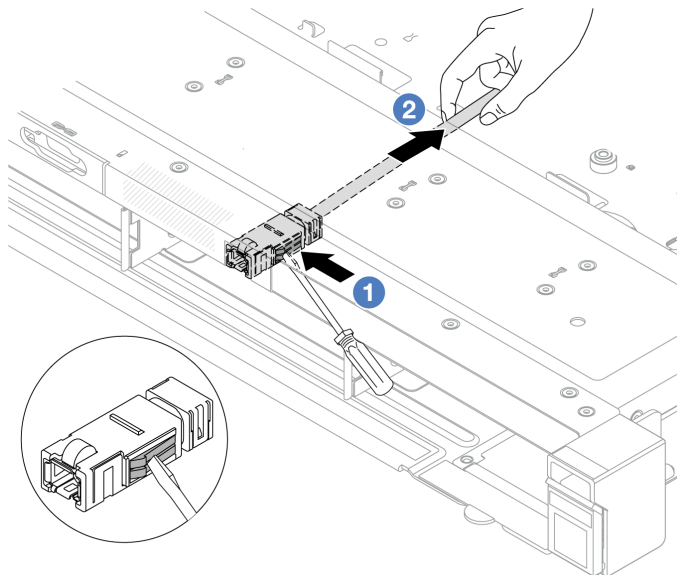


Figure 56. Removal of the external LCD cable

- a. 1 Poke the connector latch with the tip of a flat-blade screwdriver (3 or 4 mm) to disengage the connector from the chassis.
- b. 2 Pull out the cable from the back side.

Step 6. Install the front I/O module back to the chassis.

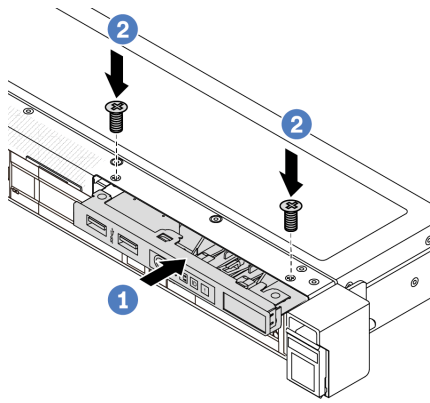


Figure 57. Front I/O module installation

- a. **1** Insert the front I/O module into the front chassis.
- b. **2** Install the screws to secure the front I/O module in place.

Step 7. Connect the front I/O cable and the USB cable to the processor board.

After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.


Demo video

<https://www.youtube.com/watch?v=PEcSFWZqFBM>

Install the external LCD cable (4 x 3.5" chassis)


Use this information to install the external LCD cable.

In the 4 x 3.5" chassis configuration, the external LCD cable is an optional part. You can choose either install or remove the cable according to your actual needs. Refer to the location of external LCD cable from the front view as below:

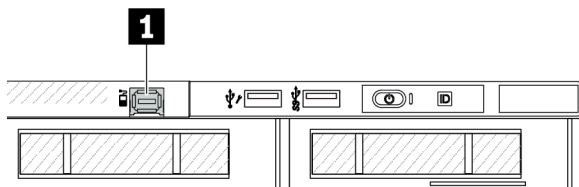

1 The external LCD cable connector

Figure 58. A front view with the cable installed

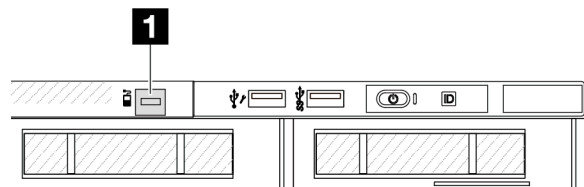

1 A filler for external LCD cable connector

Figure 59. A front view with a filler installed

Note: Before installing the cable, remove the filler first; after removing the cable, install the filler afterwards.

About this task

The following illustrates how to remove the external LCD cable from the chassis.

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See “[Power off the server](#)” on page 15.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

- Step 1. Touch the static-protective package that contains the external LCD cable to any unpainted surface on the outside of the server. Then, take the external LCD cable out of the package and place it on a static-protective surface.
- Step 2. Install the external LCD cable.

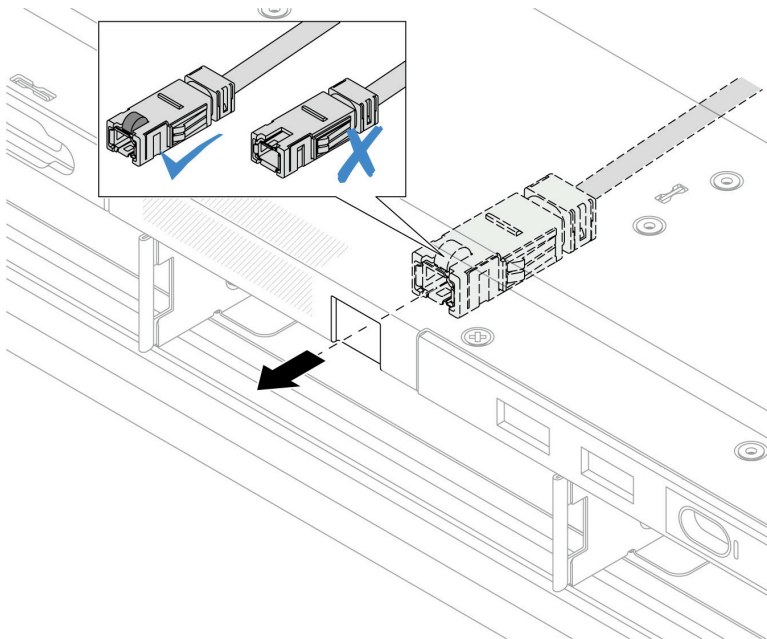


Figure 60. Installation of the external LCD cable

Note: The front and back sides of the connector to external diagnostics slot are different, and it is required to plug in with the front side.

When plugging in, face the front side upward and slide the connector into the chassis. Refer to the illustration above.

After you finish

1. Connect the external LCD cable to the processor board. See [Chapter 2 “Internal cable routing”](#) on page 203.
2. Complete the parts replacement. See “[Complete the parts replacement](#)” on page 201.

Demo video

<https://www.youtube.com/watch?v=76EhskTMmA>

GPU replacement

Use this information to remove and install a GPU adapter.

- [“Remove a GPU adapter” on page 64](#)
- [“Install a GPU adapter” on page 66](#)

Remove a GPU adapter

Use this information to remove a GPU adapter.

About this task

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 15](#).
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.
- Depending on the specific type, your GPU adapter might look different from the illustration in this topic.

Procedure

Step 1. Make preparation for the task.

- a. If the server is installed in a rack, slide the server out on its rack slide rails to gain access to the top cover, or remove the server from the rack. See [“Remove the server from rack” on page 16](#).
- b. Remove the top cover. See [“Remove the top cover” on page 197](#).
- c. If you are replacing a GPU adapter from riser 1 or riser 2 assembly, remove the adjacent riser assembly for easier operation. See [“Remove the rear riser card” on page 166](#).
- d. Disconnect GPU power cable. See [“GPU adapter \(optional\)” on page 215](#). If the cable connectors come with protective dust caps, make sure to put them back on.

Notes:

- If you need to disconnect cables from the system board (system board assembly), disengage all latches or release tabs on cable connectors first. Failing to release the tab before removing the cables will damage the cable sockets on the system board (system board assembly). Any damage to the cable sockets might require replacing the system board (system board assembly).
- The connectors on your system board (system board assembly) might look different from those in the illustration, but the removal procedure is the same.
 1. Press the release tab to release the connector.
 2. Disengage the connector from the cable socket.

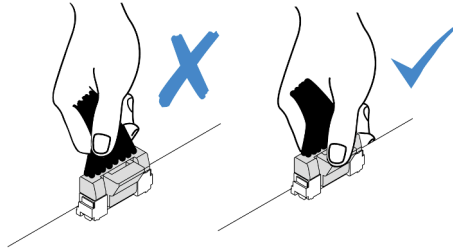


Figure 61. Disconnecting cables from the system board (system board assembly)

Step 2. Remove the riser assembly that has the GPU adapter installed from the system board (system board assembly).

Note: The following uses riser 1 assembly as an example for illustration. It is similar for other riser assemblies. See [“Remove the rear riser card” on page 166](#).

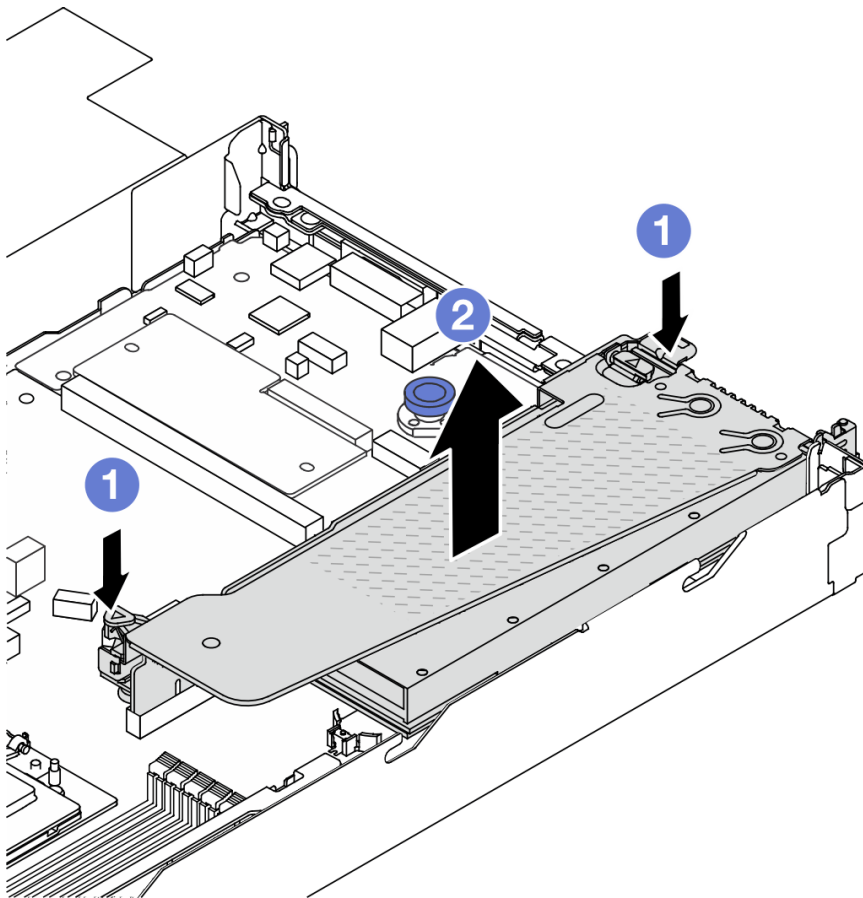


Figure 62. Removing the riser assembly

- a. 1 Press the latches on the riser bracket.
- b. 2 Grasp the riser assembly by its edges and carefully lift it straight up and off the chassis.

Note: If you are removing a GPU adapter on riser 3 assembly, slightly lift the riser assembly up, and disconnect cables from the system board (system board assembly) first.

Step 3. Remove the GPU adapter from the riser bracket.

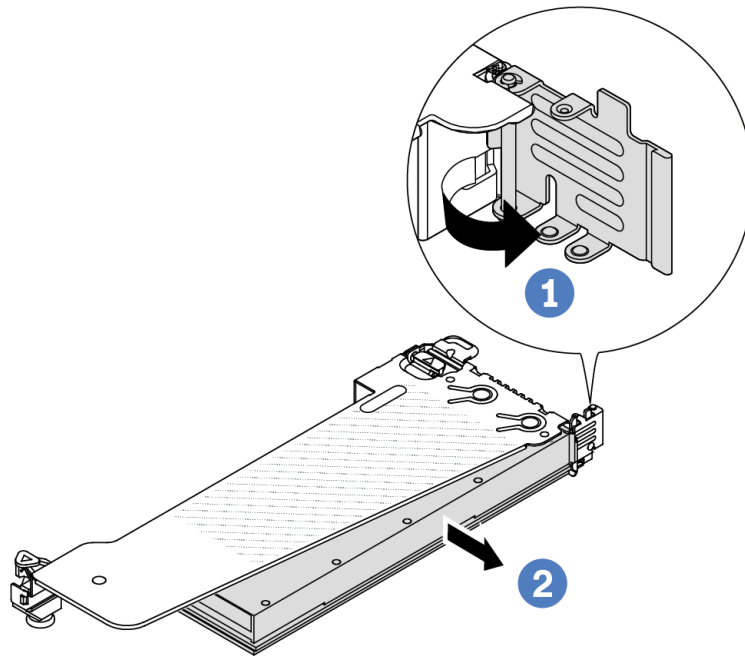


Figure 63. Removing the GPU adapter

- a. 1 Rotate the GPU adapter retention latch to the open position.
- b. 2 Grasp the GPU adapter by its edges and carefully pull it out of the PCIe slot.

After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Demo video

<https://www.youtube.com/watch?v=qdTNwcYjAPg>

Install a GPU adapter

Use this information to install a GPU adapter.

About this task

Attention:

- Read “Installation Guidelines” on page 1 and “Safety inspection checklist” on page 2 to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See “Power off the server” on page 15.

- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.
- GPU adapters are supported on some server models with requirements. See [“Thermal rules” on page 10](#).
- All installed GPU adapters must be identical.

Procedure

- Step 1. Make preparation for the task.
- Step 2. Locate the appropriate PCIe slot for the new GPU adapter. See [“PCIe slots and adapters” on page 6](#).
- Step 3. Install the GPU adapter into the PCIe slot on the riser card.

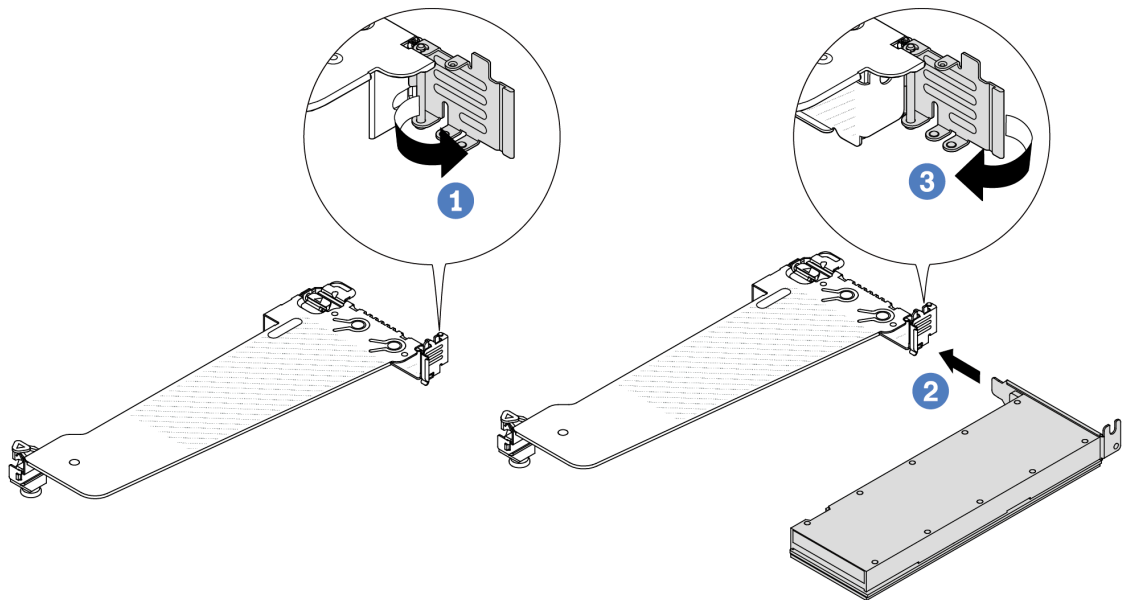


Figure 64. Installing the GPU adapter

- 1 Open the blue latch on the riser cage.
 - 2 Align the GPU adapter with the PCIe slot on the riser card. Then, carefully press the GPU adapter straight into the slot until it is securely seated.
 - 3 Close the blue latch.
- Step 4. Connect GPU power cable. See [“GPU adapter \(optional\)” on page 215](#). If the cable connectors come with protective dust caps, make sure to put them back on.
 - Step 5. Install the riser assembly with the GPU adapter: Align the riser card with the PCIe slot on the system board (system board assembly). Carefully press the riser card straight into the slot until it is securely seated.

Note: The following uses riser 1 assembly as an example for illustration. It is similar for other riser assemblies. See [“Install the rear riser card” on page 168](#).

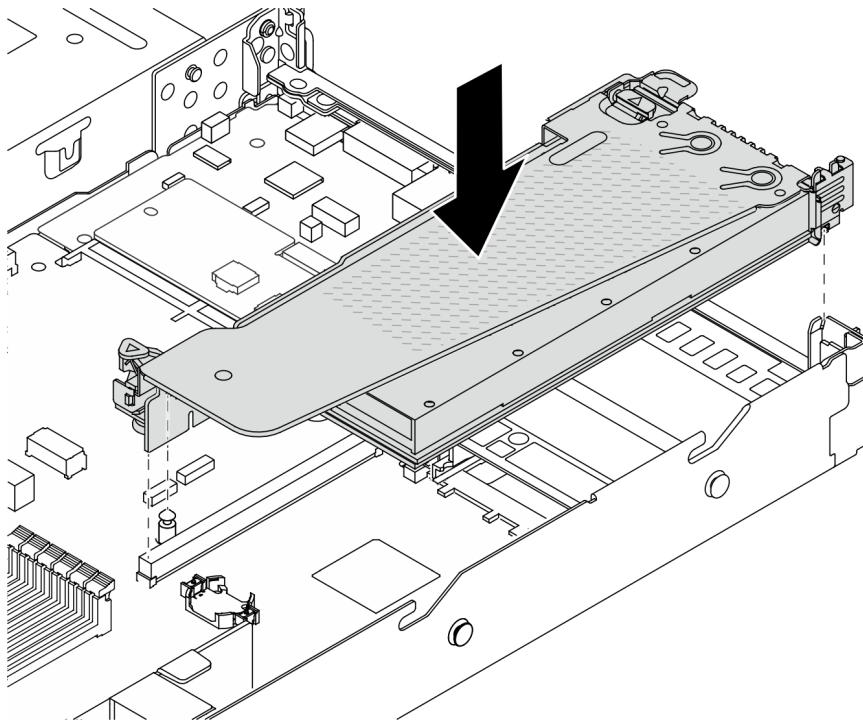


Figure 65. Installing the riser assembly

After you finish

Complete the parts replacement. See [“Complete the parts replacement” on page 201](#).

Demo video

<https://www.youtube.com/watch?v=Llim9LQVz3o>

Hot-swap drive replacement

Use this information to remove and install a hot-swap drive. You can remove or install a hot-swap drive without turning off the server, which helps you avoid significant interruption to the operation of the system.

Notes:

- The term “hot-swap drive” refers to all the supported types of hot-swap hard disk drives, hot-swap solid-state drives, and hot-swap NVMe drives.
- Use any documentation that comes with the drive, and follow the instructions and those in this topic.
- The electromagnetic interference (EMI) integrity and cooling of the server are protected by having all drive bays covered or occupied. The vacant bays are either covered by an EMI-protective panel or occupied by drive fillers. When installing a drive, save any removed drive fillers for future use to cover vacant bays.
- To avoid damage to the drive connectors, ensure that the top cover is in place and fully closed whenever you install or remove a drive.
- [“Remove a 2.5"/3.5" hot-swap drive” on page 69](#)
- [“Install a 2.5"/3.5" hot-swap drive” on page 70](#)
- [“Remove an EDSFF drive” on page 72](#)
- [“Install an EDSFF drive” on page 74](#)

Remove a 2.5"/3.5" hot-swap drive

Use this information to remove a 2.5"/3.5" hot-swap drive.

About this task

The following describes the information that you must consider for this task:

- Ensure that you have backed up data on your drive, especially if it is part of a RAID array.
 - Before you make changes to drives, RAID adapters, or drive backplanes, back up all important data that is stored on the drives.
 - Before you remove any component of a RAID array, back up all RAID configuration information.
- If one or more NVMe drives are to be removed, it is recommended to disable them first in **Safely Remove Hardware and Eject Media** (Windows) or **filesystem** (Linux). Log in to XClarity Controller and go to the **Storage** menu to identify and locate the drive type and corresponding drive bay number. If the drive bay numbers come with the term “NVMe”, it indicates that the installed drives are NVMe drives.


Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.
- To ensure that there is adequate system cooling, do not operate the server for more than two minutes without either a drive or a drive filler installed in each bay.

Procedure

Step 1. If the security bezel is installed, remove it first. See [“Remove the security bezel” on page 169](#).

Step 2. Remove a hot-swap drive.

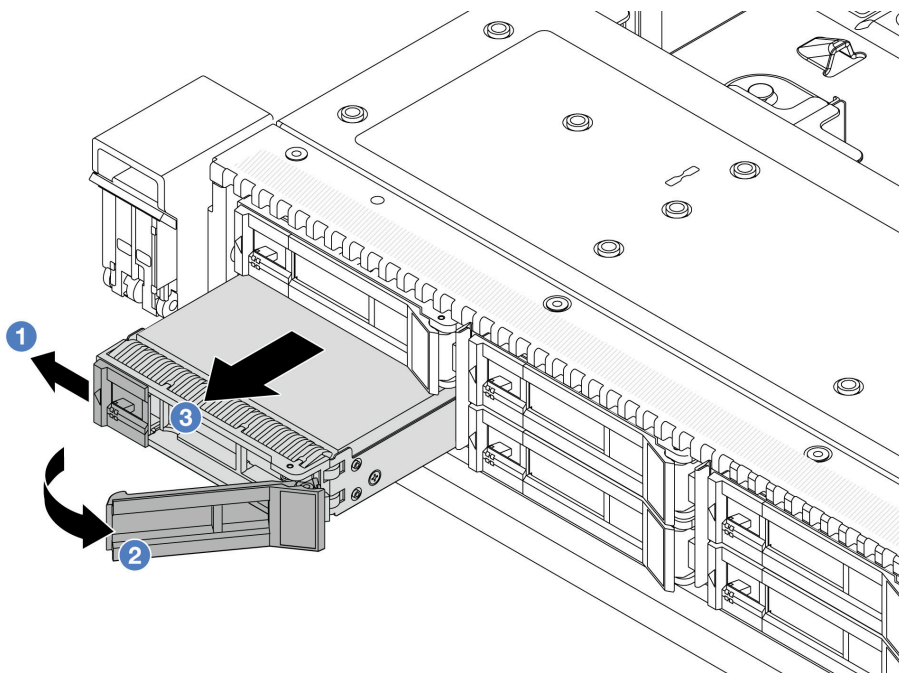

- a. **1** Slide the release latch to the left to open the drive tray handle.
- b. **2** Open the drive handle.

- c. **3** Slide the drive out of the drive bay.

After you finish

1. Install a drive filler or a new drive to cover the drive bay.

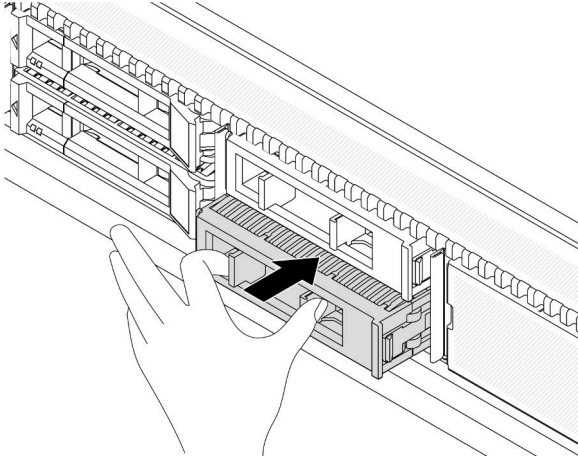


Figure 66. Install a drive filler

2. If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Demo video

<https://www.youtube.com/watch?v=Y7BbNALVQL0>

Install a 2.5"/3.5" hot-swap drive

Use this information to install a 2.5"/3.5" hot-swap drive.

About this task

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

- Step 1. Touch the static-protective package that contains the drive to any unpainted surface on the outside of the server. And then, take the drive out of the package and place it on a static-protective surface.
- Step 2. Remove the drive filler from the drive bay and keep the drive filler in a safe place.

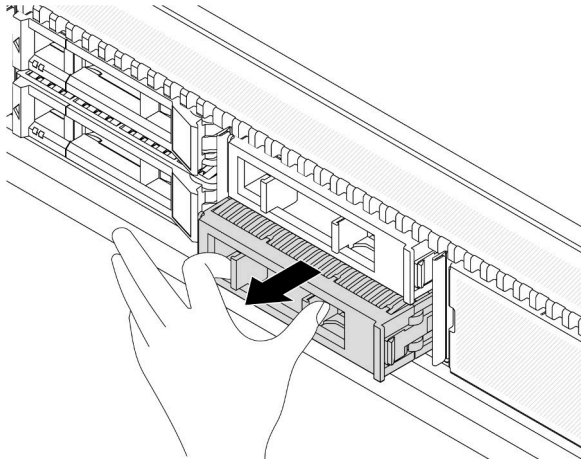


Figure 67. Remove a drive filler

Step 3. Install the drive in the drive bay.

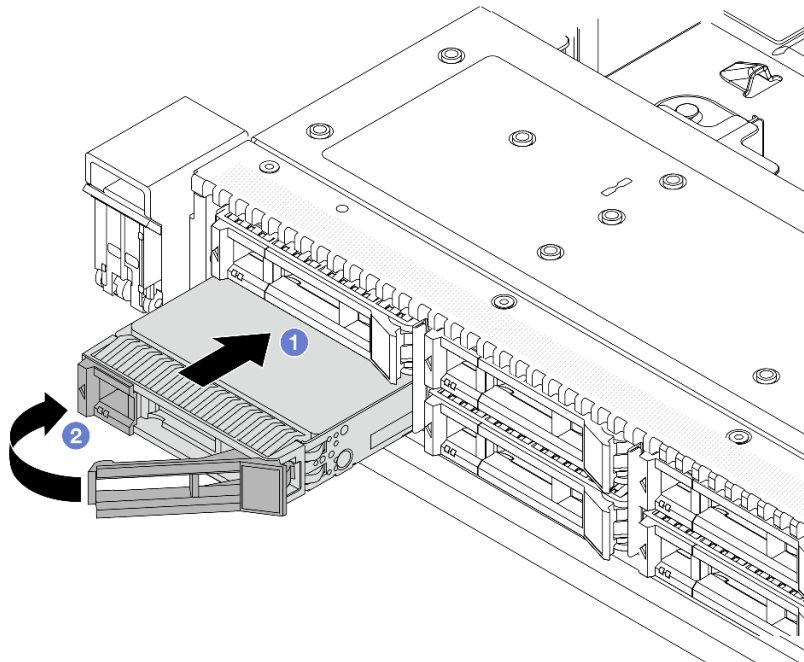


Figure 68. Hot-swap drive installation

- a. ① Ensure that the drive tray handle is in the open position. Slide the drive into the drive bay until it snaps into position.
- b. ② Close the drive tray handle to lock the drive in place.

Step 4. Check the drive LEDs to verify that the drive is operating normally. For details, see [“Drive LEDs” on page 382](#).

Step 5. Continue to install additional hot-swap drives if necessary.

After you finish

1. Reinstall the security bezel if you removed it. See [“Install the security bezel” on page 171](#).

2. Use the Lenovo XClarity Provisioning Manager to configure the RAID if necessary. For more information, see:

https://sysmgt.lenovofiles.com/help/topic/ixpm_frontend/ixpm_product_page.html

Demo video

<https://www.youtube.com/watch?v=1v45wGaENIU>

Remove an EDSFF drive

Use this information to remove an EDSFF drive.

About this task

The following describes the information that you must consider for this task:

- Ensure that you have backed up data on your drive, especially if it is part of a RAID array.
 - Before you make changes to drives, RAID adapters, or drive backplanes, back up all important data that is stored on the drives.
 - Before you remove any component of a RAID array, back up all RAID configuration information.
- If one or more NVMe drives are to be removed, it is recommended to disable them first in Safely Remove Hardware and Eject Media (Windows) or filesystem (Linux). Log in to XClarity Controller and go to the **Storage** menu to identify and locate the drive type and corresponding drive bay number. If the drive bay numbers come with the term “NVMe”, it indicates that the installed drives are NVMe drives.

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.
- To ensure that there is adequate system cooling, do not operate the server for more than two minutes without either a drive or a drive filler installed in each bay.

Procedure

Step 1. If the security bezel is installed, remove it first. See “[Remove the security bezel](#)” on page 169.

Step 2. Remove the EDSFF drive cage cover.

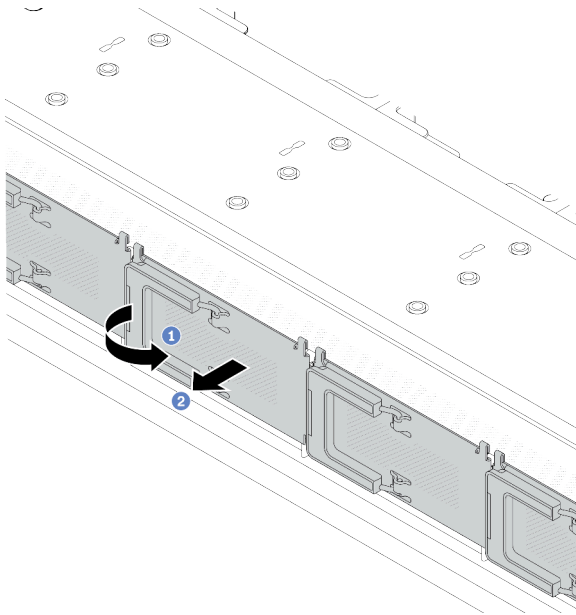


Figure 69. EDSFF drive cage cover removal

- a. 1 Open the handle as shown.
- b. 2 Grasp the handle and remove the drive cage cover.

Step 3. Remove the EDSFF drive.

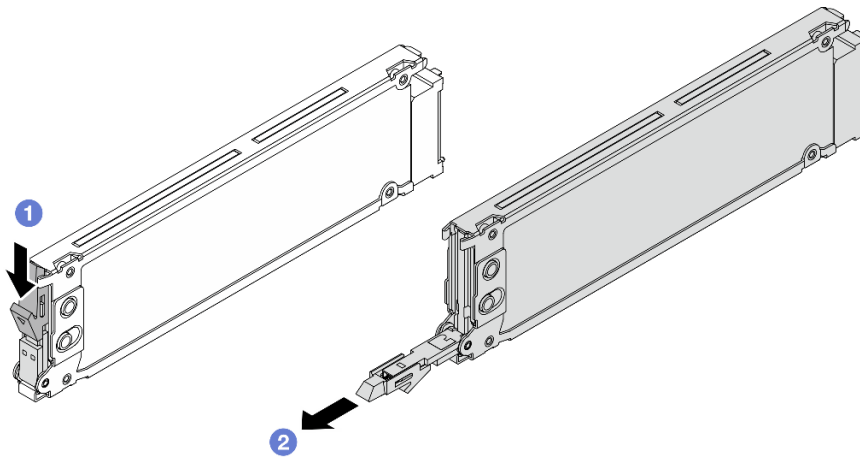


Figure 70. EDSFF drive removal

- a. 1 Slide the release latch as shown to open the drive tray handle.
- b. 2 Grasp the handle and slide the drive out of the drive bay.

After you finish

1. Install a new drive or a drive cage cover to cover the drive bay.

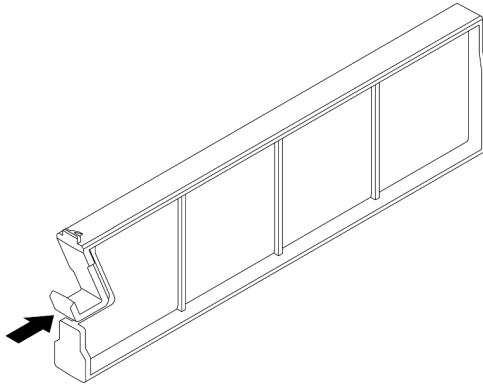


Figure 71. EDSFF drive filler installation

2. Install the drive cage cover.
3. If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Demo video

https://www.youtube.com/watch?v=IUZT_0uS0pc

Install an EDSFF drive

Use this information to install an EDSFF drive.

About this task

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

- Step 1. Touch the static-protective package that contains the drive to any unpainted surface on the outside of the server. Then, take the drive out of the package and place it on a static-protective surface.
- Step 2. Remove the drive filler from the drive bay and keep the drive filler in a safe place.

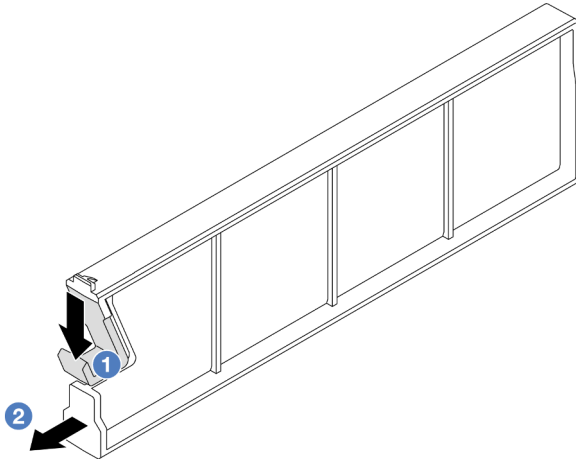


Figure 72. Remove an EDSFF drive filler

- a. 1 Press the latch down to disengage the drive clip from the cage.
- b. 2 Pull and slide the filler out.

Step 3. Install the EDSFF drive.

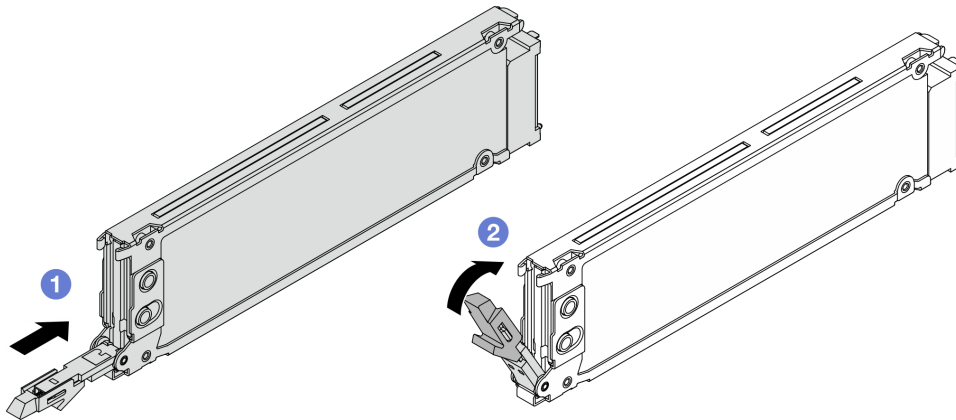


Figure 73. EDSFF drive installation

- a. 1 Ensure that the drive tray handle is in the open position. Slide the drive into the drive bay until it snaps into position.
- b. 2 Close the drive tray handle to lock the drive in place.

Step 4. Continue to install additional EDSFF drives if necessary.

Step 5. Install the EDSFF drive cage cover.

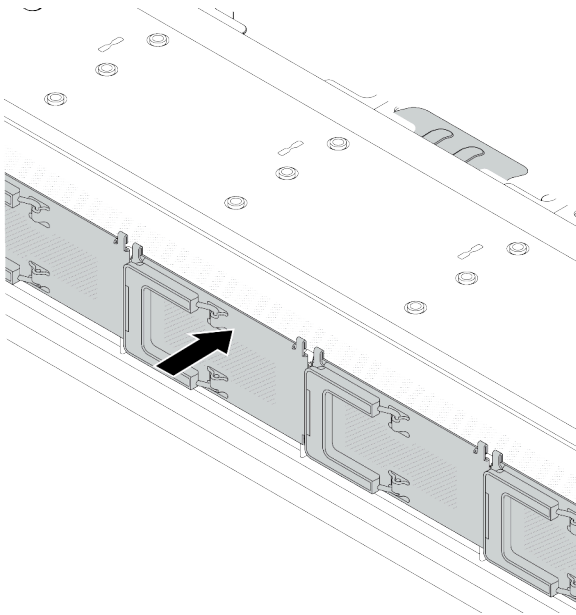


Figure 74. EDSFF drive cage cover installation

After you finish

1. Reinstall the security bezel if you have removed it. See [“Install the security bezel” on page 171](#).
2. Use the Lenovo XClarity Provisioning Manager to configure the RAID if necessary. For more information, see:
https://sysmgt.lenovofiles.com/help/topic/ixpm_frontend/ixpm_product_page.html

Demo video

<https://www.youtube.com/watch?v=cALUsYDRIXI>

Internal CFF HBA/RAID adapter replacement

Use this information to remove and install the internal CFF HBA/RAID adapter.

- [“Remove the internal CFF HBA/RAID adapter” on page 76](#)
- [“Install the internal CFF HBA/RAID adapter” on page 77](#)

Remove the internal CFF HBA/RAID adapter

Use this information to remove the internal CFF HBA/RAID adapter.

About this task

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 15](#).
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

- Step 1. Remove the top cover. See “Remove the top cover” on page 197.
- Step 2. Remove any components that may impede access to the internal CFF HBA/RAID adapter.
- Step 3. Disconnect all cables from the internal CFF HBA/RAID adapter.
- Step 4. Lift the release pin, slightly slide the internal CFF HBA/RAID adapter as shown, and carefully lift it out of the chassis.

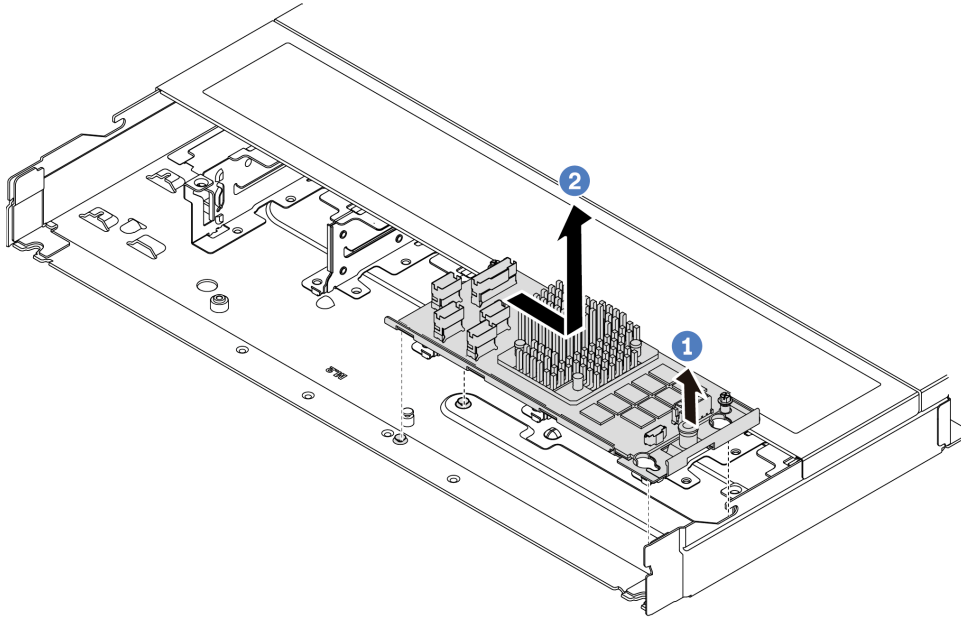


Figure 75. Internal CFF HBA/RAID adapter removal

- a. 1 Release the push pin on the internal CFF RAID adapter.
- b. 2 Move the adapter to the right and then lift it out of the chassis.

After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Demo video

<https://www.youtube.com/watch?v=K68CReaBeTc>

Install the internal CFF HBA/RAID adapter

Use this information to install the internal CFF HBA/RAID adapter.

About this task

Attention:

- Read “Installation Guidelines” on page 1 and “Safety inspection checklist” on page 2 to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See “Power off the server” on page 15.

- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

- Step 1. Touch the static-protective package that contains the internal CFF HBA/RAID adapter to any unpainted surface on the outside of the server. Then, take the internal CFF HBA/RAID adapter out of the package and place it on a static-protective surface.
- Step 2. Align the notches on the tray with the pins on the chassis, place down the internal CFF HBA/RAID adapter, and slightly slide it as shown to secure it on the chassis.

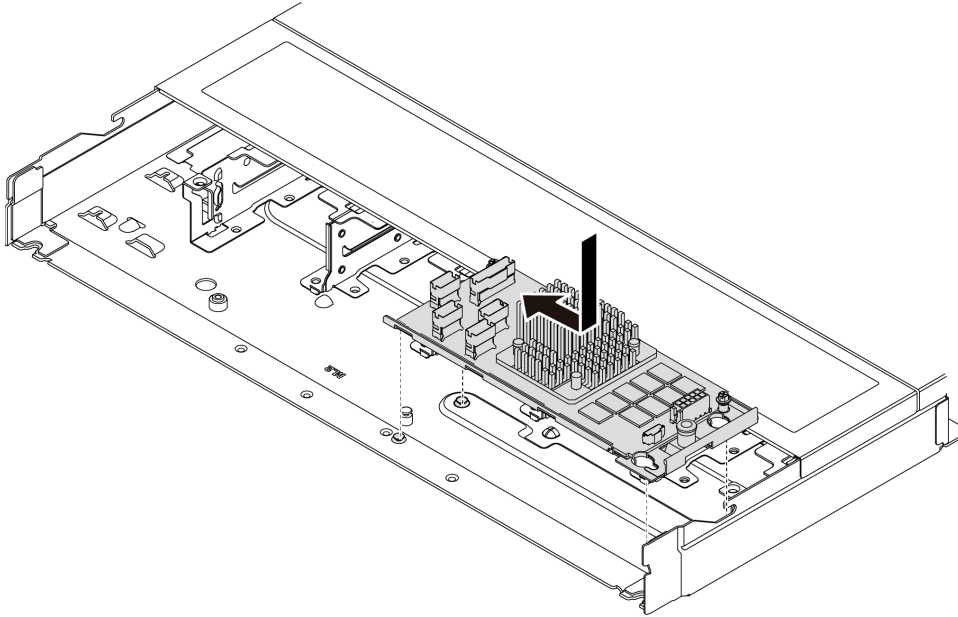


Figure 76. Internal CFF HBA/RAID adapter installation

- Step 3. Connect cables to the internal RAID adapter. See [“CFF RAID adapter” on page 210](#).

After you finish

Complete the parts replacement. See [“Complete the parts replacement” on page 201](#).

Demo video

<https://www.youtube.com/watch?v=FFiCPCOGMdQ>

Intrusion switch replacement

Use this information to remove and install an intrusion switch. The intrusion switch informs you that the server cover is not properly installed or closed by creating an event in the system event log (SEL).

The intrusion switch informs you that the server cover is not properly installed or closed by creating an event in the system event log (SEL).

- [“Remove an intrusion switch” on page 79](#)
- [“Install an intrusion switch” on page 81](#)

Remove an intrusion switch

Use this information to remove an intrusion switch.

About this task


Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 15](#).
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.


Procedure

Step 1. Remove the top cover. See [“Remove the top cover” on page 197](#).

Step 2. Remove the number 4 fan.

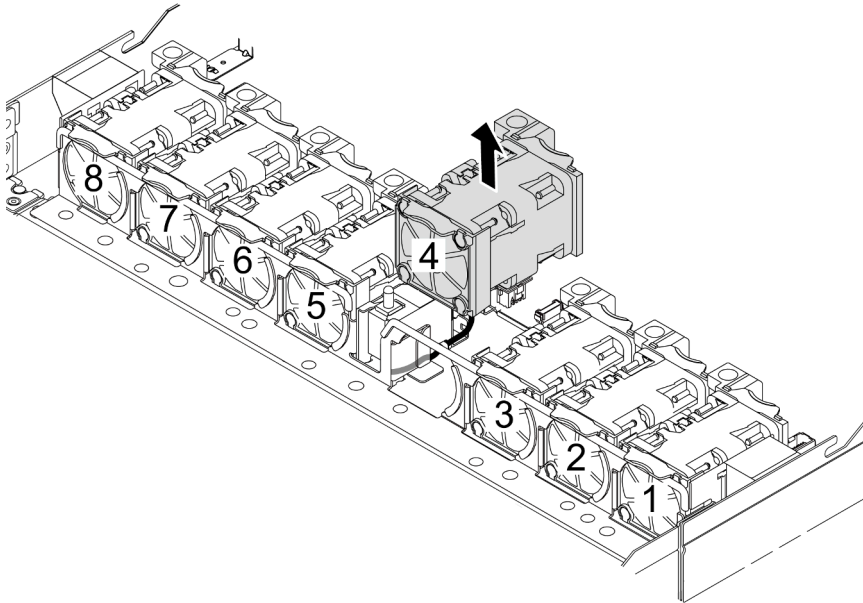


Step 3. Remove the intrusion switch.

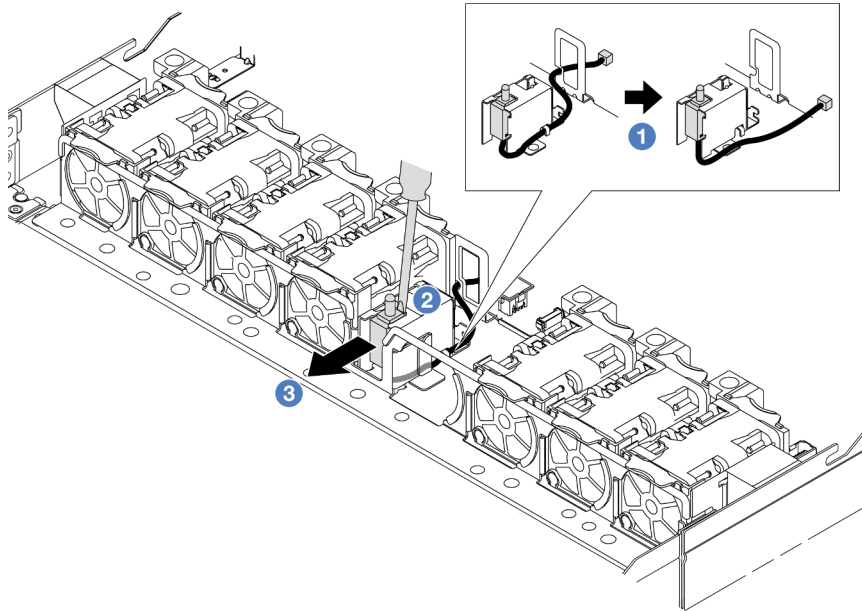

- a. **1** Disconnect the cable of the intrusion switch from the processor board. For the location of the intrusion switch connector and cable routing information, refer to “System-board layout” in *User Guide* and “Intrusion switch” on page 216. Route the cable out of the cable clip.
- b. **2** Insert the tip of a slotted screwdriver into the gap between the cage and switch and push outwards.
- c. **3** Slide the intrusion switch as shown to remove it.

Step 4. Re-install the number 4 fan.

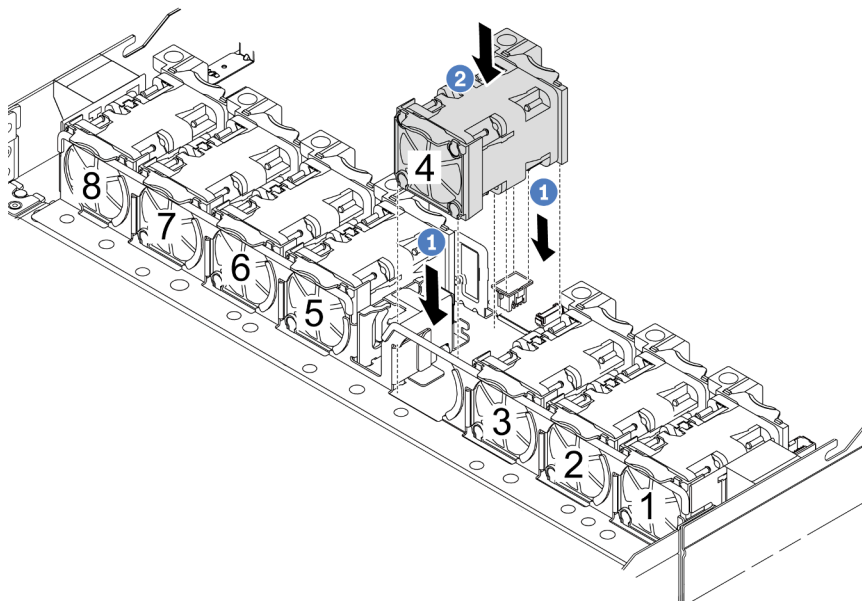

- a. **1** Align the four corners of the fan to fan module socket and put it down.

- b. **2** Press the fan latch down to ensure that it is plugged in the connector.

After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Demo video

<https://www.youtube.com/watch?v=IWLptjQV-ZE>

Install an intrusion switch

Use this information to install an intrusion switch.

About this task

Attention:


- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See “[Power off the server](#)” on page 15.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Watch the procedure


A video of this procedure is available at YouTube: <https://www.youtube.com/playlist?list=PLYV5R7hVcs-CTkyVDu-5Lhy1r9G-4PQGI>.

Procedure

- Step 1. Touch the static-protective package that contains the intrusion switch to any unpainted surface on the outside of the server. Then, take the intrusion switch out of the package and place them on a static-protective surface.
- Step 2. Remove the number 4 fan.

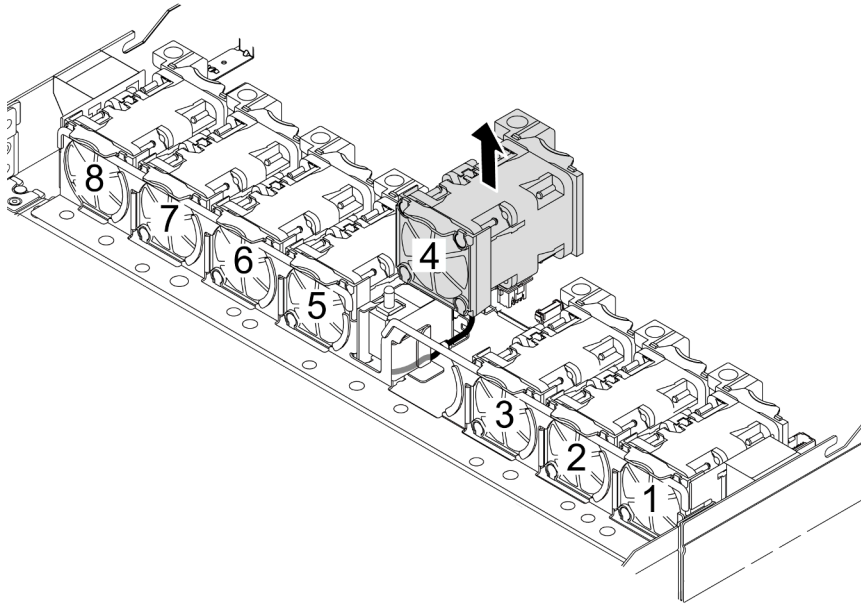


Step 3. Install the intrusion switch.

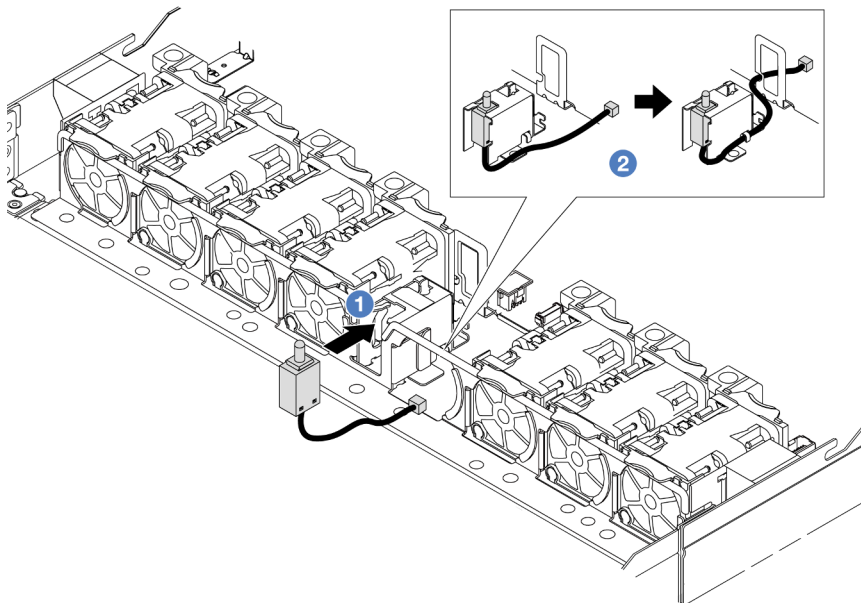

- a. ① Insert the intrusion switch into the cage.
- b. ② Route the cable into the cable clip.

Step 4. Connect the cable of the intrusion switch to the intrusion switch connector on the system board (system board assembly). See [“Intrusion switch” on page 216](#).

Step 5. Re-install the number 4 fan.

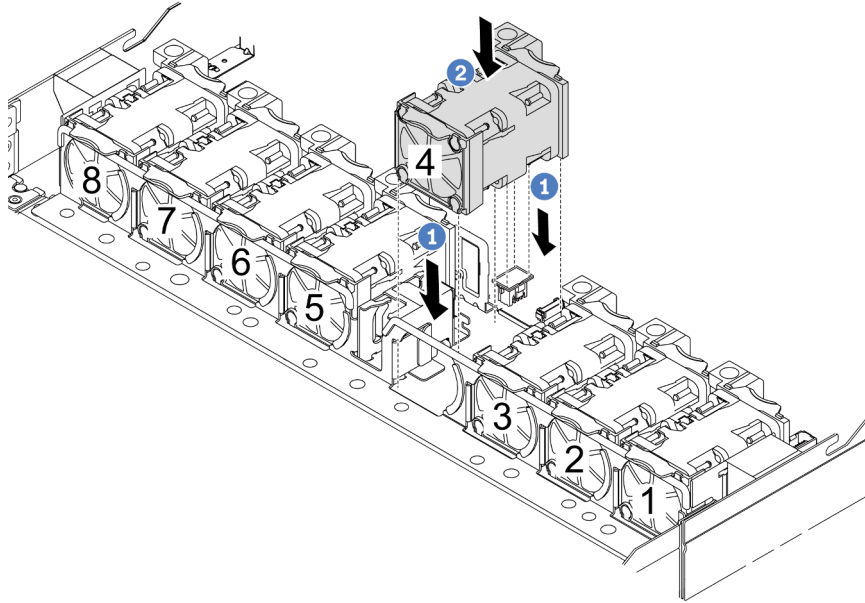

- a. ① Align the four corners of the fan to fan module socket and put it down.
- b. ② Press the fan latch down to ensure that it is plugged in the connector.

After you finish

Complete the parts replacement. See [“Complete the parts replacement”](#) on page 201.

Demo video

<https://www.youtube.com/watch?v=Tpya1mUrGPs>

The Lenovo Neptune Liquid to Air Module replacement (trained technicians only)

Follow instructions in this section to remove and install the L2AM (The Lenovo Neptune Liquid to Air Module).

Important:

- This task must be operated by trained technicians that are certified by Lenovo Service. Do not attempt to remove or install it without proper training and qualification.
- When the server has an L2AM module (close-loop cooling module) installed, you must apply for a handle first if you need to install or remove the processor board, I/O board, and processor. However, while replacing the old L2AM module with a new one, you do not need to apply for a handle as the new L2AM module contains it.
- This section is for L2AM (The Lenovo Neptune Liquid to Air Module) replacement. For the replacement of the processor and heat sink, refer to [“Processor and heat sink replacement \(trained technicians only\)”](#) on page 129.
- [“Remove the Lenovo Neptune Liquid to Air Module”](#) on page 83
- [“Install the Lenovo Neptune Liquid to Air Module”](#) on page 87

Remove the Lenovo Neptune Liquid to Air Module

Follow instructions in this section to remove the L2AM (The Lenovo Neptune Liquid to Air Module).

About this task

Safety information for liquid detection sensor module cable

S011



CAUTION:

Sharp edges, corners, or joints nearby.

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 15](#).
- If the server is installed in a rack, slide the server out on its rack slide rails to gain access to the top cover, or remove the server from the rack. See [“Remove the server from rack” on page 16](#).

Prepare the following screwdrivers to ensure to install and remove the corresponding screws properly.

Torque screwdriver type list	Screw Type
Torx T20 screwdriver	Torx T20 screw
Phillips 2 screwdriver	Phillips 2 screw

CAUTION:

Ensure that the module handle (LACM heat sink bracket) is installed when removing or installing the L2AM. Do not touch the radiator fins. Touching the radiator fins might damage the L2AM.

Procedure

- Step 1. Remove the top cover. See [“Remove the top cover” on page 197](#).
- Step 2. Disconnect the pump cable and leak detection cable of the LACM module from the connector on the processor board. See [“The Lenovo Neptune Liquid to Air Module” on page 234](#).

Notes:

- If you need to disconnect cables from the system board assembly, disengage all latches or release tabs on cable connectors first. Failing to release the tab before removing the cables will damage the cable sockets on the system board assembly. Any damage to the cable sockets might require replacing the system board assembly.
- The connectors on your system board assembly might look different from those in the illustration, but the removal procedure is the same.
 1. Press the release tab to release the connector.
 2. Disengage the connector from the cable socket.


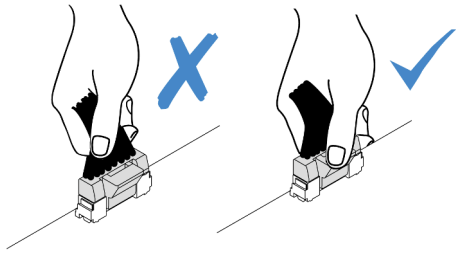



Figure 77. Disconnecting cables from the processor board

- Step 3. Disconnect the leak detection cable from the processor board, and route it out of the cable clips on the liquid detection sensor module holder.

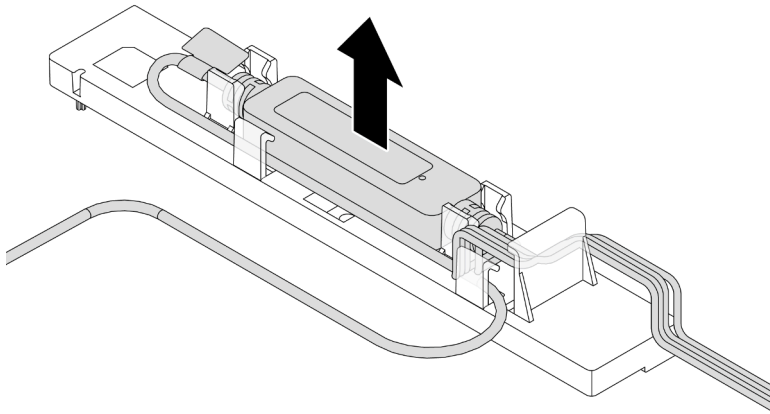


Note: It is advised to disengage the cable connector from the processor board by pulling the safety information label or liquid detection sensor module.

- Step 4. Re-install the module handle (LACM heat sink bracket) to the L2AM.

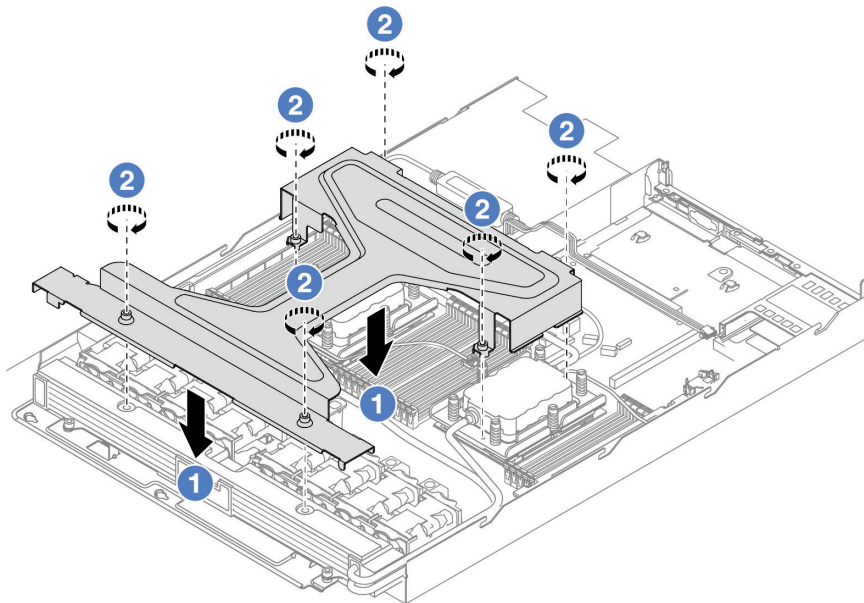

- a. 1 Place the module handle (LACM heat sink bracket) evenly on the L2AM and align screw holes.
- b. 2 Tighten six Torx T20 screws. Ensure that the screws are secured in place.

Step 5. Disengage the LACM from the processor board.

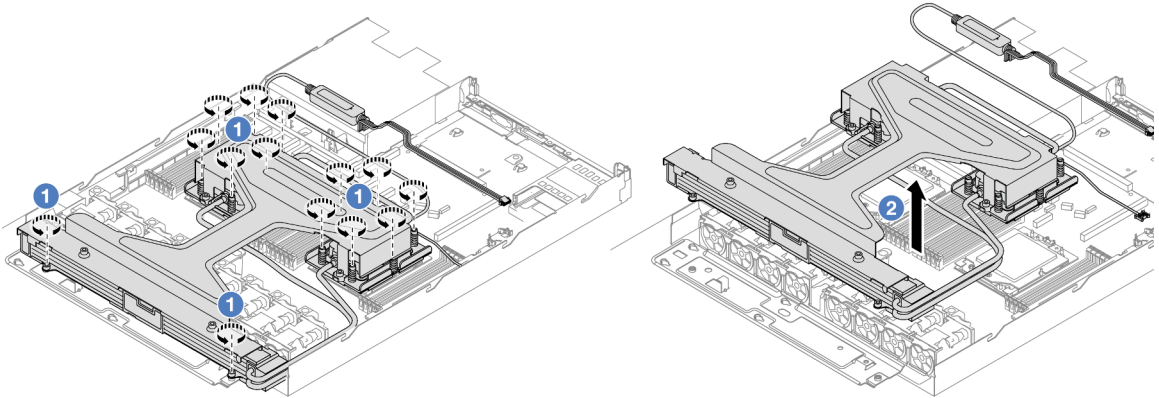


- a. 1 Fully loosen fourteen Torx T20 screws on the cold plate assembly and radiator.
- b. 2 Grasp the middle of the module handle (LACM heat sink bracket) and one of the two T20 screws fastening the radiator to carefully lift the LACM from the processor sockets. If the LACM cannot be fully lifted out of the socket, further loosen the Torx T20 screws and try lifting the LACM again.

Step 6. Place the L2AM upside down on the clean surface.


Step 7. If there is any old thermal grease on the processors and the cold plates, gently clean the top of the processors and the cold plates with an alcohol cleaning pad.

Step 8. Optionally, if you do not need to install a new LACM module, do the following:

- a. Remove the radiator tray from the chassis.

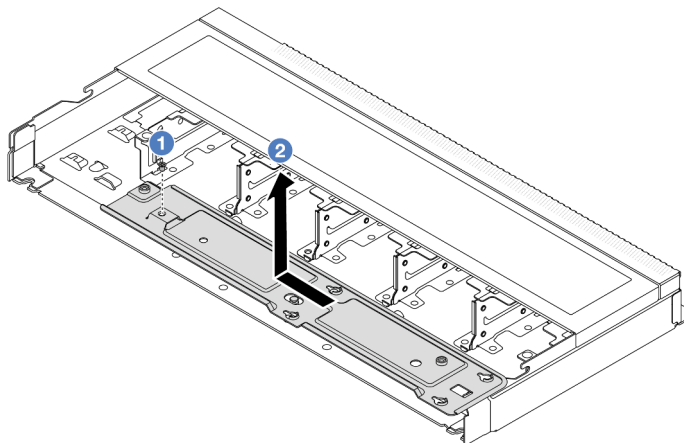

1. 1 Remove the Phillips 2 screw on the radiator tray.
2. 2 Move the radiator tray to the left and lift it out of the chassis.
- b. Remove the liquid detection sensor module holder from the chassis.

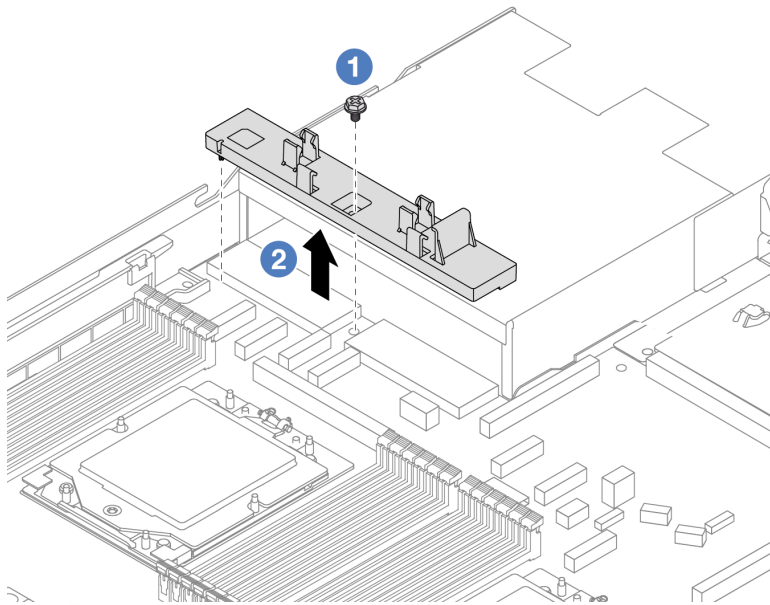

1. 1 Remove the Phillips 2 screw on the liquid detection sensor module holder.
2. 2 Lift the liquid detection sensor module holder out of the chassis.

After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Demo video

<https://www.youtube.com/watch?v=hOBVmOWRJX8>

Install the Lenovo Neptune Liquid to Air Module

Follow instructions in this section to install the L2AM (The Lenovo Neptune Liquid to Air Module).

About this task

Safety information for liquid detection sensor module cable

S011



CAUTION:
Sharp edges, corners, or joints nearby.

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.

CAUTION:

When removing a new L2AM from the shipping box, lift out the cold plate assembly with the shipping tray attached to prevent thermal grease on the cold plate assembly from damage.

CAUTION:

Ensure that the module handle (LACM heat sink bracket) is installed when removing or installing the L2AM. Do not touch the radiator fins. Touching the radiator fins might damage the L2AM.


Prepare the following screwdrivers to ensure you can install and remove the corresponding screws properly.

Torque screwdriver type list	Screw Type
Torx T20 screwdriver	Torx T20 screw
Phillips 2 screwdriver	Phillips 2 screw


Procedure

Step 1. Prepare your server.

- a. Install the liquid detection sensor module holder to the chassis.

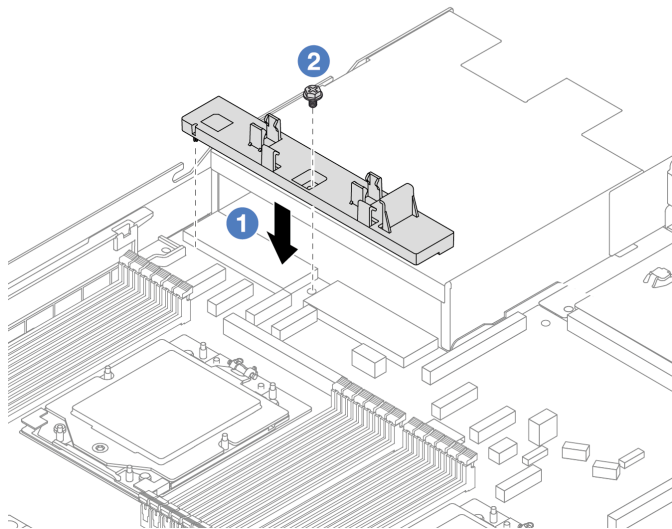


- 1. 1 Align the liquid detection sensor module holder to the corresponding screw hole on the chassis.
 - 2. 2 Tighten the Phillips 2 screw and ensure that the holder is secured in place.
- b. Install the radiator tray to the chassis.

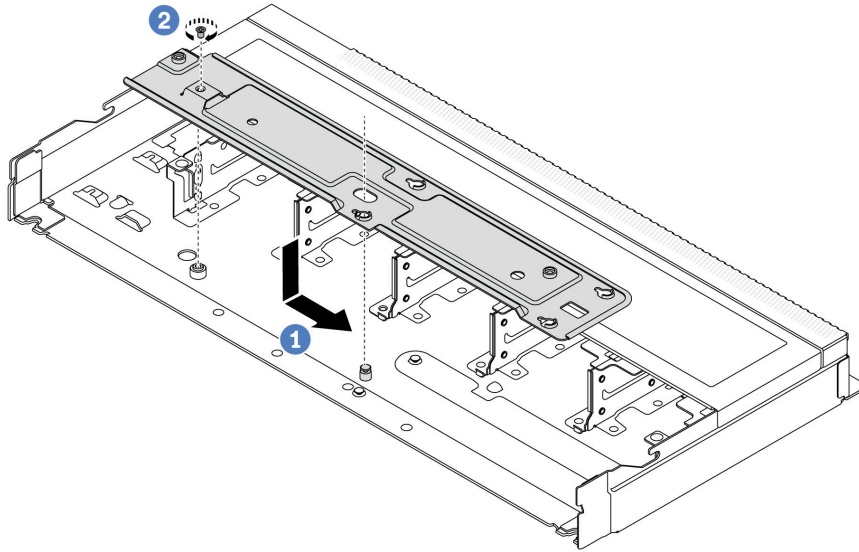

1. ① Place the tray evenly into the chassis and then move it to the right so that the screw hole on the tray aligns with the hole on the chassis.
2. ② Tighten the Phillips 2 screw.

Step 2. Separate the L2AM module from the shipping tray.

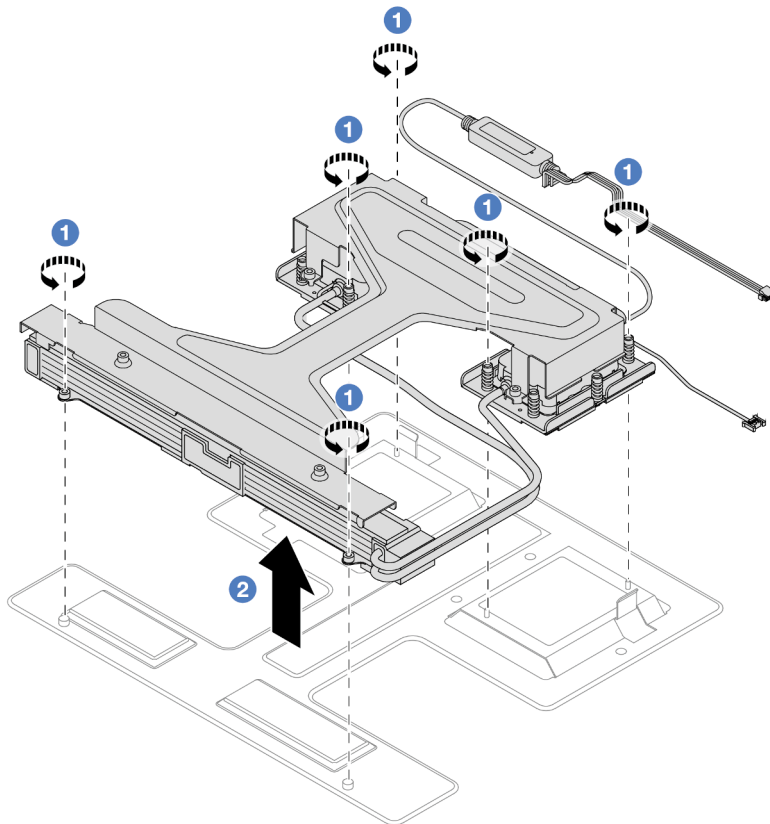


1. ① Loosen the six Torx T20 screws on the L2AM module shipping tray.
2. ② Grasp the middle of the module handle (LACM heat sink bracket) and one of the two T20 screws fastening the radiator to lift the L2AM by the module handle (LACM heat sink bracket) to separate the module from the shipping tray.

Step 3. Make sure you have an alcohol cleaning pad available.


Attention: If there is any old thermal grease on the processors, gently clean the top of the processors with an alcohol cleaning pad.

Step 4. Install the L2AM on the processor board.

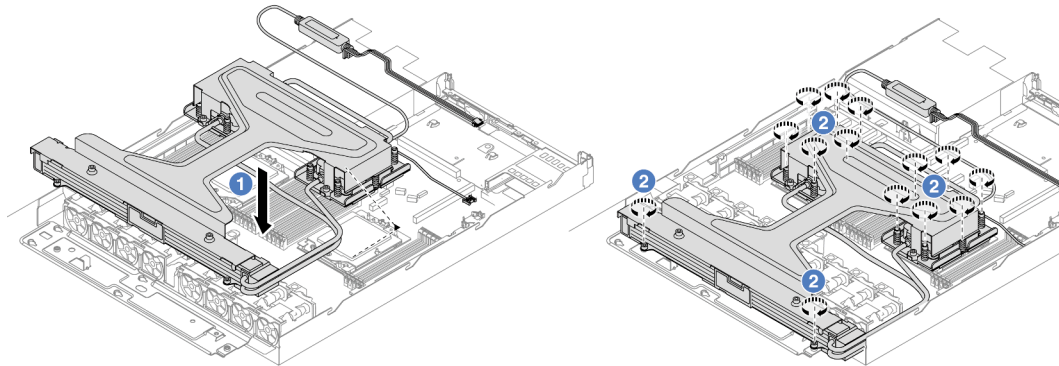


1. ① Align the triangular mark on the cold plate assembly label with the triangular mark on the processor carrier and processor. Install the LACM onto the processor-carrier.
2. ② Fully tighten the fourteen Torx T20 nuts *in the installation sequence shown* on the cold plate assembly and the radiator. Tighten the screws until they stop; then, visually inspect to make sure that there is no gap between the screw shoulder beneath the cold plate assembly and the processor socket. (For reference, the torque required for the fasteners to fully tighten is 1.22-1.47 newton-meters, 10.8–13.0 inch-pounds.)

Step 5. Separate the module handle (LACM heat sink bracket) from the module.

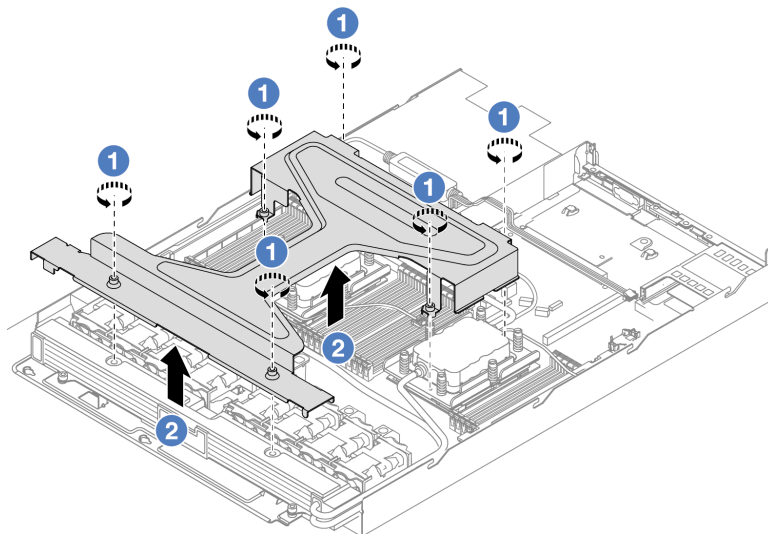

1. ① Loosen the six Torx T20 screws on the module handle (LACM heat sink bracket).
2. ② Grasp the middle of the module handle (LACM heat sink bracket) to separate it from the module.

Step 6. Install the leak detection module to the holder.

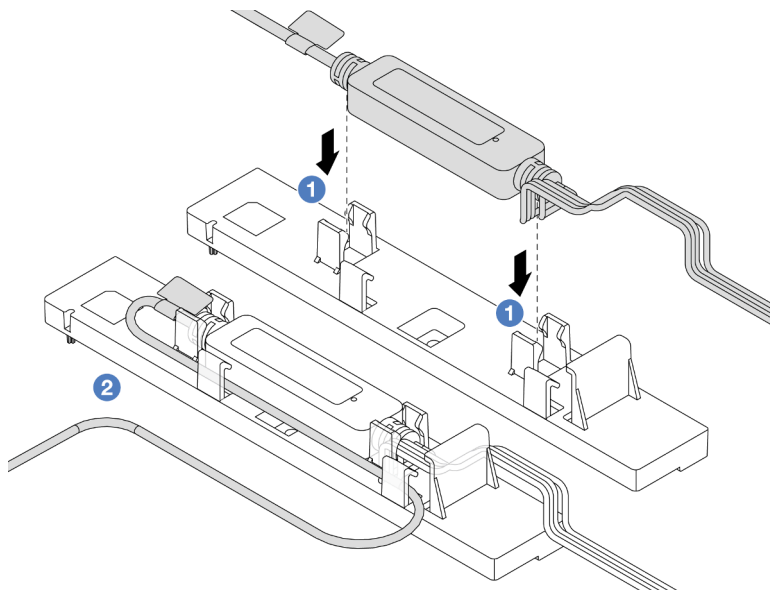

1. ① Install the liquid detection sensor module into the two clips on the holder. Ensure that the module is secured in place.
2. ② After the module is secured, route the cable through the cable clips to keep tidy for later cable routing arrangements.

Note: For liquid detection sensor module working status, see “Liquid detection sensor module LED” in *User Guide*.

Step 7. Connect the pump cable and leak detection cable of the LACM to the connectors on the processor board. See “[The Lenovo Neptune Liquid to Air Module](#)” on page 234.

After you finish

1. Complete the parts replacement. See “[Complete the parts replacement](#)” on page 201.

Demo video

<https://www.youtube.com/watch?v=TsKgt7BuUd4>

Management NIC adapter replacement

Follow instructions in this section to install or remove the ThinkSystem V3 Management NIC Adapter Kit (management NIC adapter).

Note: If the ThinkSystem V3 Management NIC Adapter Kit (management NIC adapter) is installed on the server, it will not be displayed on the PCIe card list of system management software, such as XCC, LXPM, and so on.

- “[Remove the management NIC adapter](#)” on page 91
- “[Install the management NIC adapter](#)” on page 93

Remove the management NIC adapter

Follow instructions in this section to remove the ThinkSystem V3 Management NIC Adapter Kit (management NIC adapter).

About this task

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 15](#).
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

Step 1. Prepare for the task.

- Access the Lenovo XClarity Controller; then, select **Network** in **BMC Configuration** and disable **Ethernet Port 2**.
- If the server is installed in a rack, remove the server from the rack.
- Remove the top cover. See [“Remove the top cover” on page 197](#).
- If the server comes with a riser 1 assembly, remove it first. See [“Remove the rear riser card” on page 166](#).

Step 2. Disconnect the cable on the management NIC adapter, see [“Management NIC adapter” on page 217](#).

Step 3. Remove the management NIC adapter.

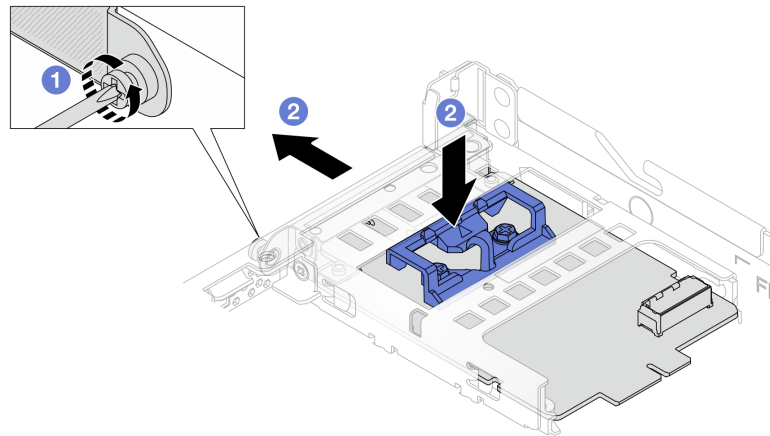


Figure 78. Removing the management NIC adapter

- Loosen the screw that secures the management NIC adapter.
- Press and hold the blue latch. And pull the management NIC adapter by the latch out from the chassis.

After you finish

- Install a replacement unit or a filler. See [“Install the management NIC adapter” on page 93](#).
- If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Demo video

[Watch the procedure on YouTube](#)

Install the management NIC adapter

Follow instructions in this section to install the ThinkSystem V3 Management NIC Adapter Kit (management NIC adapter).

About this task

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See “[Power off the server](#)” on page 15.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Firmware and driver download: You might need to update the firmware or driver after replacing a component.

- Go to <https://datacentersupport.lenovo.com/tw/en/products/servers/thinksystem/sr645v3/7d9c/downloads/driver-list/> to see the latest firmware and driver updates for your server.
- Go to “Update the firmware” in *User Guide* or *System Configuration Guide* for more information on firmware updating tools.

Procedure

Step 1. If a filler is installed, remove it.

Step 2. Install the management NIC adapter.

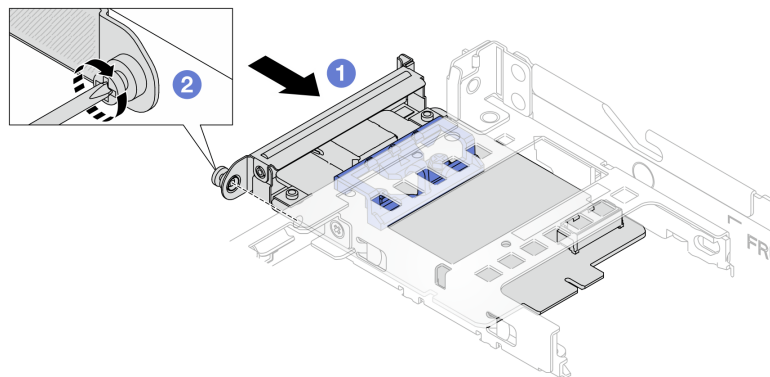


Figure 79. Installing the management NIC adapter

- a. ① Slide the management NIC adapter into the slot until it is fully seated.
- b. ② Tighten the screw to secure the management NIC adapter.

Step 3. Connect the cable to the management NIC adapter. See “[Management NIC adapter](#)” on page 217.

Step 4. Install the riser 1 assembly if you have removed it. See “[Install the rear riser card](#)” on page 168.

After you finish

1. Complete the parts replacement. See “[Complete the parts replacement](#)” on page 201.

2. Access the Lenovo XClarity Controller; then, select **Network** in **BMC Configuration** and enable **Ethernet Port 2**.

Demo video

[Watch the procedure on YouTube](#)

Memory module replacement

Use the following procedures to remove and install a memory module.

- [“Remove a memory module” on page 94](#)
- [“Install a memory module” on page 96](#)

Remove a memory module

Use this information to remove a memory module.

About this task

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 15](#).
- Make sure to remove or install memory module 20 seconds after disconnecting power cords from the system. It allows the system to be completely discharged of electricity and safe for handling memory module.
- If the server is installed in a rack, slide the server out on its rack slide rails to gain access to the top cover, or remove the server from the rack. See [“Remove the server from rack” on page 16](#).
- If you are not installing a replacement memory module to the same slot, make sure you have memory module filler available.
- Memory modules are sensitive to static discharge and require special handling. Refer to the standard guidelines for [“Handling static-sensitive devices” on page 4](#).
 - Always wear an electrostatic-discharge strap when removing or installing memory modules. Electrostatic-discharge gloves can also be used.
 - Never hold two or more memory modules together so that they do not touch each other. Do not stack memory modules directly on top of each other during storage.
 - Never touch the gold memory module connector contacts or allow these contacts to touch the outside of the memory module connector housing.
 - Handle memory modules with care: never bend, twist, or drop a memory module.
 - Do not use any metal tools (such as jigs or clamps) to handle the memory modules, because the rigid metals may damage the memory modules.
 - Do not insert memory modules while holding packages or passive components, which can cause package cracks or detachment of passive components by the high insertion force.

Important: Remove or install memory modules for one processor at a time.

Procedure

Attention: Make sure to remove or install memory module 20 seconds after disconnecting power cords from the system. It allows the system to be completely discharged of electricity and safe for handling memory module.

Step 1. Power off the server and disconnect all power cords.

- Step 2. Remove the top cover. See “Remove the top cover” on page 197.
- Step 3. Remove the memory module from the slot.

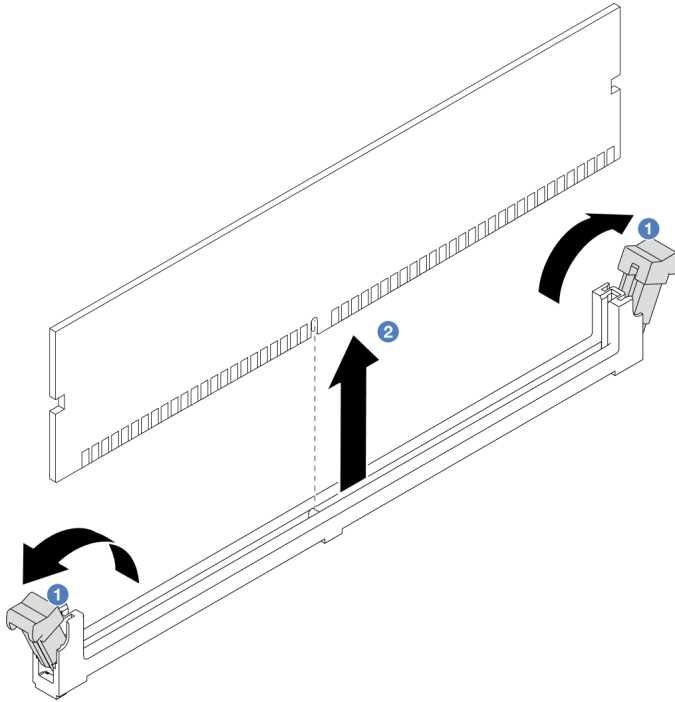


Figure 80. Memory module removal

- a. ① Open the retaining clip on each end of the memory module slot.

Attention: To avoid breaking the retaining clips or damaging memory module slots, handle the clips gently.

- b. ② Grasp the memory module at both ends and carefully lift it out of the slot.

After you finish

1. A memory module slot must be installed with a memory module or a memory module filler. See “Install a memory module” on page 96.
2. If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Demo video

<https://www.youtube.com/watch?v=5J25gvB5JmM>

Install a memory module

Use this information to install a memory module.

About this task

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Make sure to remove or install memory module 20 seconds after disconnecting power cords from the system. It allows the system to be completely discharged of electricity and safe for handling memory module.
- Make sure to adopt one of the supported configurations listed in “[Memory module installation rules and order](#)” on page 4.
- Memory modules are sensitive to static discharge and require special handling. Refer to the standard guidelines at “[Handling static-sensitive devices](#)” on page 4:
 - Always wear an electrostatic-discharge strap when removing or installing memory modules. Electrostatic-discharge gloves can also be used.
 - Never hold two or more memory modules together so that they do not touch each other. Do not stack memory modules directly on top of each other during storage.
 - Never touch the gold memory module connector contacts or allow these contacts to touch the outside of the memory module connector housing.
 - Handle memory modules with care: never bend, twist, or drop a memory module.
 - Do not use any metal tools (such as jigs or clamps) to handle the memory modules, because the rigid metals may damage the memory modules.
 - Do not insert memory modules while holding packages or passive components, which can cause package cracks or detachment of passive components by the high insertion force.

Important: Remove or install memory modules for one processor at a time.

Firmware and driver download: You might need to update the firmware or driver after replacing a component.

- Go to <https://datacentersupport.lenovo.com/tw/en/products/servers/thinksystem/sr645v3/7d9c/downloads/driver-list/> to see the latest firmware and driver updates for your server.
- Go to “Update the firmware” in *User Guide* or *System Configuration Guide* for more information on firmware updating tools.

Procedure

Attention: Make sure to remove or install memory module 20 seconds after disconnecting power cords from the system. It allows the system to be completely discharged of electricity and safe for handling memory module.

- Step 1. Power off the server and disconnect all power cords.
- Step 2. Touch the static-protective package that contains the memory module to any unpainted surface on the outside of the server. Then, take the memory module out of the package and place it on a static-protective surface.
- Step 3. Locate the required memory module slot on the system board (system board assembly).

Note: Ensure that you observe the installation rules and sequence in “[Memory module installation rules and order](#)” on page 4.

Step 4. Install the memory module into the slot.

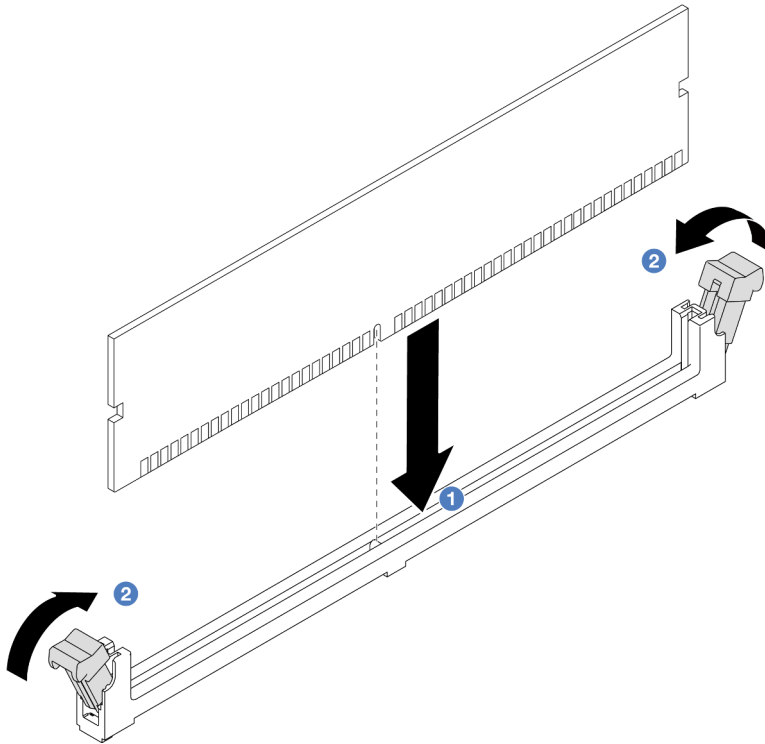


Figure 81. Memory module installation

Attention:

- Before you install a memory module into the slot, make sure that the clips are on open position, and the slot is clear of any debris.
 - To avoid breaking the retaining clips or damaging the memory module slots, open and close the clips gently.
- a. ① Identify the key on the memory module and then align the key to the slot, and gently place the memory module into the slot with both hands.
 - b. ② Firmly press both ends of the memory module straight down into the slot until the retaining clips snap into the locked position.

Note: If there is a gap between the memory module and the retaining clips, the memory module has not been correctly inserted. In this case, open the retaining clips, remove the memory module, and then reinsert it.

After you finish

Complete the parts replacement. See “[Complete the parts replacement](#)” on page 201.

Demo video

<https://www.youtube.com/watch?v=MaToyWBsvVw>

MicroSD card replacement

Follow the instructions in this section to remove and install the MicroSD card.

- [“Remove the MicroSD card” on page 98](#)
- [“Install the MicroSD card” on page 99](#)

Remove the MicroSD card

Follow the instructions in this section to remove the MicroSD card.

About this task

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 15](#).
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

Step 1. Prepare your server.

- a. Remove the top cover. See [“Remove the top cover” on page 197](#).
- b. If your server comes with riser assemblies, remove them first, see [“Remove a PCIe adapter” on page 115](#).
- c. If your server comes with a rear drive assembly, remove it first. See [“Remove the rear 2.5" drive assembly” on page 147](#).
- d. If your server comes with a 7mm rear drive assembly, remove it first. See [“Remove the 7mm rear drive assembly” on page 150](#).
- e. Record where the cables are connected to the system board assembly; then, disconnect all the cables.

Attention: Disengage all latches, cable clips, release tabs, or locks on cable connectors beforehand. Failing to release them before removing the cables will damage the cable connectors on the system board assembly. Any damage to the cable connectors may require replacing the system board assembly.

Step 2. Remove the MicroSD card.

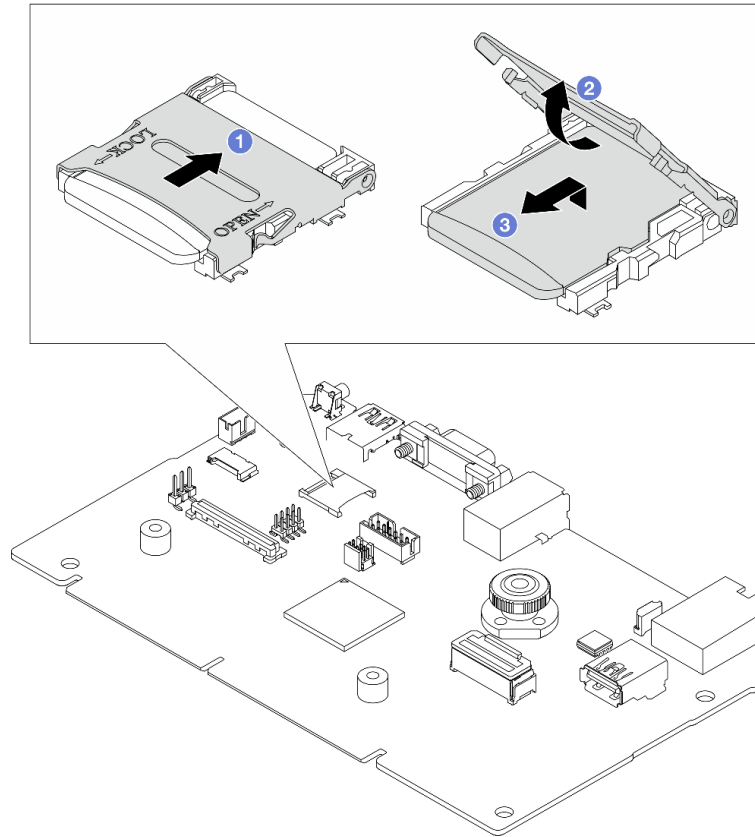


Figure 82. Removing MicroSD card

- a. ① Slide the socket lid to OPEN position.
- b. ② Lift open the socket lid.
- c. ③ Remove the MicroSD card from the socket.

Note: After the MicroSD card is removed, the historical data of the firmware and user data uploaded through Remote Disc On Card (RDOC) will be lost, and the firmware rollback function and extended RDOC space will not be supported. To enable the two features, it will need to install a new MicroSD card.

After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Demo video

<https://www.youtube.com/watch?v=SPMtyOLoxzE>

Install the MicroSD card

Follow the instructions in this section to install the MicroSD card.

About this task

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See “[Power off the server](#)” on page 15.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

Step 1. Install the MicroSD card.

Notes:

- If replacing with a new MicroSD card, the firmware historical data and user data stored in the defective MicroSD card would be lost. After a new MicroSD card is installed, subsequent firmware update history will be saved to the new card.
- To update firmware, refer to “[Updating Server Firmware](#)” section in [Lenovo XClarity Controller 2](#).

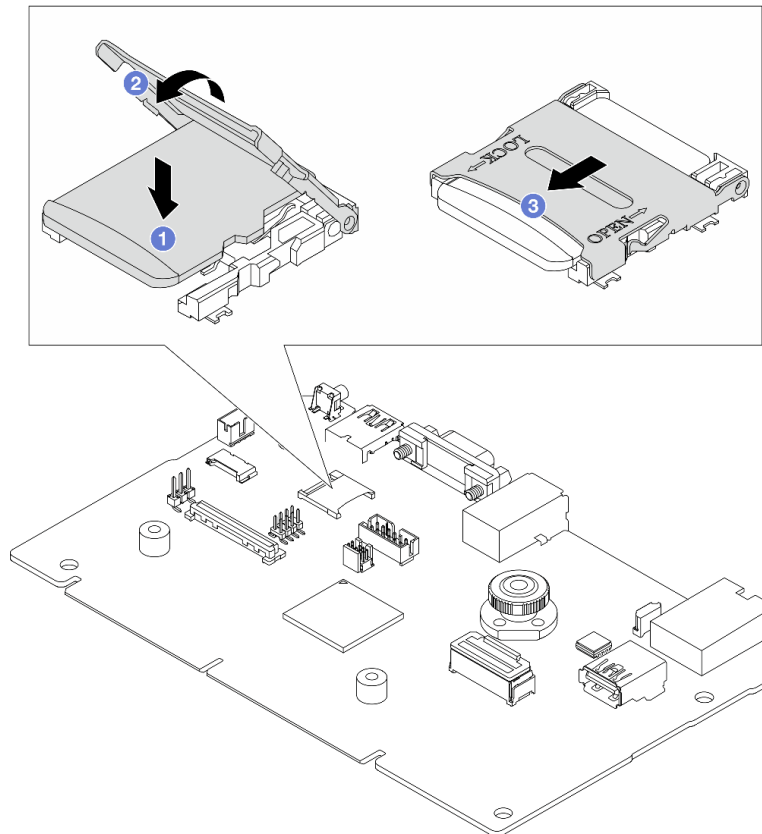


Figure 83. Installing MicroSD card

- 1 Place the MicroSD card into the socket.
- 2 Close the socket lid.
- 3 Slide the socket lid to LOCK position.

After you finish

1. Install any components that you have removed:

- a. [“Install a PCIe adapter” on page 117](#)
 - b. [“Install the 7mm rear drive assembly” on page 151](#)
 - c. [“Install the rear 2.5” drive assembly” on page 148](#)
 - d. [“Install the top cover” on page 199](#)
2. Complete the parts replacement. See [“Complete the parts replacement” on page 201](#).

Demo video


<https://www.youtube.com/watch?v=qgQMcsFZTC0>

M.2 backplane and M.2 drive replacement

Use this information to remove and install the M.2 backplane and M.2 drive (an assembled M.2 backplane and M.2 drive is also known as M.2 module).

The server supports two types of M.2 backplanes. The removal and installation methods are similar.

Note: The M.2 adapters and modules are also referred to as enablement kits. In this publication, they are referred to as M.2 backplanes. These terms are interchangeable.

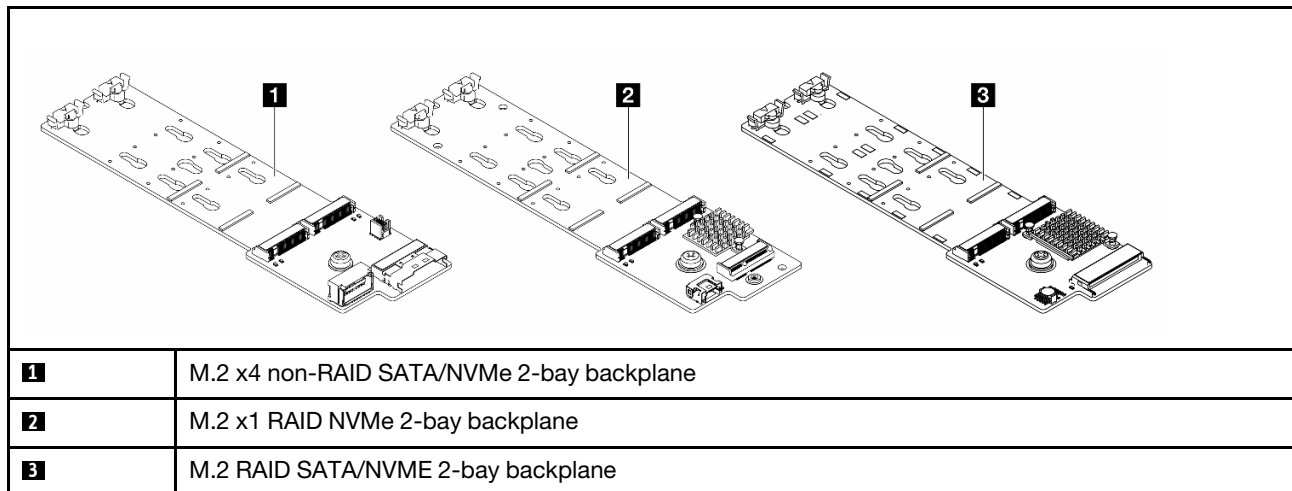

- [“Remove the M.2 backplane and M.2 drive” on page 101](#)
- [“Adjust the retainer on the M.2 backplane” on page 104](#)
- [“Install the M.2 backplane and M.2 drive” on page 105](#)
- [“Remove the M.2 cage and M.2 backplane \(16-EDSFF chassis\)” on page 109](#)
- [“Install the M.2 cage and M.2 backplane \(16-EDSFF chassis\)” on page 110](#)

Remove the M.2 backplane and M.2 drive

Use this information to remove the M.2 backplane and M.2 drive.

About this task

Attention:




- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 15](#).

- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

Step 1. Remove the top cover. See “Remove the top cover” on page 197.

Step 2. Disconnect the M.2 cables from the M.2 backplane.

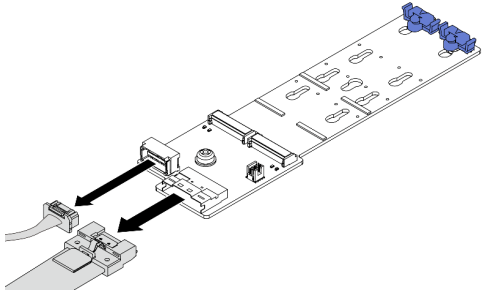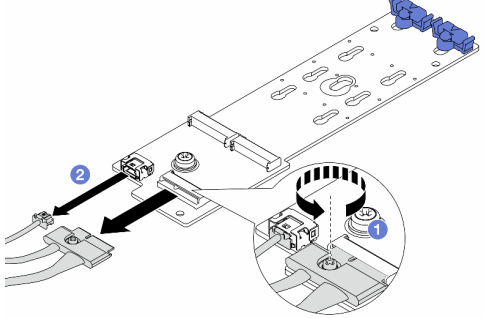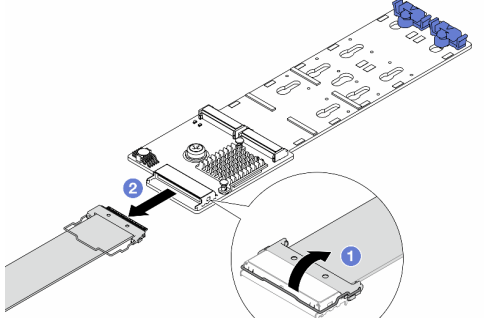 <p><i>Figure 84. M.2 x4 non-RAID SATA/NVMe 2-bay backplane</i></p>	<p>Disconnect the M.2 cables from the M.2 backplane.</p>
 <p><i>Figure 85. M.2 x1 RAID NVMe 2-bay backplane</i></p>	<ol style="list-style-type: none"> 1 Loosen the screw on the M.2 backplane. 2 Disconnect the M.2 cables from the M.2 backplane.
 <p><i>Figure 86. M.2 RAID SATA/NVMe 2-bay backplane</i></p>	<ol style="list-style-type: none"> 1 Pull up the latch on the M.2 cable. 2 Disconnect the M.2 cable from the M.2 backplane.

Step 3. Remove the M.2 drive from the M.2 backplane.

Note: The M.2 backplane you want to remove might be different from the following illustrations, but the removal method is the same.

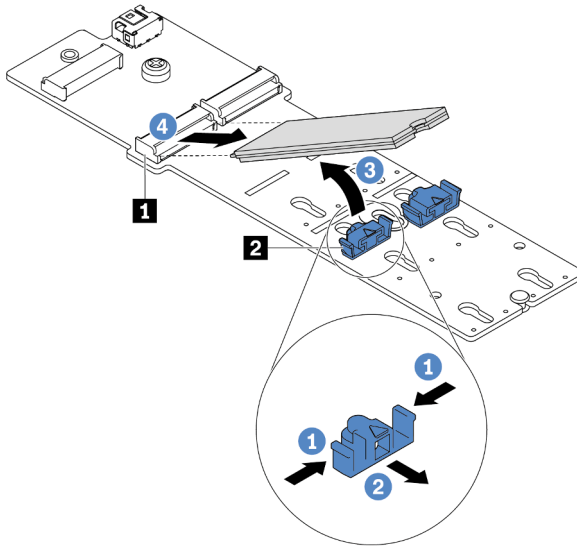


Figure 87. M.2 drive removal

- a. 1 Press both sides of the retainer 2.
- b. 2 Slide the retainer backward to loosen the M.2 drive from the M.2 backplane.
- c. 3 Rotate the M.2 drive away from the M.2 backplane.
- d. 4 Pull the M.2 drive away from the connector 1 at an angle of approximately 30 degrees.

Step 4. Remove the M.2 module from the chassis.

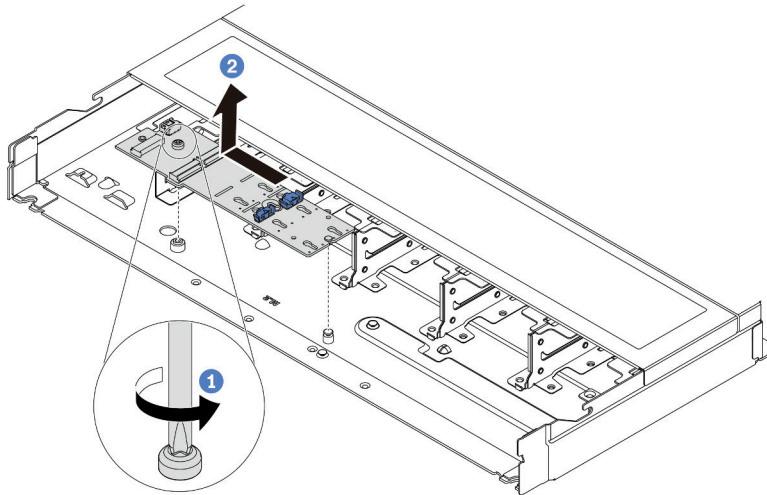


Figure 88. M.2 module removal

- a. **1** Loosen the screw.
- b. **2** Release the M.2 backplane from the pin and carefully lift the M.2 backplane out from the chassis.

Step 5. Disconnect all M.2 cables from the processor board.

After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Demo video

<https://www.youtube.com/watch?v=7IARQfLFk6Q>

Adjust the retainer on the M.2 backplane

Use this information to adjust the retainer on the M.2 backplane.

About this task

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See “[Power off the server](#)” on page 15.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

Note: The M.2 backplane you want to adjust might be different from the following illustrations, but the adjustment method is the same.

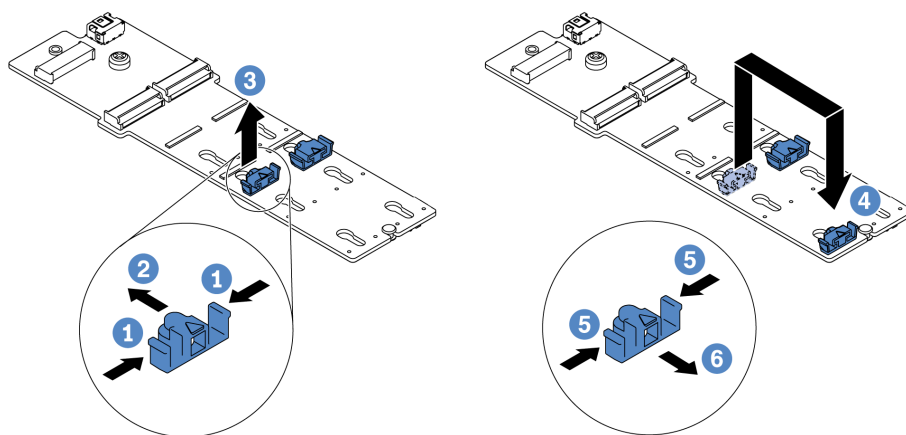


Figure 89. M.2 retainer adjustment

- Step 1. **1** Press both sides of the retainers.
- Step 2. **2** Move the retainer forward until it is in the large opening of the keyhole.
- Step 3. **3** Take the retainer out of the keyhole.
- Step 4. **4** Insert the retainer into the correct keyhole into which the retainer should be installed to accommodate the particular size of the M.2 drive you wish to install.
- Step 5. **5** Press both sides of the retainer.
- Step 6. **6** Slide the retainer backwards until it is seated in place.

Demo video

<https://www.youtube.com/watch?v=92ZproaVNV0>

Install the M.2 backplane and M.2 drive

Use this information to install the M.2 backplane and M.2 drive.

About this task

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See “[Power off the server](#)” on page 15.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

- Step 1. Touch the static-protective package that contains the M.2 backplane and M.2 drive to any unpainted surface on the outside of the server. Then, take the M.2 backplane and M.2 drive out of the package and place them on a static-protective surface.

Note: The M.2 backplane you want to install might be different from the following illustrations, but the installation method is the same.

- Step 2. (Optional) Adjust the retainer on the M.2 backplane to accommodate the particular size of the M.2 drive you wish to install. See [“Adjust the retainer on the M.2 backplane”](#) on page 104.
- Step 3. Locate the M.2 drive slot on the M.2 backplane.

Note: For some M.2 backplanes that support two identical M.2 drives, install the M.2 drive in slot 0 first.

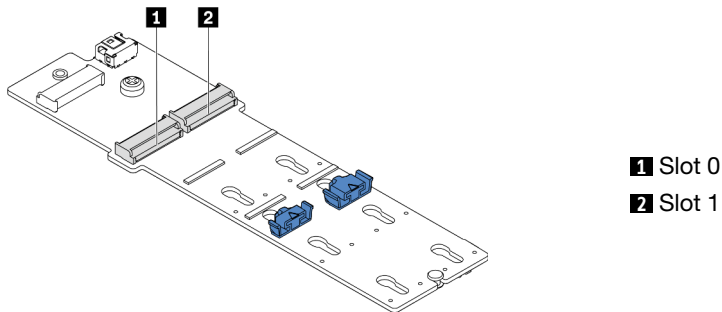


Figure 90. M.2 drive slot

- Step 4. Install the M.2 backplane onto the chassis.

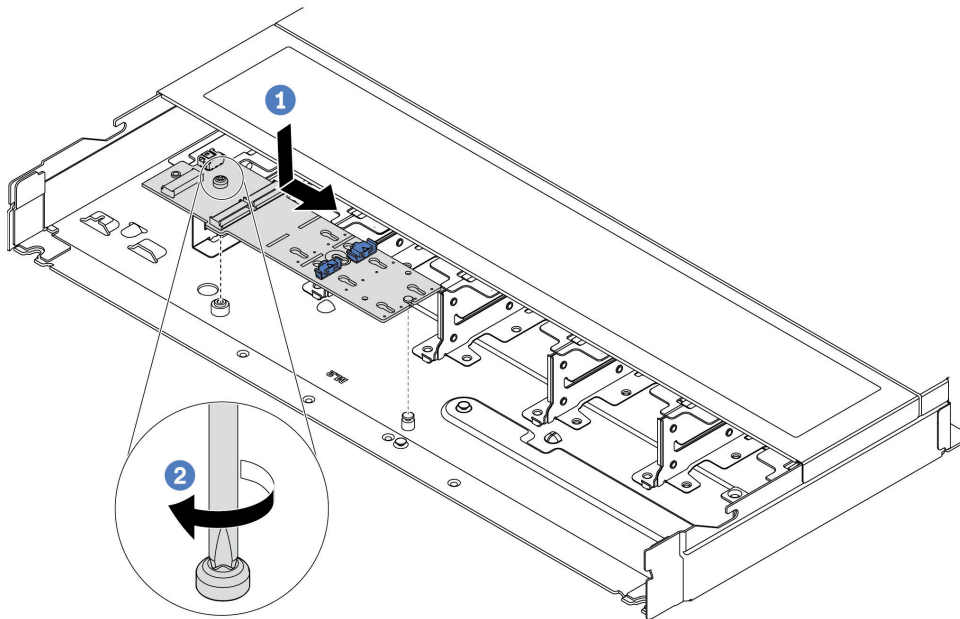


Figure 91. M.2 backplane installation

- 1 Align the notch of the M.2 backplane with the pin on the chassis, and then place down the M.2 backplane.
- 2 Tighten the screw to secure the M.2 backplane.

Step 5. Install the M.2 drive on the M.2 backplane.

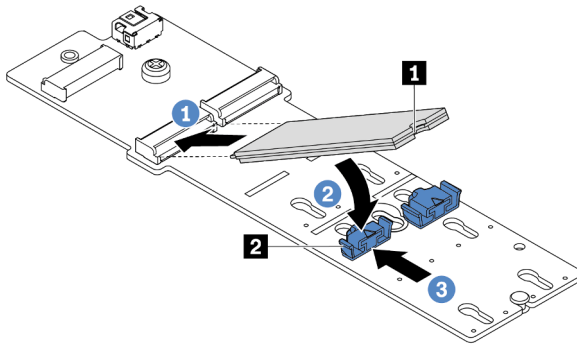
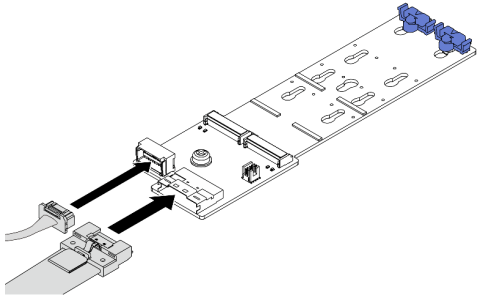
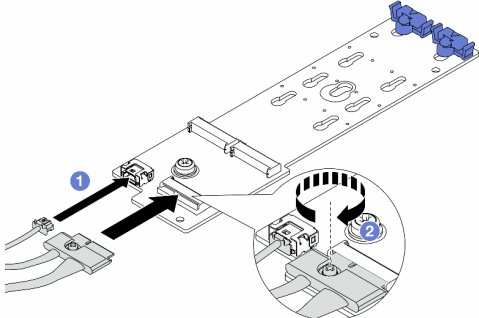
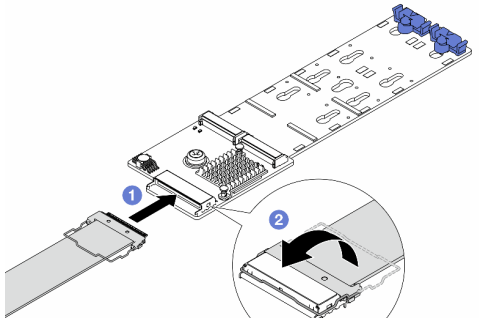


Figure 92. M.2 drive installation

- a. ① Insert the M.2 drive at an angle of approximately 30 degrees into the connector.
- b. ② Rotate the M.2 drive down until the notch 1 catches on the lip of the retainer 2.
- c. ③ Slide the retainer forward (toward the connector) to secure the M.2 drive into place.

Step 6. Disconnect the M.2 cables from the M.2 backplane.

 <p>Figure 93. M.2 x4 non-RAID SATA/NVMe 2-bay backplane</p>	<p>Connect the M.2 cables from the M.2 backplane.</p>
 <p>Figure 94. M.2 x1 RAID NVMe 2-bay backplane</p>	<ol style="list-style-type: none"> 1. 1 Connect the M.2 cables to the M.2 backplane. 2. 2 Tighten the screw on the M.2 backplane.
 <p>Figure 95. M.2 RAID SATA/NVMe 2-bay backplane</p>	<ol style="list-style-type: none"> 1. 1 Connect the M.2 cable to the M.2 backplane. 2. 2 Rotate the latch on the cable as illustrated, and press the latch down until it clicks into place.

After you finish

1. Complete the parts replacement. See [“Complete the parts replacement” on page 201](#).
2. Use the Lenovo XClarity Provisioning Manager to configure the RAID. For more information, see: https://sysmgt.lenovofiles.com/help/topic/ixpm_frontend/ixpm_product_page.html

Demo video

<https://www.youtube.com/watch?v=Q4iaG2nfwKg>

Remove the M.2 cage and M.2 backplane (16-EDSFF chassis)

Use the information in this topic to remove the M.2 cage and M.2 backplane from the 16-EDSFF chassis.

About this task

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 15](#).
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

- Step 1. Remove the top cover. See [“Remove the top cover” on page 197](#).
- Step 2. Disconnect the cables routed to the M.2 backplane. See [“M.2 drive backplane” on page 218](#) for more details.
- Step 3. Remove the M.2 cage from the chassis.

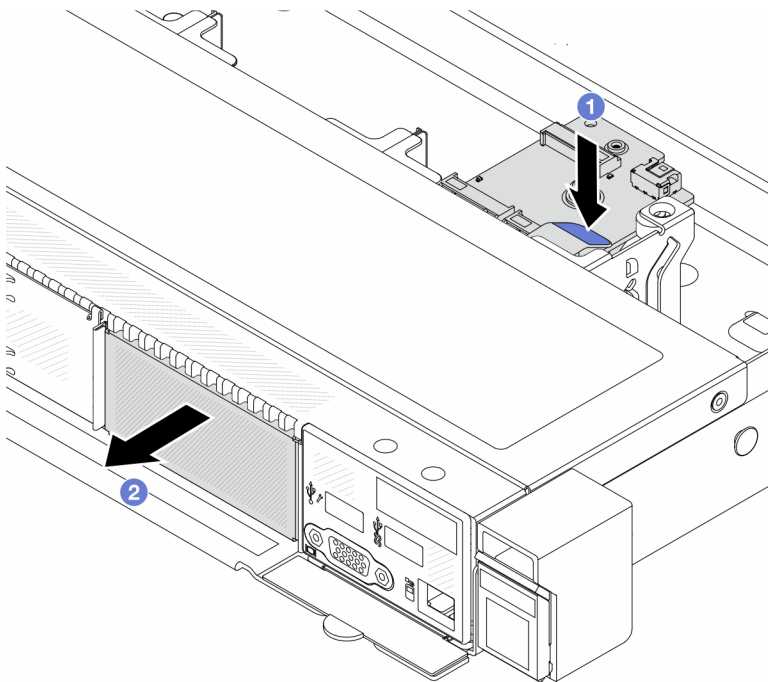


Figure 96. M.2 cage removal

- a. **1** Press down the blue touch point on release latch of the M.2 cage.
 - b. **2** Push the cage to the direction as shown to disengage the cage from the chassis.
- Step 4. Remove the M.2 backplane from the M.2 cage.

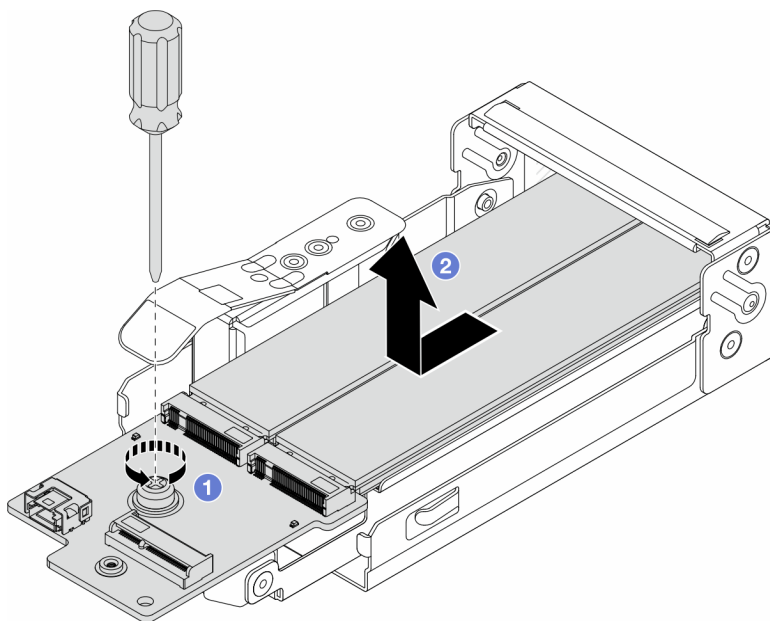


Figure 97. M.2 backplane removal

- a. ① Loosen the captive screw on the M.2 backplane.
- b. ② Slide the backplane out and take it out of the cage.

Step 5. Remove the M.2 drives if necessary, see [“Remove the M.2 backplane and M.2 drive” on page 101](#).

After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Demo video

<https://www.youtube.com/watch?v=nNaFqnomLOU>

Install the M.2 cage and M.2 backplane (16-EDSFF chassis)

Use the information in this topic to install the M.2 cage and M.2 backplane to the 16-EDSFF chassis.

About this task

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 15](#).
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

Step 1. Touch the static-protective package that contains the M.2 backplane, M.2 drive and M.2 cage to any unpainted surface on the outside of the server. Then, take the M.2 backplane, M.2 drive and M.2 cage out of the package and place them on a static-protective surface.

Note: The M.2 backplane you want to install might be different from the following illustrations, but the installation method is the same.

Step 2. To install the M.2 drives to M.2 backplane, see [“Install the M.2 backplane and M.2 drive”](#) on page 105.

Step 3. Install the M.2 backplane to M.2 cage.

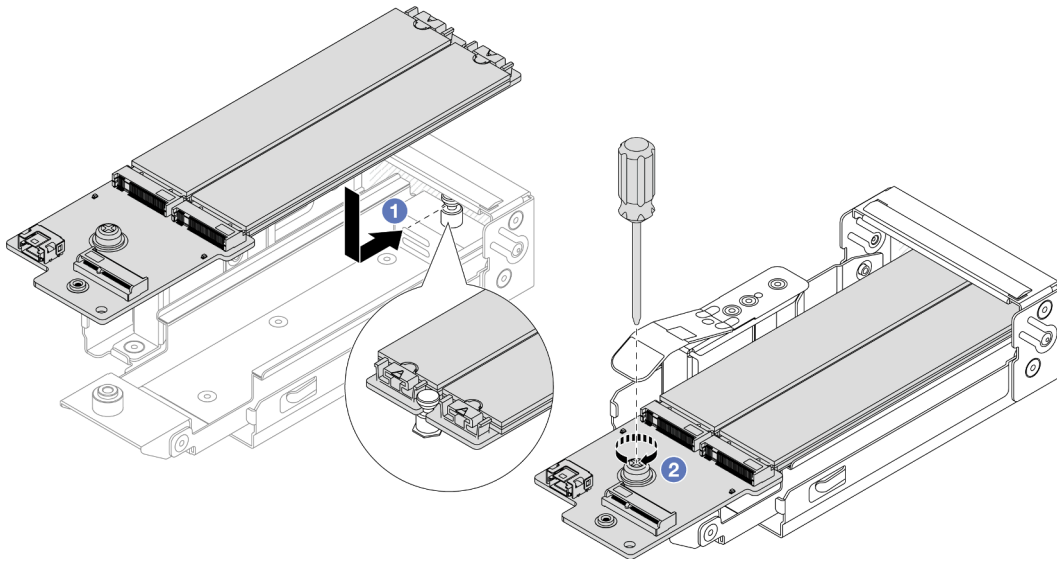


Figure 98. M.2 backplane installation

- a. ① Place the M.2 backplane evenly to the rails on the M.2 cage, and slide the backplane into the cage until the notch on the backplane mounts the groove on the standoff.
- b. ② Tighten the captive screw on the backplane, and make sure that the backplane is secured in place.

Step 4. Install the M.2 cage to the chassis.

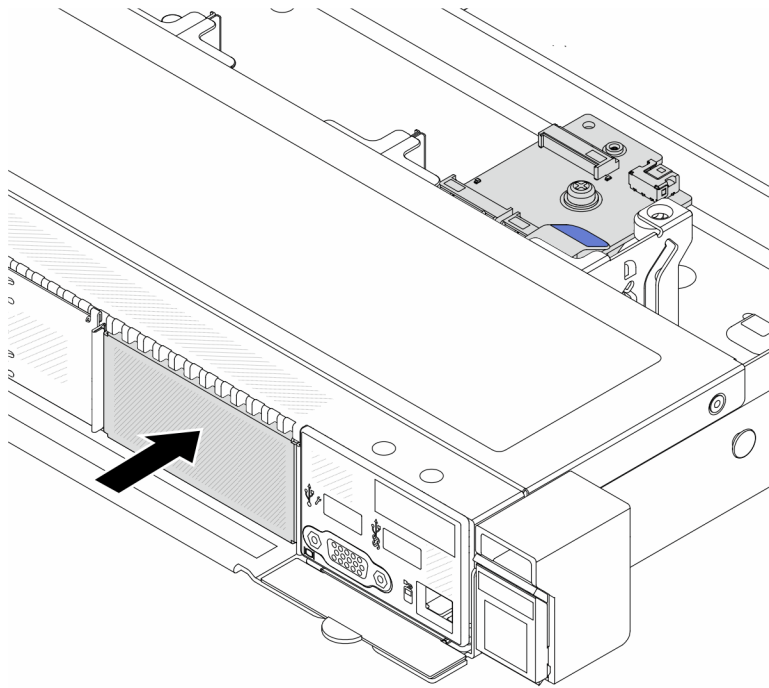


Figure 99. M.2 cage installation

Push the M.2 cage into the chassis until the release latch clicks into place.

Step 5. Reconnect the cables to the M.2 backplane. See “M.2 drive backplane” on page 218.

Step 6. Install the top cover. See “Install the top cover” on page 199.

After you finish

1. Complete the parts replacement. See “Complete the parts replacement” on page 201.
2. Use the Lenovo XClarity Provisioning Manager to configure the RAID. For more information, see: https://sysmgt.lenovofiles.com/help/topic/lxpm_frontend/lxpm_product_page.html.

Demo video

<https://www.youtube.com/watch?v=Uxo-8UPyDIQ>

OCP module replacement

Use this information to remove and install the OCP module.

Notes:

- The OCP module is available only on some models.
- If ThinkSystem V3 Management NIC Adapter Kit is installed on the server, it will not be displayed on the PCIe card list of system management software, such as XCC, LXPM, and so on.
- “Remove the OCP module” on page 112
- “Install the OCP module” on page 113

Remove the OCP module

Use this information to remove the OCP module.

About this task

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See “[Power off the server](#)” on page 15.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

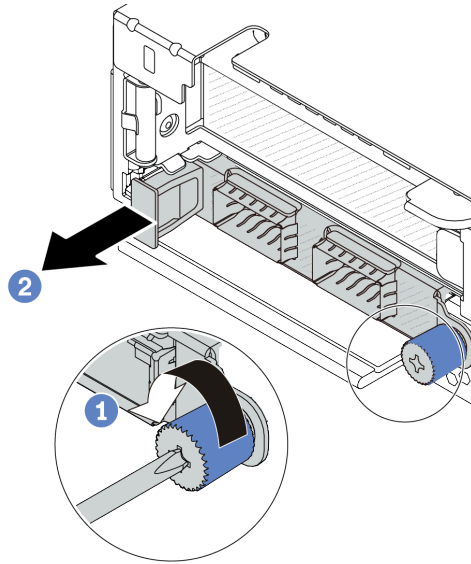
Procedure

Figure 100. OCP module removal

- Step 1. ① Loosen the thumbscrew that secures the module.
- Step 2. ② Pull out the OCP module by its handle on the left as shown.

After you finish

1. Install a new OCP module or a card filler. See “[Install the OCP module](#)” on page 113.
2. If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Demo video

<https://www.youtube.com/watch?v=MNeW-QatPd8>

Install the OCP module

Use this information to install the OCP module.

About this task**Attention:**

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.

- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 15](#).
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

Step 1. Touch the static-protective package that contains the OCP module to any unpainted surface on the outside of the server. Then, take the OCP module out of the package and place it on a static-protective surface.

Step 2. Install the OCP module.

Notes:

- Ensure that the Ethernet adapter is fully seated and the thumbscrew is securely tightened. Otherwise, the OCP module will not get full connection and may not function.
- If there is an OCP module installed, when the system is powered off but still plugged in to AC power, system fan 1 and fan 2 will continue to spin at a much lower speed. This is the system design to provide proper cooling for the OCP module.

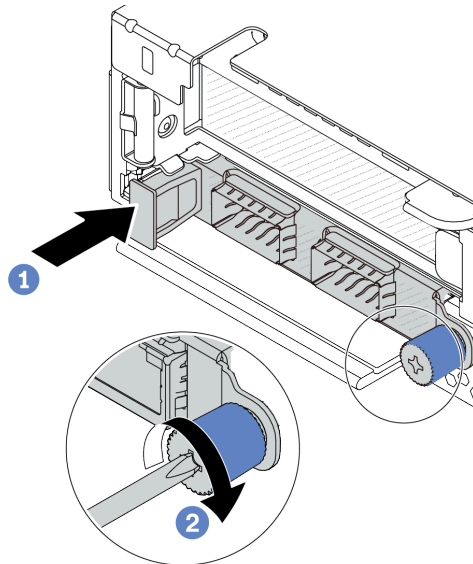


Figure 101. OCP module installation

- 1 Push the OCP module by its handle on the left until it is fully inserted into the connector on the processor board.
- 2 Fully tighten the thumbscrew to secure the adapter.

Notes:

 


Figure 102. OCP module (two connectors)

 


Figure 103. OCP module (four connectors)

- The OCP module provides two or four extra Ethernet connectors for network connections.
- By default, any Ethernet connector on the OCP module can also function as a management connector using the shared management capacity.

After you finish

Complete the parts replacement. See [“Complete the parts replacement” on page 201](#).

[Watch the procedure on YouTube](#)

Demo video

<https://www.youtube.com/watch?v=OZ27njIksFA>

PCIe adapter replacement

Use this information to remove and install a PCIe adapter.

The PCIe adapter can be an Ethernet adapter, a host bus adapter (HBA), a PCIe RAID adapter, a PCIe interposer adapter, a PCIe solid-state drive, a PCIe GPU, and any other supported PCIe adapter.

Notes:

- Depending on the specific type, the PCIe adapter might look different from the illustrations in this topic.
- Use any documentation that comes with the PCIe adapter, and follow the instructions and those in this topic.
- [“Remove a PCIe adapter” on page 115](#)
- [“Install a PCIe adapter” on page 117](#)

Remove a PCIe adapter

Use this information to remove a PCIe adapter.

About this task

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 15](#).
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

Step 1. Remove the top cover. See [“Remove the top cover” on page 197](#).

- Step 2. Remove the riser assembly. See [“Remove the rear riser card” on page 166.](#)
- Step 3. Disconnect cables from the PCIe adapter in the riser assembly.
- Step 4. Remove the PCIe adapter from the riser assembly.

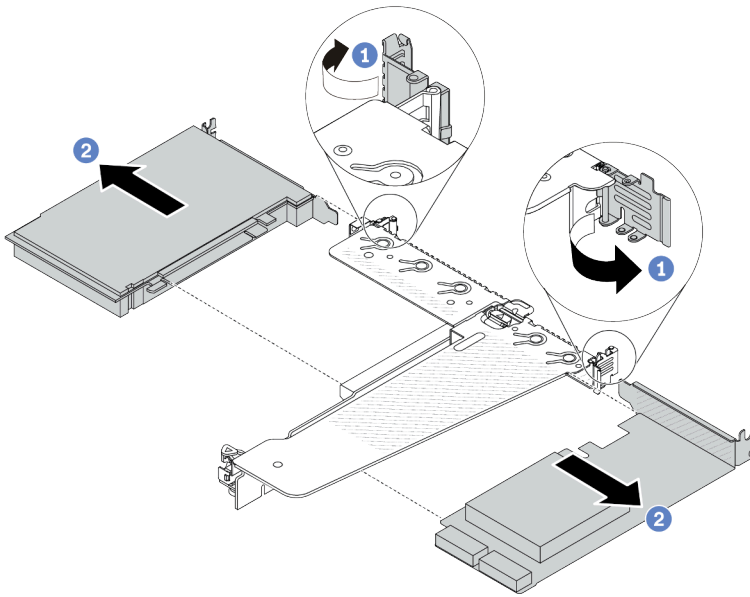


Figure 104. PCIe adapter removal from the rear LP-FH riser assembly

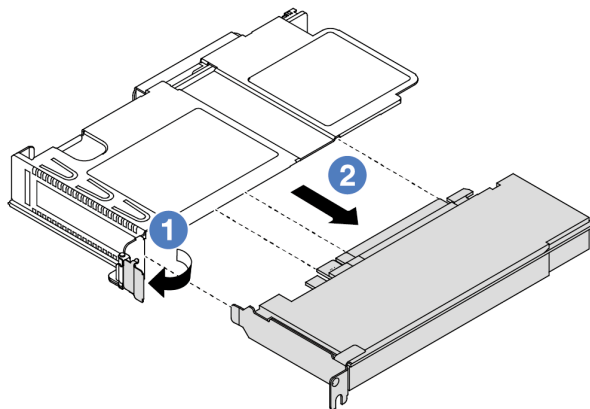


Figure 105. PCIe adapter removal from the front LP riser assembly

- a. ① Rotate the latch on the riser bracket to open position.
- b. ② Grasp the PCIe adapter by its edges and carefully pull it out of the PCIe adapter slot on the riser card.

Note: The procedure for removing a PCIe adapter is similar for different types of riser assembly. In this topic, the LP-FH riser assembly is used as an example.

After you finish

- 1. Install a PCIe adapter or PCIe adapter filler. See [“Install a PCIe adapter” on page 117.](#)

2. If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Demo video

<https://www.youtube.com/watch?v=9s2HdZJV-a8>

Install a PCIe adapter

Use this information to install a PCIe adapter.

About this task

Attention:

- Read “Installation Guidelines” on page 1 and “Safety inspection checklist” on page 2 to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See “Power off the server” on page 15.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

- Step 1. Touch the static-protective package that contains the PCIe adapter to any unpainted surface on the outside of the server. Then, take the PCIe adapter out of the package and place it on a static-protective surface.
- Step 2. Locate the correct PCIe slot for the PCIe adapter. For information about the PCIe slots and supported PCIe adapters, see “Rear view” in *User Guide* or *System Configuration Guide*.
- Step 3. Install the PCIe adapter and secure it to the riser assembly.

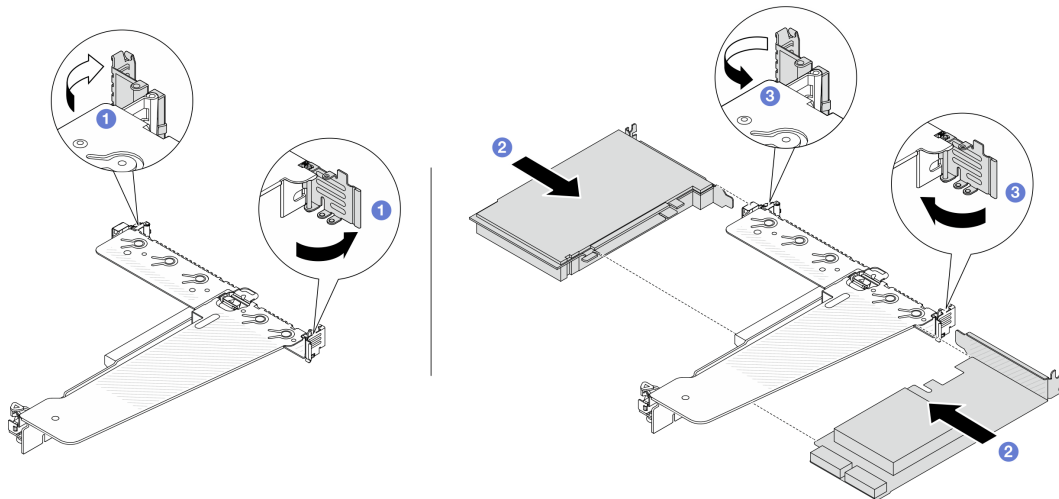


Figure 106. PCIe adapter installation into the rear LP-FH riser assembly

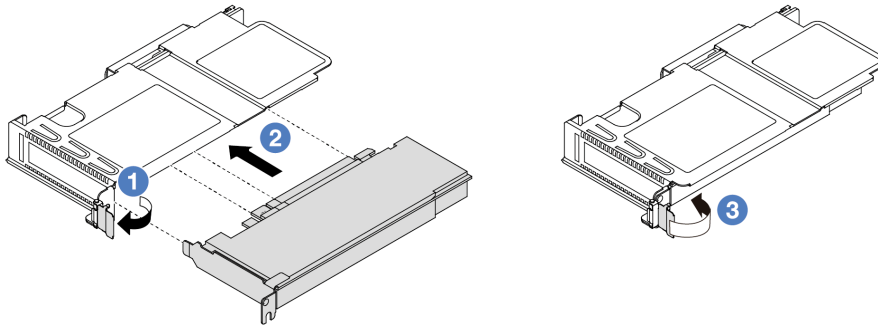


Figure 107. PCIe adapter installation into the front LP riser assembly

- a. 1 Rotate the latch on the riser bracket to open position.
- b. 2 Align the PCIe adapter with the PCIe slot on the riser card. Then, carefully press the PCIe adapter straight into the slot until it is securely seated and its bracket is secured.
- c. 3 Rotate the latch on the riser bracket to closed position.

Notes:

- Ensure that PCIe adapter installation meets the rules in [“PCIe slots and adapters” on page 6](#)
- The procedure for installing a PCIe adapter is similar for different types of riser assembly. In this topic, the LP-FH riser assembly is used as an example.

Step 4. Connect cables to the PCIe adapter in the riser assembly. See [Chapter 2 “Internal cable routing” on page 203](#).

After you finish

1. Reinstall the riser assembly. See [“Install the rear riser card” on page 168](#).
2. Complete the parts replacement. See [“Complete the parts replacement” on page 201](#).

Demo video

<https://www.youtube.com/watch?v=f1re0t3euFU>

Power supply unit replacement

Use this information to remove and install a power supply unit.

- [“Remove a power supply unit” on page 118](#)
- [“Install a power supply unit” on page 123](#)

Remove a power supply unit

Use this information to remove a power supply unit.

About this task

If the power supply unit to be removed is the only one installed, the power supply unit is not hot-swappable. Before removing it, you must turn off the server first. To support redundancy mode or hot-swap, install an additional hot-swap power supply unit.

Safety information for AC power supplies

S035



CAUTION:

Never remove the cover on a power supply or any part that has this label attached. Hazardous voltage, current, and energy levels are present inside any component that has this label attached. There are no serviceable parts inside these components. If you suspect a problem with one of these parts, contact a service technician.

S002



CAUTION:

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

S001



Electrical current from power, telephone, and communication cables is hazardous.

To avoid a shock hazard:

- Connect all power cords to a properly wired and grounded electrical outlet/source.
- Connect any equipment that will be attached to this product to properly wired outlets/sources.
- When possible, use one hand only to connect or disconnect signal cables.
- Never turn on any equipment when there is evidence of fire, water, or structural damage.
- The device might have more than one power cord, to remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

Safety information for DC power supplies

CAUTION:

240 V dc input (input range: 180-300 V dc) is supported in Chinese Mainland ONLY. Power supply with 240 V dc input cannot support hot plugging power cord function. Before removing the power supply

with dc input, please turn off server or disconnect dc power sources at the breaker panel or by turning off the power source. Then, remove the power cord.



NEVER CONNECT AND DISCONNECT THE POWER SUPPLY CABLE AND EQUIPMENT WHILE YOUR EQUIPMENT IS POWERED ON WITH DC SUPPLY (hot-plugging). Otherwise you may damage the equipment and result in data loss, the damages and losses result from incorrect operation of the equipment will not be covered by the manufacturers' warranty.


S035



CAUTION:

Never remove the cover on a power supply or any part that has this label attached. Hazardous voltage, current, and energy levels are present inside any component that has this label attached. There are no serviceable parts inside these components. If you suspect a problem with one of these parts, contact a service technician.

S019

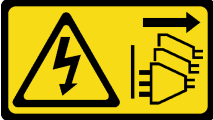

CAUTION:

The power-control button on the device does not turn off the electrical current supplied to the device. The device also might have more than one connection to dc power. To remove all electrical current from the device, ensure that all connections to dc power are disconnected at the dc power input terminals.

S029



**For -48V dc power supply, electrical current from power cords is hazardous.
To avoid a shock hazard:**

- **To connect or disconnect -48V dc power cords when you need to remove/install redundancy power supply unit(s).**

To Connect:

1. Turn OFF subject dc power source(s) and equipment (s) that are attached to this product.
2. Install the power supply unit(s) into the system housing.
3. Attach dc power cord(s) to the product.
 - Ensure correct polarity of -48 V dc connections: RTN is + and -Vin (typical -48 V) dc is -. Earth ground should be connected very well.
4. Connect dc power cord(s) to subject power source (s).
5. Turn ON all the power source(s).

To Disconnect:

1. Disconnect or turn off the subject dc power source(s) (at the breaker panel) before removing the power supply unit(s).
2. Remove the subject dc cord(s) and make sure the wire terminal of power cord(s) is insulated.
3. Unplug the subject power supply unit(s) from the system housing.

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Watch the procedure

A video of this procedure is available at YouTube: <https://www.youtube.com/playlist?list=PLYV5R7hVcs-CTkyVDu-5Lhy1r9G-4PQGI>.

Procedure

Step 1. If the server is in a rack, adjust the cable management arm (CMA) to gain access to the power supply bay.

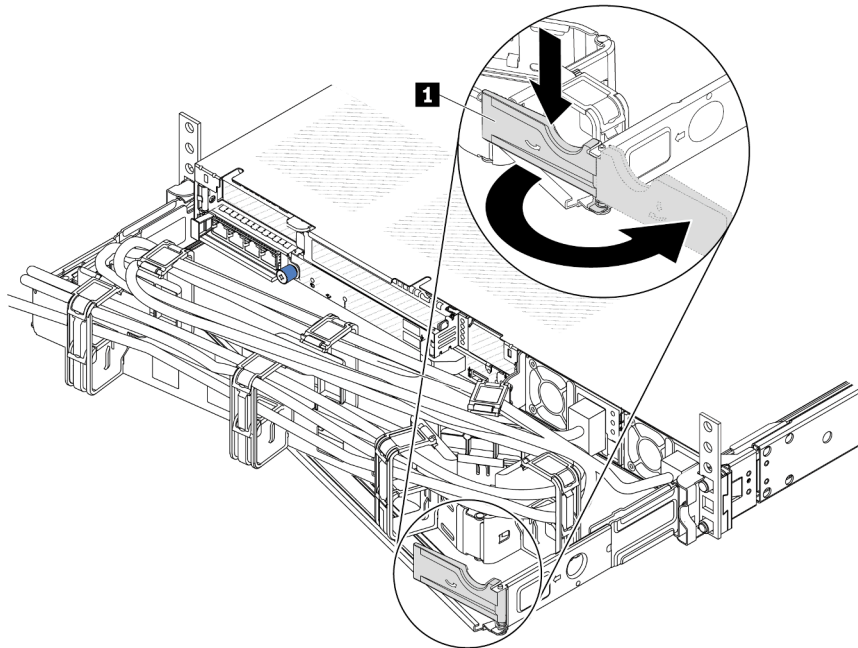


Figure 108. CMA adjustment

1. Press down the stop bracket **1** and rotate it to the open position.
 2. Rotate the CMA out of the way to gain access to the power supply.
- Step 2. Disconnect the power cord from the hot-swap power supply.
- For 240 V DC power supply units, turn off the server, and then, disconnect both ends of the power cord and keep it in an ESD-safe place.
 - For AC power supply units, disconnect both ends of the power cord and keep it in an ESD-safe place.
 - For -48V DC power supply units:
 1. Disconnect the power cords from the electrical outlet.
 2. Use a slotted screwdriver to loosen the captive screws on the power supply terminal block.
 3. Disconnect the power cords from the power supply unit, make the wire terminal insulated, and keep them in an ESD-safe place.

Note: If you are replacing two power supplies, replace them one by one to ensure that the power supply to the server is not interrupted. Do not disconnect the power cord from the secondly replaced power supply until the power output LED for the firstly replaced power supply is lit. For the location of the power output LED, refer to [“LEDs on the power supply unit” on page 385](#).

- Step 3. Press the release tab toward the handle and carefully pull the handle at the same time to slide the hot-swap power supply out of the chassis.

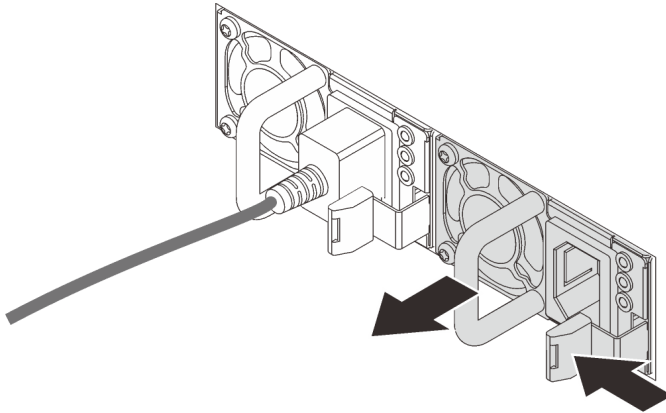


Figure 109. Hot-swap power supply removal

After you finish

1. Install a new power supply or install the power-supply filler to cover the power supply bay. See “[Install a power supply unit](#)” on page 123.

Important: To ensure proper cooling during normal server operation, both power supply bays must be occupied. This means that each bay must have a power supply installed; or one has a power supply installed and the other has a power supply filler installed.

2. If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Demo video

<https://www.youtube.com/watch?v=wPF6zj22FFU>

Install a power supply unit

Use this information to install a power supply unit.

About this task

The following describes the information that you must consider when installing a power supply:

- If the power supply unit to be removed is the only one installed, the power supply unit is not hot-swappable. Before removing it, you must turn off the server first. To support redundancy mode or hot-swap, install an additional hot-swap power supply unit.
- If you are replacing the existing power supply with a new power supply:
 - Use Lenovo Capacity Planner to calculate the required power capacity for what is configured for your server. More information about Lenovo Capacity Planner is available at: <https://datacentersupport.lenovo.com/solutions/Invo-lcp>
 - Ensure that the devices that you are installing are supported. For a list of supported optional devices for the server, go to: <https://serverproven.lenovo.com/>
 - Attach the power information label that comes with this option on the existing label near the power supply.



Figure 110. Example power supply unit label on the top cover

Safety information for AC power supplies

S035



CAUTION:

Never remove the cover on a power supply or any part that has this label attached. Hazardous voltage, current, and energy levels are present inside any component that has this label attached. There are no serviceable parts inside these components. If you suspect a problem with one of these parts, contact a service technician.

S002



CAUTION:

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

S001



Electrical current from power, telephone, and communication cables is hazardous.

To avoid a shock hazard:

- Connect all power cords to a properly wired and grounded electrical outlet/source.
- Connect any equipment that will be attached to this product to properly wired outlets/sources.
- When possible, use one hand only to connect or disconnect signal cables.
- Never turn on any equipment when there is evidence of fire, water, or structural damage.
- The device might have more than one power cord, to remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

Safety information for DC power supplies

CAUTION:

240 V dc input (input range: 180-300 V dc) is supported in Chinese Mainland ONLY. Power supply with 240 V dc input cannot support hot plugging power cord function. Before removing the power supply with dc input, please turn off server or disconnect dc power sources at the breaker panel or by turning off the power source. Then, remove the power cord.



NEVER CONNECT AND DISCONNECT THE POWER SUPPLY CABLE AND EQUIPMENT WHILE YOUR EQUIPMENT IS POWERED ON WITH DC SUPPLY (hot-plugging). Otherwise you may damage the equipment and result in data loss, the damages and losses result from incorrect operation of the equipment will not be covered by the manufacturers' warranty.

S035



CAUTION:

Never remove the cover on a power supply or any part that has this label attached. Hazardous voltage, current, and energy levels are present inside any component that has this label attached. There are no serviceable parts inside these components. If you suspect a problem with one of these parts, contact a service technician.

S019



CAUTION:

The power-control button on the device does not turn off the electrical current supplied to the device. The device also might have more than one connection to dc power. To remove all electrical current from the device, ensure that all connections to dc power are disconnected at the dc power input terminals.

S029



DANGER

**For -48V dc power supply, electrical current from power cords is hazardous.
To avoid a shock hazard:**

- **To connect or disconnect -48V dc power cords when you need to remove/install redundancy power supply unit(s).**

To Connect:

1. Turn OFF subject dc power source(s) and equipment (s) that are attached to this product.
2. Install the power supply unit(s) into the system housing.
3. Attach dc power cord(s) to the product.
 - Ensure correct polarity of -48 V dc connections: RTN is + and -Vin (typical -48 V) dc is -. Earth ground should be connected very well.
4. Connect dc power cord(s) to subject power source (s).
5. Turn ON all the power source(s).

To Disconnect:

1. Disconnect or turn off the subject dc power source(s) (at the breaker panel) before removing the power supply unit(s).
2. Remove the subject dc cord(s) and make sure the wire terminal of power cord(s) is insulated.
3. Unplug the subject power supply unit(s) from the system housing.

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

- Step 1. Touch the static-protective package that contains the hot-swap power supply to any unpainted surface on the outside of the server. And then, take the hot-swap power supply out of the package and place it on a static-protective surface.
- Step 2. If there is a power-supply filler installed, remove it.

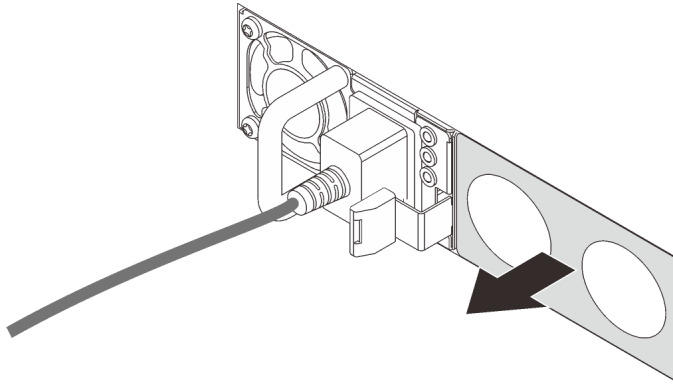


Figure 111. Hot-swap power supply filler removal

Step 3. Slide the new hot-swap power supply into the bay until it snaps into position.

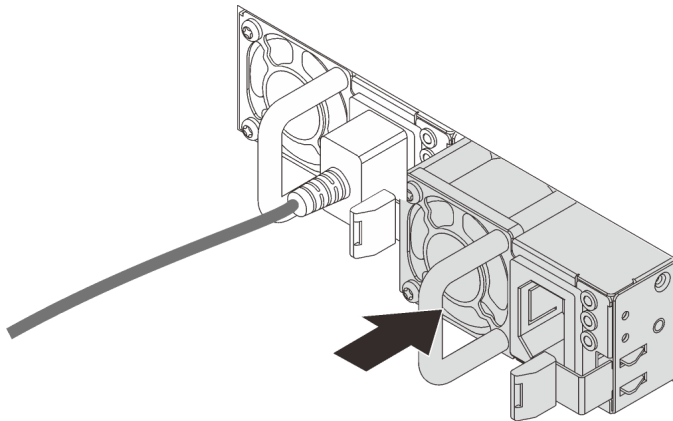



Figure 112. Hot-swap power supply installation

Step 4. Connect the power supply unit to a properly grounded electrical outlet.

- For 240 V DC power supply units:
 1. Turn off the server.
 2. Connect one end of the power cord to the power connector on the power supply unit.
 3. Connect the other end of the power cord to a properly grounded electrical outlet.
- For AC power supply units:
 1. Connect one end of the power cord to the power connector on the power supply unit.
 2. Connect the other end of the power cord to a properly grounded electrical outlet.
- For -48V DC power supply units:
 1. Use a slotted screwdriver to loosen the 3 captive screws on the power supply terminal block.
 2. Check the type label on the power supply block and each power cord.

Type	PSU terminal block	Power cord
Input	-Vin	-Vin

Ground		GND
Input	RTN	RTN

3. Face the groove side of each power cord pin upwards, and then plug the pins into corresponding holes on the power block. Use the table above for guidance to ensure that the pins find correct slots.
4. Tighten the captive screws on the power block. Ensure that the screws and cord pins are secured in place and no bare metal parts are shown.
5. Connect the other end of the cables to a properly grounded electrical outlet. Ensure that the cable ends find correct outlets.

After you finish

1. If you have adjusted the CMA to gain access to the power supply bay, readjust the CMA back in place.
2. If the server is turned off, turn on the server. Ensure that both the power input LED and the power output LED on the power supply are lit, indicating that the power supply is operating properly.

Demo video

<https://www.youtube.com/watch?v=dTOi5WLBO5M>

Processor and heat sink replacement (trained technicians only)

Use this information to remove and install a processor or a heat sink.

Important:

- This task must be operated by trained technicians that are certified by Lenovo Service. Do not attempt to remove or install it without proper training and qualification.
- Before replacing a processor, check the current PSB fuse policy. See *Service process before replacement* at [Service process for updating PSB fuse state](#).
- After replacing a processor, ensure that the processor fuse status is expected without unexpected XCC event logs. See *Service process after replacing a processor* at [Service process for updating PSB fuse state](#).
- When the server has a L2AM (The Lenovo Neptune Liquid to Air Module) installed, you must apply for a L2AM module handle (LACM heat sink bracket) first if you need to install or remove the system board assembly or processor. However, while replacing the old L2AM with a new one, you do not need to apply for a module handle (LACM heat sink bracket) as the new L2AM package contains it.

Attention:

- Before reusing a processor or heat sink, make sure you use Lenovo proven alcohol cleaning pad and thermal grease.
- Each processor socket must always contain a cover or a processor. When replacing a processor, protect the empty processor socket with a cover.
- Do not touch the processor socket or processor contacts. Processor-socket contacts are very fragile and easily damaged. Contaminants on the processor contacts, such as oil from your skin, can cause connection failures.
- Do not allow the thermal grease on the processor or heat sink to come in contact with anything. Contact with any surface can compromise the thermal grease, rendering it ineffective. Thermal grease can damage components, such as the electrical connectors in the processor socket.
- This section is for processor and heat sink replacement. For the replacement of the L2AM (The Lenovo Neptune Liquid to Air Module), refer to [“The Lenovo Neptune Liquid to Air Module replacement \(trained technicians only\)” on page 83](#).

The following illustration shows the components of the processor and heat sink.

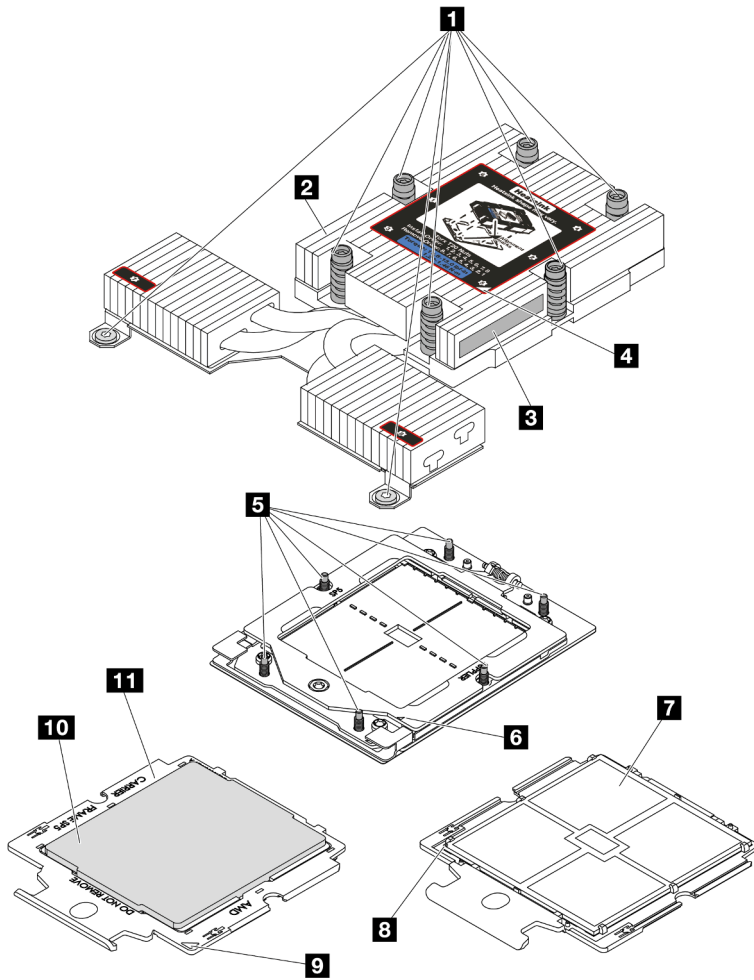


Figure 113. Process and heat sink components

1 Captive screws (8)	2 Heat sink
3 Processor identification label	4 Heat sink triangular mark
5 Screw bolts (6)	6 Retention frame triangular mark
7 Processor contacts	8 Processor triangular mark
9 Carrier triangular mark	10 Processor carrier
11 Processor heat spreader	

- [“Remove a heat sink” on page 130](#)
- [“Remove a processor” on page 132](#)
- [“Install a processor” on page 133](#)
- [“Install a heat sink” on page 135](#)

Remove a heat sink

Use this information to remove a heat sink. This task requires a Torx T20 screwdriver. This procedure must be executed by a trained technician.

About this task

Important: This task must be operated by trained technicians that are certified by Lenovo Service. Do not attempt to remove or install it without proper training and qualification.

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See “[Power off the server](#)” on page 15.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Prepare the following screwdriver to ensure to install and remove the corresponding screws properly.

Torque screwdriver type list	Screw Type
Torx T20 screwdriver	Torx T20 screw

Procedure

Step 1. Make preparations for this task.

- a. If the server is installed in a rack, slide the server out on its rack slide rails to gain access to the top cover, or remove the server from the rack. See “[Remove the server from rack](#)” on page 16.
- b. Remove the top cover. See “[Remove the top cover](#)” on page 197.

Step 2. Remove the heat sink.

Notes:

- Do not touch the contacts on the bottom of the processor.
- Keep the processor socket clean from any object to prevent possible damages.

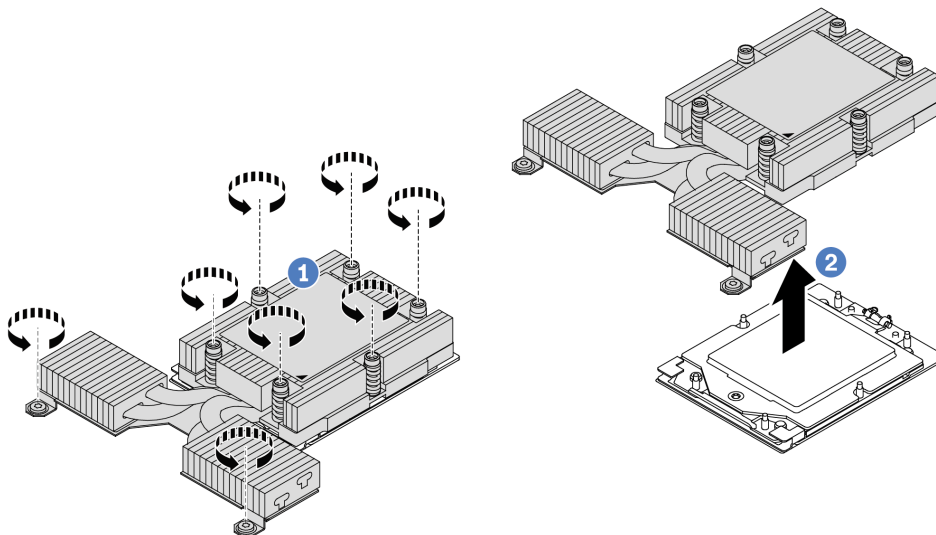


Figure 114. Removing a performance heat sink

- a. ① Fully loosen all the screws on the heat sink **in the removal sequence shown** on the heat-sink label.
- b. ② Carefully lift the heat sink from the processor socket.

After you finish

- If you are replacing a heat sink, install a new heat sink. See “Install a heat sink” on page 135.
- If you are replacing a processor, remove the processor. See “Remove a processor” on page 132.
- If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Demo video

<https://www.youtube.com/watch?v=HLIADlwVpwU>

Remove a processor

Use this information to remove a processor. This task requires a Torx T20 screwdriver. The procedure must be executed by a trained technician.

About this task

Important: This task must be operated by trained technicians that are certified by Lenovo Service. Do not attempt to remove or install it without proper training and qualification.

Attention:

- Read “Installation Guidelines” on page 1 and “Safety inspection checklist” on page 2 to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See “Power off the server” on page 15.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

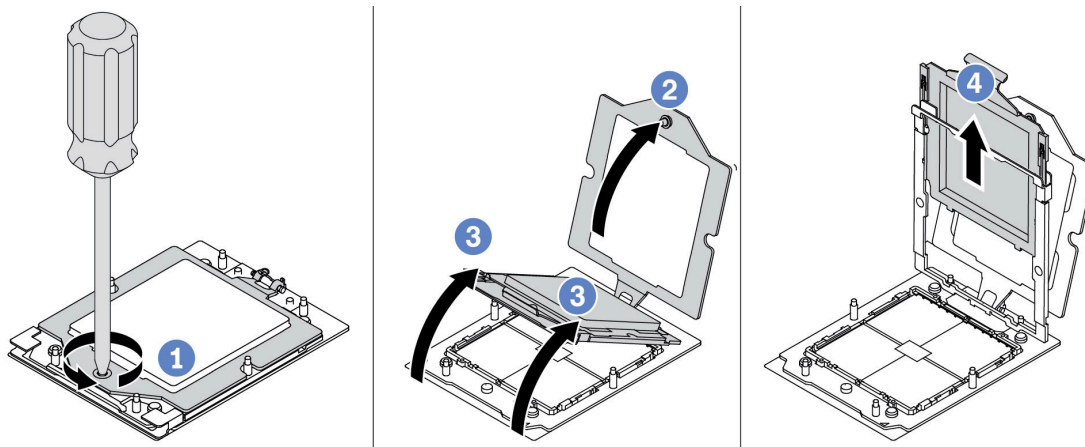


Figure 115. Processor removal

- Step 1. Use a Torx T20 screwdriver to loosen the captive screw.
- Step 2. Slightly lift up the retention frame in the direction shown.
- Step 3. Slightly lift up the rail frame in the direction shown. The processor in the rail frame is spring-loaded.
- Step 4. Hold the blue tab of the processor carrier and slide the processor carrier out of the rail frame.

After you finish

- If you are going to install a new processor, see “Install a processor” on page 133.
- If you are not going to install a processor, cover the processor socket with the socket cover and install a processor filler.

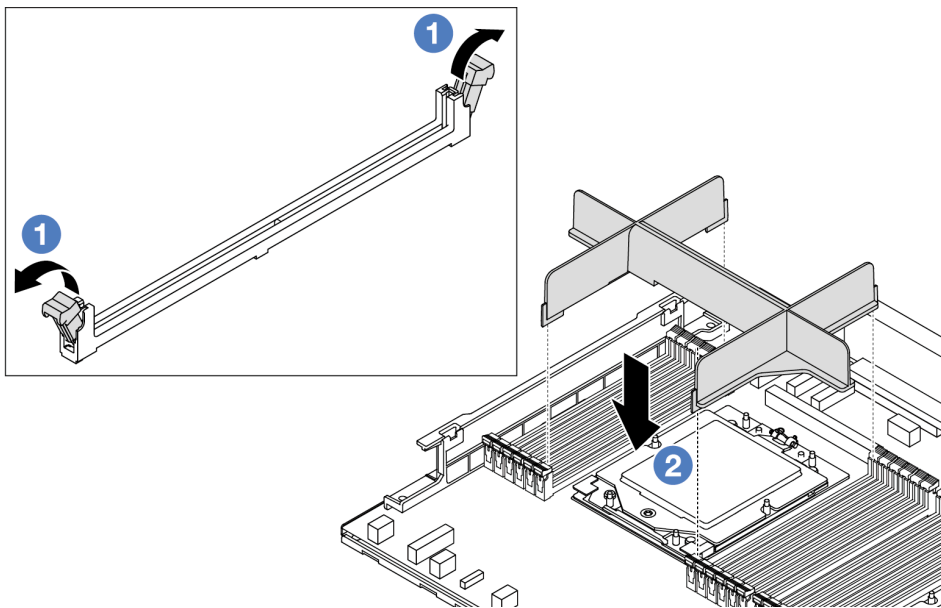


Figure 116. Installing a processor filler

1. Gently open the retaining clip on each end of the memory module slots next to the left and right sides of the processor.
 2. Align the processor filler with the slots, and place the processor filler on the slots with both hands. Firmly press the processor filler straight down into the slots until the retaining clips snap into the locked position.
- If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Demo video

<https://www.youtube.com/watch?v=HLIADlwVpwU>

Install a processor

Use this information to install a processor. This task requires a Torx T20 screwdriver. The procedure must be executed by a trained technician.

About this task

Important: This task must be operated by trained technicians that are certified by Lenovo Service. Do not attempt to remove or install it without proper training and qualification.

Attention:

- Read “Installation Guidelines” on page 1 and “Safety inspection checklist” on page 2 to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See “Power off the server” on page 15.

- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Notes:

- See <https://serverproven.lenovo.com/> for a list of processors supported for your server. All processors on the system board (system board assembly) must have the same speed, number of cores, and frequency.
- Before you install a new processor or replacement processor, update your system firmware to the latest level. See “Update the firmware” in *User Guide*.

Firmware and driver download: You might need to update the firmware or driver after replacing a component.

- Go to <https://datacentersupport.lenovo.com/tw/en/products/servers/thinksystem/sr645v3/7d9c/downloads/driver-list/> to see the latest firmware and driver updates for your server.
- Go to “Update the firmware” in *User Guide* or *System Configuration Guide* for more information on firmware updating tools.

Procedure

Step 1. (Optional) If a processor filler is installed on the processor socket, remove the processor filler.

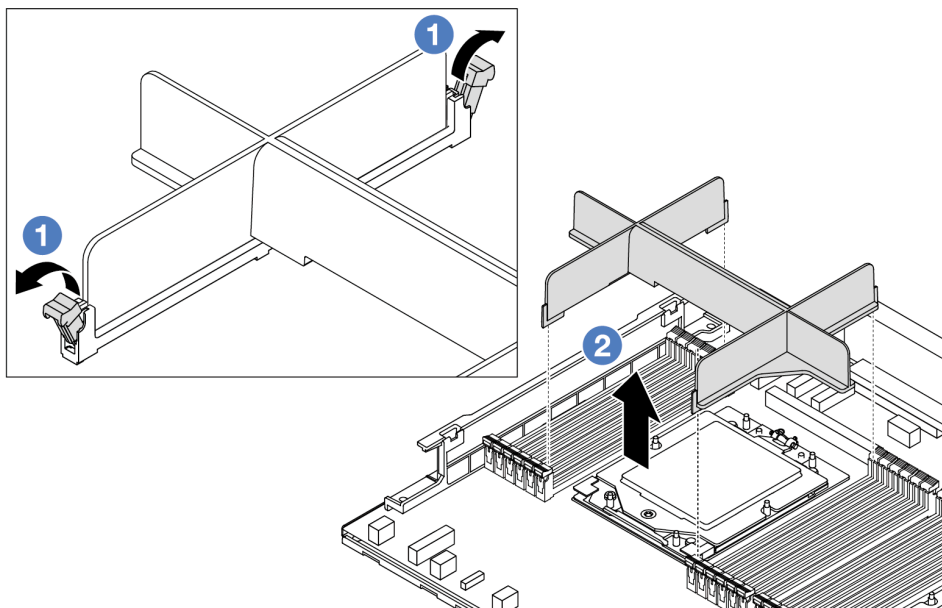


Figure 117. Removing a processor filler

- 1 Gently open the retaining clip on each end of the memory module slots next to the left and right sides of the processor.
- 2 Grasp the processor filler with both hands and carefully lift it out of the slots.

Step 2. (Optional) Remove the processor socket cover.

The procedure of removing the processor socket cover is the same as that of removing a processor. See “Remove a processor” on page 132.

Step 3. Install the processor.

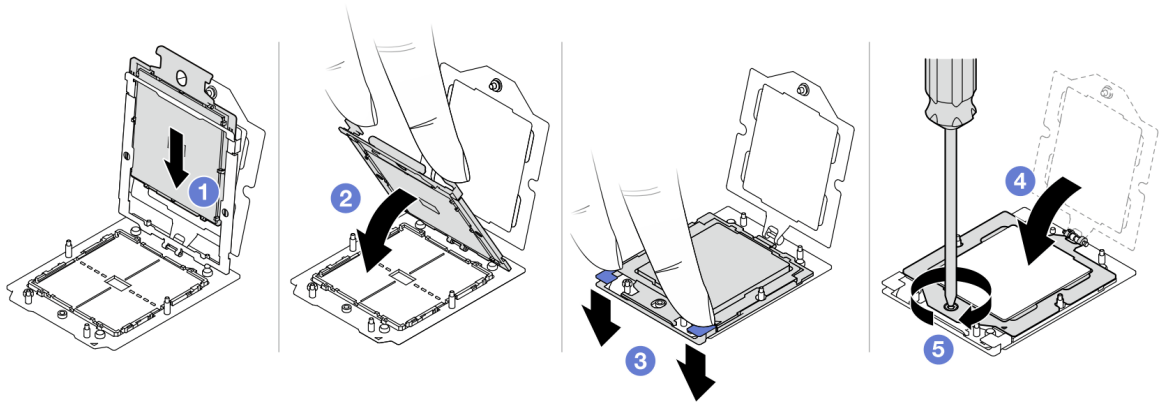


Figure 118. Installing a processor

1. **1** Slide the processor carrier into the rail frame.

Attention:

- Make sure the processor carrier is well seated inside the rail frame.
 - Make sure the rear of processor carrier does not float above the rail frame.
2. **2** Use the index finger of both hands to press down the rail frame.
 3. **3** Use the index finger of both hands to push the rail frame down until the blue latches lock into place.
 4. **4** Close the retention frame.
 5. **5** Close the retention frame.

After you finish

Install the heat sink. See “[Install a heat sink](#)” on page 135.

Demo video

https://www.youtube.com/watch?v=gy9Q_kR9Q4w

Install a heat sink

Follow the instructions in this section to install a heat sink. This task requires a Torx T20 screwdriver. The procedure must be executed by a trained technician.

About this task

Important: This task must be operated by trained technicians that are certified by Lenovo Service. Do not attempt to remove or install it without proper training and qualification.

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See “[Power off the server](#)” on page 15.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Prepare the following screwdriver to ensure to install and remove the corresponding screws properly.

Torque screwdriver type list	Screw Type
Torx T20 screwdriver	Torx T20 screw

Procedure

Step 1. Do the following according to the actual scenario.

If you are replacing a processor and reusing the heat sink:

1. Remove the processor identification label from the heat sink and replace it with the new label that comes with the replacement processor.
2. Wipe off old thermal grease on the heat sink with an alcohol cleaning pad.

If you are replacing a heat sink and reusing the processor:

1. Remove the processor identification label from the old heat sink and place it on the new heat sink in the same location.

Note: If you are unable to remove the label and place it on the new heat sink, or if the label is damaged during transfer, write the processor serial number from the processor identification label on the new heat sink in the same location as the label would be placed using a permanent marker.

2. Wipe off old thermal grease on the processor with an alcohol cleaning pad.
3. Check whether the manufacturing date on the new heat sink exceeds two years.
 - If yes, wipe off the thermal grease on the new heat sink with an alcohol cleaning pad, and go to [Step 2 on page 136](#).
 - If no, go to [Step 3 on page 136](#).

Step 2. Apply new thermal grease on the top of the processor with a syringe by forming four uniformly spaced dots, while each dot consists of about 0.1 ml of thermal grease.

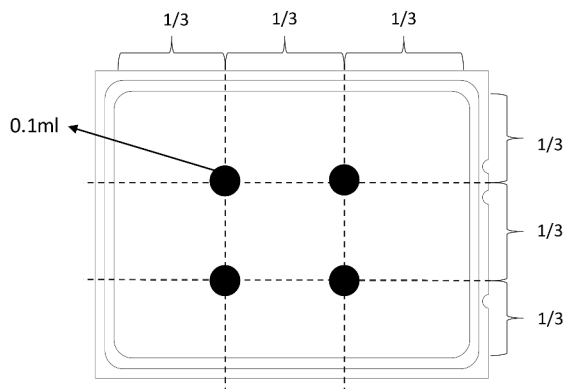


Figure 119. Applying thermal grease

Step 3. Install the heat sink.

Note: For reference, the torque required for the fasteners to fully tighten is 1.22-1.46 newton-meters (10.8-13.0 inch-pounds).

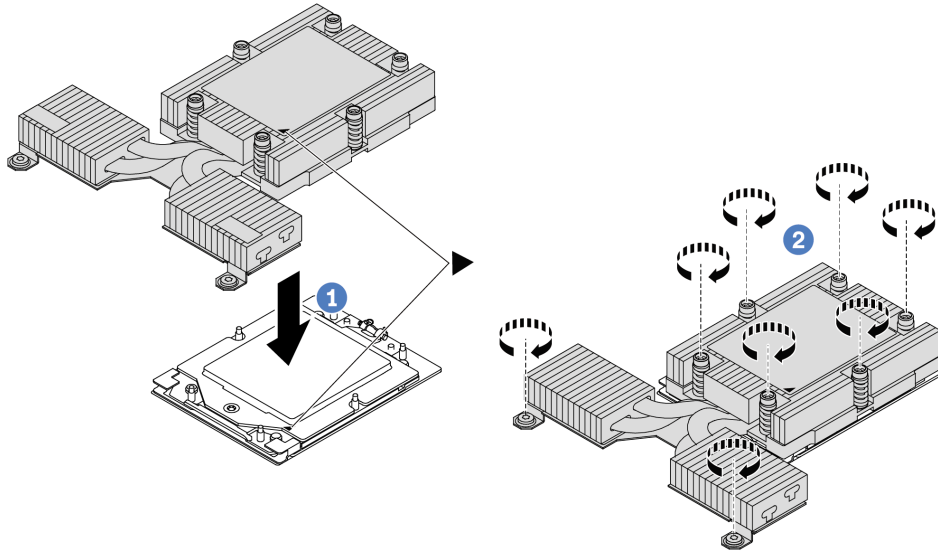


Figure 120. Installing a performance heat sink

- a. 1 Align the triangular mark and screws on the heat sink with the triangular mark and threaded posts on the processor socket; then install the heat sink onto the processor carrier.
- b. 2 Fully tighten all the screws *in the installation sequence shown* on the heat-sink label.

After you finish

1. Install any parts that you have removed.
2. Complete the parts replacement. See “Complete the parts replacement” on page 201.

Demo video

https://www.youtube.com/watch?v=gy9Q_kR9Q4w

Rack latches replacement

Use this information to remove and install the rack latches.

- “Remove the rack latches” on page 137
- “Install the rack latches” on page 138

Remove the rack latches

Use this information to remove the rack latches.

About this task

Attention: Read “Installation Guidelines” on page 1 and “Safety inspection checklist” on page 2 to ensure that you work safely.

Watch the procedure

A video of this procedure is available at YouTube: <https://www.youtube.com/playlist?list=PLYV5R7hVcs-CTkyVDu-5Lhy1r9G-4PQGI>.

Procedure

- Step 1. If the server is installed with the security bezel, remove it first. See [“Remove the security bezel” on page 169](#).
- Step 2. Remove the rack latch.

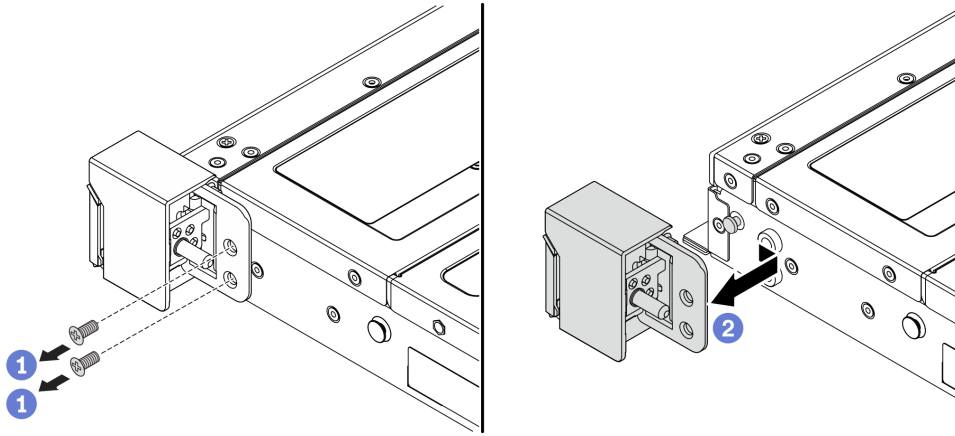


Figure 121. Rack latch removal

- a. 1 On each side of the server, remove the two screws that secure the rack latch.
- b. 2 On each side of the server, remove the rack latch from the chassis as shown.

After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Demo video

https://www.youtube.com/watch?v=JvMgE-cSy_c

Install the rack latches

Use this information to install the rack latches.

About this task

Attention: Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.

Procedure

- Step 1. Touch the static-protective package that contains the rack latches to any unpainted surface on the outside of the server. Then, take the rack latches out of the package and place them on a static-protective surface.
- Step 2. Install the rack latch.

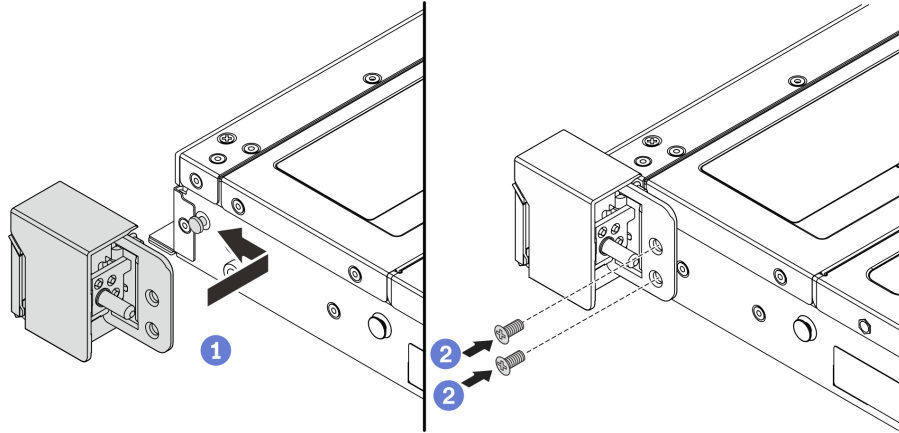


Figure 122. Rack latch installation

- a. ① On each side of the server, align the rack latch with the pin on the chassis. Then, press the rack latch onto the chassis and slightly slide it forward as shown.
- b. ② Install the two screws to secure the rack latch on each side of the server.

After you finish

Complete the parts replacement. See [“Complete the parts replacement” on page 201](#).

Demo video

https://www.youtube.com/watch?v=pCE1-3NS_M4


RAID flash power module replacement

The RAID flash power module protects the cache memory on the installed RAID adapter. You can purchase a RAID flash power module from Lenovo. Use this information to remove and install a RAID flash power module (also called super capacitor).

For a list of supported options, see:
<https://serverproven.lenovo.com/>

RAID flash power module can be installed on the chassis or on one riser slot.

RAID flash power modules in the chassis

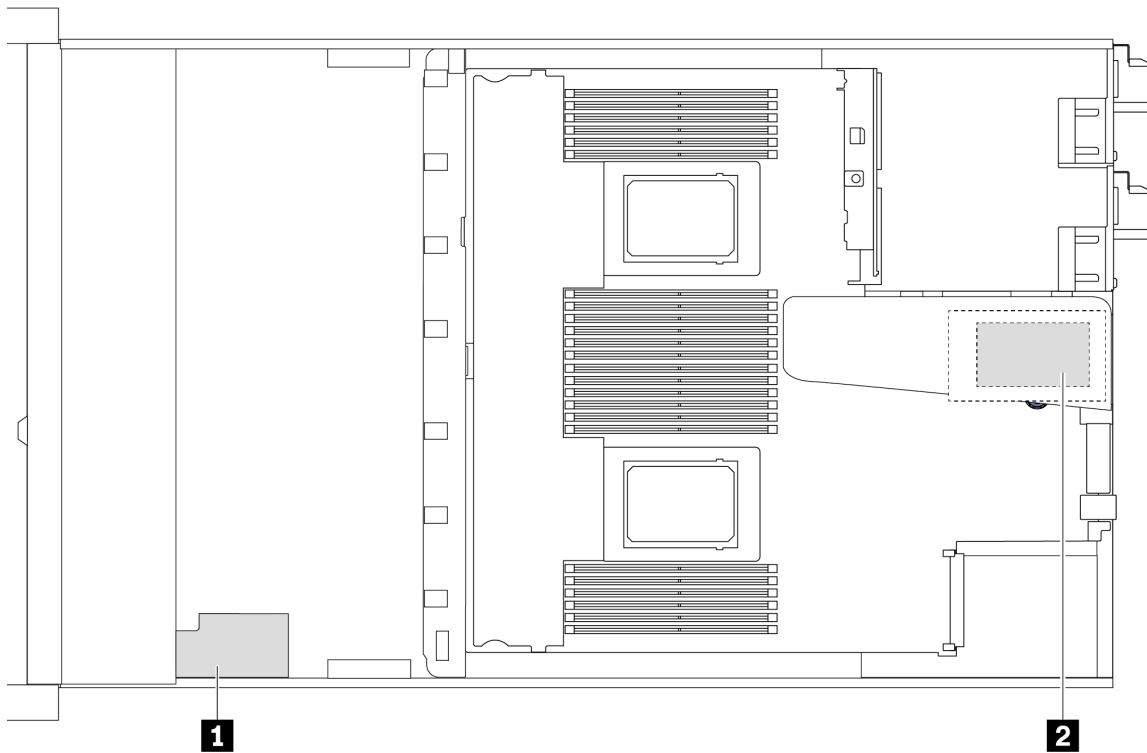

No.	Location	Scenario
1	RAID flash power module on the chassis	2.5" chassis installed with a performance heat sink
2	RAID flash power module on riser 1 slot	<ul style="list-style-type: none"> • 3.5" chassis installed with a performance heat sink • 2.5" chassis installed with the Lenovo Neptune Liquid to Air Module

- [“Remove the RAID flash power module on the chassis” on page 140](#)
- [“Install the RAID flash power module on the chassis” on page 142](#)
- [“Remove the RAID flash power module on the riser” on page 144](#)
- [“Install the RAID flash power module on the riser” on page 145](#)

Remove the RAID flash power module on the chassis

Use this information to remove the RAID flash power module on the chassis.

About this task

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 15](#).
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

- Step 1. Remove the top cover. See “Remove the top cover” on page 197.
- Step 2. Disconnect the cable of the RAID flash power module.
- Step 3. Remove the RAID flash power module on the chassis.

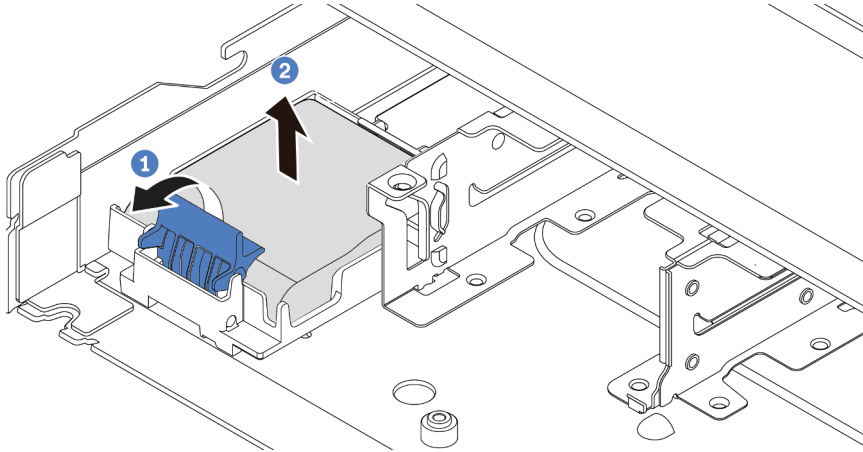


Figure 123. Removal of the RAID flash power module on the chassis

- a. ① Open the retention clip on the holder of the RAID flash power module.
 - b. ② Take the RAID flash power module out of the holder.
- Step 4. Remove the RAID flash power module holder as shown if necessary.

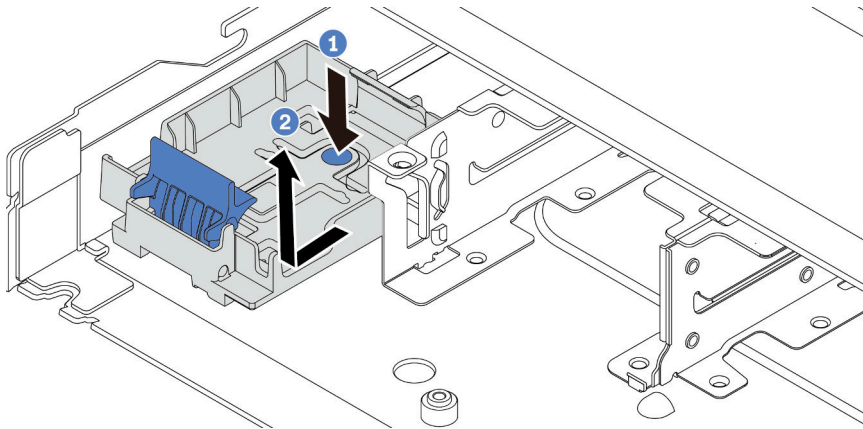


Figure 124. RAID flash power module holder removal

After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Demo video

<https://www.youtube.com/watch?v=sLoydFNTE7c>

Install the RAID flash power module on the chassis

Use this information to install the RAID flash power module on the chassis.

About this task

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 15](#).
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

- Step 1. Touch the static-protective package that contains the RAID flash power module to any unpainted surface on the outside of the server. Then, take the RAID flash power module out of the package and place it on a static-protective surface.
- Step 2. If the server comes with a tray that covers the place of the RAID flash power module on the chassis, remove it first.

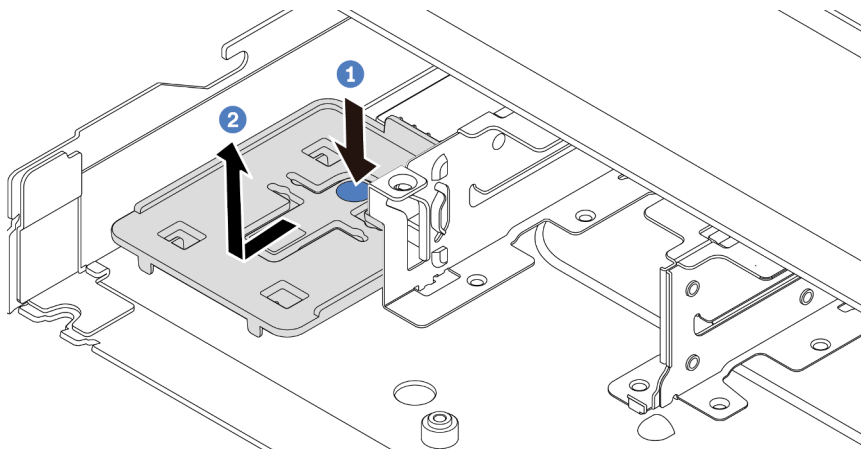


Figure 125. Tray removal

- a. **1** Press the blue touch point to disengage the tray from the chassis.
- b. **2** Move the tray to the direction as shown and lift it out of the chassis.

Step 3. If the server does not have a RAID flash power module holder on the chassis, install one first. Put the holder down, and move it to the direction as shown to lock the holder onto the chassis.

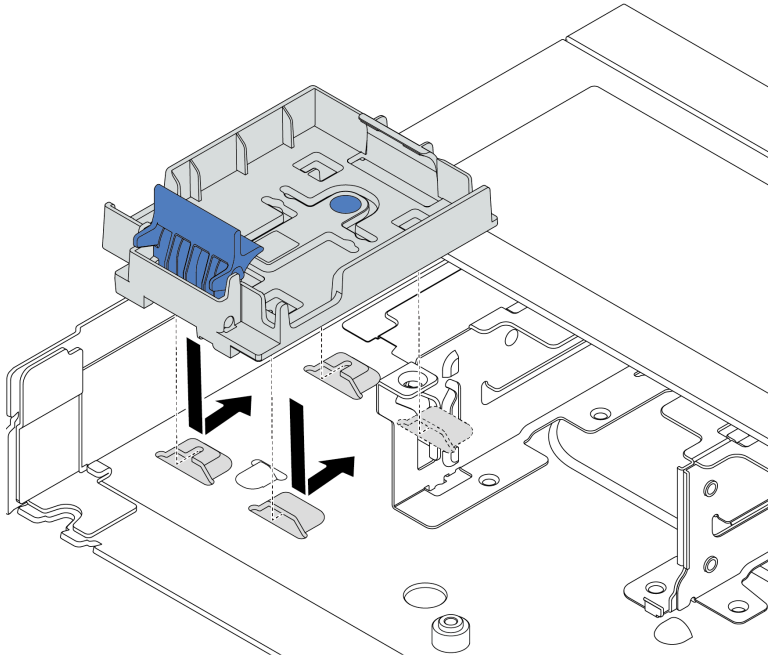


Figure 126. RAID flash power module holder installation

Step 4. Install the RAID flash power module on the chassis.

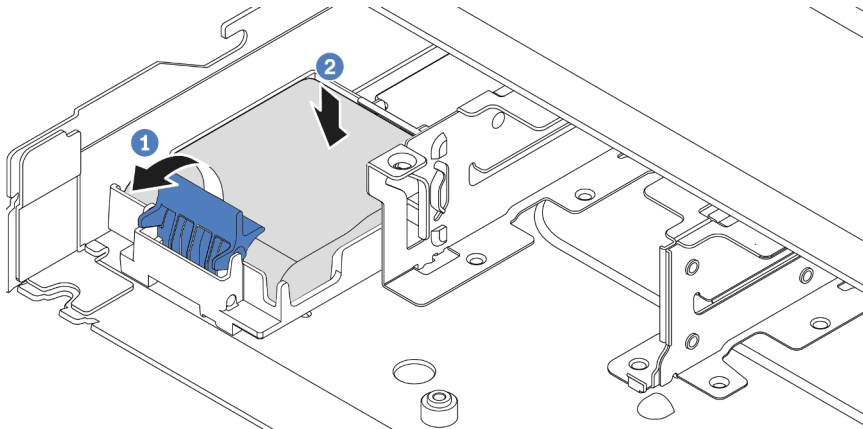


Figure 127. Installation of the RAID flash power module on the chassis

- a. 1 Open the retention clip on the holder.
- b. 2 Put the RAID flash power module into the holder and press it down to secure it into the holder.

After you finish

1. Connect the RAID flash power module to an adapter with the extension cable that comes with the flash power module. See [“RAID flash power modules” on page 224](#).
2. Complete the parts replacement. See [“Complete the parts replacement” on page 201](#).

Demo video

<https://www.youtube.com/watch?v=X1VZgNyBVO4>

Remove the RAID flash power module on the riser

Use this information to remove the RAID flash power module on the riser.

About this task

Attention:

- Read “Installation Guidelines” on page 1 and “Safety inspection checklist” on page 2 to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See “Power off the server” on page 15.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

- Step 1. Remove the top cover. See “Remove the top cover” on page 197.
- Step 2. Disconnect the cable of the RAID flash power module.
- Step 3. Remove the riser assembly. See “Remove the rear riser card” on page 166.
- Step 4. Remove the RAID flash power module from the riser.

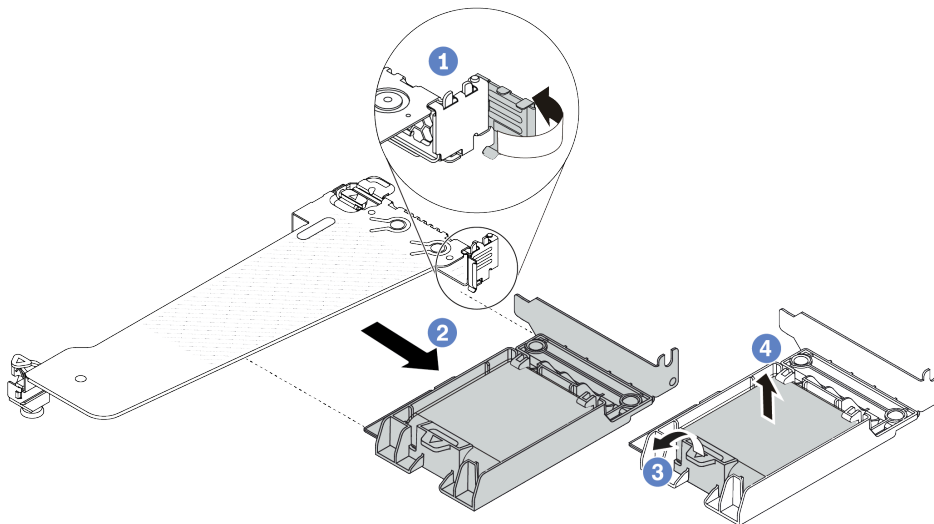


Figure 128. Removal of the RAID flash power module assembly from the riser

- a. **1** Rotate the latch on the riser bracket to the open position.
- b. **2** Remove the RAID flash power assembly from the riser.
- c. **3** Open the retention clip on the holder of the RAID flash power module.
- d. **4** Take the RAID flash power module out of the holder.

After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Demo video

<https://www.youtube.com/watch?v=m0q19MA5VUE>

Install the RAID flash power module on the riser

Use this information to install the RAID flash power module on the riser.

About this task

Attention:

- Read “[Installation Guidelines](#)” on [page 1](#) and “[Safety inspection checklist](#)” on [page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See “[Power off the server](#)” on [page 15](#).
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

- Step 1. Touch the static-protective package that contains the RAID flash power module to any unpainted surface on the outside of the server. Then, take the RAID flash power module out of the package and place it on a static-protective surface.

Step 2. Install the RAID flash power module on the riser.

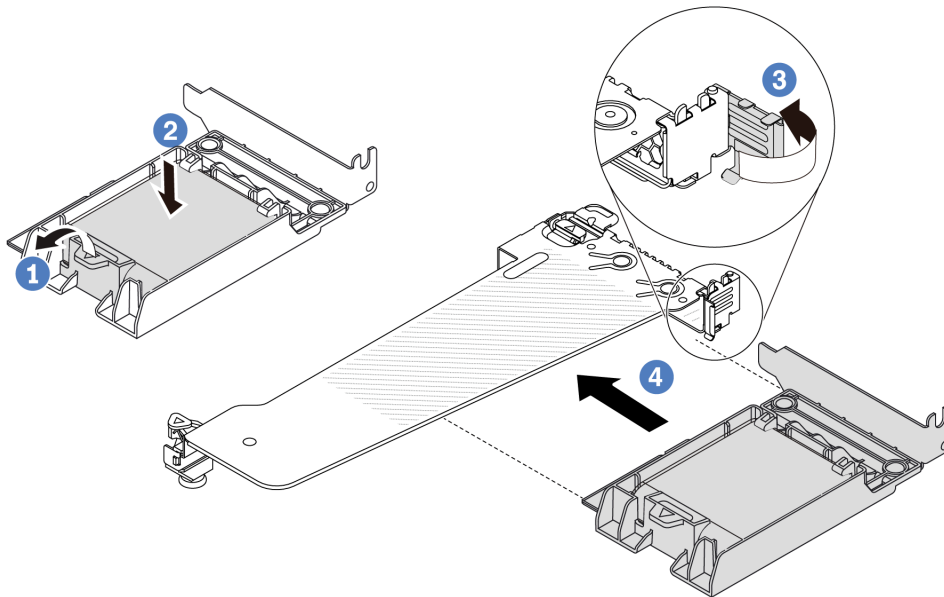


Figure 129. Installation of the RAID flash power module on the riser

- a. 1 Open the retention clip on the holder.
- b. 2 Put the RAID flash power module into the holder and press it down to secure it into the holder.
- c. 3 Rotate the latch on the riser bracket to the open position.
- d. 4 Align the RAID flash power assembly with the slot on the riser card. Then, carefully press the RAID flash power assembly straight into the slot until it is securely seated and its bracket is secured. Rotate the latch on the riser bracket to the close position.

After you finish

1. Install the riser assembly on the chassis. See “Install the rear riser card” on page 168.
2. Connect the flash power module to an adapter with the extension cable that comes with the flash power module. See “RAID flash power modules” on page 224.
3. Complete the parts replacement. See “Complete the parts replacement” on page 201.

Demo video

https://www.youtube.com/watch?v=a_yI3RMfQVk

Rear drive assembly replacement

Use this information to remove and install the rear drive assembly.

- “Remove the rear 2.5” drive assembly” on page 147
- “Install the rear 2.5” drive assembly” on page 148
- “Remove the 7mm rear drive assembly” on page 150
- “Install the 7mm rear drive assembly” on page 151

Remove the rear 2.5" drive assembly

Use this information to remove the rear 2.5" drive assembly.

About this task

The following illustrates how to remove the rear 2.5" drive assembly.

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 15](#).
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

- Step 1. Remove the top cover. See [“Remove the top cover” on page 197](#).
- Step 2. Remove the drives or drive fillers installed in the hot-swap rear drive cage. See [“Remove a 2.5"/3.5" hot-swap drive” on page 69](#).
- Step 3. Disconnect the hot-swap rear drive cage cables from the processor board or the PCIe adapter. See [Chapter 2 “Internal cable routing” on page 203](#).
- Step 4. Hold the two blue touch points and directly lift the hot-swap rear drive cage out of the chassis.

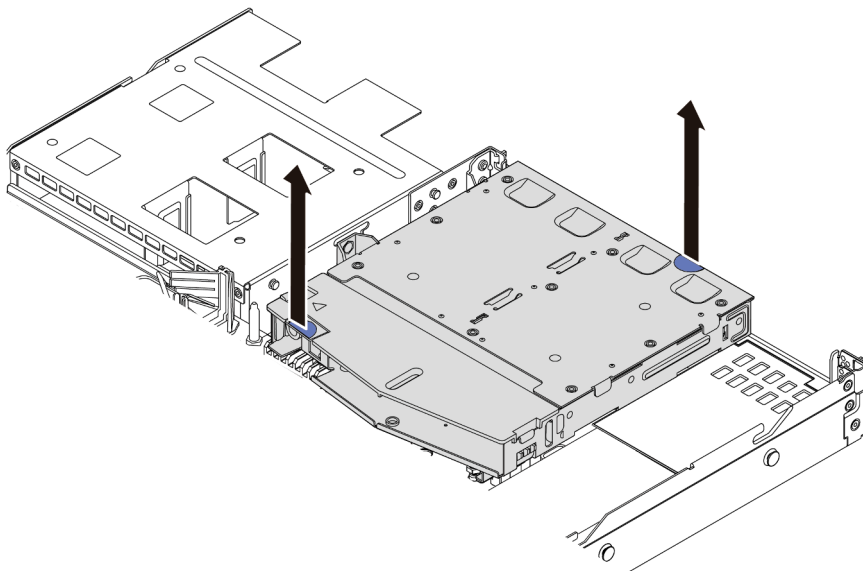


Figure 130. Hot-swap rear drive cage removal

- Step 5. If the rear backplane is reused, remove the rear backplane. See [“Remove the rear 2.5" drive backplane” on page 153](#).

After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Demo video

<https://www.youtube.com/watch?v=0S3ialMhB70>

Install the rear 2.5" drive assembly

Use this information to install the rear 2.5" drive assembly.

About this task

The following illustrates how to install the rear 2.5" drive assembly.

Attention:

- Read “Installation Guidelines” on page 1 and “Safety inspection checklist” on page 2 to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See “Power off the server” on page 15.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

- Step 1. Touch the static-protective package that contains the hot-swap rear drive cage to any unpainted surface on the outside of the server. And then, take the hot-swap rear drive cage out of the package and place it on a static-protective surface.
- Step 2. Gently press and hold the tab on the hot-swap rear drive cage as shown and remove the air baffle from the hot-swap rear drive cage.

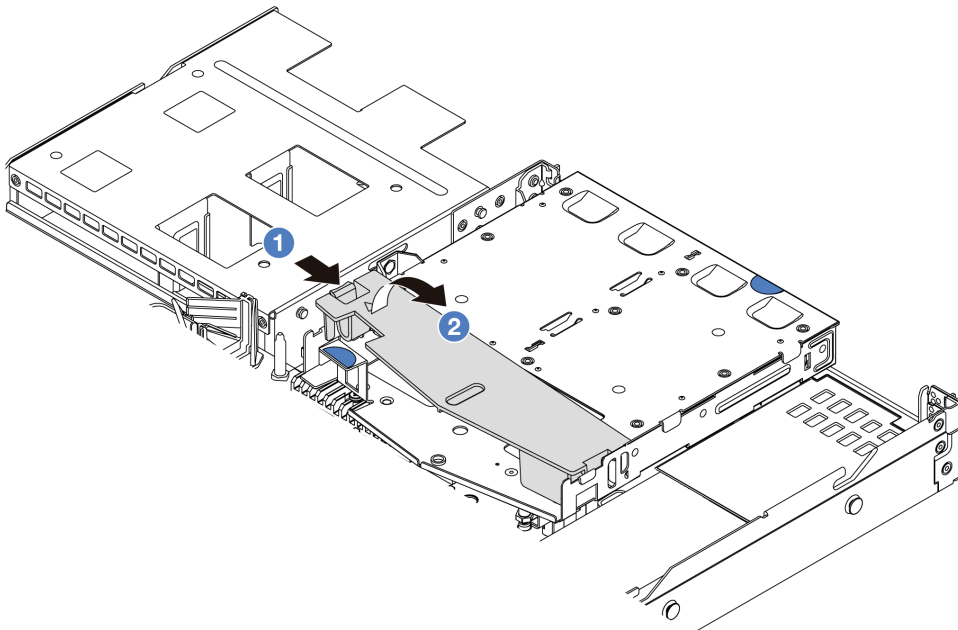


Figure 131. Air baffle removal

- a. 1 Press the tab on one side to disengage the air baffle.
- b. 2 Lift the air baffle to remove it from drive cage.

Step 3. Align the rear backplane with the hot-swap rear drive cage and lower it into the hot-swap rear drive cage.

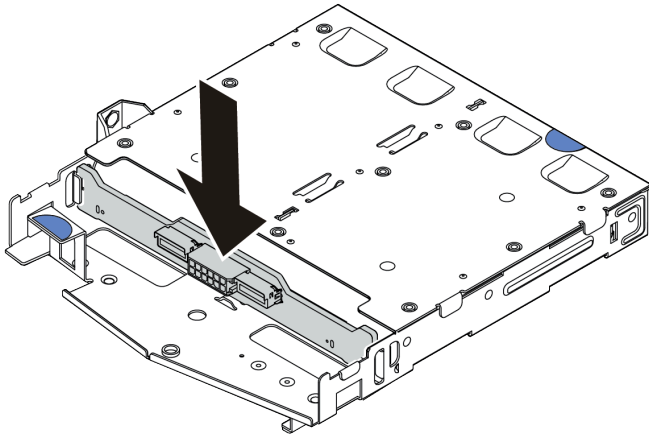


Figure 132. Rear backplane installation

Step 4. Connect the cables to the backplane.

Step 5. Install the air baffle into the hot-swap rear drive cage as shown.

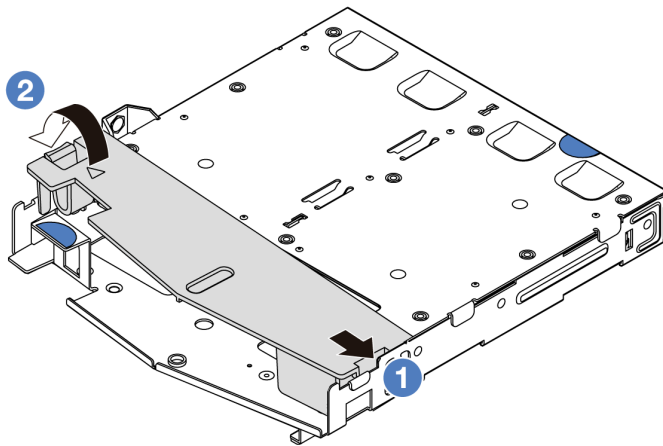


Figure 133. Air baffle installation

- a. 1 Align the air baffle edge with the notch on the drive cage.
- b. 2 Press the air baffle down and make sure that it is seated in place.

Step 6. Align the pins on the hot-swap rear drive cage with the corresponding hole and slot in the chassis. Then, lower the hot-swap rear drive cage into the chassis until it is fully seated.

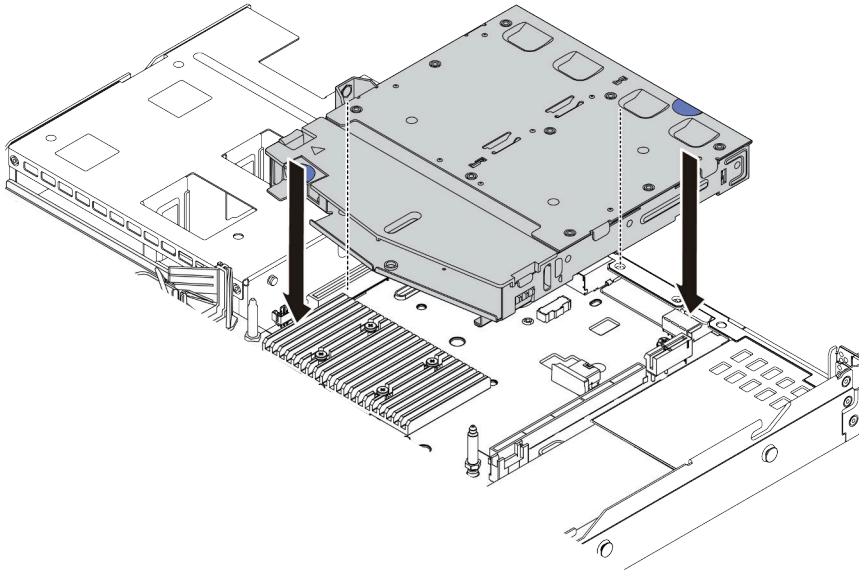


Figure 134. Hot-swap rear drive cage installation

Step 7. Connect the cables to the system board (system board assembly) or expansion slots. See [Chapter 2 “Internal cable routing” on page 203](#).

After you finish

1. Reinstall the drives or drive fillers into the hot-swap rear drive cage. See [“Install a 2.5"/3.5" hot-swap drive” on page 70](#).
2. Complete the parts replacement. See [“Complete the parts replacement” on page 201](#).

Demo video

<https://www.youtube.com/watch?v=vT-l-EBiY4o>

Remove the 7mm rear drive assembly

Use this information to remove the rear drive assembly.

About this task

The following illustrates how to remove the 7mm rear drive assembly.

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 15](#).
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Watch the procedure

A video of this procedure is available at YouTube: <https://www.youtube.com/playlist?list=PLYV5R7hVcs-CTkyVDu-5Lhy1r9G-4PQGI>.

Procedure

- Step 1. Remove the top cover. See “[Remove the top cover](#)” on page 197.
- Step 2. Remove the 7mm drives or drive fillers installed in the hot-swap rear drive cage. The removal method is the same as 2.5/3.5 inch hot-swap drive. See “[Remove a 2.5"/3.5" hot-swap drive](#)” on page 69.
- Step 3. Disconnect the hot-swap rear drive cage cables from the processor board or the PCIe adapter.
- Step 4. Lift the hot-swap rear drive cage out of the chassis.

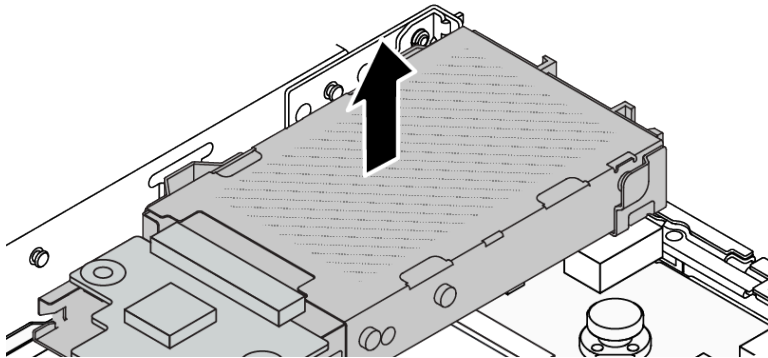


Figure 135. Hot-swap rear drive cage removal

- Step 5. If the rear backplane is reused, remove the rear backplane. See “[Remove the 7mm drive backplanes](#)” on page 156.

After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Demo video

<https://www.youtube.com/watch?v=1ojkhtx2Ujc>

Install the 7mm rear drive assembly

Use this information to install the rear drive assembly.

About this task

The following illustrates how to install the 7mm rear drive assembly.

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See “[Power off the server](#)” on page 15.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

- Step 1. Touch the static-protective package that contains the hot-swap rear drive cage to any unpainted surface on the outside of the server. And then, take the hot-swap rear drive cage out of the package and place it on a static-protective surface.
- Step 2. Install the 7mm backplane, see [“Install the 7mm drive backplanes” on page 157](#).
- Step 3. Align the pins on the hot-swap 7mm rear drive cage with the corresponding pin and slot in the chassis. Then, lower the hot-swap rear drive cage into the chassis until it is fully seated.

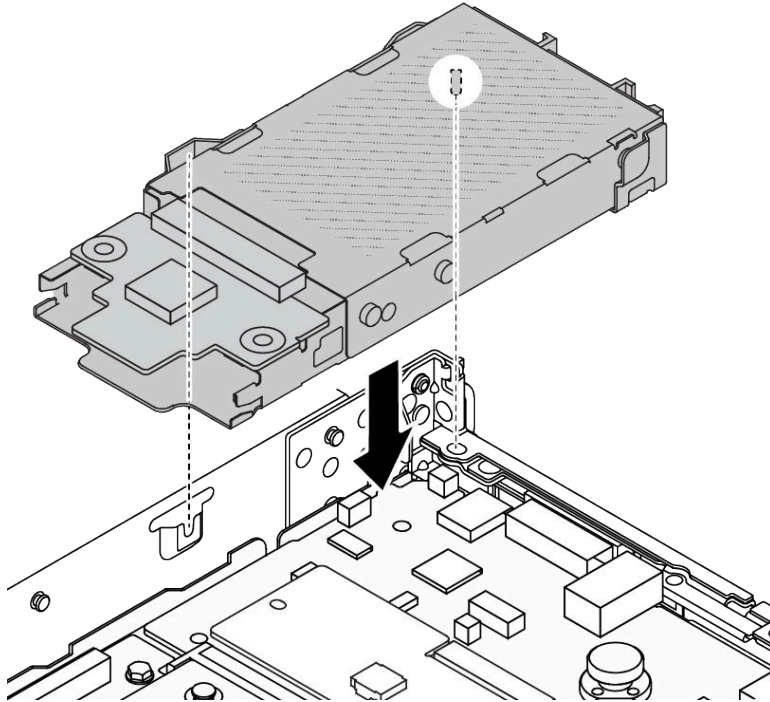


Figure 136. Hot-swap rear drive cage installation

- Step 4. Connect the cables from the backplanes to the processor board and riser slot. See [Chapter 2 “Internal cable routing” on page 203](#).

After you finish

1. Reinstall the drives or drive fillers into the hot-swap rear drive cage. See [“Install a 2.5"/3.5" hot-swap drive” on page 70](#).
2. Complete the parts replacement. See [“Complete the parts replacement” on page 201](#).

Demo video

https://www.youtube.com/watch?v=UMeIBPRJ_dM

Rear drive backplane replacement

Use this information to remove and install a rear drive backplane.

- [“Remove the rear 2.5" drive backplane” on page 153](#)
- [“Install the rear 2.5" drive backplane” on page 154](#)
- [“Remove the 7mm drive backplanes” on page 156](#)
- [“Install the 7mm drive backplanes” on page 157](#)

Remove the rear 2.5" drive backplane

Use this information to remove the rear 2.5" drive backplane.

About this task

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 15](#).
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

Step 1. Prepare your server.

- a. Remove the top cover. See [“Remove the top cover” on page 197](#).
- b. Remove all installed drives and fillers (if any) from the drive bays. See [“Remove a 2.5"/3.5" hot-swap drive” on page 69](#).

Step 2. Gently press and hold the tab on the rear hot-swap drive cage as shown and remove the air baffle from the rear hot-swap drive cage.

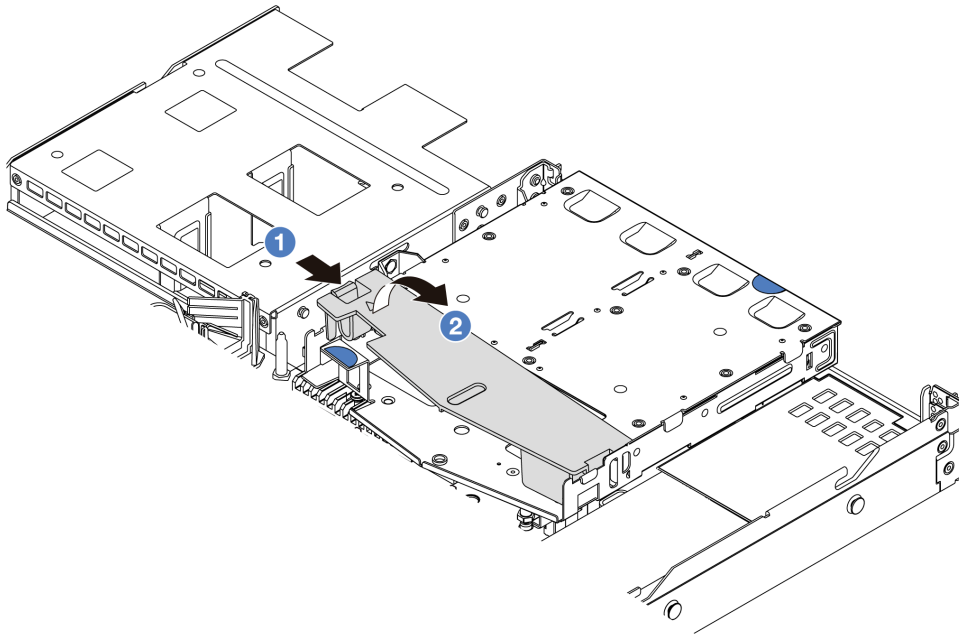


Figure 137. Air baffle removal

- a. **1** Press the tab on one side to disengage the air baffle.
- b. **2** Lift the air baffle to remove it from drive cage.

Step 3. Record the cable connections for 2.5" rear drive and then disconnect all cables from the backplanes. For information about the backplane cable routing, see [Chapter 2 “Internal cable routing” on page 203](#).

Step 4. Carefully lift the rear 2.5" drive backplane out of the rear hot-swap drive cage.

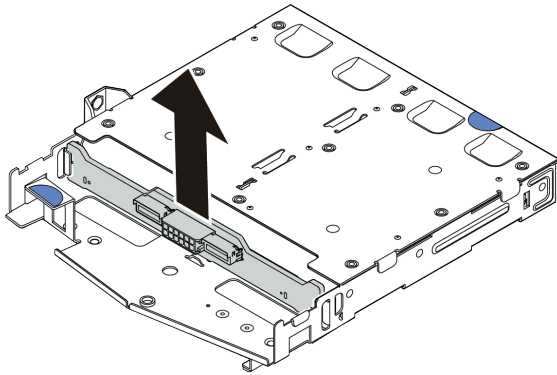


Figure 138. Rear 2.5" drive backplane removal

After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Demo video

<https://www.youtube.com/watch?v=qpE3meycUBM>

Install the rear 2.5" drive backplane

Use this information to install the rear 2.5" drive backplane.

About this task

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See “[Power off the server](#)” on page 15.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

- Step 1. Touch the static-protective package that contains the rear backplane to any unpainted surface on the outside of the server. Then, take the rear backplane out of the package and place it on a static-protective surface.

- Step 2. Align the rear backplane with the rear hot-swap drive cage and lower it into the rear hot-swap drive cage.

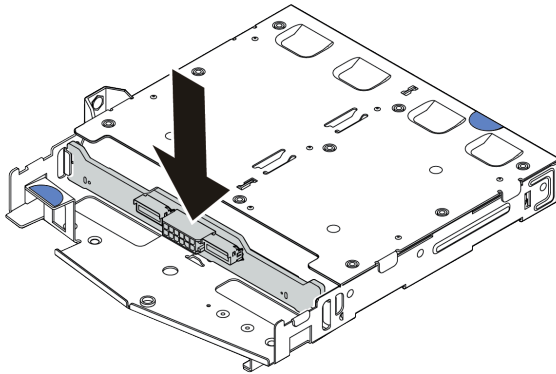


Figure 139. Rear backplane installation

- Step 3. Connect the cables to the system board assembly and the backplane. See [Chapter 2 “Internal cable routing” on page 203](#). If the cable connectors come with protective dust caps, make sure to remove them before plugging in.
- Step 4. Install the air baffle into the rear hot-swap drive cage as shown.

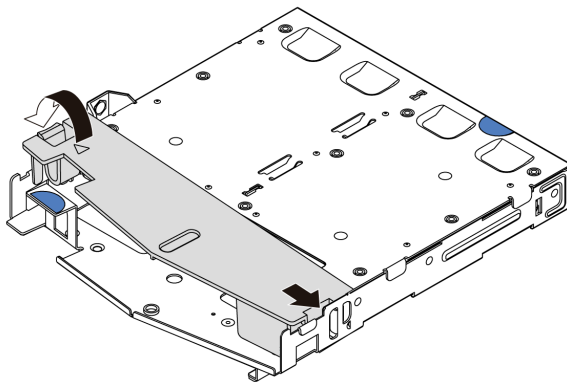


Figure 140. Air baffle installation

- a. 1 Align the air baffle edge with the notch on the drive cage.
- b. 2 Press the air baffle down and make sure that it is seated in place.

After you finish

1. Reinstall drives or drive fillers into the rear hot-swap drive cage. See [“Install a 2.5"/3.5" hot-swap drive” on page 70](#).
2. Reinstall the drive assembly to the server. See [“Install the rear 2.5" drive assembly” on page 148](#).
3. Complete the parts replacement. See [“Complete the parts replacement” on page 201](#).

Demo video

<https://www.youtube.com/watch?v=l1v7bwRF1xw>

Remove the 7mm drive backplanes

Use this information to remove the 7mm drive backplanes.

About this task

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 15](#).
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

Note: Depending on the specific type, your backplanes might look different from the illustration in this topic.

Step 1. Prepare your server.

- a. Remove the top cover. See [“Remove the top cover” on page 197](#).
- b. Remove all installed drives and fillers (if any) from the drive bays. See [“Remove a 2.5"/3.5" hot-swap drive” on page 69](#).
- c. Record the cable connections for 7mm drives and then disconnect all cables from the backplanes. For information about the backplane cable routing, See [“7mm drive backplane” on page 229](#). If the cable connectors come with protective dust caps, make sure to put them back on.
- d. Remove the 7mm drive assembly (if any) from the rear chassis. See [“Remove the rear 2.5" drive assembly” on page 147](#).

Step 2. Remove the 7mm drive backplane on the top.

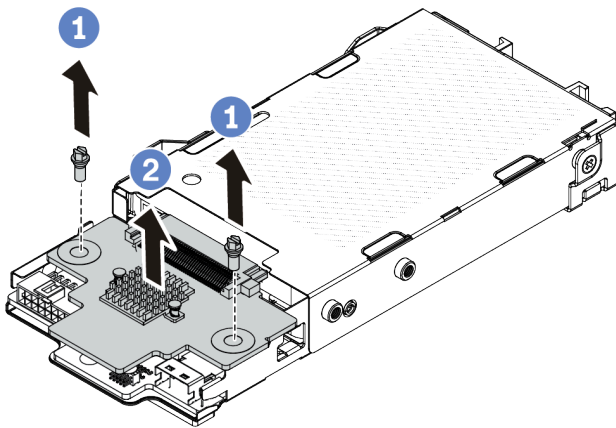


Figure 141. 7mm drive backplane removal (top)

- a. **1** Remove the two screws as shown.
- b. **2** Vertically lift the backplane up and put it aside.

Step 3. Remove the 7mm drive backplane at the bottom.

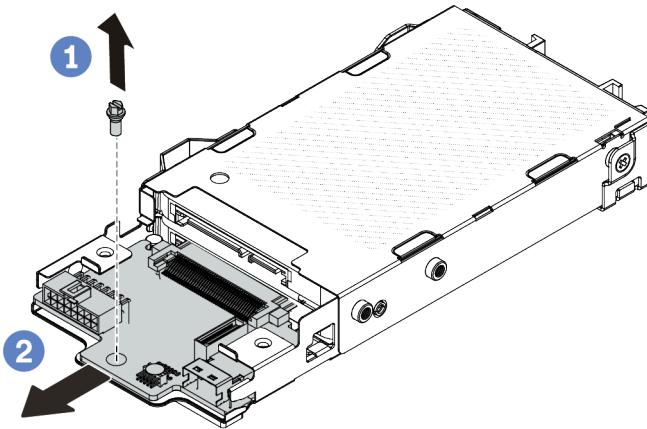


Figure 142. 7mm drive backplane removal (bottom)

- a. 1 Remove the screw as shown.
- b. 2 Remove the backplane horizontally from the cage as shown.

After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Demo video

<https://www.youtube.com/watch?v=zcW4kg97qZ4>

Install the 7mm drive backplanes

Use this information to install the 7mm drive backplanes.

About this task

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See “[Power off the server](#)” on page 15.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

- Step 1. Touch the static-protective package that contains new backplanes to any unpainted surface on the outside of the server. And then, take new backplanes out of the package and place them on a static-protective surface.
- Step 2. Install the 7mm drive backplane at the bottom.

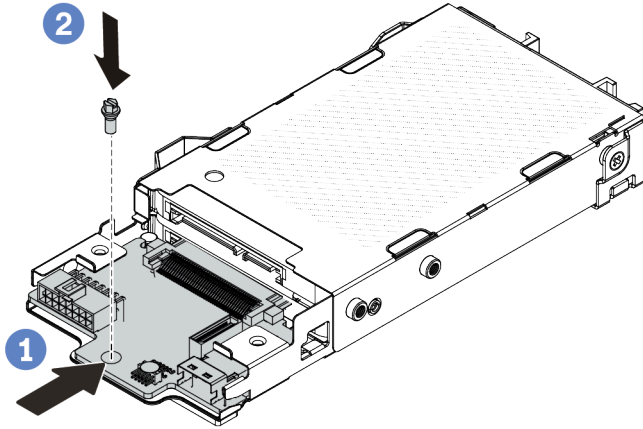


Figure 143. 7mm drive backplane installation (bottom)

- a. **1** Align the pin on the cage and slightly slide the backplane into the cage until it is fully seated.
- b. **2** Install the screw as shown.

Step 3. Install the 7mm drive backplane on the top.

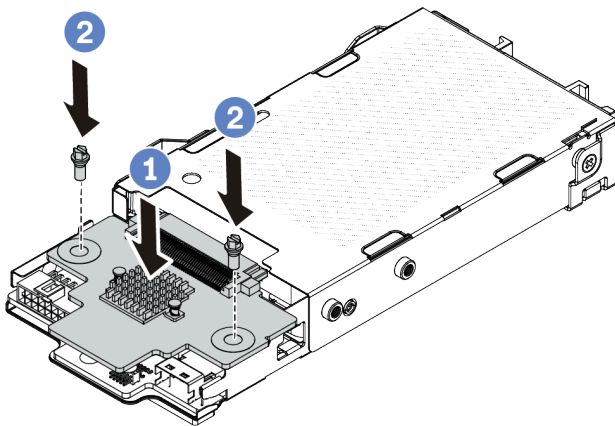


Figure 144. 7mm drive backplane installation (top)

- a. **1** Put the backplane down on the cage as shown.
- b. **2** Install the two screws to secure the backplane in place.

Step 4. Connect the cables to the system board assembly and the backplane. See [Chapter 2 “Internal cable routing” on page 203](#). If the cable connectors come with protective dust caps, make sure to remove them before plugging in.

After you finish

1. Install the 7mm drive cage assembly on the rear chassis. See [“Install the 7mm rear drive assembly” on page 151](#).
2. Reinstall the 7mm drives and fillers into the drive bays. The installation method is the same as 2.5/3.5 inch hot-swap drive. See [“Install a 2.5"/3.5" hot-swap drive” on page 70](#).
3. Complete the parts replacement. See [“Complete the parts replacement” on page 201](#).

Demo video

<https://www.youtube.com/watch?v=XVF3TpitGSc>

Rear riser assembly replacement

Use this information to remove and install the riser assembly.

- [“Server rear configuration and riser assemblies” on page 159](#)
- [“The overview of riser brackets” on page 162](#)
- [“The overview of riser cards” on page 163](#)

Server rear configuration and riser assemblies

See this section to identify the correlations between the rear/front configuration and riser assemblies.

Table 8. Server rear configuration and riser assemblies¹

 
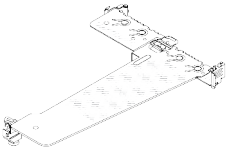
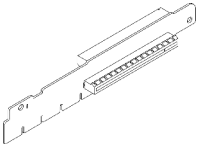
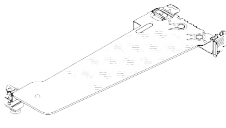
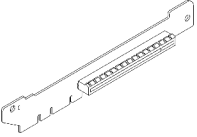
 
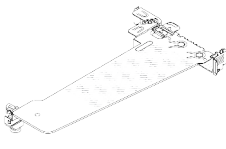
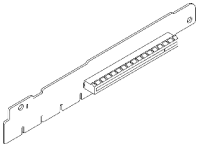
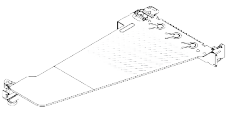
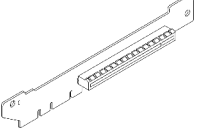
 
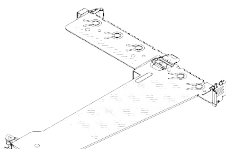
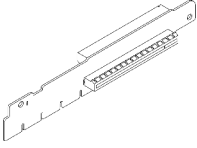
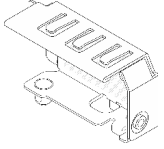
Server rear configuration	Riser 1 assembly	Riser 2 assembly
 <p>Figure 145. Three PCIe slots</p>	 <p>Figure 146. Riser 1 LP-LP bracket</p>  <p>Figure 147. Riser 1 BF² card</p>	 <p>Figure 148. Riser 2 bracket</p>  <p>Figure 149. Riser 2 card</p>
 <p>Figure 150. Two PCIe slots</p>	 <p>Figure 151. Riser 1 LP-filler bracket</p>  <p>Figure 152. Riser 1 card</p>	 <p>Figure 153. Riser 2 FH bracket</p>  <p>Figure 154. Riser 2 card</p>
 <p>Figure 155. Two PCIe slots</p>	 <p>Figure 156. Riser 1 LP-FH bracket</p>  <p>Figure 157. Riser 1 BF card</p>	<p>Riser 2 assembly is not supported.</p> <p>A rear wall bracket is required for this configuration.</p>  <p>Figure 158. A rear wall bracket</p>

Table 8. Server rear configuration and riser assemblies¹ (continued)

 
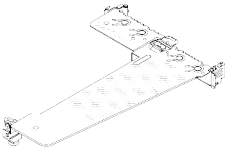
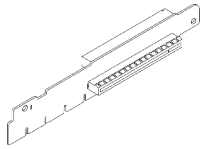
 
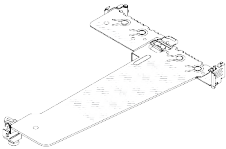
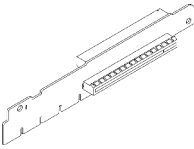
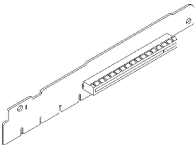
 
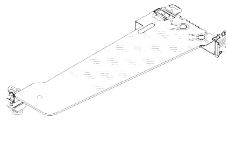
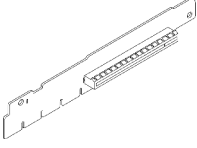
Server rear configuration	Riser 1 assembly	Riser 2 assembly
 <p>Figure 159. Two PCIe slots</p>	 <p>Figure 160. Riser 1 LP-LP bracket</p>  <p>Figure 161. Riser 1 BF card</p>	<p>Riser 2 assembly is not supported.</p>

Table 8. Server rear configuration and riser assemblies¹ (continued)


Server rear configuration	Riser 1 assembly	Riser 2 assembly
 <p>Figure 162. One PCIe slot</p>	 <p>Figure 163. Riser 1 LP-LP bracket</p> <p>Choose either one below to assemble:</p> <ul style="list-style-type: none">  <p>Figure 164. Riser 1 BF card</p>  <p>Figure 165. Riser 1 card</p> 	<p>Riser 2 assembly is not supported.</p>
 <p>Figure 166. One PCIe slot</p>	 <p>Figure 167. Riser 1 LP bracket</p>  <p>Figure 168. Riser 1 card</p>	<p>Riser 2 assembly is not supported.</p>

Notes:

1. The illustrations of riser brackets and cards may look slightly different from the physical ones.
2. BF: “butterfly”, a riser card with slots on both sides.




The overview of riser brackets

See this section to identify different riser brackets.

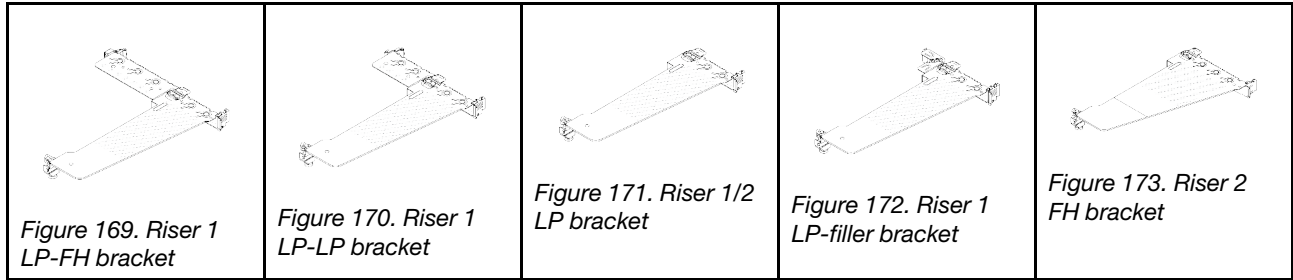

The overview of riser cards

See this section to identify different riser cards.

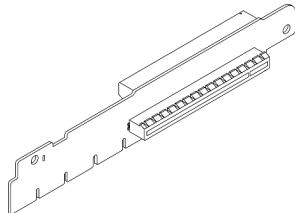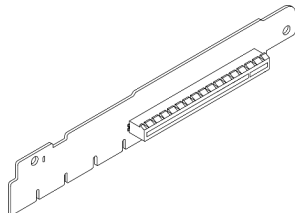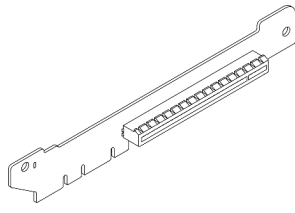Riser card	Notes
 <p>Figure 174. A Gen 4/5 BF riser card</p>	<ul style="list-style-type: none"> Depending on the server configuration or specific orders, the riser card can be a Gen 4 or Gen 5 card. This section only breaks down how to match the cards with the brackets as the appearance and the installation methods are the same for the Gen 4 and Gen 5 BF cards.
 <p>Figure 175. A Gen 4/5 riser card</p>	<p>This card can be:</p> <ul style="list-style-type: none"> A Gen 4 riser 1 card A Gen 5 BF riser 1 card with one slot removed
 <p>Figure 176. A Gen 4/5 riser card</p>	<p>Gen 4/5 riser 2 card</p>

- [“Remove the rear riser bracket” on page 164](#)
- [“Install the rear riser bracket” on page 165](#)
- [“Remove the rear riser card” on page 166](#)
- [“Install the rear riser card” on page 168](#)

Rear riser bracket replacement

Follow instructions in this section to remove and install the rear riser bracket.

- [“Remove the rear riser bracket” on page 164](#)
- [“Install the rear riser bracket” on page 165](#)

Remove the rear riser bracket

Use this information to remove the rear riser bracket.

About this task

For more riser brackets supported, see [“The overview of riser bracket types” on page 159](#).

The riser bracket you want to remove might be different from the following illustrations, but the removal method is the same. The following takes the rear LP-FH riser bracket as an example.

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 15](#).
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

- Step 1. Remove the top cover. See [“Remove the top cover” on page 197](#).
- Step 2. If there is any PCIe adapter installed on the riser card, record the cable connections first. Then, disconnect all cables from the riser card.
- Step 3. Press the two latches on both ends at the same time, and carefully lift it out of the chassis by the two latches.

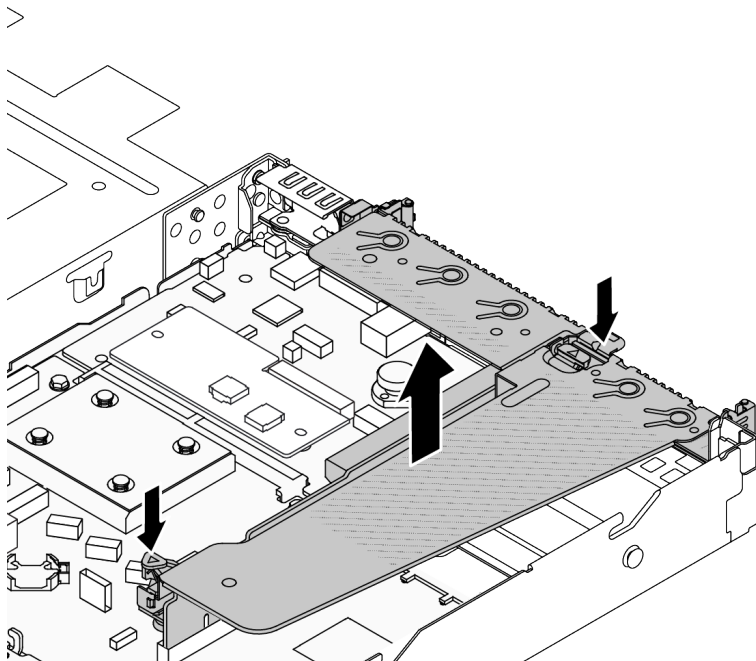


Figure 177. Rear riser bracket removal

After you finish

1. If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.
2. Remove the rear wall bracket if you would like to install a non-LP-FH riser bracket.

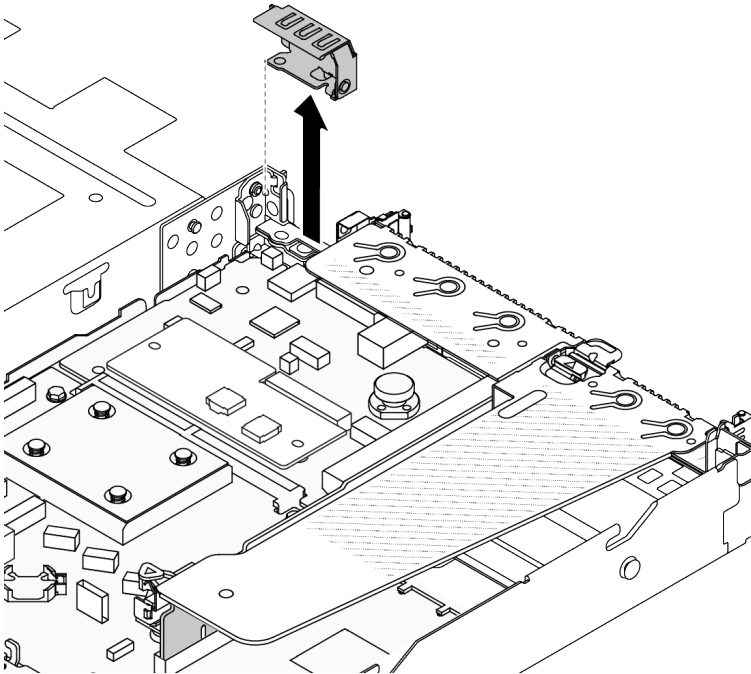


Figure 178. Rear wall bracket removal

Demo video

<https://www.youtube.com/watch?v=j8WyMn9FMGU>

Install the rear riser bracket

Use this information to install the rear riser bracket.

About this task

For more riser brackets supported, see [“The overview of riser bracket types” on page 159](#).

The riser bracket you want to install might be different from the following illustrations, but the installation method is the same. The following takes the rear LP-FH riser bracket as an example.

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 15](#).
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

Step 1. Position the riser bracket on the chassis. Align the plastic clip and two pins on the bracket with the guide pin and two holes on the chassis, and align the riser card with the riser slot on the system board. Then, carefully press the riser bracket straight down into the slot until it is fully seated.

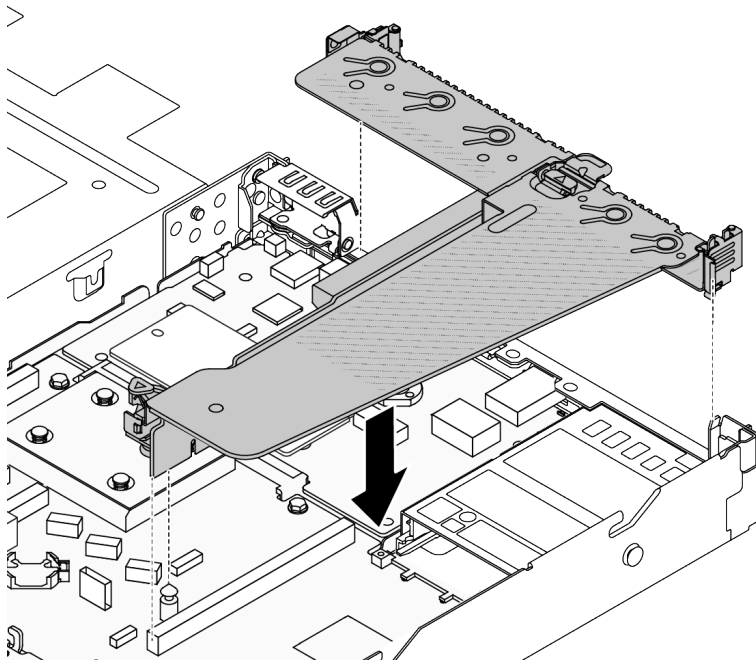


Figure 179. Rear riser bracket installation

After you finish

Complete the parts replacement. See [“Complete the parts replacement” on page 201](#).

Demo video

<https://www.youtube.com/watch?v=jgG0z4Xn9cY>

Rear riser card replacement

Follow instructions in this section to remove and install the rear riser card.

- [“Remove the rear riser card” on page 166](#)
- [“Install the rear riser card” on page 168](#)

Remove the rear riser card

Use this information to remove the rear riser card.

About this task

For more riser brackets supported, see [“The overview of riser bracket types” on page 159](#).

The riser card you want to remove might be different from the following illustrations, but the removal method is the same. The following takes the rear LP-FH riser card as an example.

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 15](#).
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

- Step 1. Remove the top cover. See [“Remove the top cover” on page 197](#).
- Step 2. If there is any PCIe adapter installed on the riser card, record the cable connections first. Then, disconnect all cables from the riser card.
- Step 3. Remove the rear riser card. Refer to [“Remove the rear riser bracket” on page 164](#).
- Step 4. If necessary, remove the PCIe adapters that are installed on the riser card. See [“Remove a PCIe adapter” on page 115](#).
- Step 5. Remove the riser card from the bracket.

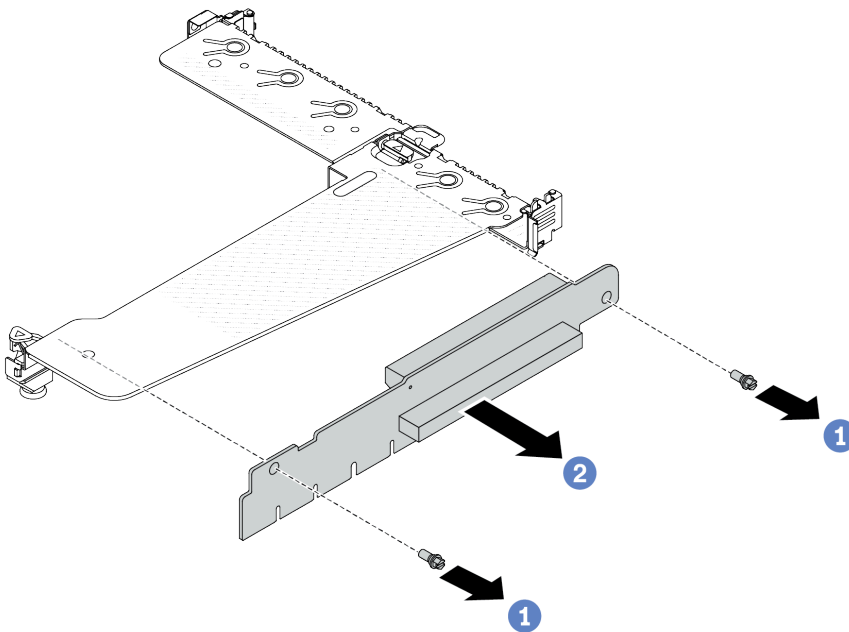


Figure 180. Riser card removal

- a. **1** Remove the two screws that secure the riser card to the bracket.
- b. **2** Remove the riser card.

After you finish

1. If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.
2. Remove the rear wall bracket if you would like to install a non-LP-FH riser assembly.

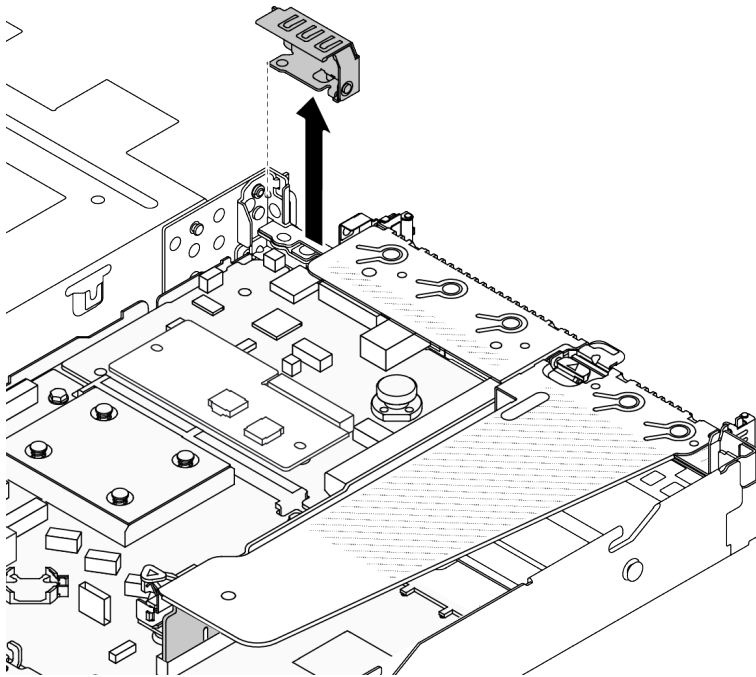


Figure 181. Rear wall bracket removal

Demo video

<https://www.youtube.com/watch?v=g1Wuj56bsM4>

Install the rear riser card

Use this information to install the rear riser card.

About this task

For more riser brackets supported, see [“The overview of riser bracket types” on page 159](#).

The riser card you want to install might be different from the following illustrations, but the installation method is the same. The following takes the rear LP-FH riser card as an example.

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 15](#).
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

Step 1. Touch the static-protective package that contains the riser card to any unpainted surface on the outside of the server. Then, take the riser card out of the package and place it on a static-protective surface.

Step 2. Install the riser card and secure it to the bracket.

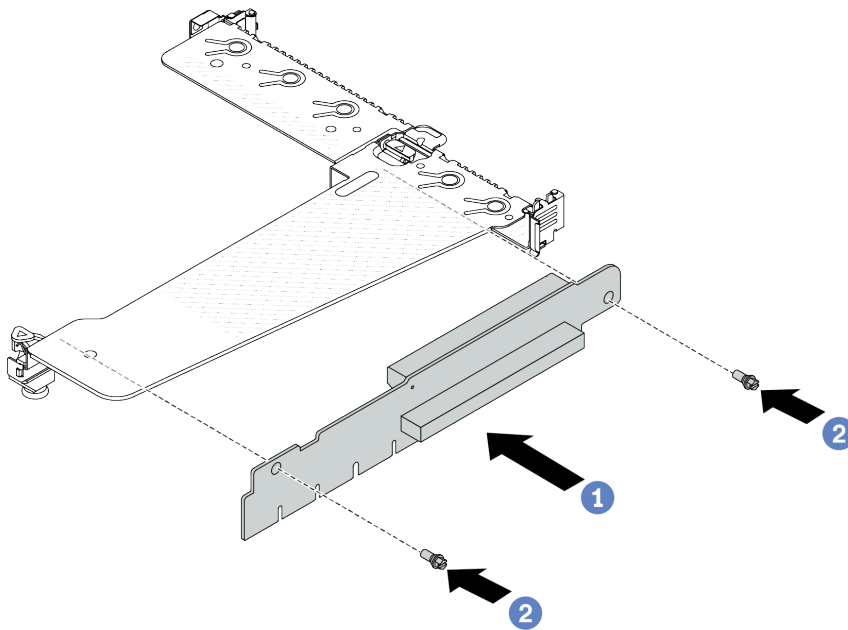


Figure 182. Riser card installation

1. **1** Align the screw holes in the riser card with the corresponding ones in the bracket.
2. **2** Install the two screws to secure the riser card to the bracket.

Step 3. If necessary, reinstall the PCIe adapters on the riser card. See [“Install a PCIe adapter” on page 117](#). Then, refer to your note to reconnect any cables of the PCIe adapters on the riser card. Or you can refer to the [Chapter 2 “Internal cable routing” on page 203](#) and locate the cable routing information for your configuration options.

Step 4. Install the rear riser assembly. Refer to [“Install the rear riser bracket” on page 165](#).

After you finish

Complete the parts replacement. See [“Complete the parts replacement” on page 201](#).

Demo video

<https://www.youtube.com/watch?v=zISs-VLi8Ys>

Security bezel replacement

Use this information to remove and install the security bezel.

Note: The security bezel is available on some models.

- [“Remove the security bezel” on page 169](#)
- [“Install the security bezel” on page 171](#)

Remove the security bezel

Use this information to remove the security bezel.

About this task

Attention: Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.

Procedure

Step 1. Use the key to unlock the security bezel.

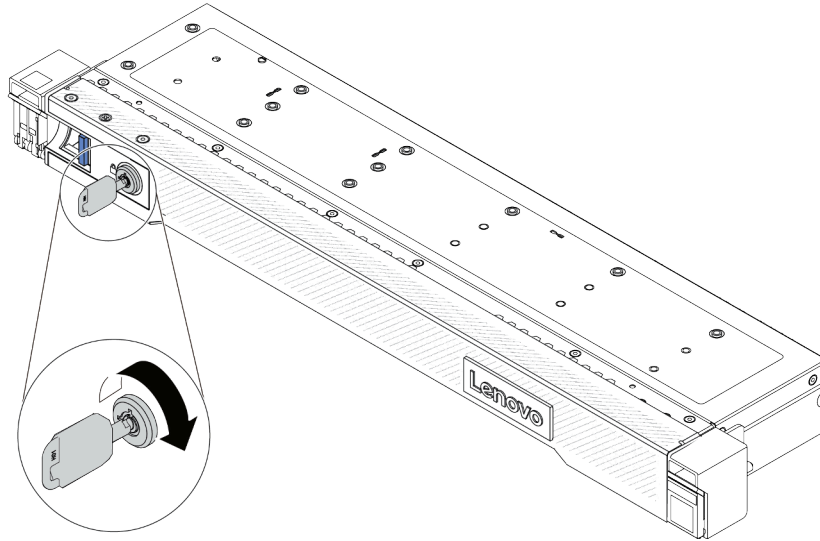


Figure 183. Unlocking the security bezel

Step 2. Remove the security bezel.

Attention: Before you ship the rack with the server installed, reinstall and lock the security bezel into place.

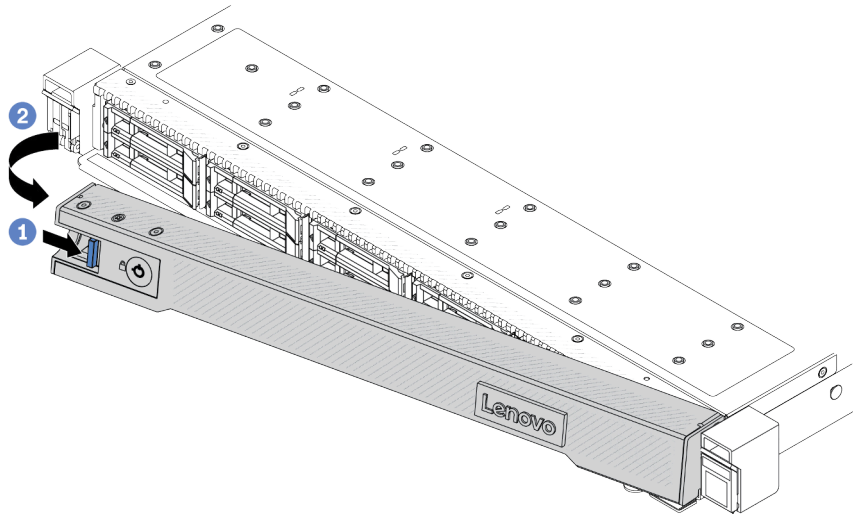


Figure 184. Security bezel removal

- a. 1 Press the release latch.
- b. 2 Rotate the security bezel outward to remove it from the chassis.

Demo video

<https://www.youtube.com/watch?v=o0zHcHIXgfg>

Install the security bezel

Use this information to install the security bezel.

About this task

Attention: Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.

Procedure

Step 1. If you have removed the rack latches, reinstall them. See “[Install the rack latches](#)” on page 138.

Step 2. If the key is held inside the security bezel, remove it out of the security bezel.

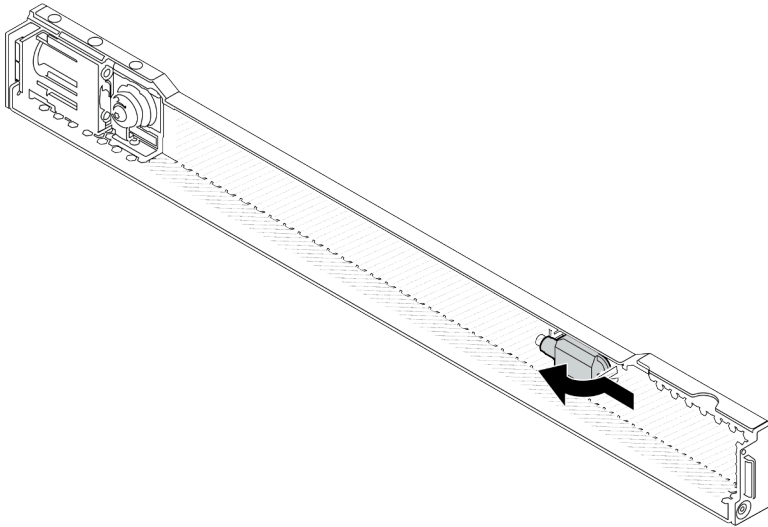


Figure 185. Key removal

Step 3. Install the security bezel to the chassis.

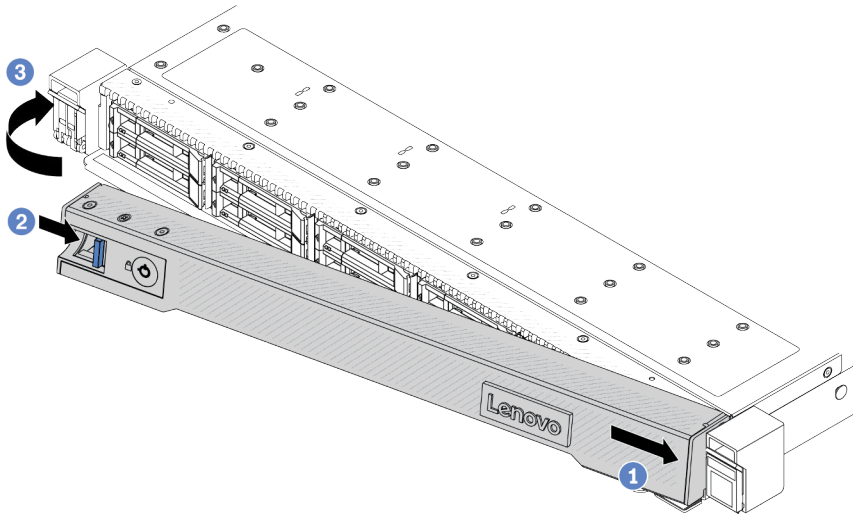


Figure 186. Security bezel installation

- a. ① Insert the tab on the security bezel into the slot on the right rack latch.
- b. ② Press and hold the blue release latch.
- c. ③ Rotate the security bezel inward until the left side clicks into place.

Step 4. Use the key to lock the security bezel to the closed position.

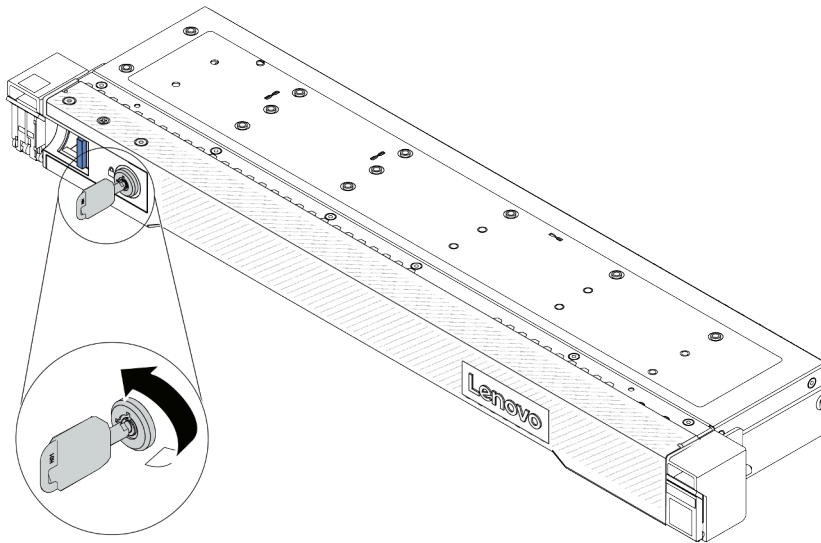


Figure 187. Locking the security bezel

After you finish

Complete the parts replacement. See [“Complete the parts replacement” on page 201](#).

Demo video

https://www.youtube.com/watch?v=RsaTB_7KJdM

Serial port module replacement

Use this information to remove and install a serial port module.

- [“Remove a serial port module” on page 173](#)
- [“Install a serial port module” on page 175](#)

Remove a serial port module

Use this information to remove a serial port module.

About this task

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 15](#).
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Watch the procedure

A video of this procedure is available at YouTube: <https://www.youtube.com/playlist?list=PLYV5R7hVcs-CTkyVDu-5Lhy1r9G-4PQGI>.

Procedure

- Step 1. Remove the top cover. See “Remove the top cover” on page 197.
- Step 2. Disconnect the cable of the serial port module from the system board (system board assembly).
- Step 3. Press the two latches on both ends at the same time, and carefully lift the riser cage out of the chassis by two latches.

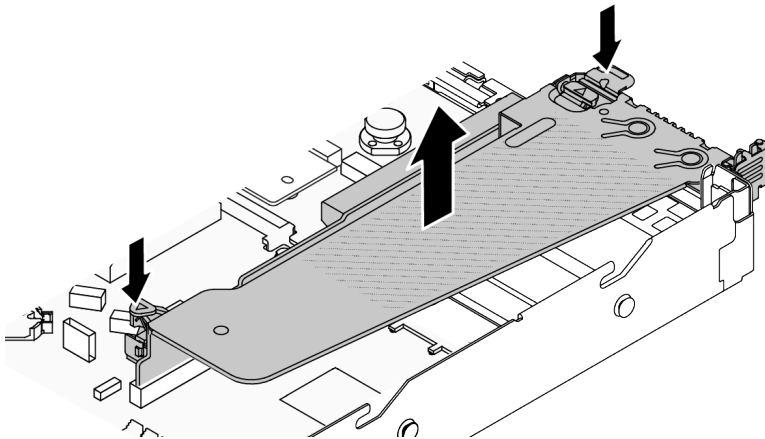


Figure 188. Removing the riser bracket

- Step 4. Open the retention latch and remove the serial port module from the riser bracket.

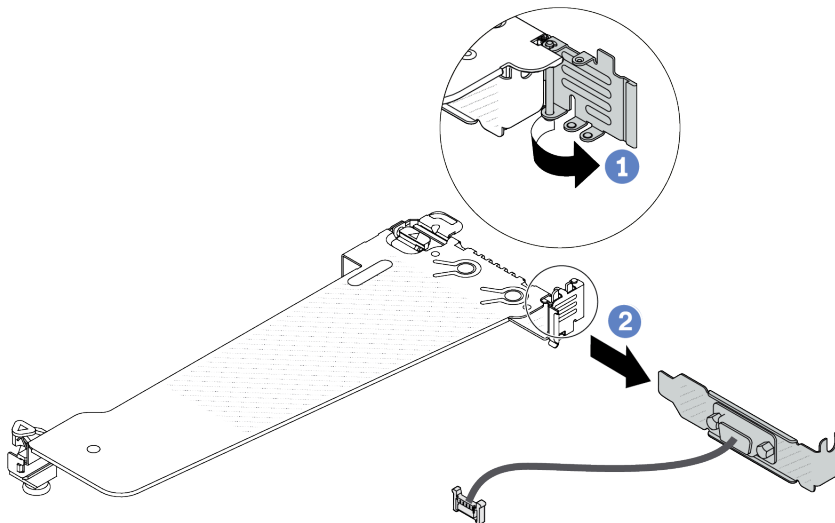


Figure 189. Removing the riser bracket

- a. ① Open the retention latch.
 - b. ② Remove the serial port module from the riser bracket.
- Step 5. (Optional) If you need to replace the serial port bracket, use a 5 mm wrench to disassemble the serial port cable from the bracket.

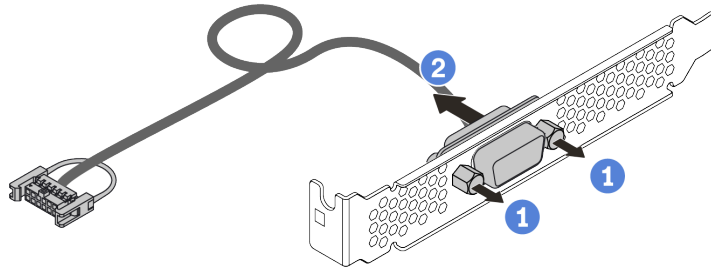


Figure 190. Disassembling the serial port module

- a. 1 Loosen the two screws.
- b. 2 Pull out the serial port cable from the bracket.

After you finish

1. Install a new serial port module, a PCIe adapter, or a PCIe slot bracket to cover the place. See “[Install a serial port module](#)” on page 175 and “[Install a PCIe adapter](#)” on page 117.
2. If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Demo video

<https://www.youtube.com/watch?v=MeCEpeteLPs>

Install a serial port module

Use this information to install a serial port module.

About this task

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See “[Power off the server](#)” on page 15.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Watch the procedure

A video of this procedure is available at YouTube: <https://www.youtube.com/playlist?list=PLYV5R7hVcs-CTkyVDu-5Lhy1r9G-4PQGI>.

Procedure

- Step 1. Touch the static-protective package that contains the component to any unpainted surface on the outside of the server. Then, take the component out of the package and place it on a static-protective surface.
- Step 2. Use a 5 mm wrench to install the serial port cable into the bracket.

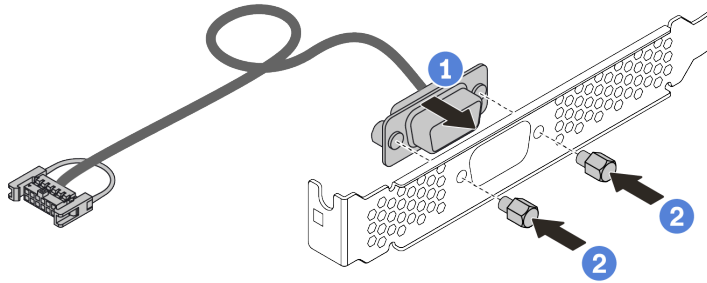


Figure 191. Assembling the serial port module

- a. 1 Align the two screw holes on the cable connector to the bracket.
- b. 2 Install the two screws to the bracket.

Step 3. Install the serial port module to the riser bracket.

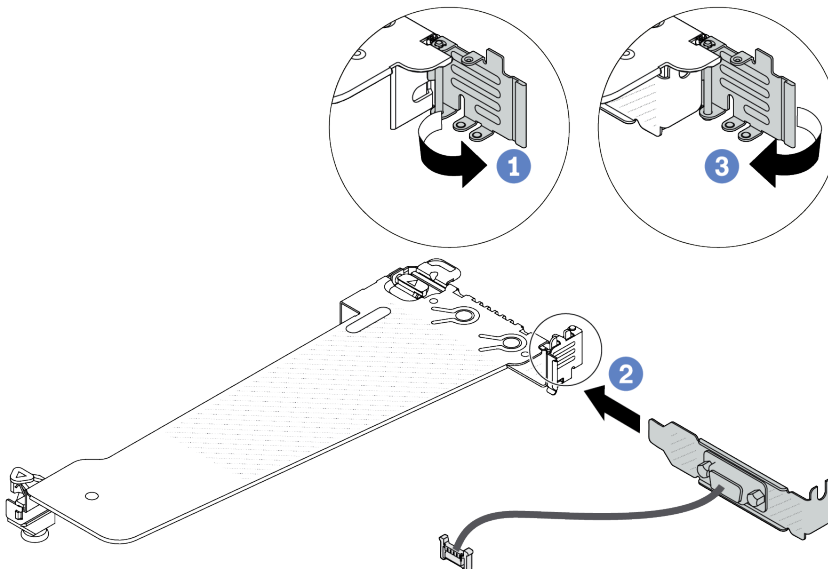


Figure 192. Installing the serial port module

- a. 1 Open the retention latch on the riser cage.
- b. 2 Install the serial port module to the riser bracket.
- c. 3 Close the retention latch and ensure that the serial port module is securely installed.

Step 4. Install the riser assembly to the server.

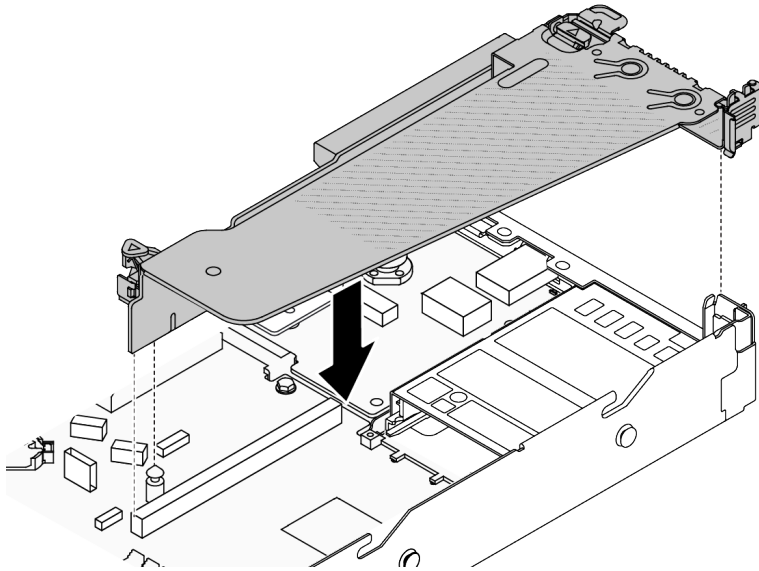


Figure 193. Installing the riser assembly

- Step 5. Connect the cable of the serial port module to the serial-port-module connector on the system board (system board assembly). For the location of the serial-port-module connector, refer to [“System-board-assembly connectors”](#) on page 367.

After you finish

1. Complete the parts replacement. See [“Complete the parts replacement”](#) on page 201.
2. To enable the serial port module, do one of the followings according to the installed operating system:
 - For Linux operating system:

Open the ipmitool and enter the following command to disable the Serial over LAN (SOL) feature:

```
-I lanplus -H IP -U USERID -P PASSWORD sol deactivate
```

- For Microsoft Windows operating system:
 - a. Open the ipmitool and enter the following command to disable the SOL feature:


```
-I lanplus -H IP -U USERID -P PASSWORD sol deactivate
```
 - b. Open Windows PowerShell and enter the following command to disable the Emergency Management Services (EMS) feature:


```
Bcdedit /ems no
```
 - c. Restart the server to ensure that the EMS setting takes effect.

Demo video

<https://www.youtube.com/watch?v=9XXivrfakd0>

System board (system board assembly) replacement (trained technicians only)

Follow instructions in this section to remove and install the system I/O board and processor board, which assembled as a system board (system board assembly).

Important:

- This task must be operated by trained technicians that are certified by Lenovo Service. Do no attempt to remove or install it without proper training and qualification.
- When the server has a L2AM (The Lenovo Neptune Liquid to Air Module) installed, you must apply for a L2AM module handle (LACM heat sink bracket) first if you need to install or remove the system board assembly or processor. However, while replacing the old L2AM with a new one, you do not need to apply for a module handle (LACM heat sink bracket) as the new L2AM package contains it.
- If you need to replace a processor board and a firmware and RoT security module together, do the following:
 - Check the current PSB fuse policy before replacement. See *Service process before replacement at [Service process for updating PSB fuse state](#)*.
 - Ensure that the processor fuse status is expected without unexpected XCC event logs after replacement. See *Service process after replacing a processor board and a firmware and RoT security module together at [Service process for updating PSB fuse state](#)*.

The following illustration shows the layout of the system board (system board assembly) which contains the system I/O board and processor board.

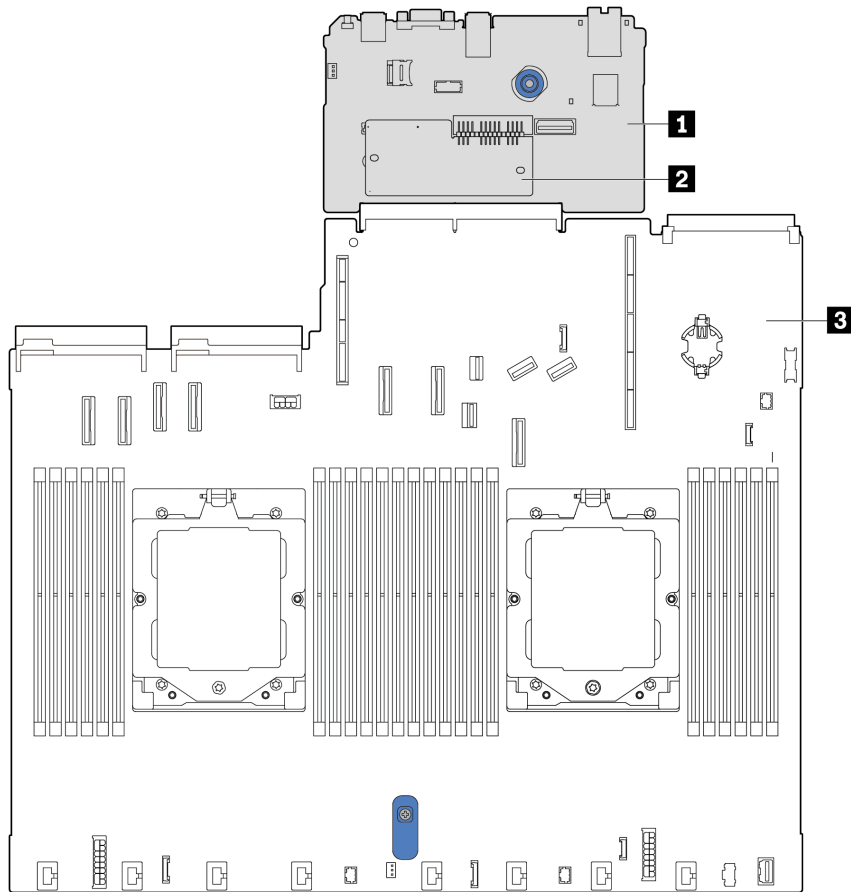


Figure 194. System-board-assembly layout

1 System I/O board	3 Processor board
2 Firmware and RoT security module	

- “Remove the firmware and RoT security module” on page 179
- “Install the firmware and RoT security module” on page 180
- “Remove the system I/O board or processor board” on page 184
- “Install the system I/O board or processor board” on page 189

Remove the firmware and RoT security module

Follow instructions in this section to remove the ThinkSystem V3 Firmware and Root of Trust Security Module (firmware and RoT security module).

About this task

Important: This task must be operated by trained technicians that are certified by Lenovo Service. Do not attempt to remove or install it without proper training and qualification.

Attention:

- Read “Installation Guidelines” on page 1 and “Safety inspection checklist” on page 2 to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See “Power off the server” on page 15.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.
- After replacing the firmware and RoT security module, update the firmware to the specific version supported by the server. Make sure that you have the required firmware or a copy of the pre-existing firmware before you proceed.

Firmware and driver download: You might need to update the firmware or driver after replacing a component.

- Go to <https://datacentersupport.lenovo.com/tw/en/products/servers/thinksystem/sr645v3/7d9c/downloads/driver-list/> to see the latest firmware and driver updates for your server.
- Go to “Update the firmware” in *User Guide* or *System Configuration Guide* for more information on firmware updating tools.

Procedure

Step 1. Prepare your server.

- Perform OneCLI commands to back up the UEFI settings. See https://sysmgmt.lenovofiles.com/help/topic/toolsctr_cli_lenovo/onecli_r_save_command.html.
- Perform both OneCLI commands and XCC actions to back up the XCC settings. See https://sysmgmt.lenovofiles.com/help/topic/toolsctr_cli_lenovo/onecli_r_save_command.html and https://sysmgmt.lenovofiles.com/help/topic/com.lenovo.systems.management.xcc2.doc/NN1ia_c_backupthexcc.html.
- Remove the top cover. See “Remove the top cover” on page 197.
- If your server comes with riser assemblies, remove them first, see “Riser assemblies” on page 159.

Step 2. Prepare your server.

- Remove the top cover. See “Remove the top cover” on page 197.
- If your server comes with a rear drive assembly, remove it first. See “Remove the rear 2.5" drive assembly” on page 147.
- If your server comes with a 7mm rear drive assembly, remove it first. See “Remove the 7mm rear drive assembly” on page 150

- d. If your server comes with riser assemblies, remove them first, see [“Riser assemblies” on page 159](#).

Step 3. Remove the firmware and RoT security module.

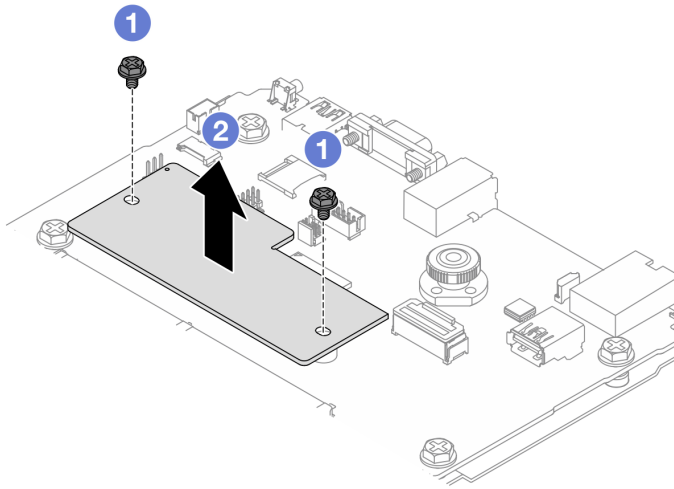


Figure 195. Firmware and RoT security module removal

- a. ① Loosen the two screws on the firmware and RoT security module.
- b. ② Lift the firmware and RoT security module out of the chassis.

After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Demo video

https://www.youtube.com/watch?v=9uCOXTan_fs

Install the firmware and RoT security module

Follow instructions in this section to install the ThinkSystem V3 Firmware and Root of Trust Security Module (firmware and RoT security module).

About this task

Important: This task must be operated by trained technicians that are certified by Lenovo Service. Do not attempt to remove or install it without proper training and qualification.

(Lenovo trained technician only) After replacing the firmware and RoT security module, update the UEFI firmware to the specific version supported by the server. For detailed information on how to update the firmware, see [Tip for replacing a firmware and RoT security module](#).

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 15](#).

- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Firmware and driver download: You might need to update the firmware or driver after replacing a component.

- Go to <https://datacentersupport.lenovo.com/tw/en/products/servers/thinksystem/sr645v3/7d9c/downloads/driver-list/> to see the latest firmware and driver updates for your server.
- Go to “Update the firmware” in *User Guide* or *System Configuration Guide* for more information on firmware updating tools.

Procedure

Step 1. Touch the static-protective package that contains the firmware and RoT security module to any unpainted surface on the outside of the server. Then, take the firmware and RoT security module out of the package and place it on a static-protective surface.

Step 2. Install the firmware and RoT security module to the server.

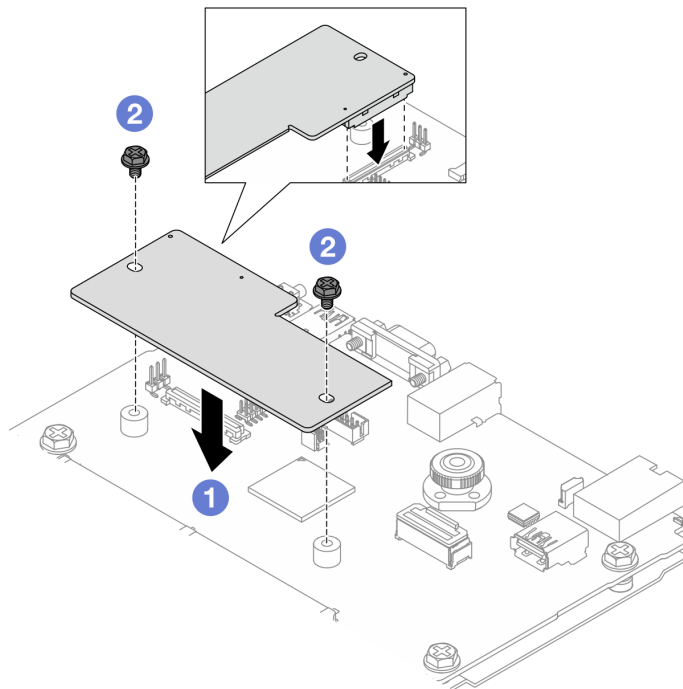


Figure 196. Installing the firmware and RoT security module

- 1 Lower the firmware and RoT security module onto the system I/O board and ensure that the connector on the module is correctly inserted into the slot on the system I/O board.
- 2 Tighten the two screws to secure the firmware and RoT security module in place.

After you finish

1. Complete the parts replacement. See “Complete the parts replacement” on page 201.
2. Update the UEFI, XCC and LXPM firmware to the specific version supported by the server. See <https://glosse4lenovo.lenovo.com/wiki/glosse4lenovo/view/How%20To/System%20related/How%20to%20do%20RoT%20Module%20FW%20update%20on%20ThinkSystem%20V3%20machines/>.

3. Perform OneCLI commands to restore the UEFI settings. See https://sysmgmt.lenovofiles.com/help/topic/toolstr_cli_lenovo/onecli_r_restore_command.html.
4. Perform both OneCLI commands and XCC actions to restore the XCC settings. See https://sysmgmt.lenovofiles.com/help/topic/toolstr_cli_lenovo/onecli_r_restore_command.html and https://sysmgmt.lenovofiles.com/help/topic/com.lenovo.systems.management.xcc2.doc/NN1ia_c_restorethexcc.html.
5. Optionally, do the following if needed:
 - Hide TPM. See “Hide/observe TPM” on page 182.
 - Update the TPM firmware. See “Update the TPM firmware” on page 183.
 - Enable UEFI Secure Boot. See “Enable UEFI Secure Boot” on page 183.

Demo video

<https://www.youtube.com/watch?v=eu7uHszmKA8>

Hide/observe TPM

TPM is enabled by default to encrypt data transfer for system operation. Optionally, you can disable TPM using Lenovo XClarity Essentials OneCLI.

To disable TPM, do the following:

1. Download and install Lenovo XClarity Essentials OneCLI.

To download Lenovo XClarity Essentials OneCLI, go to the following site:

<https://datacentersupport.lenovo.com/solutions/HT116433>

2. Run the following command:

```
OneCli.exe config set TrustedComputingGroup.HideTPMfromOS "Yes" --imm <userid>:<password>@<ip_address> --override
```

where:

- `<userid>:<password>` are the credentials used to access the BMC (Lenovo XClarity Controller interface) of your server. The default user ID is USERID, and the default password is PASSWORD (zero, not an uppercase o)
- `<ip_address>` is the IP address of the BMC.

Example:

```
D:\onecli>OneCli.exe config set TrustedComputingGroup.HideTPMfromOS "Yes" --imm USERID:PASSWORD=10.245.39.79 --override
Lenovo XClarity Essentials OneCLI 1xce_onecli01p-2.3.0
Licensed Materials - Property of Lenovo
(C) Copyright Lenovo Corp. 2013-2018 All Rights Reserved
If the parameters you input includes password, please Note that:
* The password must consist of a sequence of characters from `0-9a-zA-Z_+.$%!'&*()= ` set
* Use ` ` to quote when password parameters include special characters
* Do not use reserved characters in path name when parameter contains path
Invoking SET command ...
Connected to BMC at IP address 10.245.39.79 by IPMI
TrustedComputingGroup.HideTPMfromOS=Yes
Success.
```

3. Reboot the system.

If you want to enable TPM again, run the following command and reboot the system:

```
OneCli.exe config set TrustedComputingGroup.HideTPMfromOS "No" --imm <userid>:<password>@<ip_address> --override
```

Example:

```
D:\onecli3>OneCli.exe config set TrustedComputingGroup.HideTPMfromOS "No" --imm USERID:PASSWORD=11@10.245.39.79 --override
Lenovo XClarity Essentials OneCLI 1xce_onecli01h-3.0.1
(C) Lenovo 2013-2020 All Rights Reserved

OneCLI License Agreement and OneCLI Legal Information can be found at the following location:
"D:\onecli3\Lic"

[Is]Certificate check finished [100%][=====]
Invoking SET command ...
Connected to BMC at IP address 10.245.39.79 by IPMI
TrustedComputingGroup.HideTPMfromOS=No
Configure successfully, please reboot system.
Succeed.
```

Update the TPM firmware

Optionally, you can update the TPM firmware using Lenovo XClarity Essentials OneCLI.

Note: TPM firmware update is irreversible. After update, the TPM firmware cannot be downgraded to earlier versions.

TPM firmware version

Follow the procedure below to see the TPM firmware version:

From Lenovo XClarity Provisioning Manager

1. Start the server and press the key specified in the on-screen instructions to display the Lenovo XClarity Provisioning Manager interface. (For more information, see the “Startup” section in the LXPM documentation compatible with your server at https://sysmgt.lenovofiles.com/help/topic/lxpm_frontend/lxpm_product_page.html.)
2. If the power-on Administrator password is required, enter the password.
3. From the UEFI Setup page, click **System Settings → Security → Trusted Platform Module → TPM 2.0 → TPM Firmware Version**.

Update the TPM firmware

To update the TPM firmware, do the following:

1. Download and install Lenovo XClarity Essentials OneCLI.

To download Lenovo XClarity Essentials OneCLI, go to the following site:

<https://datacentersupport.lenovo.com/solutions/HT116433>

2. Run the following command:

```
OneCli.exe config set TrustedComputingGroup.DeviceOperation "Update to TPM 2.0 firmware version <x.x.x.x>" --bmc <userid>:<password>@<ip_address>
```

where:

- <x.x.x.x> is the target TPM version.
e.g. TPM 2.0 (7.2.1.0) -> TPM 2.0 (7.2.2.0):

```
OneCli.exe config set TrustedComputingGroup.DeviceOperation "Update to TPM 2.0 firmware version 7.2.2.0" --bmc <userid>:<password>@<ip_address>
```

- <userid>:<password> are the credentials used to access the BMC (Lenovo XClarity Controller interface) of your server. The default user ID is USERID, and the default password is PASSWORD (zero, not an uppercase o).
- <ip_address> is the IP address of the BMC.

Enable UEFI Secure Boot

Optionally, you can enable UEFI Secure Boot.

There are two methods available to enable UEFI Secure Boot:

- From Lenovo XClarity Provisioning Manager

To enable UEFI Secure Boot from Lenovo XClarity Provisioning Manager:

1. Start the server and press the key specified in the on-screen instructions to display the Lenovo XClarity Provisioning Manager interface. (For more information, see the “Startup” section in the LXPM documentation compatible with your server at https://sysmgmt.lenovofiles.com/help/topic/lxpm_frontend/lxpm_product_page.html.)
2. If the power-on Administrator password is required, enter the password.
3. From the UEFI Setup page, click **System Settings → Security → Secure Boot**.
4. Enable Secure Boot and save the settings.

Note: If disabling UEFI secure boot is needed, select Disable in step 4.

- From Lenovo XClarity Essentials OneCLI

To enable UEFI Secure Boot from Lenovo XClarity Essentials OneCLI:

1. Download and install Lenovo XClarity Essentials OneCLI.

To download Lenovo XClarity Essentials OneCLI, go to the following site:

<https://datacentersupport.lenovo.com/solutions/HT116433>

2. Run the following command to enable Secure Boot:

```
OneCli.exe config set SecureBootConfiguration.SecureBootSetting Enabled --bmc <userid>:<password>@<ip_<br>address>
```

where:

- *<userid>:<password>* are the credentials used to access the BMC (Lenovo XClarity Controller interface) of your server. The default user ID is USERID, and the default password is PASSWORD (zero, not an uppercase o)
- *<ip_address>* is the IP address of the BMC.

For more information about the Lenovo XClarity Essentials OneCLI `set` command, see:

http://sysmgmt.lenovofiles.com/help/topic/toolstr_cli_lenovo/onecli_r_set_command.html

Note: If disabling UEFI secure boot is needed, run the following command:

```
OneCli.exe config set SecureBootConfiguration.SecureBootSetting Disabled --bmc <userid>:<password>@<ip_<br>address>
```

Remove the system I/O board or processor board

Follow instructions in this section to remove the system I/O board or processor board.

About this task

Important:

- This task must be operated by trained technicians that are certified by Lenovo Service. Do not attempt to remove or install it without proper training and qualification.
- When replacing the system board (system board assembly), always update the server with the latest firmware or restore the pre-existing firmware. Make sure that you have the latest firmware or a copy of the pre-existing firmware before you proceed.
- When removing the memory modules, label the slot number on each memory module, remove all the memory modules from the system board (system board assembly), and set them aside on a static-protective surface for reinstallation.


- **When disconnecting cables, make a list of each cable and record the connectors the cable is connected to, and use the record as a cabling checklist after installing the new system board (system board assembly).**
- When the server has an LACM module (close-loop cooling module) installed, you must apply for a handle first if you need to install or remove the processor board, I/O board, and processor. However, while replacing the old LACM module with a new one, you do not need to apply for a handle as the new LACM module contains it.

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 15](#).
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

CAUTION:

Hazardous moving parts. Keep fingers and other body parts away.

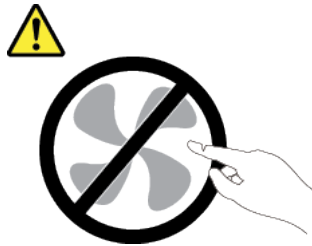

CAUTION:



The heat sinks and processors might be very hot. Turn off the server and wait several minutes to let the server cool before removing the server cover.

S002



CAUTION:

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

Procedure

Step 1. Make preparation for this task.

- a. Record all system configuration information, such as Lenovo XClarity Controller IP addresses, vital product data, and the machine type, model number, serial number, Universally Unique Identifier, and asset tag of the server.

- b. Save the system configuration to an external device with Lenovo XClarity Essentials.
- c. Save the system event log to external media.
- d. Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 15](#).
- e. If the server is installed in a rack, slide the server out on its rack slide rails to gain access to the top cover, or remove the server from the rack.
- f. Remove the top cover. See [“Remove the top cover” on page 197](#).
- g. If your server has an CFF adapter or a RAID flash power module installed on the front of the chassis, remove it first.
 - [“Remove the internal CFF HBA/RAID adapter” on page 76](#)
 - [“Remove the RAID flash power module on the chassis” on page 140](#)
- h. Record where the cables are connected to the system board (system board assembly); then, disconnect all the cables.
- i. Remove any of the following components that are installed on the system board (system board assembly) and put them in a safe, static-protective place.
 - [“Remove a system fan” on page 194](#)
 - [“Remove a memory module” on page 94](#)
 - [“Processor and heat sink replacement \(trained technicians only\)” on page 129](#)
 - [“Remove the CMOS battery” on page 24](#)
 - [“Remove the rear riser card” on page 166](#)
 - [“Remove the OCP module” on page 112](#)
- j. Pull out the power supplies slightly. Ensure that they are disconnected from the system board (system board assembly).

Step 2. Remove the system board (system board assembly).

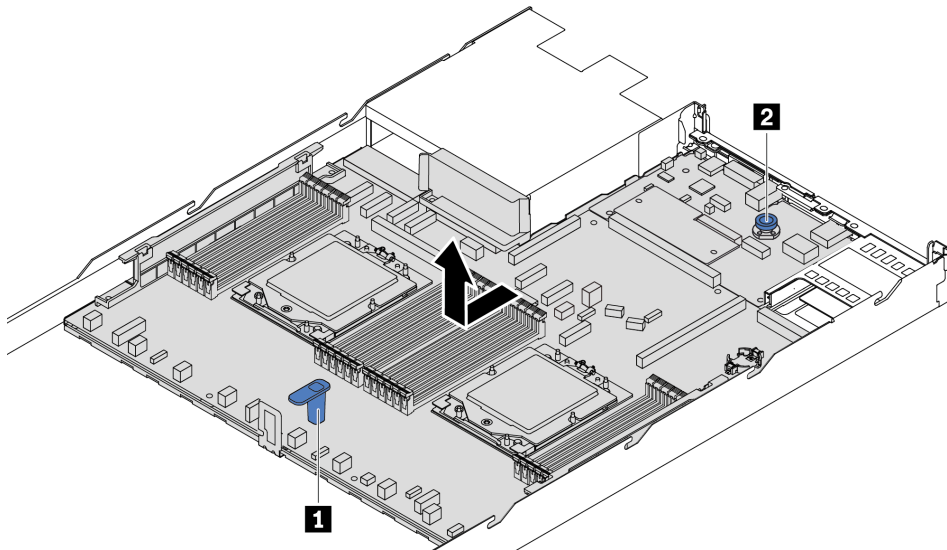


Figure 197. System board (system board assembly) removal

- a. Hold the lift handle **1** and lift the release pin **2** at the same time and slide the system board (system board assembly) toward the front of the server.
- b. Lift the system board (system board assembly) out of the chassis.

Step 3. Separate the system I/O board from the processor board.

Note: To prevent the contact of the system I/O board from damage, pinch and lift the plunger on the system I/O board upward a little and pull the system I/O board outward. During the entire pulling action, ensure that the system I/O board remains as horizontal as possible.

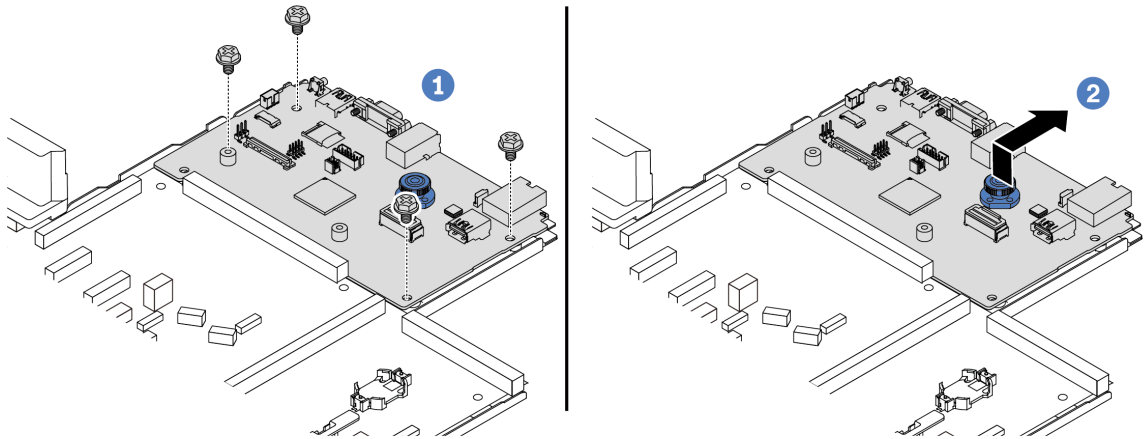


Figure 198. Separating the system I/O board from the processor board

- a. 1 Remove the screws that secure the system I/O board.
- b. 2 Lift and hold the release pin and slide the system I/O board towards the rear to disengage it from the processor board.

Step 4. (Optional) If you are going to replace the system I/O board, do the following:

1. Remove the firmware and RoT security module from the system I/O board. See [“Remove the firmware and RoT security module” on page 179](#).
2. Remove the MicroSD card.

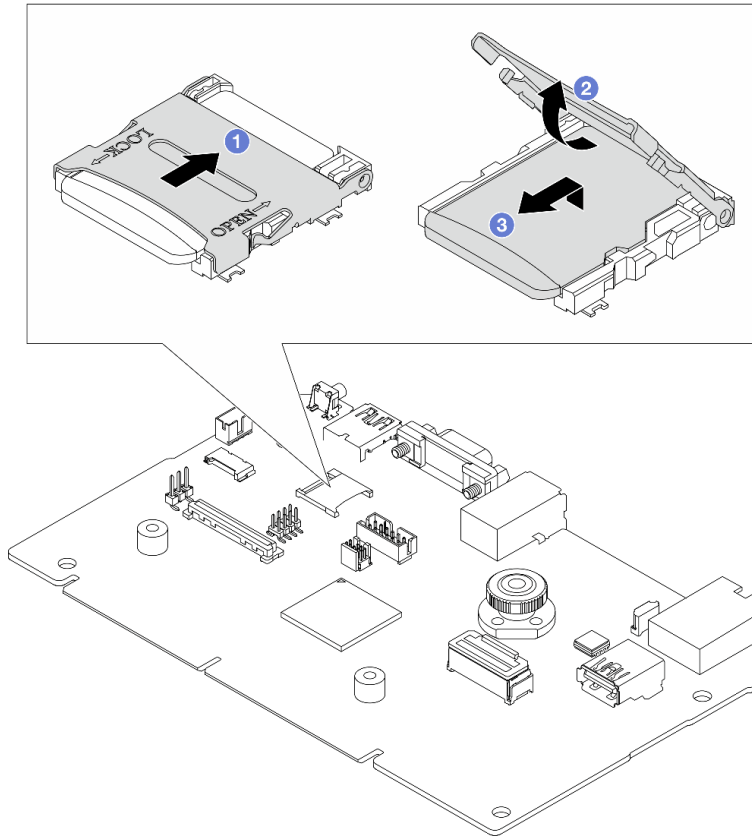


Figure 199. Removing the MicroSD card

- a. 1 Slide the shell to OPEN direction.
- b. 2 Flip the socket hinge up.
- c. 3 Remove the MicroSD card.

Note: After the MicroSD card is removed, the historical data of the firmware and user data uploaded through Remote Disc On Card (RDOC) will be lost, and the firmware rollback function and extended RDOC space will not be supported. To enable the two features, it will need to install a new MicroSD card.

After you finish

- If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Important: Before you return the processor board, make sure that you install the processor socket covers from the new processor board. To replace a processor socket cover:

1. Slide the cover out from the processor socket of the new processor board.
 2. Install the cover on the processor socket of the removed processor board.
- If you plan to recycle the component, see “Disassemble the system board (system board assembly) for recycle” in *User Guide*.

Demo video

<https://www.youtube.com/watch?v=LG--hccwfc4>

Install the system I/O board or processor board

Follow instructions in this section to install the system I/O board or processor board.

About this task

Important:

- This task must be operated by trained technicians that are certified by Lenovo Service. Do not attempt to remove or install it without proper training and qualification.
- When the server has an LACM module (close-loop cooling module) installed, you must apply for a handle first if you need to install or remove the processor board, I/O board, and processor. However, while replacing the old LACM module with a new one, you do not need to apply for a handle as the new LACM module contains it.

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See “[Power off the server](#)” on page 15.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Firmware and driver download: You might need to update the firmware or driver after replacing a component.

- Go to <https://datacentersupport.lenovo.com/tw/en/products/servers/thinksystem/sr645v3/7d9c/downloads/driver-list/> to see the latest firmware and driver updates for your server.
- Go to “Update the firmware” in *User Guide* or *System Configuration Guide* for more information on firmware updating tools.

Procedure

Step 1. Touch the static-protective package that contains the new part to any unpainted surface on the outside of the server. Then, Then, take the new part out of the package and place it on a static-protective surface.

Step 2. (Optional) If you are replacing the system I/O board, do the following:

1. Install the firmware and RoT security module removed from the old system I/O board onto the new system I/O board. See “[Install the firmware and RoT security module](#)” on page 180.
2. Install the MicroSD card.

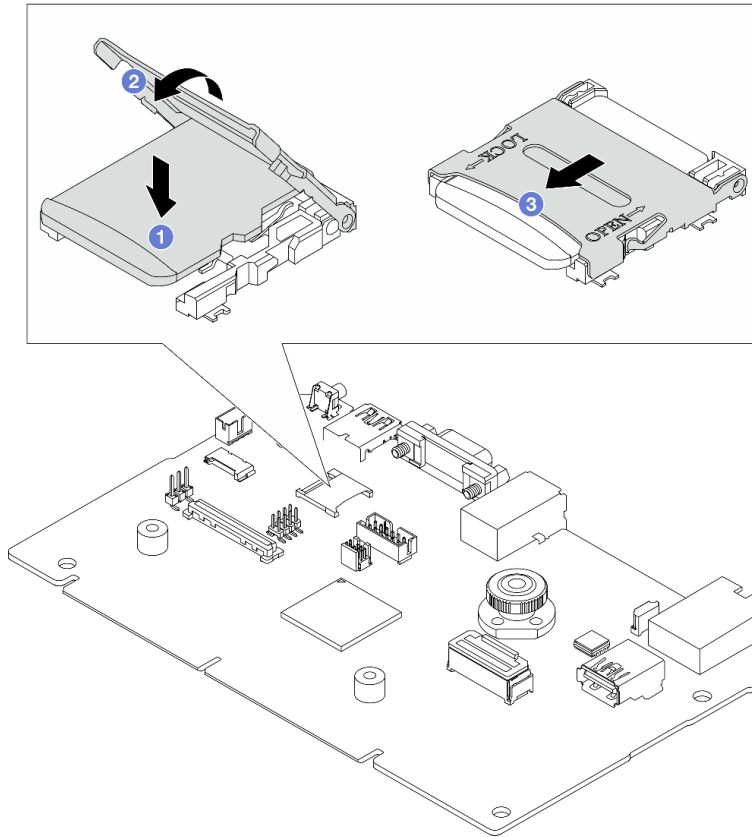


Figure 200. Installing the MicroSD card

- a. 1 Place the card onto the socket with the contacts of the MicroSD card facing downwards.
- b. 2 Close the socket hinge.
- c. 3 Slide the shell to LOCK direction.

Step 3. Depending on your need, do one of the following:

- If you are going to replace the system I/O board and reuse the processor board, install a new system I/O board onto the processor board.
- If you are going to replace the processor board and reuse the system I/O board, install the existing system I/O board onto a new processor board.


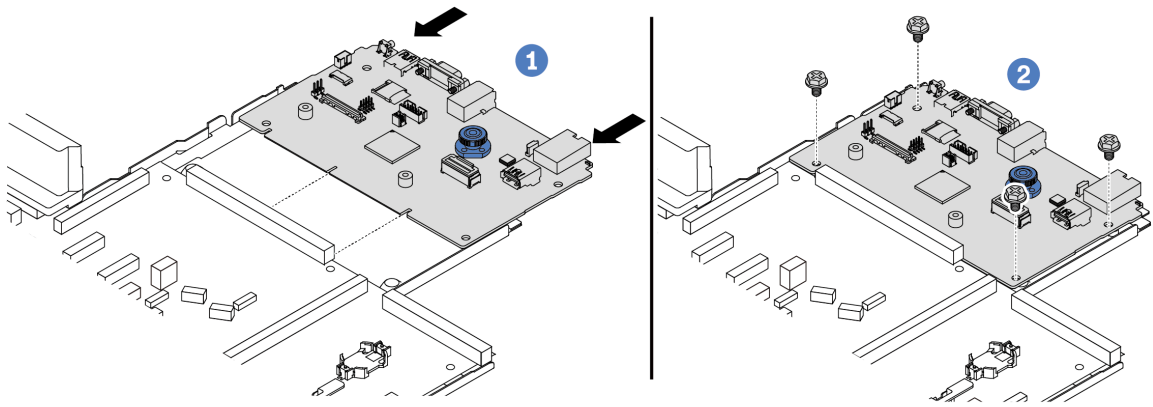


Figure 201. Installing the system I/O board onto the processor board

- a. **1** Align the system I/O board with the connector on the processor board, and use both hands to push the system I/O board and slightly insert it into the connector.

Note: To prevent the contact of the system I/O board from damage, ensure that the system I/O board is aligned correctly with the connector on the processor board, and remains as horizontal as possible during the insertion.

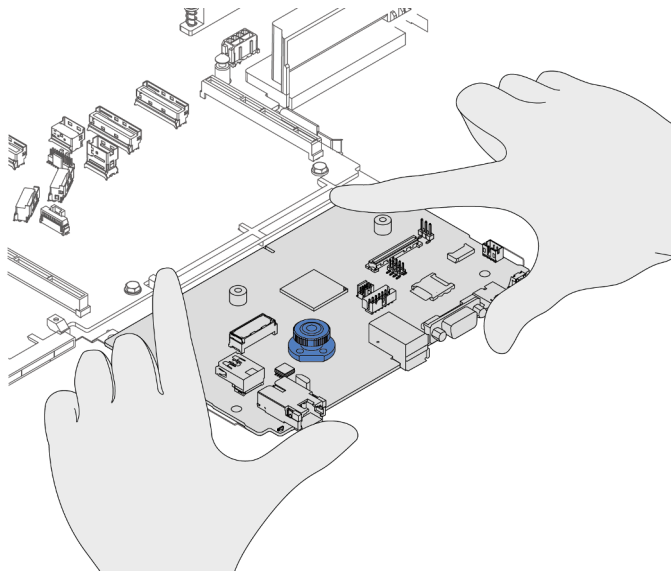

- b. **2** Install the screws to fix the system I/O board into place.

Step 4. Install the system-board assembly into the server.

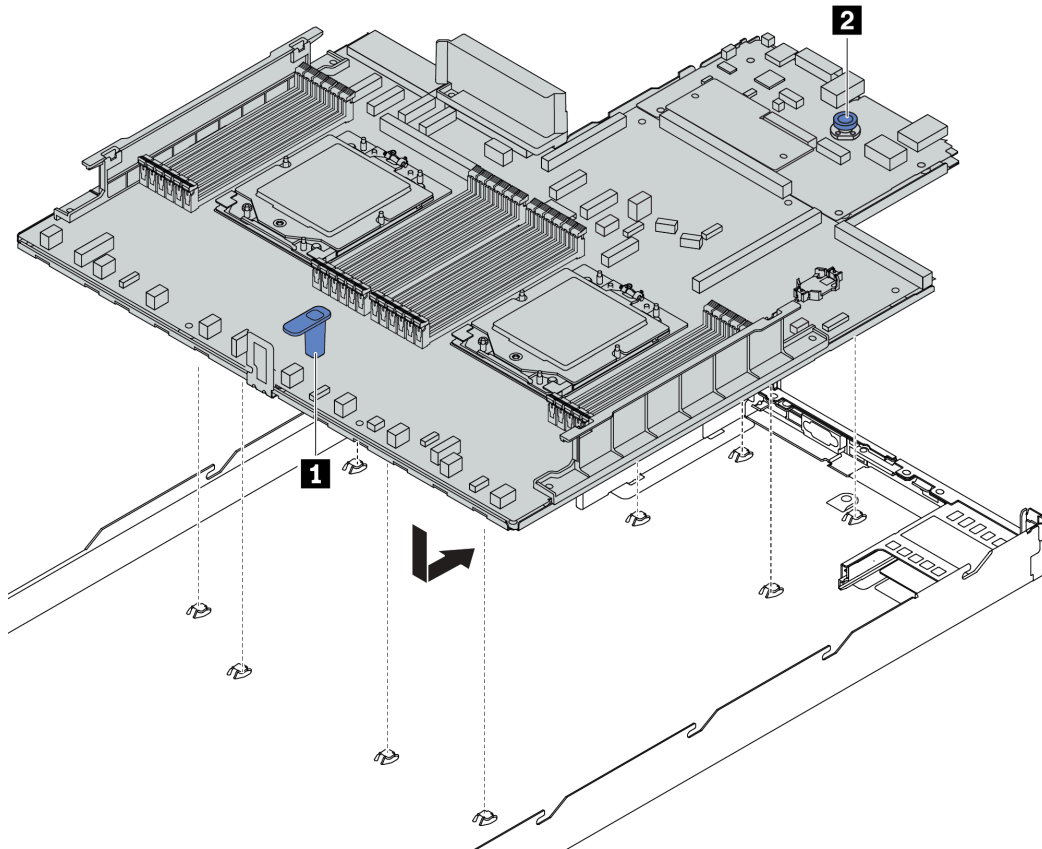


Figure 202. System board (system board assembly) installation

- a. Hold the lift handle **1** and the release pin **2** at the same time to lower the system board (system board assembly) into the chassis.
- b. Slide the system board (system board assembly) to the rear of the server until the system board (system board assembly) snaps into position. Ensure that:
 - The rear connectors on the new system board (system board assembly) are inserted into the corresponding holes in the rear panel.
 - The release pin **2** secures the system board (system board assembly) in place.

After you finish

1. Install any components that you have removed from the failing system board (system board assembly).
 - [“Install a processor” on page 133](#)
 - [“Install a heat sink” on page 135](#)
 - [“Install a memory module” on page 96](#)
 - [“Install the CMOS battery” on page 27](#)
 - [“Install the internal CFF HBA/RAID adapter” on page 77](#)
 - [“Install the RAID flash power module on the chassis” on page 142](#)
 - [“Install a system fan” on page 196](#)
 - [“Install the rear riser card” on page 168](#)
 - [“Install the OCP module” on page 113](#)
 - [“Install a power supply unit” on page 123](#)
 - [“Rear drive assembly replacement” on page 146](#)
 - [“Rear drive backplane replacement” on page 152](#)

2. Reconnect all the required cables to the same connectors on the system board (system board assembly). See [Chapter 2 “Internal cable routing” on page 203](#).
3. Ensure that all components have been reassembled correctly and that no tools or loose screws are left inside the server.
4. Reinstall the top cover. See [“Install the top cover” on page 199](#).
5. If the server was installed in a rack, reinstall the server into the rack. See [“Install the server to rack” on page 19](#).
6. Reconnect the power cords and any cables that you removed.
7. Power on the server and any peripheral devices. See [“Power on the server” on page 15](#).
8. Update the vital product data (VPD). See [“Update the Vital Product Data \(VPD\)” on page 193](#).

Machine type number and serial number can be found on the ID label, see “Identify the server and access to the Lenovo XClarity Controller” in *User Guide*.

9. Download and install the latest device drivers: <https://datacentersupport.lenovo.com/tw/en/products/servers/thinksystem/sr645v3/7d9c/downloads/driver-list/>.
10. Update the system and device firmware. See “Update the firmware” in *User Guide* or *System Configuration Guide*.

Note: (Lenovo trained technician only) If you have replaced the firmware and RoT security module, update the firmware to the specific version supported by the server. See [Tip for replacing a firmware and RoT security module](#).

Demo video

<https://www.youtube.com/watch?v=KXo6-4HWRH8>

Update the Vital Product Data (VPD)

Use this topic to update the Vital Product Data (VPD).

- **(Required)** Machine type
- **(Required)** Serial number
- (Optional) Asset tag
- (Optional) UUID

Recommended tools:

- Lenovo XClarity Provisioning Manager
- Lenovo XClarity Essentials OneCLI commands

Using Lenovo XClarity Provisioning Manager

Steps:

1. Start the server and press the key according to the on-screen instructions. The Lenovo XClarity Provisioning Manager interface is displayed by default.
2. Choose **System Summary**. The “System Summary” tab page is displayed.
3. Click **Update VPD**, then, follow on-screen instructions to update the VPD.

Using Lenovo XClarity Essentials OneCLI commands

- Updating **machine type**
onecli config set SYSTEM_PROD_DATA.SysInfoProdName <m/t_model> [access_method]
- Updating **serial number**
onecli config set SYSTEM_PROD_DATA.SysInfoSerialNum <s/n> [access_method]
- Updating **system model**

```
onecli config set SYSTEM_PROD_DATA.SysInfoProdIdentifier <system model> [access_method]
onecli config set SYSTEM_PROD_DATA.SysInfoProdIdentifierEx <system model> --override [access_method]
```

- **Updating asset tag**

```
onecli config set SYSTEM_PROD_DATA.SysEncloseAssetTag <asset_tag> [access_method]
```

- **Updating UUID**

```
onecli config createuuid SYSTEM_PROD_DATA.SysInfoUUID [access_method]
```

Variable	Description
<m/t_model>	The server machine type and model number. Type xxxxyyy, where xxxx is the machine type and yyy is the server model number.
<s/n>	The serial number on the server. Type zzzzzzz, where zzzzzzz is the serial number.
<system model>	The system model on the server. Type system yyyyyyyyy, where yyyyyyyy is the product identifier.
<asset_tag>	The server asset tag number. Type aaaaaaaaaaaaaaaaaaaaaaaaaaaaaa, where aaaaaaaaaaaaaaaaaaaaaaaaaaaaaa is the asset tag number.
[access_method]	The access method that you select to access the target server. <ul style="list-style-type: none"> • Online KCS (unauthenticated and user restricted): You can directly delete [access_method] from the command. • Online authenticated LAN: In this case, specify below LAN account information at the end of the OneCLI command: --bmc-username <user_id> --bmc-password <password> • Remote WAN/LAN: In this case, specify below XCC account information and IP address at the end of the OneCLI command: --bmc <bmc_user_id>:<bmc_password>@<bmc_external_IP> <p>Notes:</p> <ul style="list-style-type: none"> – <bmc_user_id> The BMC account name (1 of 12 accounts). The default value is USERID. – <bmc_password> The BMC account password (1 of 12 accounts).

System fan replacement

Use this information to remove and install a system fan.

- [“Remove a system fan” on page 194](#)
- [“Install a system fan” on page 196](#)

Remove a system fan

Use this information to remove a system fan. You can remove a hot-swap fan without powering off the server, which helps you avoid significant interruption to the operation of the system.

About this task

S033



CAUTION:

Hazardous energy present. Voltages with hazardous energy might cause heating when shorted with metal, which might result in spattered metal, burns, or both.

S017



CAUTION:

Hazardous moving fan blades nearby. Keep fingers and other body parts away.

Attention:

- Read [“Installation Guidelines”](#) on page 1 and [“Safety inspection checklist”](#) on page 2 to ensure that you work safely.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

Step 1. Remove the top cover. See [“Remove the top cover”](#) on page 197.

Step 2. Grasp the fan tabs on both ends of the system fan and carefully lift the system fan out of the server.

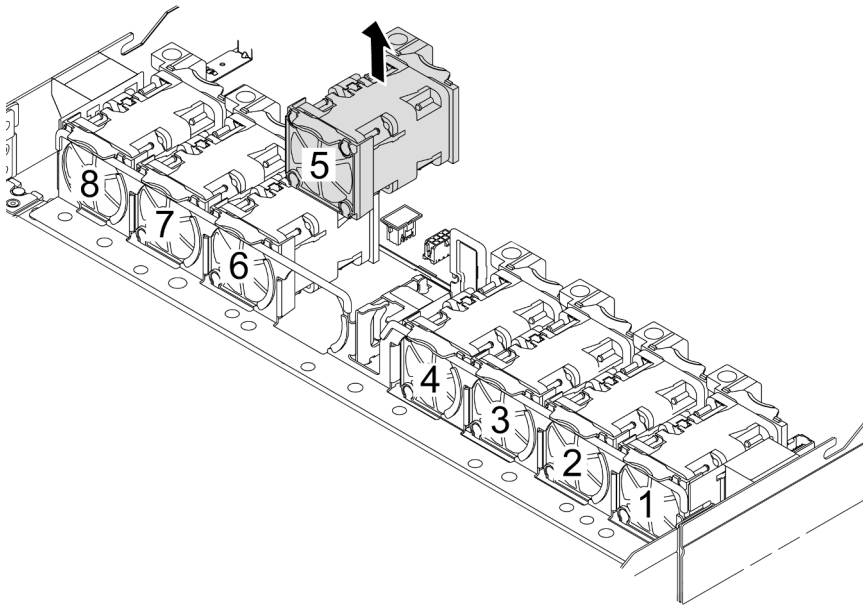


Figure 203. System fan removal

After you finish

1. Install a new system fan or install a fan filler to cover the place. See “[Install a system fan](#)” on page 196.
2. If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Demo video

<https://www.youtube.com/watch?v=ca-gwOouN8U>

Install a system fan

Use this information to install a system fan. You can install a hot-swap fan without powering off the server, which helps you avoid significant interruption to the operation of the system.

About this task

S033



CAUTION:

Hazardous energy present. Voltages with hazardous energy might cause heating when shorted with metal, which might result in spattered metal, burns, or both.

S017



CAUTION:

Hazardous moving fan blades nearby. Keep fingers and other body parts away.

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

- Step 1. Touch the static-protective package that contains the system fan to any unpainted surface on the outside of the server. Then, take the system fan out of the package and place it on a static-protective surface.



CAUTION:

Hazardous energy present. Voltages with hazardous energy might cause heating when shorted with metal, which might result in spattered metal, burns, or both.

S014



CAUTION:

Hazardous voltage, current, and energy levels might be present. Only a qualified service technician is authorized to remove the covers where the label is attached.

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 15](#).
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Procedure

- Step 1. If the server is installed in a rack, slide the server out on its rack slide rails to gain access to the top cover, or remove the server from the rack. See the Rack Installation Guide that comes with the rail kit for your server.

Step 2. Remove the top cover.

Attention: Handle the top cover carefully. Dropping the top cover with the cover latch open might damage the cover latch.

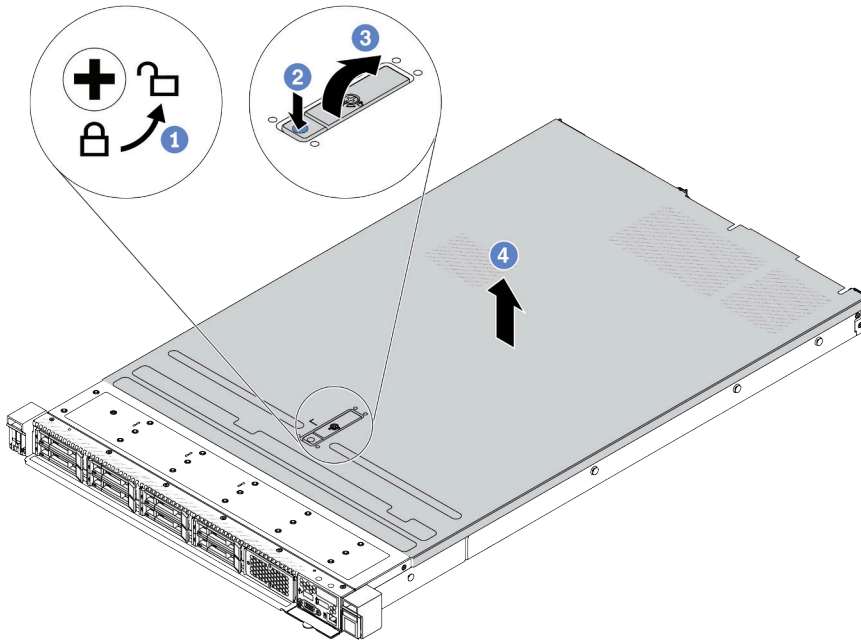


Figure 205. Top cover removal

- a. 1 Use a screwdriver to turn the cover lock to the unlocked position as shown.
- b. 2 Press the release button on the cover latch. The cover latch then gets released to some extent.
- c. 3 Fully open the cover latch as shown.
- d. 4 Slide the top cover to the rear until it is disengaged from the chassis. Then, lift the top cover off the chassis and place the top cover on a flat clean surface.

After you finish

1. Replace any options as required or install a new top cover. See “Install the top cover” on page 199.
2. If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Demo video

<https://www.youtube.com/watch?v=Jatuk6DAci0>

Install the top cover

Follow instructions in this section to install the top cover.

About this task

S033



CAUTION:

Hazardous energy present. Voltages with hazardous energy might cause heating when shorted with metal, which might result in spattered metal, burns, or both.

S014



CAUTION:

Hazardous voltage, current, and energy levels might be present. Only a qualified service technician is authorized to remove the covers where the label is attached.

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 15](#).
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Operating the server with the top cover removed might damage server components. For proper cooling and airflow, install the top cover before you turn on the server.

Note: A new top cover comes without a service label attached. If you need a service label, order it together with the new top cover and attach the service label to the new top cover first.

Procedure

Step 1. Check your server and ensure that:

- All cables, adapters, and other components are installed and seated correctly and that you have not left loose tools or parts inside the server.
- All internal cables are connected and routed correctly. See [Chapter 2 “Internal cable routing” on page 203](#).

Step 2. Install the top cover to your server.

Attention: Handle the top cover carefully. Dropping the top cover with the cover latch open might damage the cover latch.

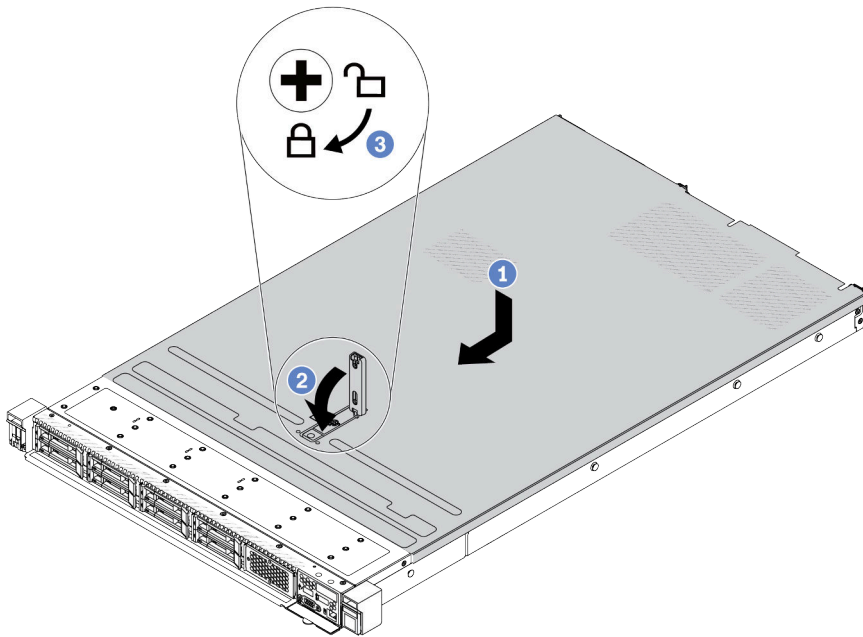


Figure 206. Top cover installation

- a. **1** Ensure that the cover latch is in the open position. Lower the top cover onto the chassis until both sides of the top cover engage the guides on both sides of the chassis. Then, slide the top cover to the front of the chassis.

Note: Before you slide the top cover forward, ensure that all the tabs on the top cover engage the chassis correctly.

- b. **2** Press down the cover latch and ensure that the cover latch is completely closed.
- c. **3** Use a screwdriver to turn the cover lock to the locked position.

After you finish

After installing the top cover, complete the parts replacement. See [“Complete the parts replacement” on page 201](#).

Demo video

<https://www.youtube.com/watch?v=6l4lgc5OeVw>

Complete the parts replacement

Go through the checklist to complete parts replacement

To complete the parts replacement, do the following:

1. Ensure that all components have been reassembled correctly and that no tools or loose screws are left inside your server.
2. Properly route and secure the cables in the server. Refer to detailed cable routing information for each component in [Chapter 2 “Internal cable routing” on page 203](#).
3. If you have removed the top cover, reinstall it. See [“Install the top cover” on page 199](#).
4. Reconnect external cables and power cords to the server.

Attention: To avoid component damage, connect the power cords last.

5. Update the server configuration if necessary.
 - Download and install the latest device drivers: <http://datacentersupport.lenovo.com>
 - Update the system firmware. See “Update the firmware” in *User Guide*.
 - Reconfigure the disk arrays if you have installed or removed a hot-swap drive or a RAID adapter. See the Lenovo XClarity Provisioning Manager User Guide, which is available for download at: <http://datacentersupport.lenovo.com>

Chapter 2. Internal cable routing

See this section to do cable routing for specific components.

Note: Disengage all latches, release tabs, or locks on cable connectors when you disconnect cables from the system board (system board assembly). Failing to release them before removing the cables will damage the cable sockets on the system board (system board assembly), which are fragile. Any damage to the cable sockets might require replacing the system board (system board assembly).

Identifying connectors

See this section to locate and identify the connectors on the electric boards.

Drive backplane connectors

See this section to locate the connectors on the drive backplanes.

- “10 x 2.5" SAS/SATA/AnyBay backplane” on page 203
- “8 x 2.5" SAS/SATA backplane” on page 204
- “4 x 3.5" SAS/SATA/AnyBay backplane” on page 204
- “4 x 2.5" SAS/SATA/NVMe/AnyBay backplane” on page 205
- “16 x EDSFF backplane” on page 206
- “Rear 7mm SAS/SATA/NVMe backplane” on page 206
- “Rear 2 x 2.5" SAS/SATA/NVMe backplane” on page 206
- “M.2 drive backplane” on page 207

10 x 2.5" SAS/SATA/AnyBay backplane

See this section to locate the connectors on the 10 x 2.5" drive backplane.

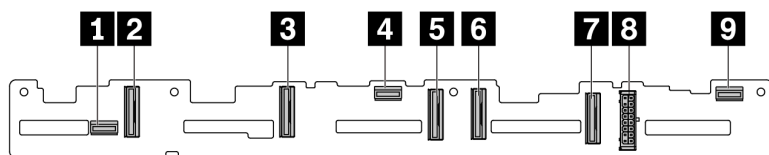


Figure 207. 10 x 2.5 AnyBay backplane

1 SAS 2	2 NVMe 8–9
3 NVMe 6–7	4 SAS 1
5 NVMe 4–5	6 NVMe 2–3
7 NVMe 0–1	8 Power
9 SAS 0	

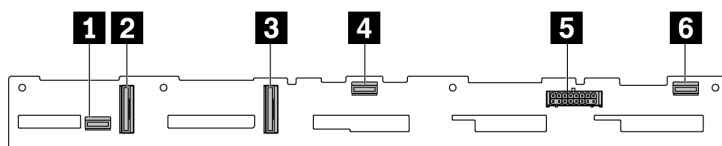


Figure 208. 6 x SAS/SATA + 4 x NVMe backplane

1 SAS 2	2 NVMe 2-3
3 NVMe 0-1	4 SAS 1
5 Power	6 SAS 0

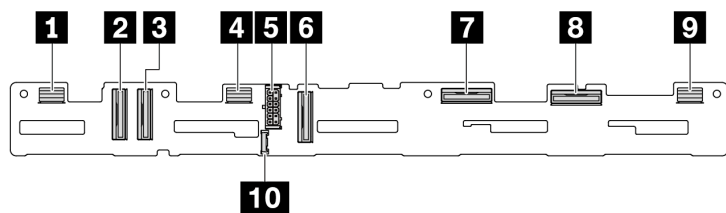


Figure 209. 10 x 2.5 AnyBay backplane (Gen 5)

1 SAS 8-9	2 NVMe 8-9
3 NVMe 6-7	4 SAS 4-7
5 Power	6 NVMe 4-5
7 NVMe 2-3	8 NVMe 0-1
9 SAS 0-3	10 Sideband connector

8 x 2.5" SAS/SATA backplane

See this section to locate the connectors on the 8 x 2.5" drive backplane.

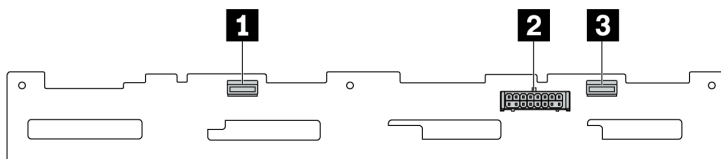


Figure 210. 8 x 2.5" SAS/SATA backplane

1 SAS 1	2 Power
3 SAS 0	

4 x 3.5" SAS/SATA/AnyBay backplane

See this section to locate the connectors on the 4 x 3.5" drive backplane.

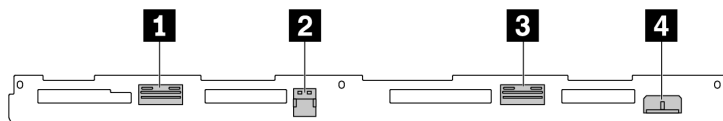


Figure 211. 4 x 3.5" AnyBay backplane

1 NVMe 2-3	2 SAS
3 NVMe 0-1	4 Power

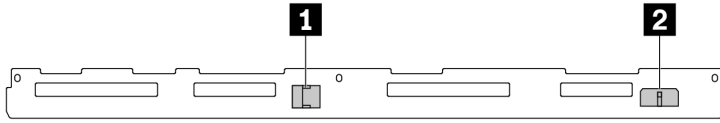


Figure 212. 4 x 3.5 SAS/SATA backplane

1 SAS	2 Power
--------------	----------------

4 x 2.5" SAS/SATA/NVMe/AnyBay backplane

See this section to locate the connectors on the 4 x 2.5" drive backplane.

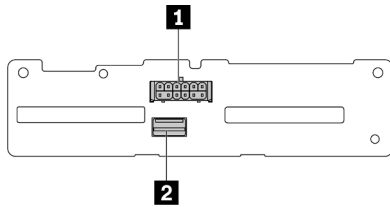


Figure 213. 4 x 2.5" SAS/SATA backplane

1 Power	2 SAS
----------------	--------------

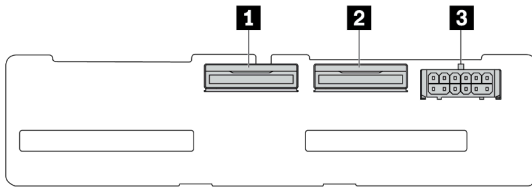


Figure 214. 4 x 2.5 NVMe backplane

1 NVMe 2-3	2 NVMe 0-1
3 Power	


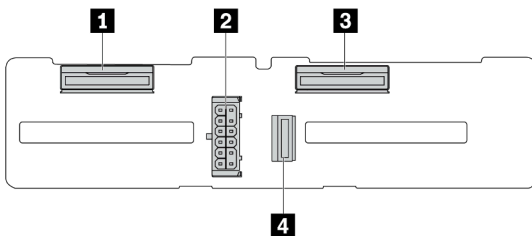


Figure 215. 4 x 2.5 AnyBay backplane

1 NVMe 2-3	2 Power
3 NVMe 0-1	4 SAS

16 x EDSFF backplane

See this section to locate the connectors on the 16 x EDSFF drive backplane.

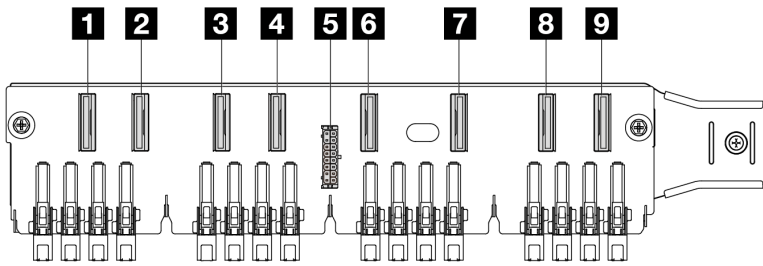

1 EDSFF 0-1	2 EDSFF 2-3
3 EDSFF 4-5	4 EDSFF 6-7
5 Power	6 EDSFF 8-9
7 EDSFF 10-11	8 EDSFF 12-13
9 EDSFF 14-15	

Rear 7mm SAS/SATA/NVMe backplane

See this section to locate the connectors on the rear 7mm drive backplane.

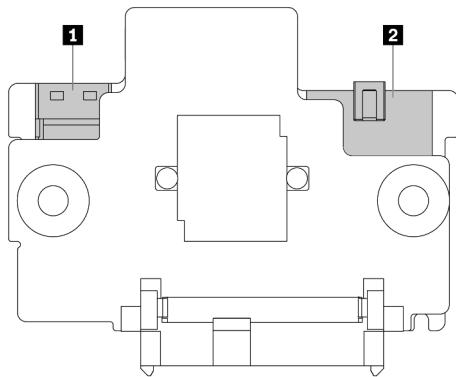


Figure 216. 7mm SAS/SATA/NVMe backplane (top + bottom)

1 Power	2 Signal
----------------	-----------------

Rear 2 x 2.5" SAS/SATA/NVMe backplane

See this section to locate the connectors on the rear 2 x 2.5" drive backplane.

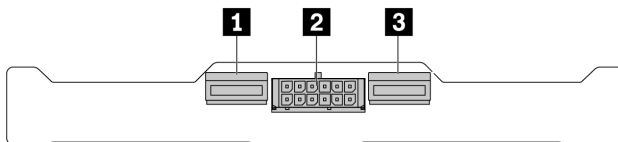


Figure 217. Rear 2 x 2.5" NVMe backplane

1 NVMe 1	2 Power
3 NVMe 0	

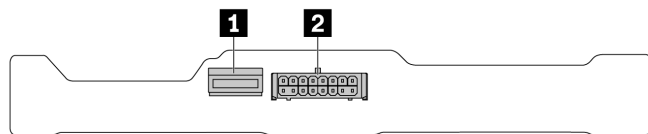


Figure 218. Rear 2 x 2.5 SAS/SATA backplane

1 SAS	2 Power
--------------	----------------

M.2 drive backplane

To locate the connectors on the M.2 drive backplanes, see [“M.2 backplane and M.2 drive replacement” on page 101](#) for details.

Backplane power cable routing

Use the section to understand the power cable routing for both front and rear drive backplanes.

- The backplanes your server supports require power connection. This section singles out the power connection from signal connection for better understanding.
- For the locations of backplane power connectors the processor board, see [“System-board-assembly connectors” on page 367](#) for details.
- For more information about backplanes supported and their connectors, see [“Drive backplane connectors” on page 203](#).

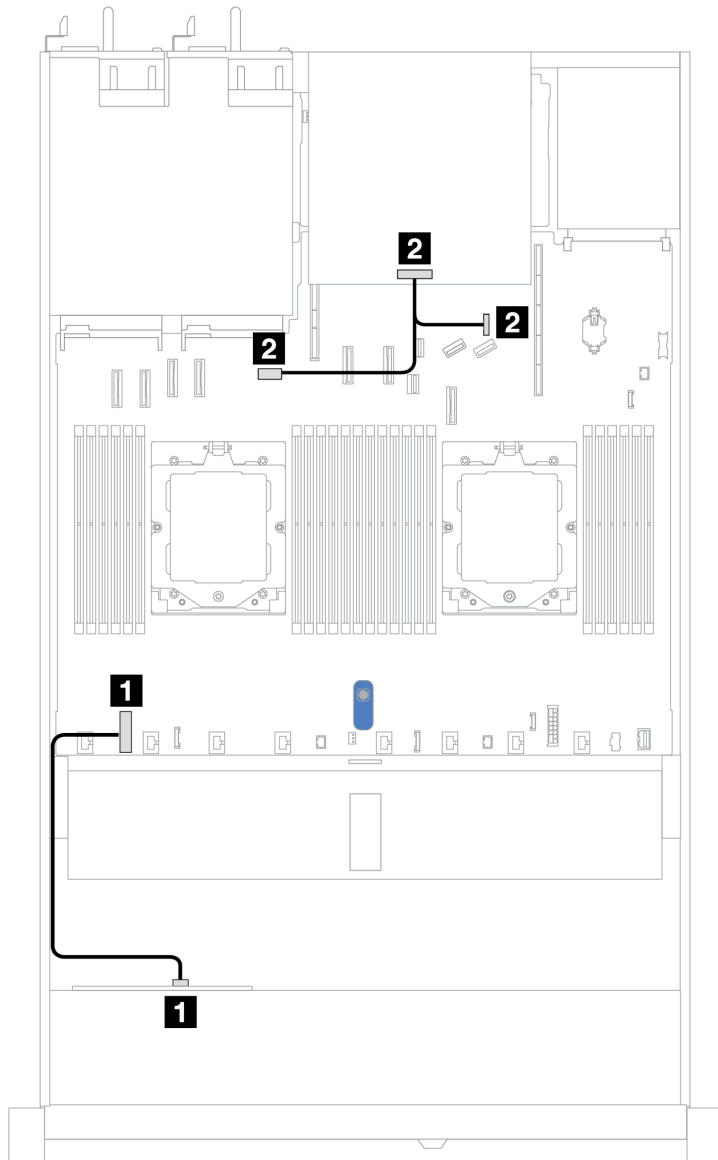


Figure 219. Backplane power cable connection

From	To
1 Power connector on the front drive backplane	1 Front backplane power connector on the processor board
2 Power connector on the rear drive backplane	<ul style="list-style-type: none"> 2 Left: GPU/7mm/Rear backplane power connector on the processor board 2 Right: 7mm/Rear backplane sideband connector on the processor board

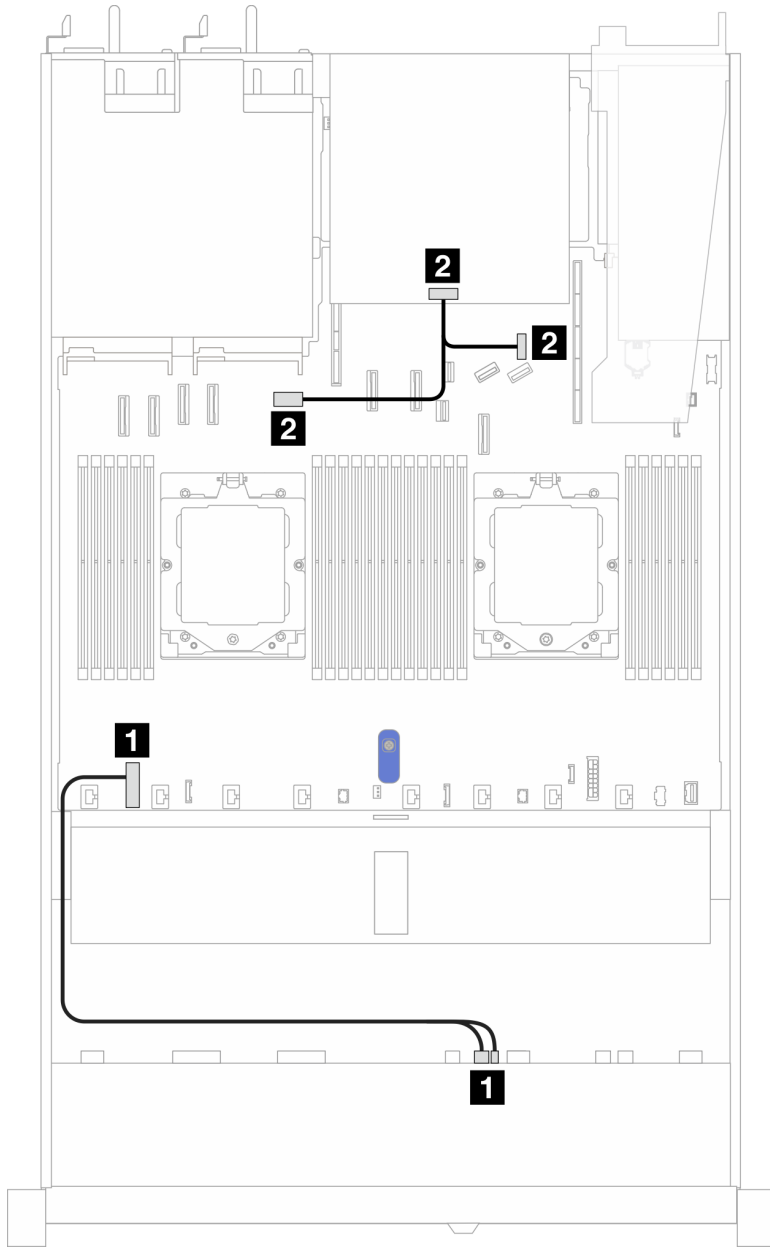


Figure 220. Backplane power cable connection (Gen 5)

From	To
1 Power connector and sideband connector on the front drive backplane	1 Front backplane power connector on the processor board
2 Power connector on the rear drive backplane	<ul style="list-style-type: none"> 2 Left: GPU/7mm/Rear backplane power connector on the processor board 2 Right: 7mm/Rear backplane sideband connector on the processor board

CFF RAID adapter

Use the section to understand the power cable and signal input cable routing for CFF RAID adapters.

Cable routing for CFF RAID adapters

- The following illustrations are for Gen 4 adapters. For Gen 3 adapters, the illustration might be slightly different.
- For the locations of connectors on CFF RAID adapters and the processor board, see [“System-board-assembly connectors”](#) on page 367 for details.
- The table below presents that how the power cables and MB input cables are connected with one and two processors installed. Find more connections in different configuration at [“Cable routing for backplane signals \(one processor\)”](#) on page 259 and [“Cable routing for backplane signals \(two processors\)”](#) on page 294.

Table 9. Cable routing for 8i or 16i CFF RAID adapters

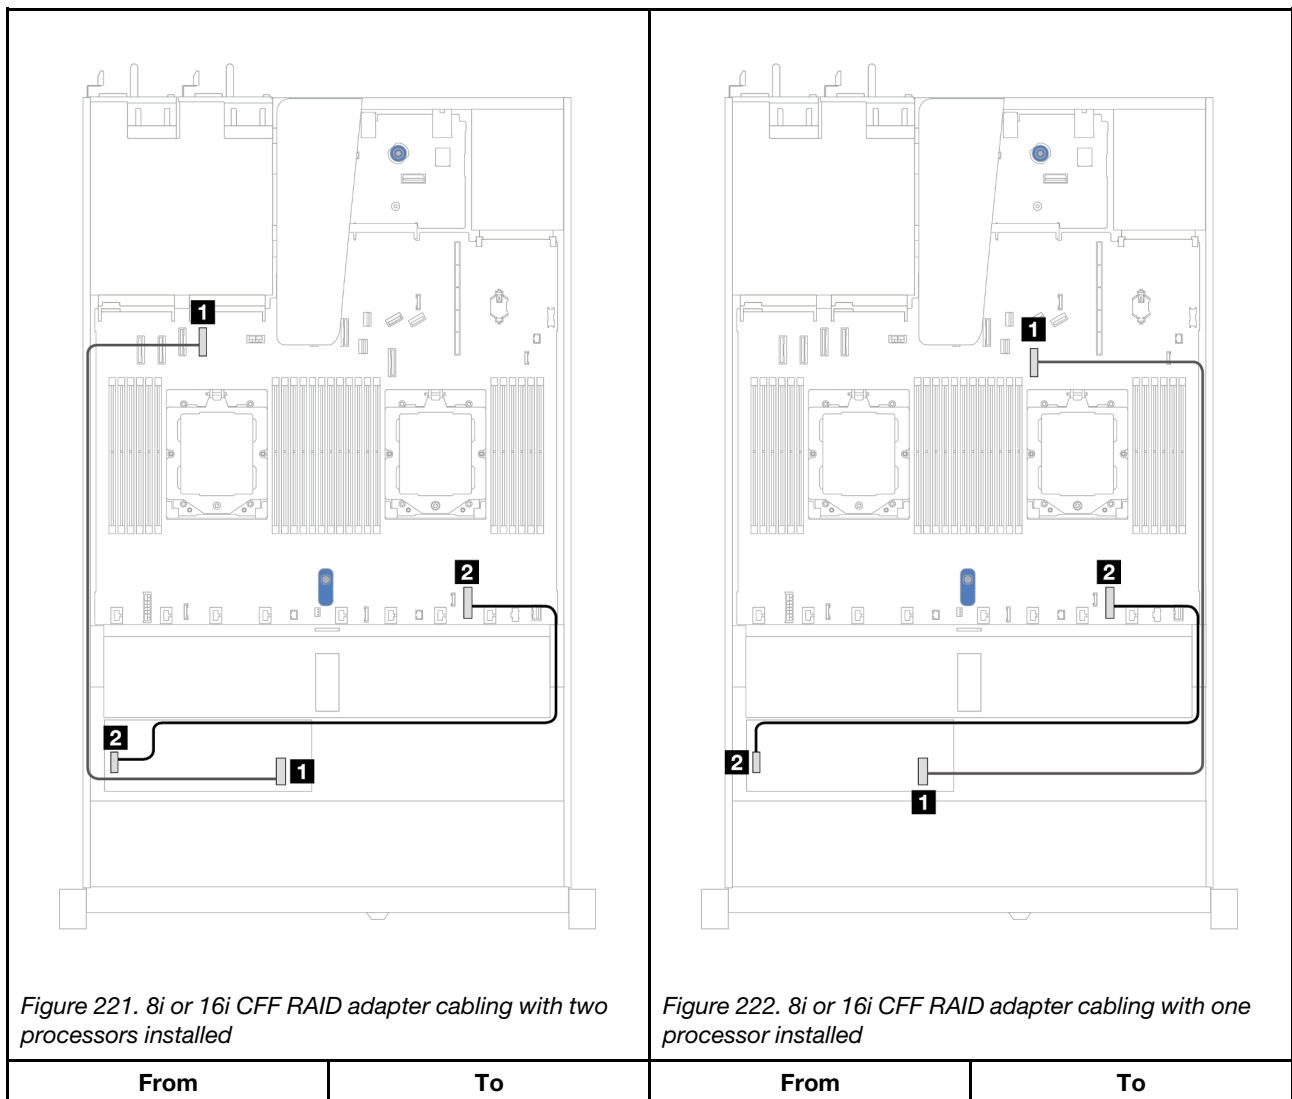


Table 9. Cable routing for 8i or 16i CFF RAID adapters (continued)

1 MB input connector of CFF RAID adapter	1 PCIe connector 4 of processor board	1 MB input connector of CFF RAID adapter	1 PCIe connector 7 of processor board
2 Power connector of CFF RAID adapter	2 Internal RAID power connector of processor board	2 Power connector of CFF RAID adapter	2 Internal RAID power connector of processor board

Front I/O module

Use the section to understand the cable routing for front I/O module.

Note: The illustration shows the cabling scenario for server models with 2.5" and 3.5" front drive bays. Location of each connector on the front of the server varies by models. For detailed location of front I/O components for different models, see "Front view" in *User Guide*.

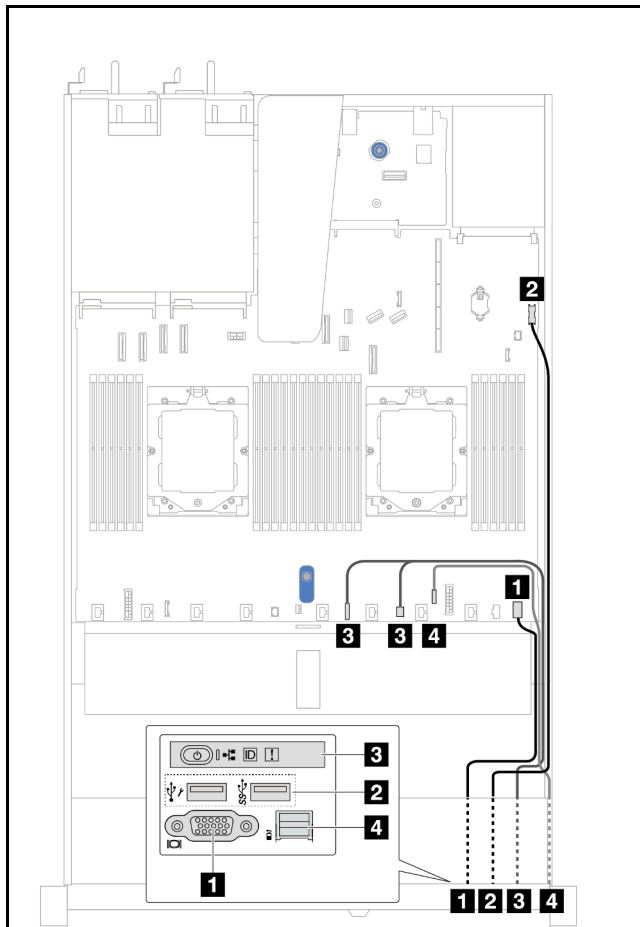


Figure 223. Cable routing for a front I/O module on 2.5" chassis

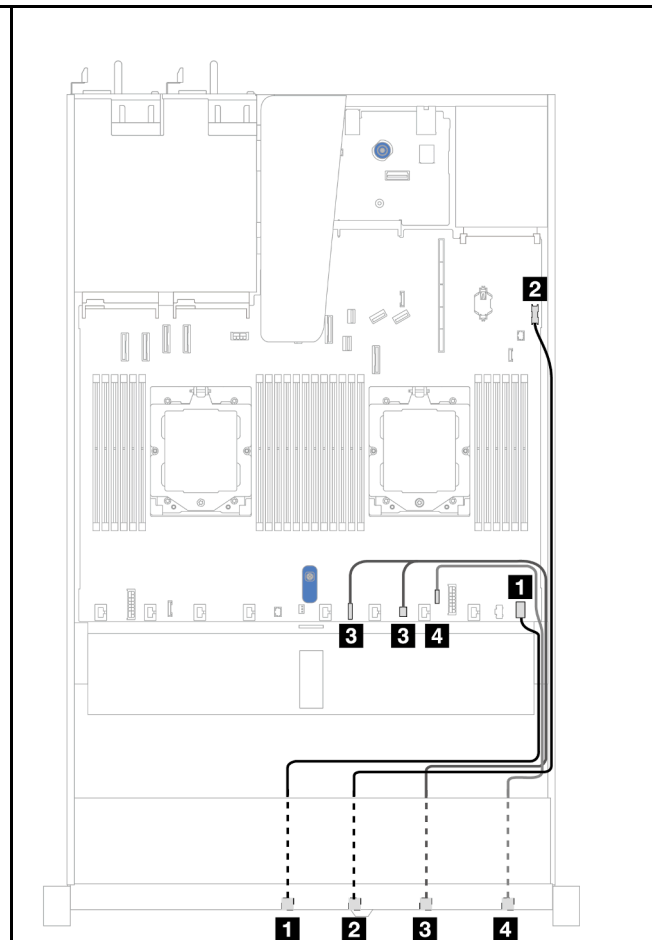


Figure 224. Cable routing for a front I/O module on 3.5" chassis

From	To	From	To
1 VGA connector	1 Front VGA connector on the processor board	1 VGA connector	1 Front VGA connector on the processor board
2 Front USB connector	2 Front USB connector on the processor board	2 Front USB connector	2 Front USB connector on the processor board

3 Front operator panel	3 FIO_Y cable connector and FIO connector on the processor board	3 Front operator panel	3 FIO_Y cable connector and FIO connector on the processor board
4 External LCD diagnostics handset connector ^{Note}	4 External LCD connector on the processor board	4 External LCD diagnostics handset connector	4 External LCD connector on the processor board
Note: The external LCD connector is not available on certain front I/O modules of 10 x 2.5" server models.			

Front riser assembly

Use the section to understand the cable routing for front riser assembly.

- For the locations of front PCIe adapter connector on the processor board, see [“System-board-assembly connectors” on page 367](#) for details.
- The following illustrations and tables list the front PCIe adapters supported:
 - [“Cable routing with one x8 PCIe riser card and one x16 PCIe riser card” on page 213](#)
 - [“Cable routing with two x8 PCIe riser cards” on page 214](#)
 - [“Cable routing with one x16 PCIe riser card” on page 215](#)

Cable routing with one x8 PCIe riser card and one x16 PCIe riser card

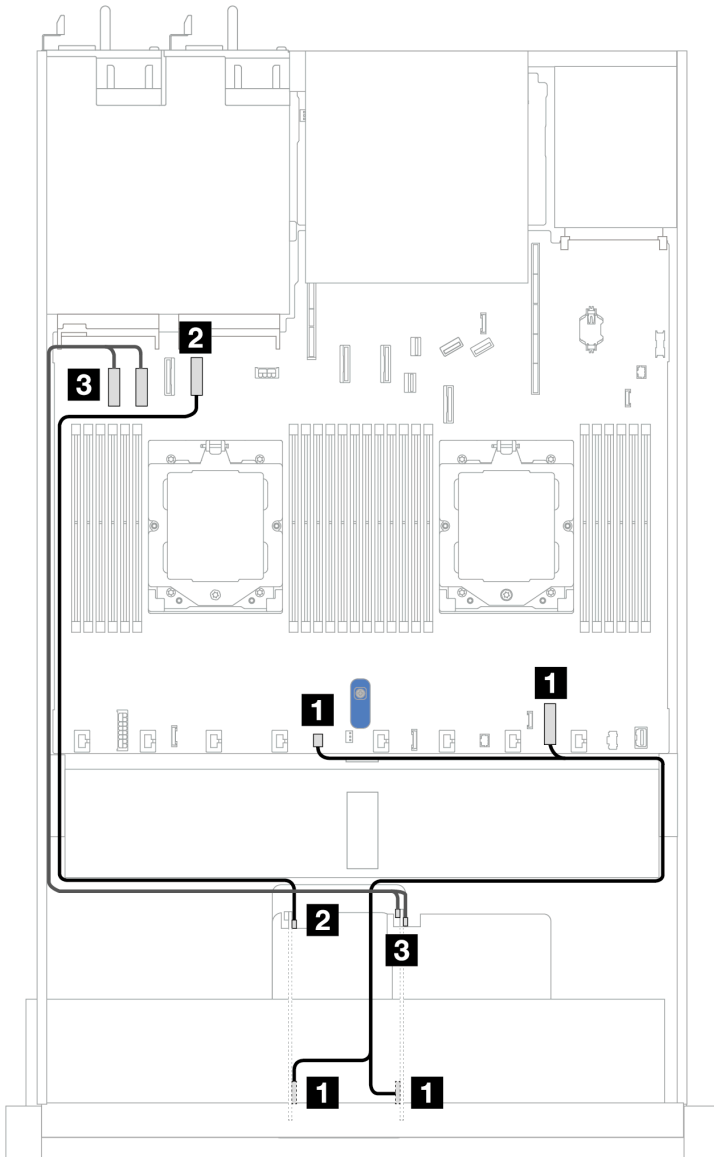


Figure 225. Cable routing with one x8 PCIe riser card and one x16 PCIe riser card

From	To
1 Power connectors on Risers 3 and 4	1 Internal RAID power connector and pump 2 connector on the processor board
2 MCI/O 1 connector on Riser 3	2 PCIe connector 4 on the processor board
3 MCI/O 1 and MCI/O 2 connectors on Riser 4	3 PCIe connectors 1 and 2 on the processor board

Cable routing with two x8 PCIe riser cards

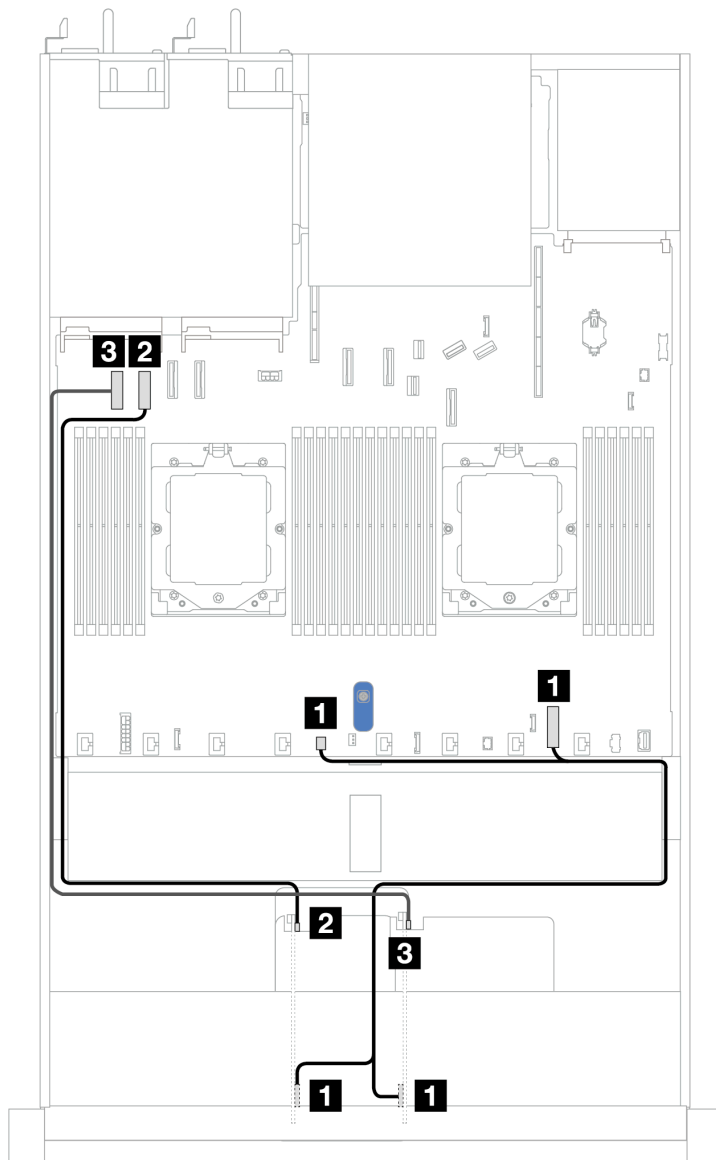


Figure 226. Cable routing with two x8 PCIe riser cards

From	To
1 Power connectors on Risers 3 and 4	1 Internal RAID power connector and pump 2 connector on the processor board
2 MCI0 1 connector on Riser 3	2 PCIe connector 2 on the processor board
3 MCI0 1 connector on Riser 4	3 PCIe connector 1 on the processor board

Cable routing with one x16 PCIe riser card

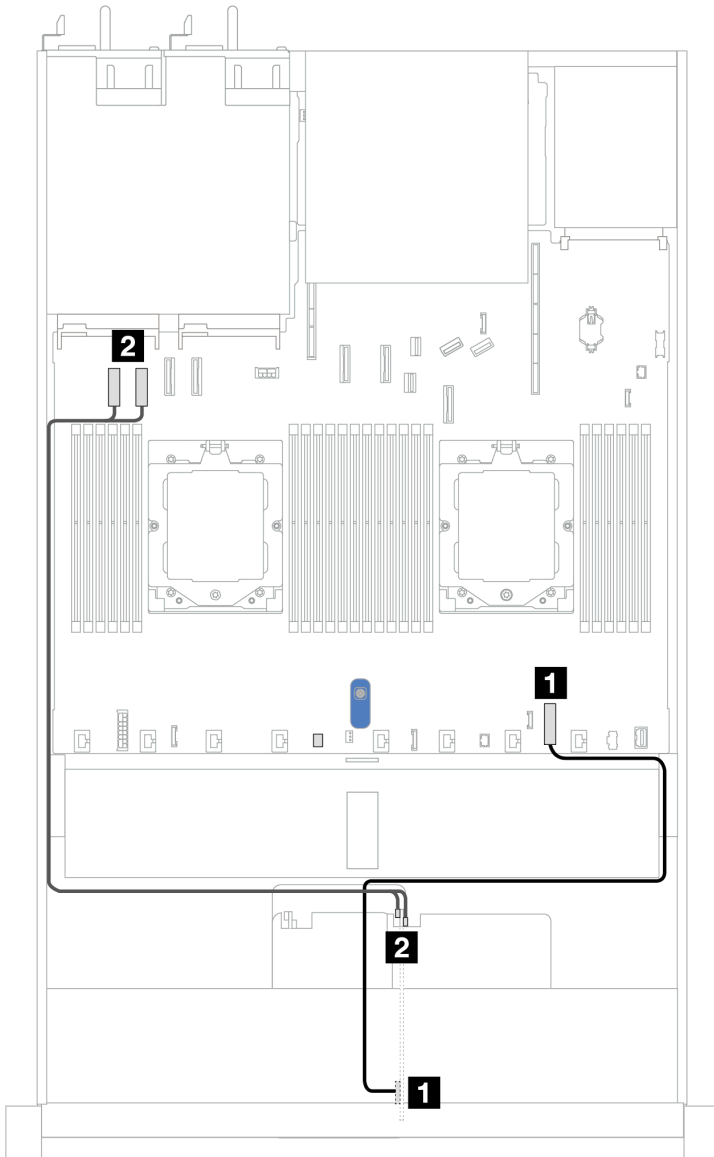


Figure 227. Cable routing with one x16 PCIe riser card

From	To
1 Power connector on Riser 4	1 Internal RAID power connector on the processor board
2 MCIO 1 and MCIO 2 connectors on Riser 4	2 PCIe connectors 1 and 2 on the processor board

GPU adapter (optional)

Use the section to understand the cable routing for GPU adapters. The GPU(s) your server support may not need to connect power cables.

For the locations of GPU power connector on the processor board, see [“System-board-assembly connectors” on page 367](#) for details.

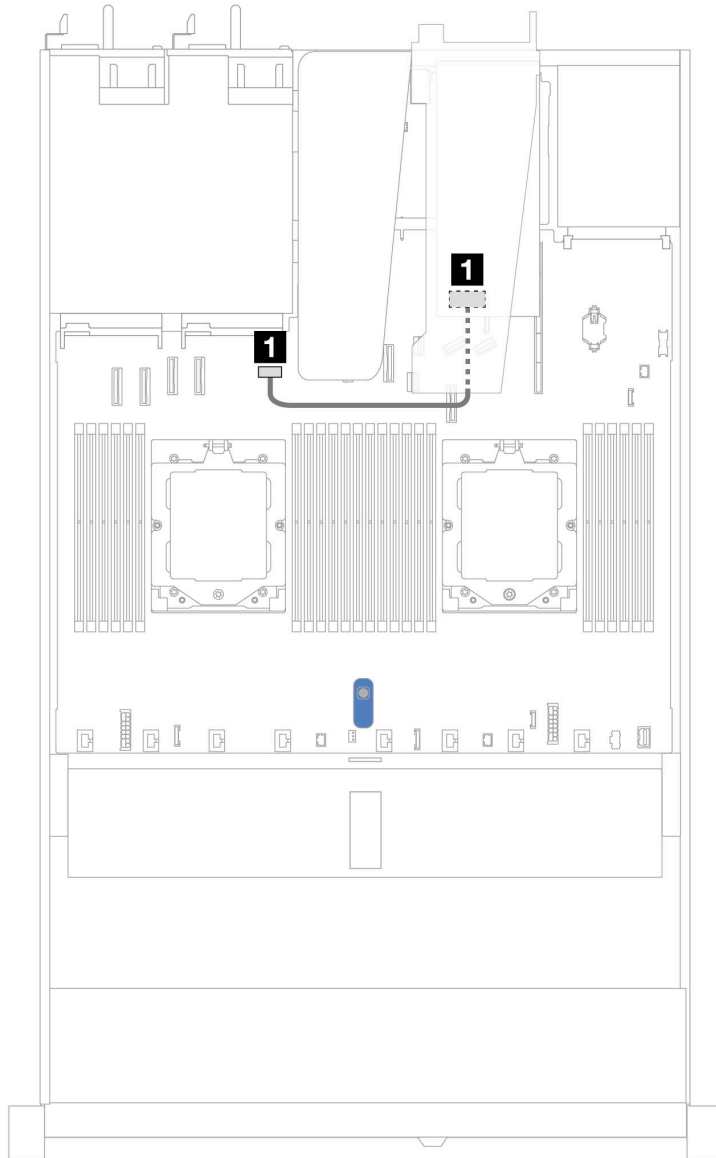


Figure 228. GPU adapter cable routing

From	To
1 GPU power connector	1 GPU power connector on the processor board

Intrusion switch

Use the section to understand the cable routing for the intrusion switch.

For the locations of intrusion switch connector on the processor board, see [“System-board-assembly connectors” on page 367](#) for details.

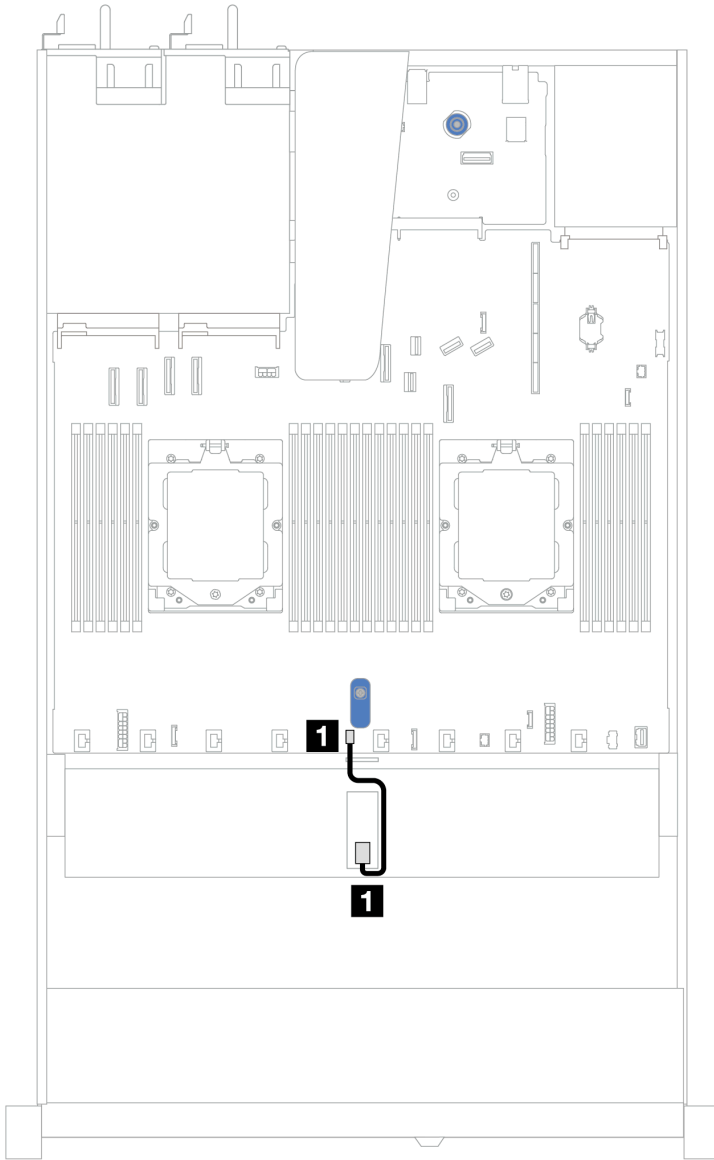


Figure 229. Intrusion switch cable routing

From	To
1 Intrusion switch cable	1 Intrusion switch connector on the processor board

Management NIC adapter

Use the section to understand the cable routing for the ThinkSystem V3 Management NIC Adapter Kit (management NIC adapter).

For the locations of intrusion switch connector on the processor board, see [“System-board-assembly connectors” on page 367](#) for details.

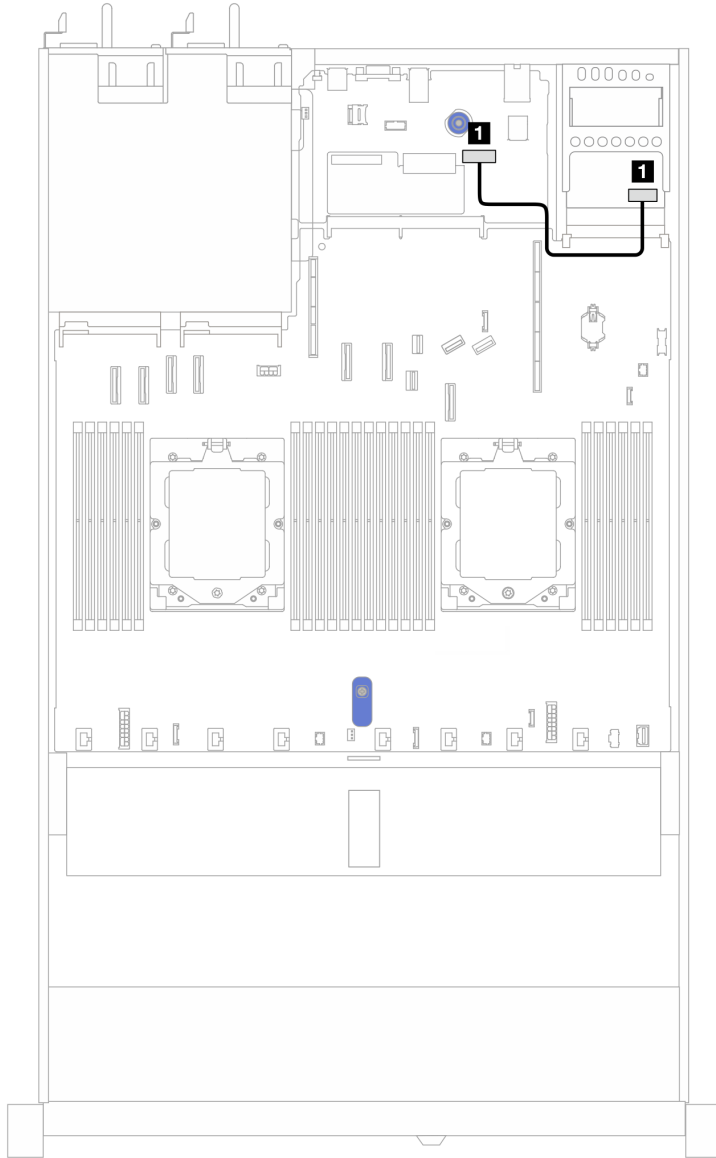


Figure 230. Management NIC adapter cable routing



From	To
1 Connector on management NIC adapter	1 Second management Ethernet connector on the system I/O board

M.2 drive backplane

This section provides cable routing information for the M.2 drives. Your server supports M.2 SATA/NVMe drive backplanes.

Locations of M.2 drive assemblies

The locations of M.2 drive assemblies vary in different configuration. The server has two locations for M.2 drive assemblies.

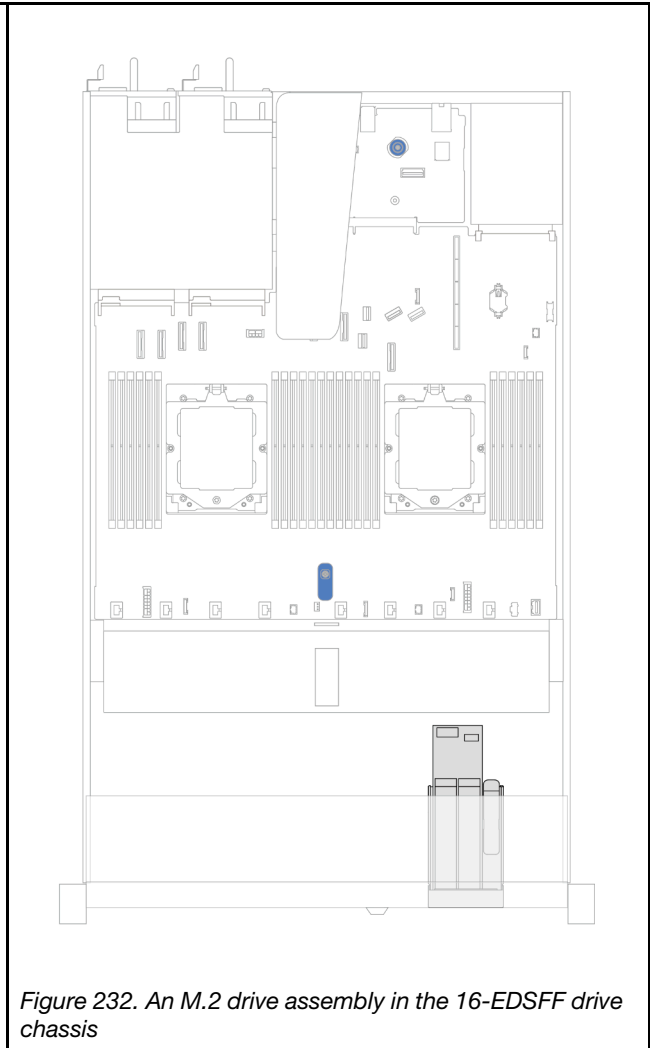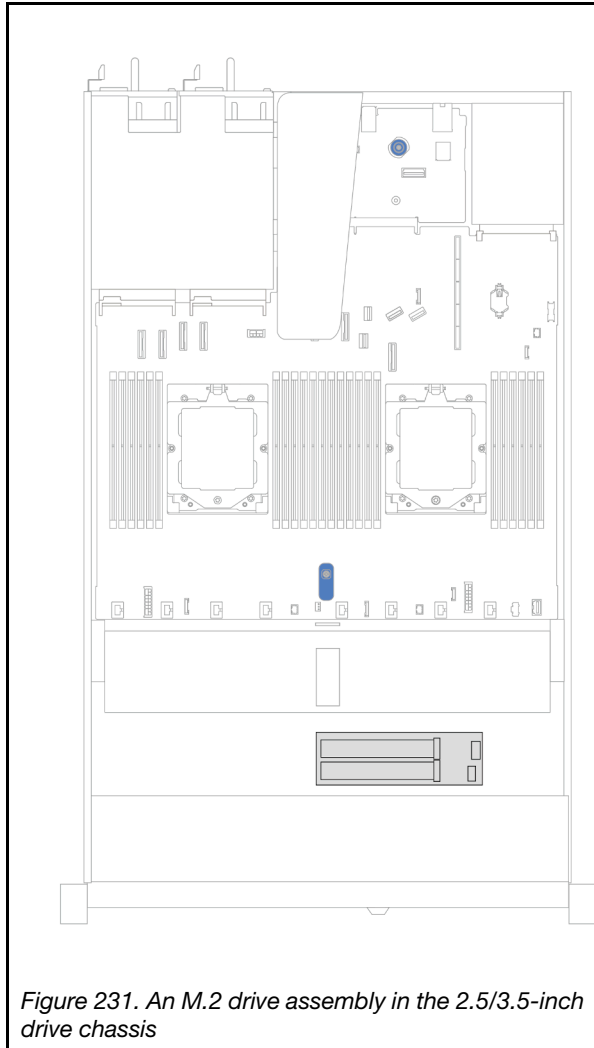

Cable routing of the M.2 drive backplanes

- For the locations of M.2 connectors on the backplanes and the processor board, see [“M.2 backplane and M.2 drive replacement” on page 101](#) and [“System-board-assembly connectors” on page 367](#) for details.
- The following illustrations and tables list the M.2 drive backplanes supported:
 - [“M.2 x4 non-RAID SATA/NVMe 2-bay backplanes” on page 220](#)
 - [“M.2 x1 RAID NVMe 2-bay backplanes” on page 221](#)
 - [“M.2 RAID SATA/NVMe 2-bay backplanes” on page 222](#)
 - [“M.2 backplane to SFF RAID adapters” on page 222](#)

M.2 x4 non-RAID SATA/NVMe 2-bay backplanes

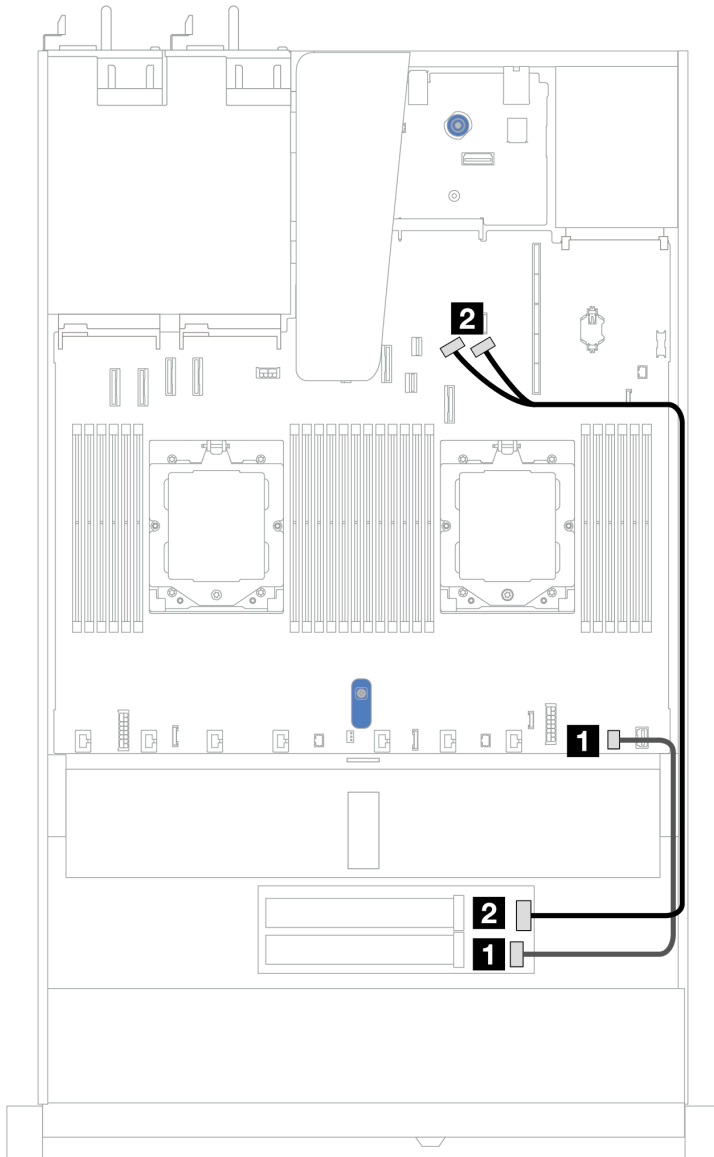


Figure 233. Cable routing for M.2 x4 non-RAID SATA/NVMe 2-bay backplanes

From	To
1 M.2 power connector	1 M.2 power connector on the processor board
2 M.2 signal connector	2 PCIe connectors 8 and 9 on the processor board

M.2 x1 RAID NVMe 2-bay backplanes

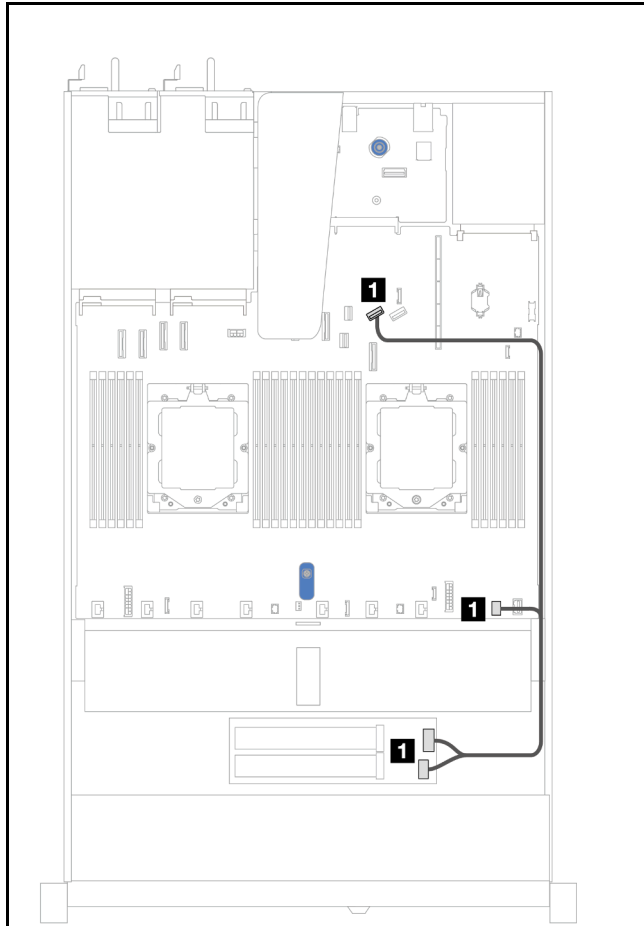


Figure 234. M.2 x1 RAID NVMe 2-bay configuration

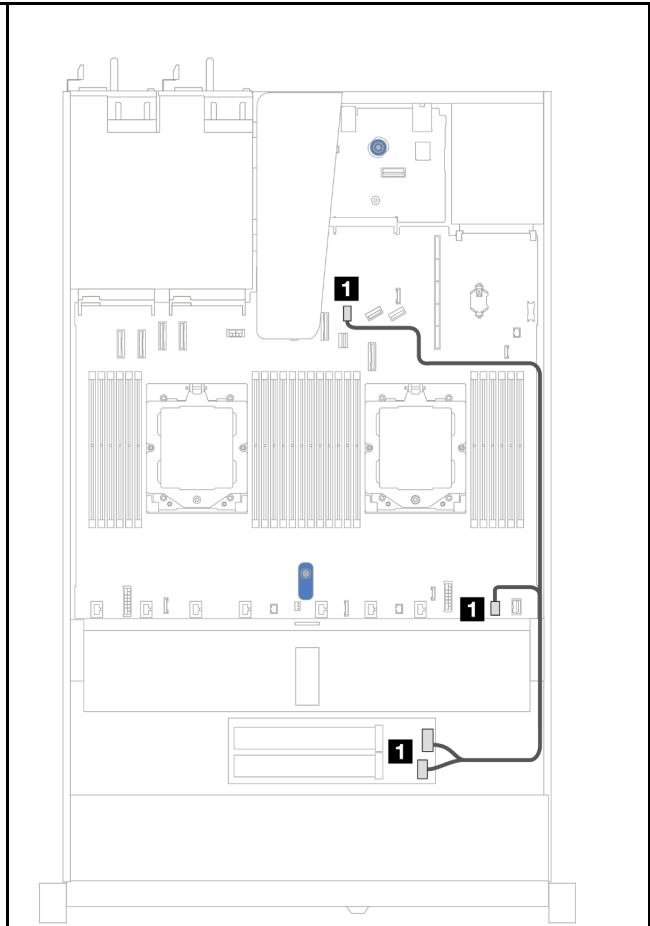


Figure 235. M.2 x1 RAID NVMe 2-bay configuration

From	To	From	To
1 M.2 signal connector and power connector	1 PCIe connector 8 and M.2 power connector on the processor board	1 M.2 signal connector and power connector	1 M.2 signal connector and M.2 power connector on the processor board

M.2 RAID SATA/NVME 2-bay backplanes

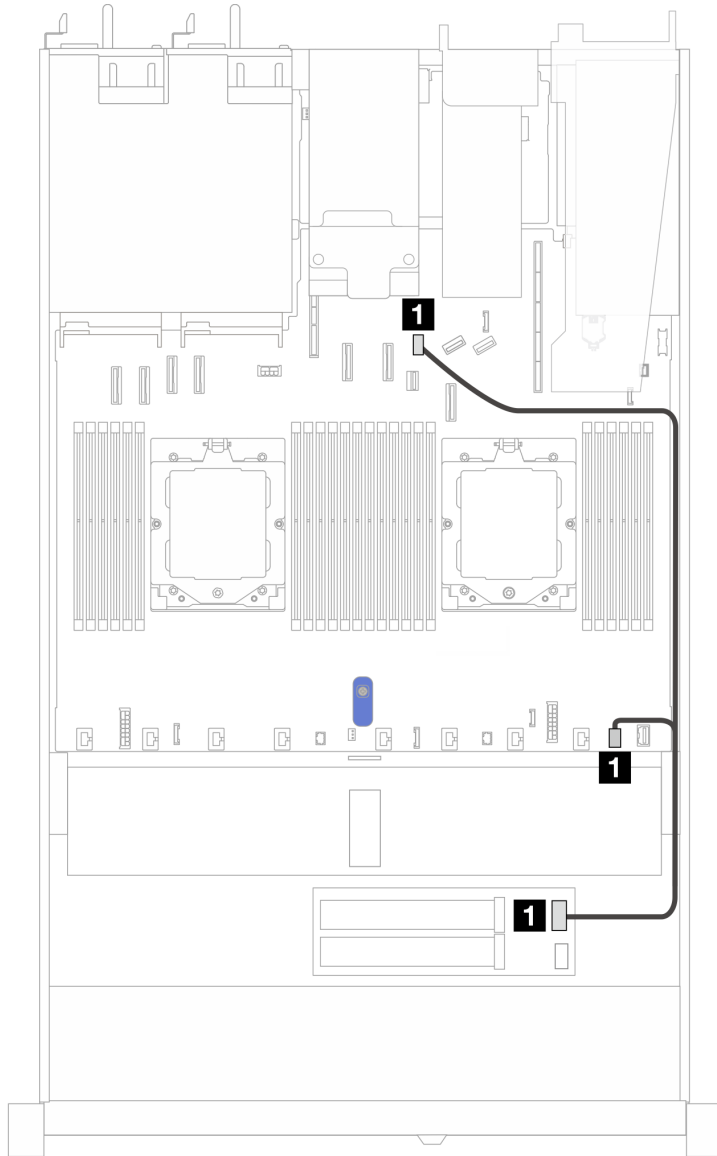


Figure 236. Cable routing for M.2 RAID SATA/NVME 2-bay backplanes

From	To
1 M.2 backplane	1 M.2 signal connector and M.2 power connector on the processor board

M.2 backplane to SFF RAID adapters

Notes: This cable routing is only applicable to the following backplanes:

- M.2 x4 non-RAID SATA/NVMe 2-bay backplanes
- M.2 x1 RAID NVMe 2-bay backplanes

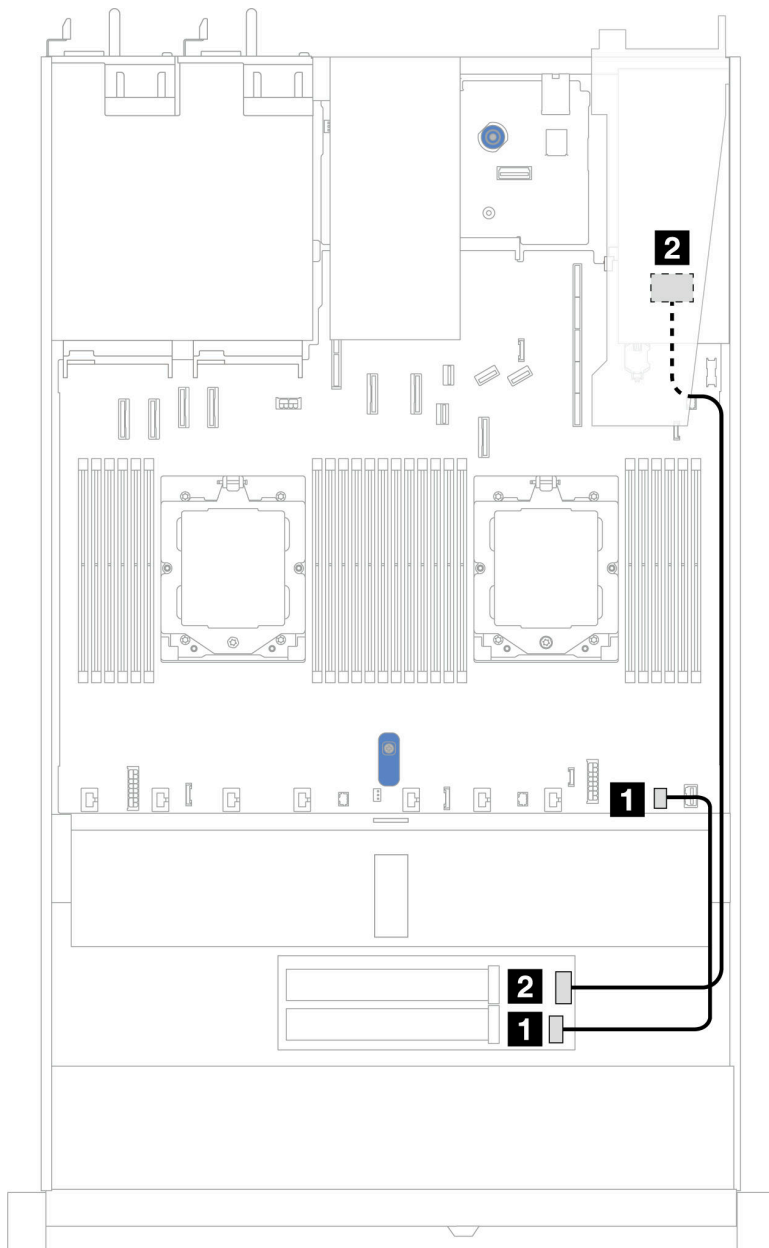


Figure 237. Cable routing for M.2 backplane to an 8i SFF RAID adapter (Gen 3 or Gen 4)

From	To
1 M.2 power connector	1 M.2 power connector on the processor board
2 M.2 signal connector	2 SFF RAID connector <ul style="list-style-type: none"> • Gen 3: C0, C1 • Gen 4: C0

OCP interposer

Use the section to understand the cable routing for OCP interposers.

For the locations of OCP interposer connector on the processor board, see “[System-board-assembly connectors](#)” on page 367 for details.

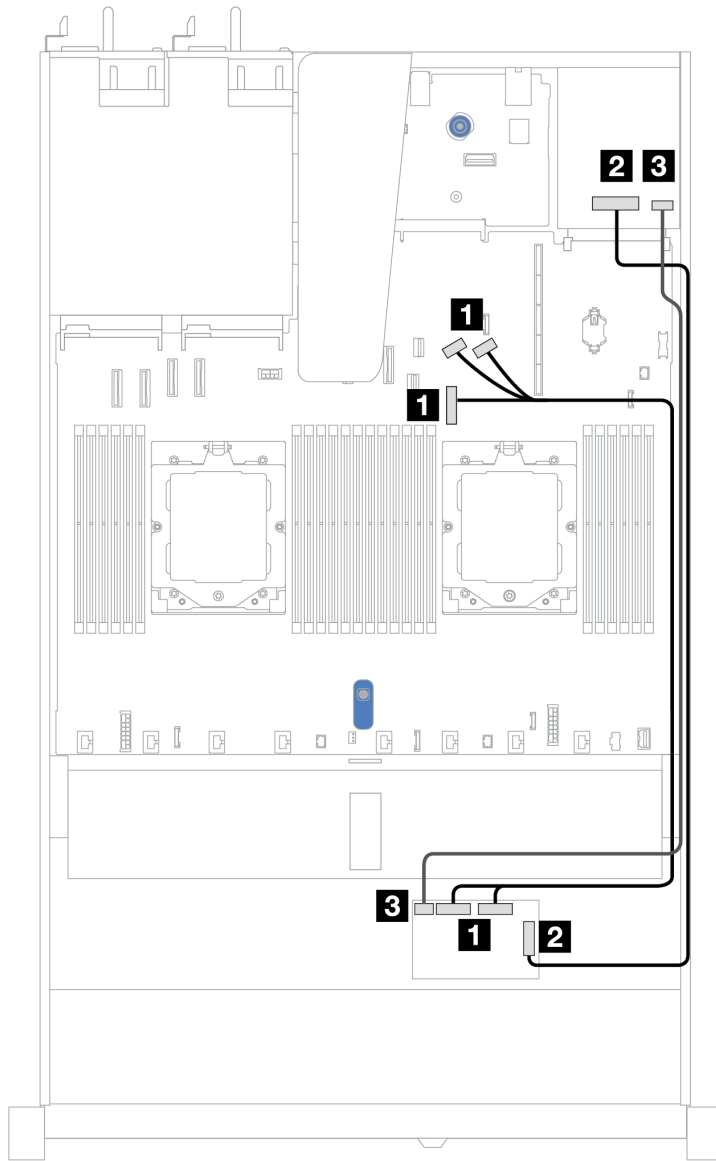



Figure 238. OCP interposer cable routing

From	To
1 Front OCP interposer card: MCIO 1, MCIO 2	1 Onboard: PCIe connectors 7, 8, and 9
2 Front OCP interposer card: F-SWIFT	2 Rear OCP interposer card: R-SWIFT
3 Front OCP interposer card: PWR	3 Rear OCP interposer card: PWR

RAID flash power modules

Use the section to understand the cable routing for RAID flash power modules.

RAID flash power modules in the chassis

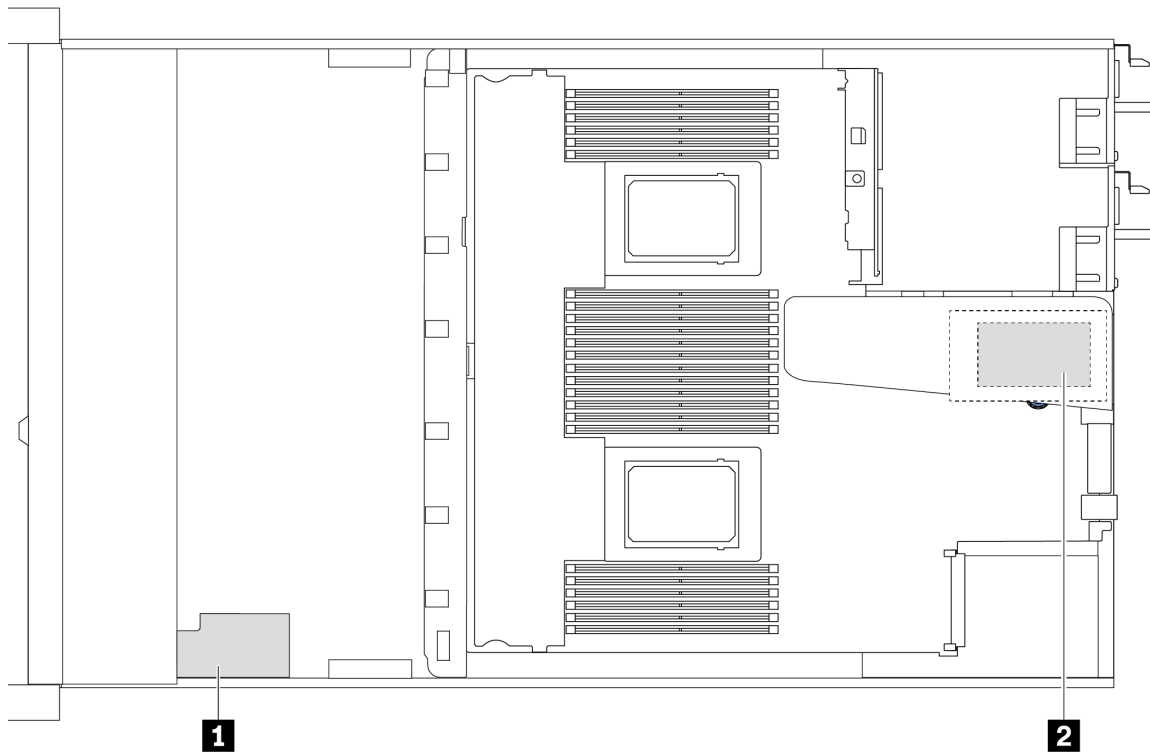

No.	Location	Scenario
1	RAID flash power module on the chassis	2.5" chassis installed with a performance heat sink
2	RAID flash power module on riser 1 slot	<ul style="list-style-type: none"> • 3.5" chassis installed with a performance heat sink • 2.5" chassis installed with the Lenovo Neptune Liquid to Air Module

Cable routing of the RAID flash power modules

The following illustrations show the cable routing of the RAID flash power modules on different locations:

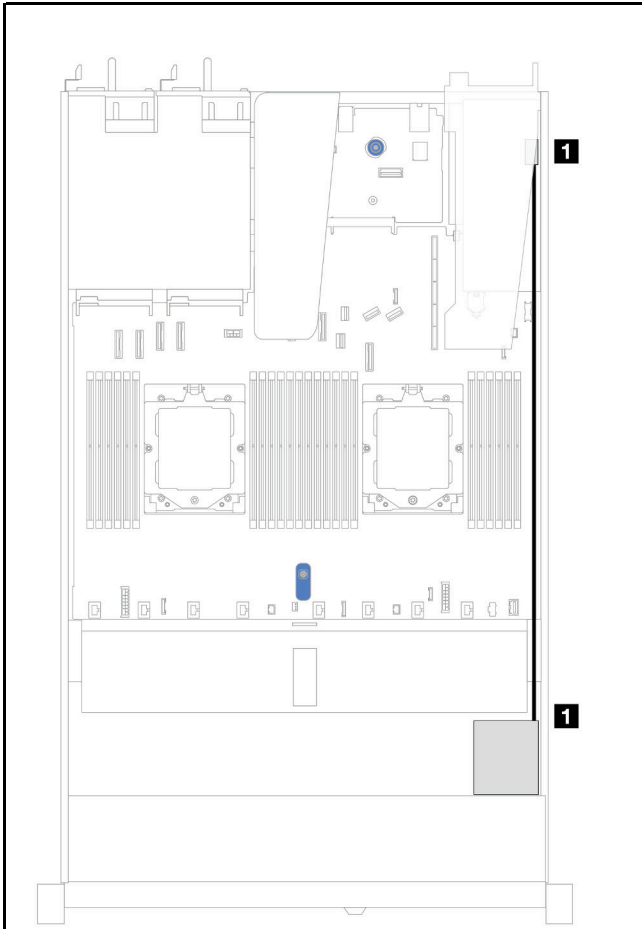


Figure 239. On the chassis

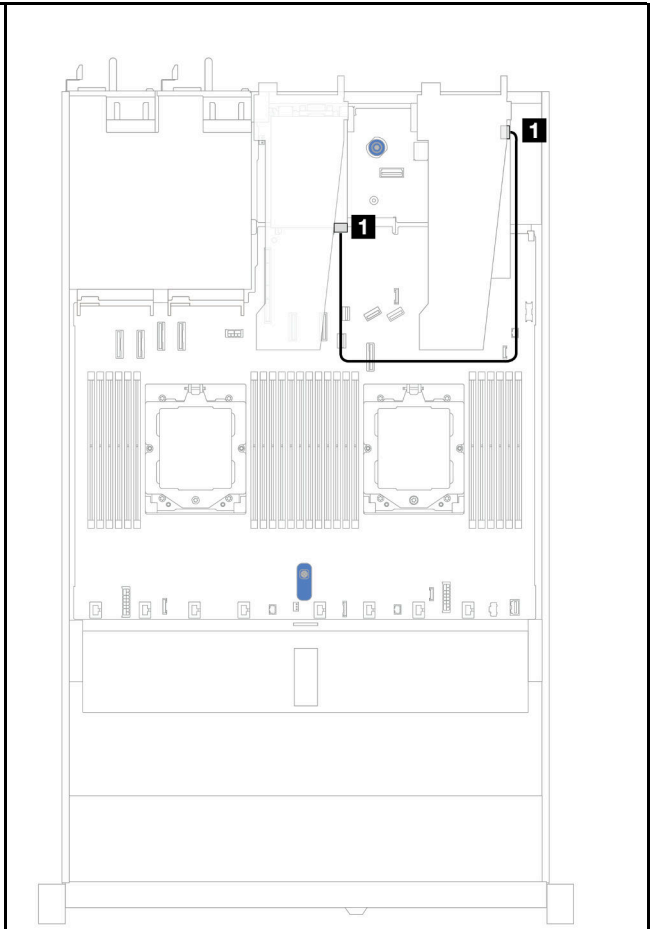


Figure 240. On riser 1 slot

From	To	From	To
1 RAID flash power module on the chassis	1 RAID flash power port on the RAID/HBA adapter	1 RAID flash power module on the PCIe slot 1 on riser 1 assembly	1 RAID flash power port on the RAID/HBA adapter

An extension cable is provided for each RAID flash power module for connection. Connect the RAID flash power module cable to the RAID flash power module connector on the corresponding RAID adapter as shown.

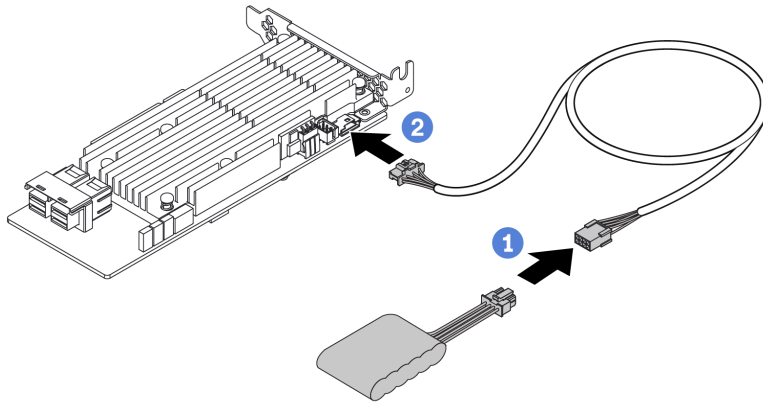


Figure 241. Power cable routing for RAID flash power module

Rear NVMe/SAS/SATA drive backplane

Use this section to understand the cable routing of rear NVMe/SAS/SATA backplanes with both one and two processors installed.

- The onboard connection of rear NVMe/SAS/SATA drive backplane are different based on whether one or two processors installed.
- The following illustrations and tables list the rear NVMe/SAS/SATA drive backplanes supported:
 - [“Rear 2 x 2.5” NVMe drive backplane” on page 228](#)
 - [“Rear 2 x 2.5” SAS/SATA drive backplane” on page 229](#)

Rear 2 x 2.5" NVMe drive backplane

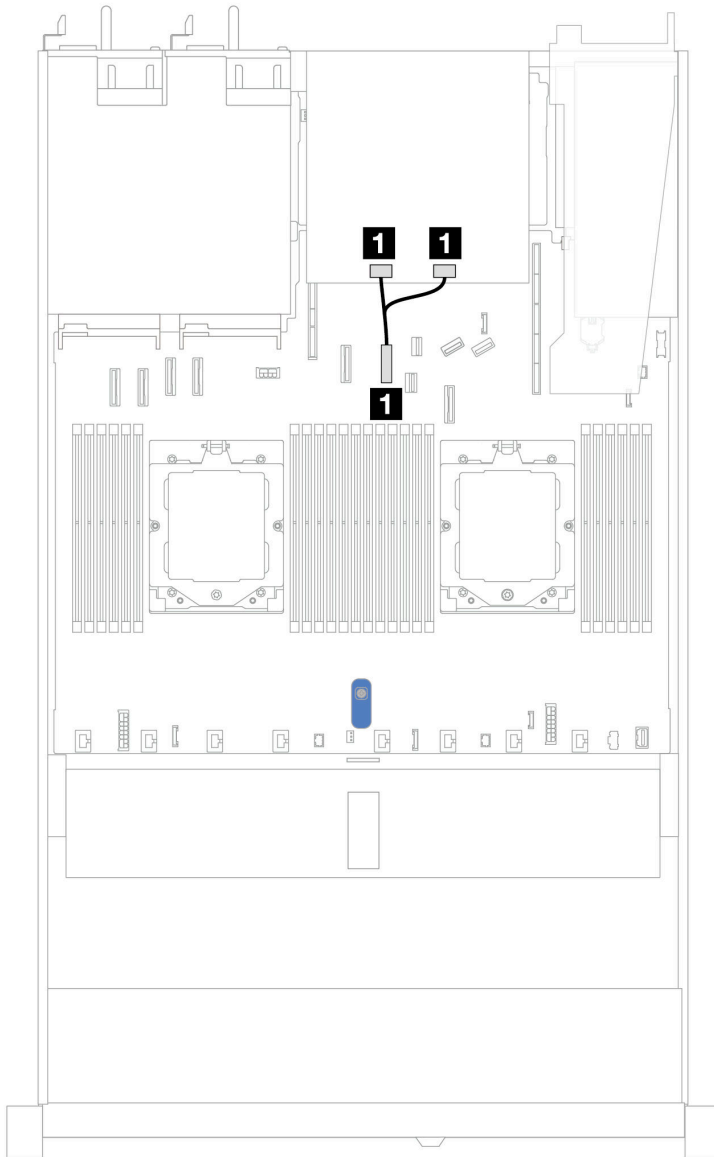


Figure 242. Rear 2 x 2.5" NVMe drive backplane cable routing with two processors installed

From	To
1 NVMe 0 connector and NVMe 1 connector on the rear backplane	1 PCIe connector 6 on the processor board

Rear 2 x 2.5" SAS/SATA drive backplane

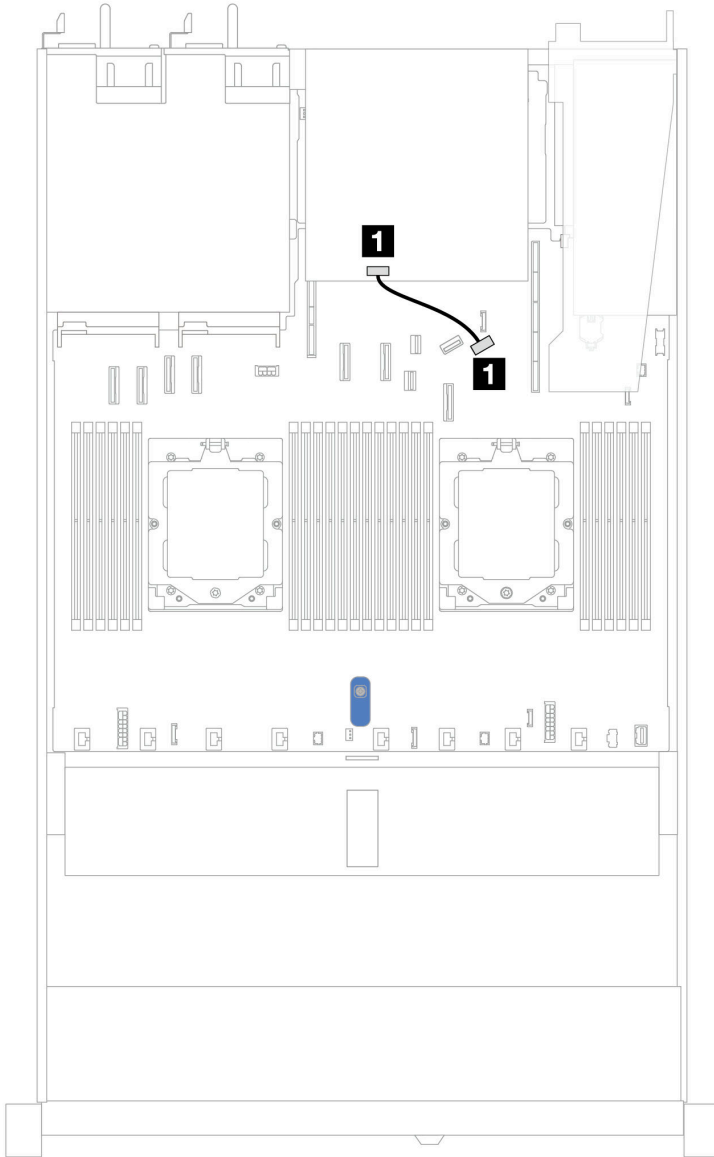


Figure 243. Rear 2 x 2.5" SAS/SATA drive backplane cable routing with one processor or two processors installed

From	To
1 SAS connector on the rear backplane	1 PCIe connector 9 on the processor board

7mm drive backplane

This section provides cable routing information for the 7mm drives.

For the locations of 7mm drive connectors on the processor board, see [“System-board-assembly connectors” on page 367](#) for details.

- [“7mm non-RAID SATA/NVMe 2-bay backplanes” on page 230](#)
- [“7mm RAID NVMe 2-bay backplanes” on page 231](#)

- “7mm RAID SATA/NVMe 2-bay backplanes” on page 232
- “7mm SATA/NVMe drives to SFF RAID adapter” on page 232

7mm non-RAID SATA/NVMe 2-bay backplanes

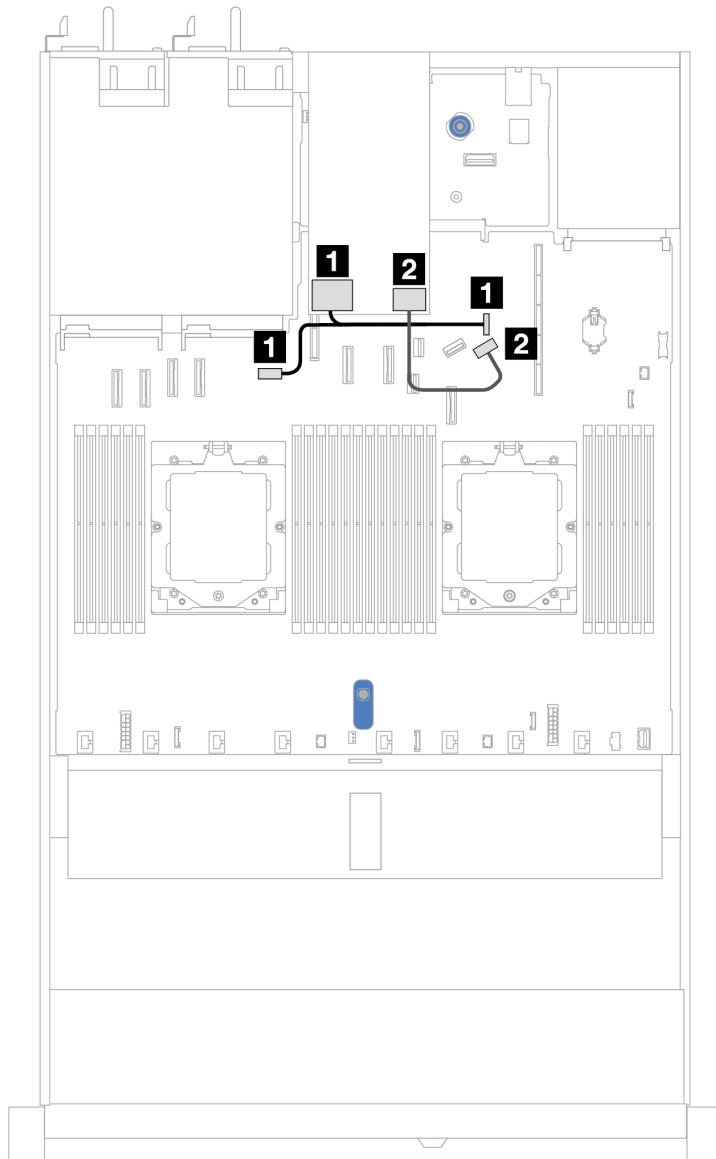


Figure 244. Cable routing for 7mm non-RAID SATA/NVMe 2-bay backplanes

From	To
1 Power connector on the 7mm drive backplane	<ul style="list-style-type: none"> • 1 Left: GPU/7mm/Rear backplane power connector on the processor board • 1 Right: 7mm/Rear backplane sideband connector on the processor board
2 Signal connector on the 7mm drive backplane	2 PCIe connector 9 on the processor board

7mm RAID NVMe 2-bay backplanes

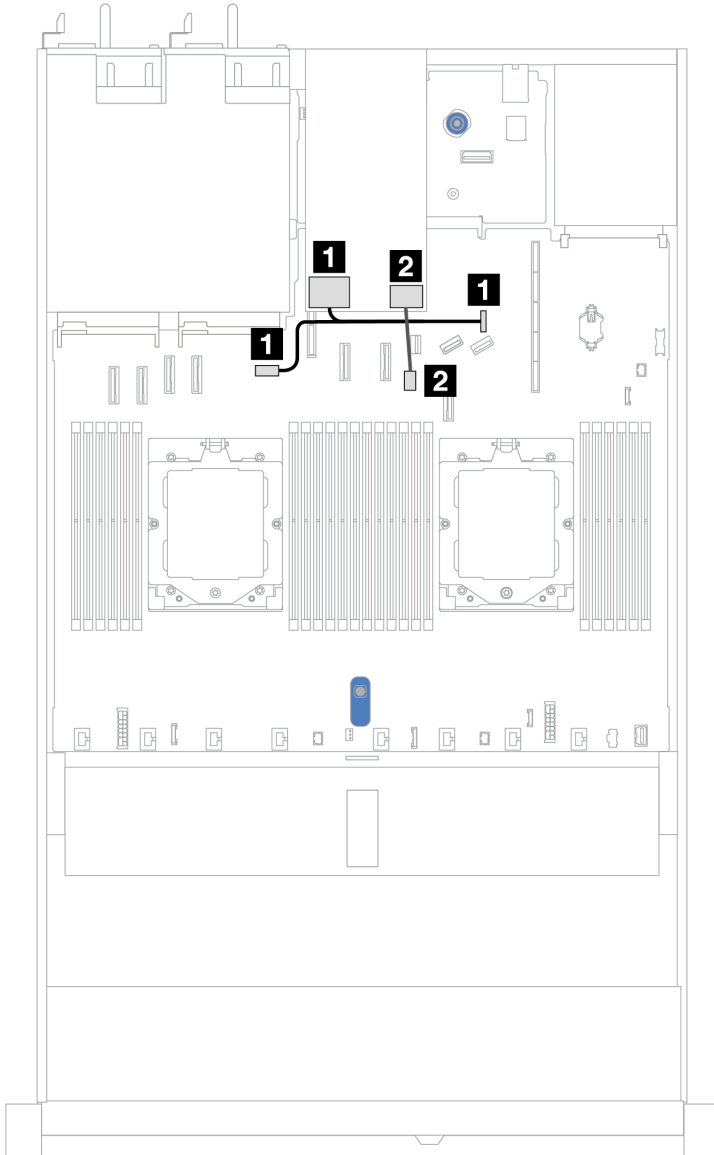


Figure 245. Cable routing for 7mm RAID NVMe 2-bay backplanes

From	To
1 Power connector on the 7mm drive backplane	<ul style="list-style-type: none"> 1 Left: GPU/7mm/Rear backplane power connector on the processor board 1 Right: 7mm/Rear backplane sideband connector on the processor board
2 Signal connector on the 7mm drive backplane	2 7mm backplane signal connector on the processor board

7mm RAID SATA/NVMe 2-bay backplanes

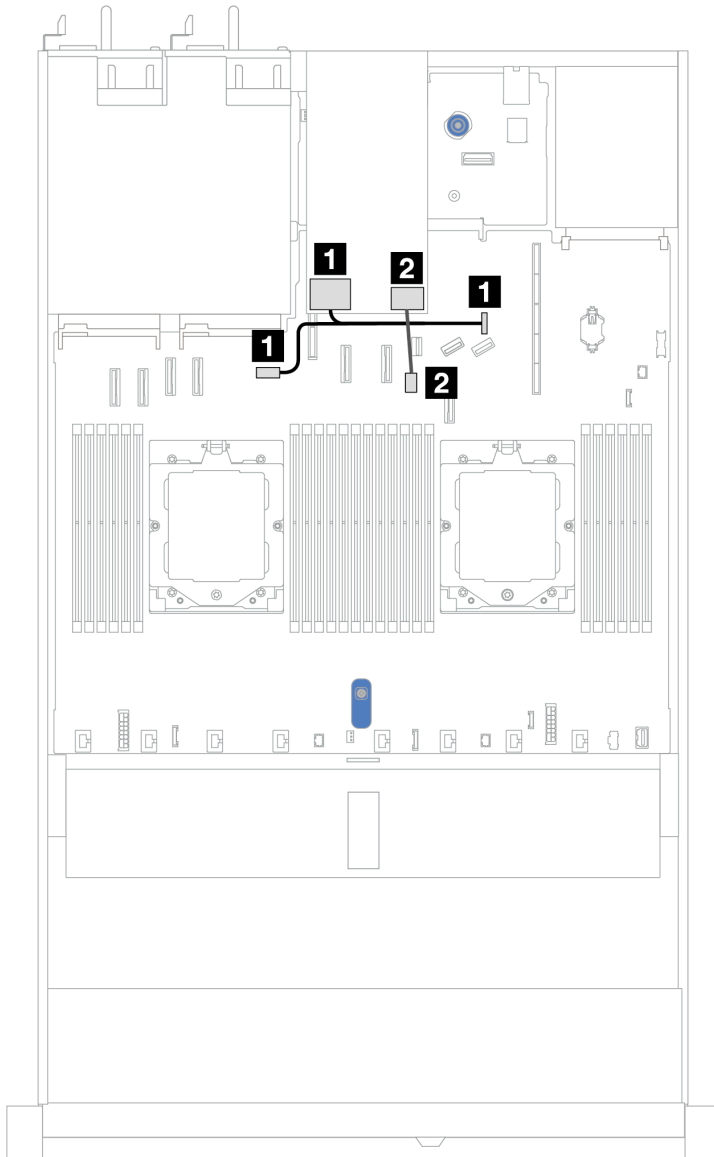


Figure 246. Cable routing for 7mm RAID SATA/NVMe 2-bay backplanes

From	To
1 Power connector on the 7mm drive backplane	<ul style="list-style-type: none"> 1 Left: GPU/7mm/Rear backplane power connector on the processor board 1 Right: 7mm/Rear backplane sideband connector on the processor board
2 Signal connector on the 7mm drive backplane	2 7mm backplane signal connector on the processor board

7mm SATA/NVMe drives to SFF RAID adapter

Notes: This cable routing is only applicable to the following backplanes:

- 7mm non-RAID SATA/NVMe 2-bay backplanes

- 7mm RAID NVMe 2-bay backplanes

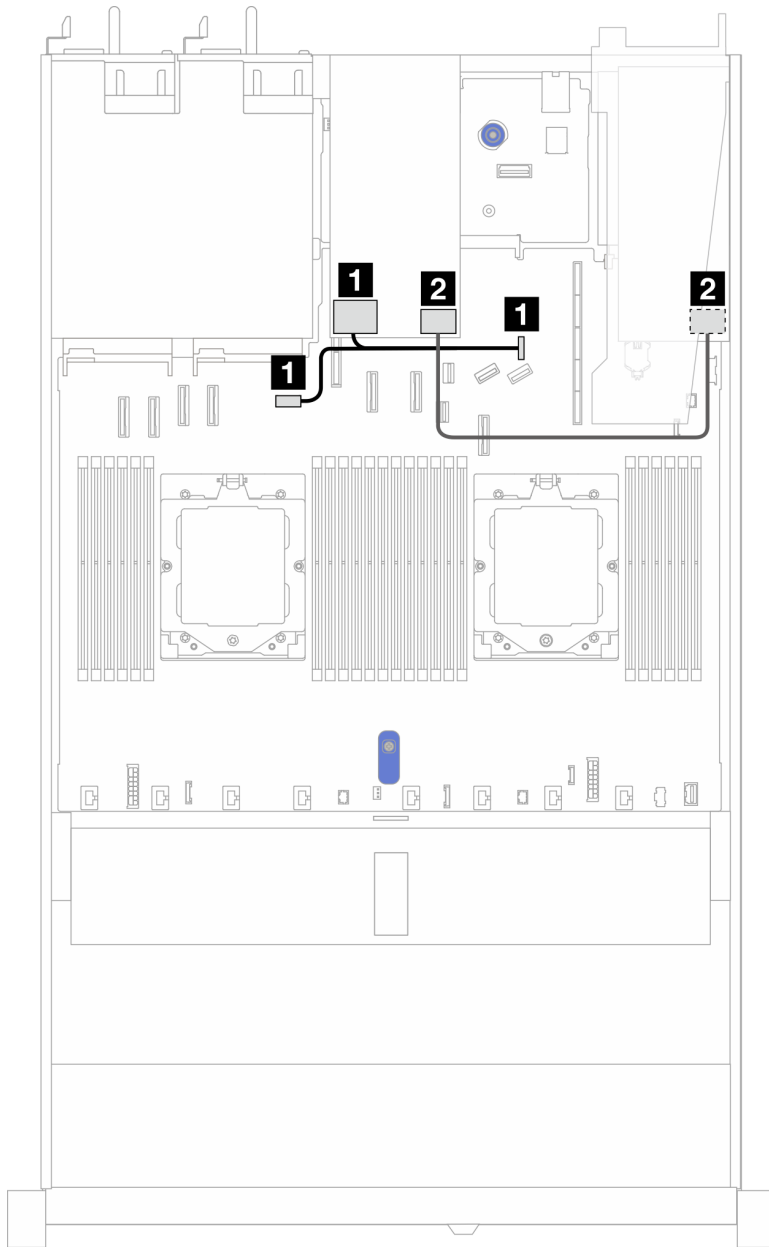


Figure 247. Cable routing for 7mm SATA/NVMe drives and an 8i SFF RAID adapter (Gen 3 or Gen 4)

From	To
1 Power connector on the 7mm drive backplane	<ul style="list-style-type: none"> • 1 Left: GPU/7mm/Rear backplane power connector on the processor board • 1 Right: 7mm/Rear backplane sideband connector on the processor board
2 Signal connector on the 7mm drive backplane	<ul style="list-style-type: none"> • 2 SFF RAID connector <ul style="list-style-type: none"> • Gen 3: C0, C1 (connected to 7mm SATA drives) • Gen 4: C0 (connected to 7mm NVMe drives)

The Lenovo Neptune Liquid to Air Module


Use this section to understand the cable routing of the Lenovo Neptune Liquid to Air Module (L2AM).

- For the locations of the L2AM connectors on the processor board, see [“System-board-assembly connectors” on page 367](#) for details.
- The two pump cables and one cable for the leakage detection sensor module are integrated to the L2AM, make sure that all three cables are connected.

Notes:

- Before you start cable routing for the L2AM, make sure that you have put on gloves.
- For better cable arrangement, it is required to install the liquid detection sensor module to a designated holder, and make sure that the module is secured in holder clips. Use the illustration below or [“Install the Lenovo Neptune Liquid to Air Module” on page 87](#) for details.

The Lenovo Neptune Liquid to Air Module cable routing

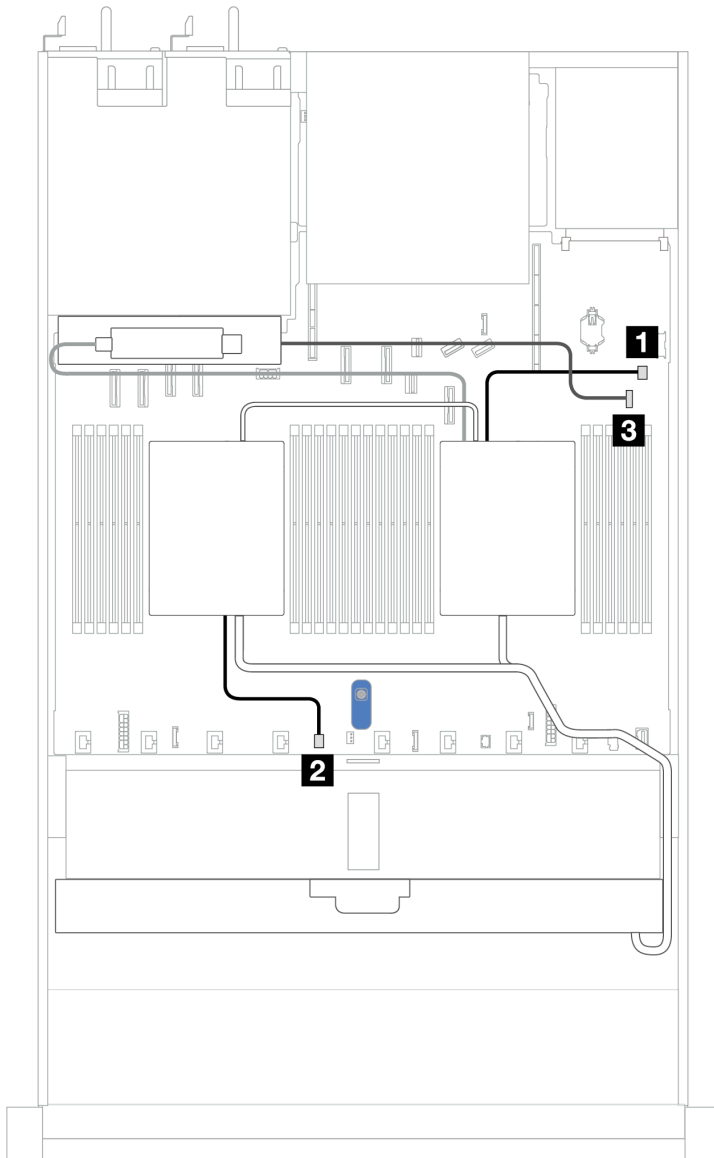

Cable	From	To
1 Pump 1	Pump 1 cable of the L2AM	Pump 1 connector on the processor board
2 Pump 2	Pump 2 cable of the L2AM	Pump 2 connector on the processor board
3 Leak detection	Leak detection cable of the L2AM	Leak detection connector on the processor board

4 x 2.5" front drives (liquid cooling)

Use the section to understand the cable routing for signal cable connections for 4 x 2.5" front drive backplanes for liquid assisted cooling module.

4 x 2.5" NVMe backplane (Gen 4)

Use this section to understand the NVMe backplane cable routing for server model with four 2.5" front drives.

To connect power cables for a backplane for standard 2.5" or 3.5" drives, refer to [“Backplane power cable routing” on page 207](#).

To connect signal cables for a backplane for standard 4 x 2.5" front drives, refer to the following cable routing scenarios depending on your server configuration:

- [“Cable routing for onboard configuration” on page 236](#)

Cable routing for onboard configuration

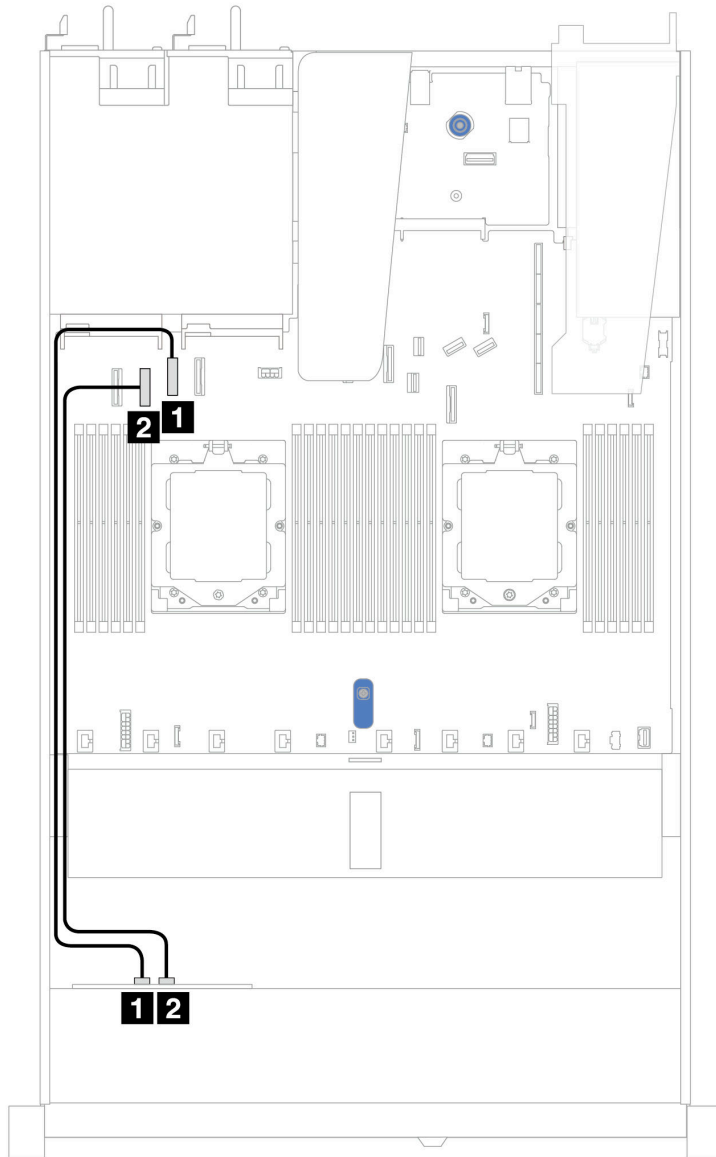


Figure 248. Cable routing for onboard configuration of 4 x 2.5" front NVMe drive bays (Gen 4)

Table 10. Mapping between backplane connectors and system board connectors for onboard configuration

Backplane	From	To
Front BP (NVMe)	1 NVMe 2-3	1 PCIe connector 2
	2 NVMe 0-1	2 PCIe connector 3

4 x 2.5" NVMe backplane (Gen 5)

Use this section to understand the NVMe backplane cable routing for server model with four 2.5" front drives.

To connect power cables for a backplane for standard 2.5" or 3.5" drives, refer to [“Backplane power cable routing” on page 207](#).

To connect signal cables for a backplane for standard 4 x 2.5" front drives, refer to the following cable routing scenarios depending on your server configuration:

- [“Cable routing for onboard configuration” on page 237](#)

Cable routing for onboard configuration

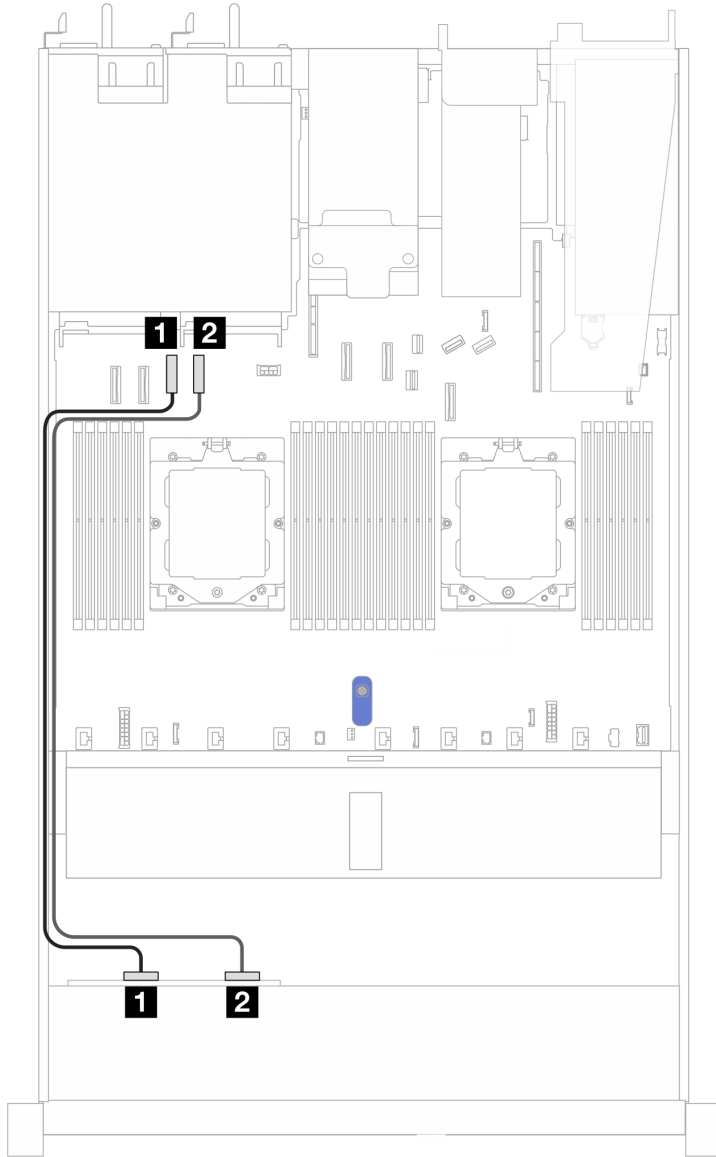


Figure 249. Cable routing for onboard configuration of 4 x 2.5" front NVMe drive bays (Gen 5)

Table 11. Mapping between backplane connectors and system board connectors for onboard configuration

Backplane	From	To
Front BP (NVMe)	1 NVMe 0-1	1 PCIe connector 3
	2 NVMe 2-3	1 PCIe connector 4

4 x 2.5" SAS/SATA backplane

Use this section to understand the SAS/SATA backplane cable routing for server model with four 2.5" front drives.

To connect power cables for a backplane for standard 2.5" or 3.5" drives, refer to [“Backplane power cable routing” on page 207](#).

To connector cables of RAID flash power modules, refer to [“RAID flash power modules” on page 224](#).

To connect signal cables for a backplane for standard 4 x 2.5" front drives, refer to the following cable routing scenarios depending on your server configuration:

- [“Cable routing for onboard configuration” on page 239](#)
- [“Cable routing with an SFF HBA/RAID adapter” on page 239](#)

Cable routing for onboard configuration

The following table shows the mapping relationship between backplane connectors and system board connectors for onboard configuration.

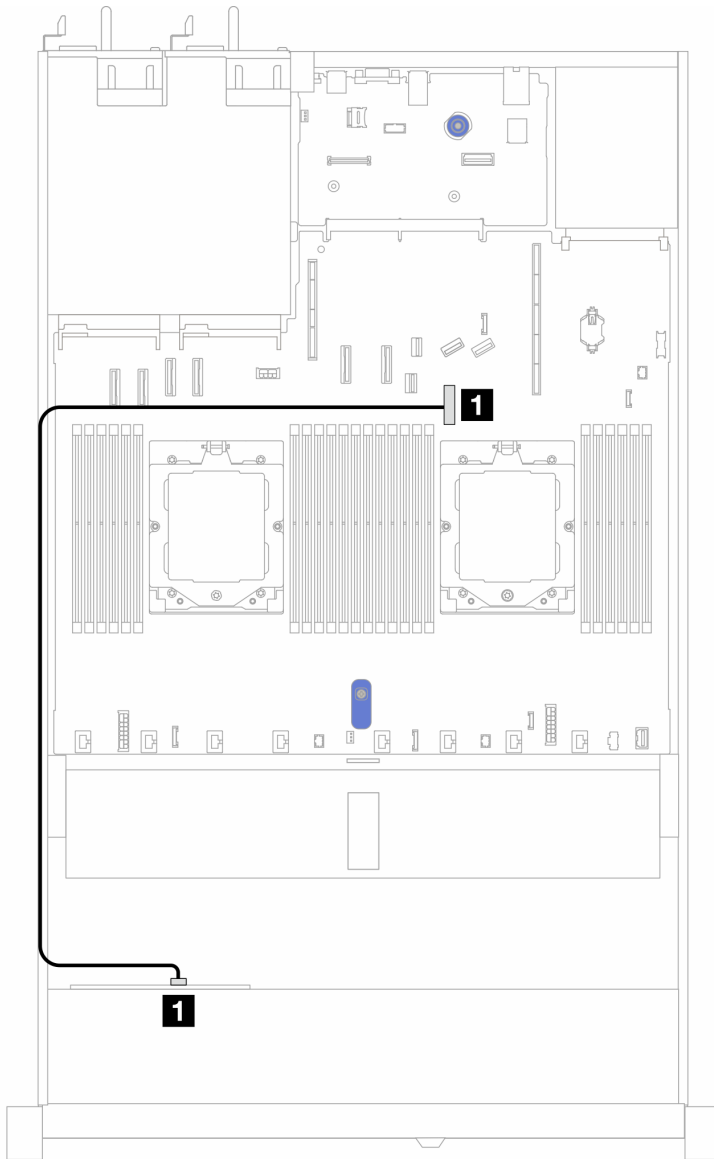


Figure 250. Cable routing for onboard configuration of 4 x 2.5" front SAS/SATA drive bays

Table 12. Mapping between backplane connectors and system board connectors for onboard configuration

Backplanes	From	To
Front BP (SAS)	SAS	PCIe connector 8

Note: If the cable PN is SC17B32993, connect it to PCIe connector 4 instead.

Cable routing with an SFF HBA/RAID adapter

The following table shows the mapping relationship between backplane connectors and system board/adapter connectors when an 8i SFF HBA/RAID adapter (Gen 3 or Gen 4) is installed.

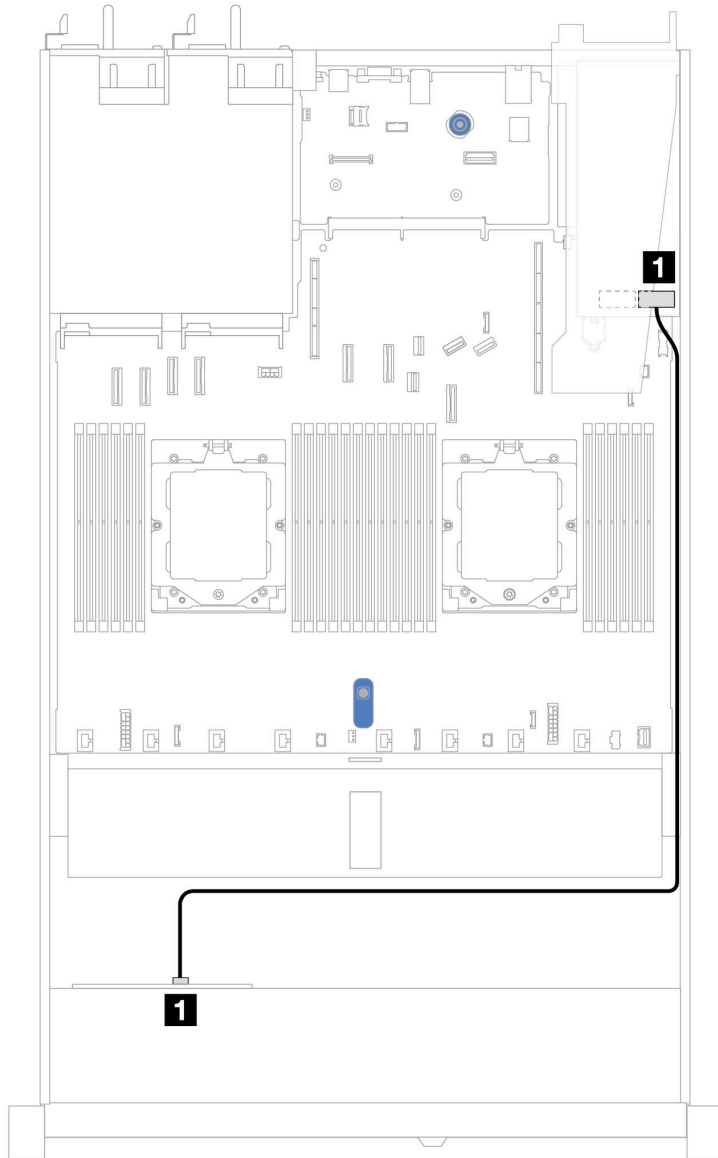


Figure 251. Cable routing for 4 x 2.5" front AnyBay drive bays with an 8i SFF RAID adapter

Table 13. Mapping between backplane connectors and system board/adaptor connectors when an SFF HBA/RAID adapter is installed

Backplanes	From	To
Front BP (SAS)	SAS	C0

Notes:

- Gen 3 and Gen 4 SFF HBA/RAID adapters are slightly different in their connectors, but the cable routing method is similar.
- To connect cables for RAID flash power module, refer to [“RAID flash power modules” on page 224.](#)

8 x 2.5" front drives (liquid cooling)

Use the section to understand the cable routing for signal cable connections for 8 x 2.5" front drive backplanes for liquid assisted cooling module.

8 x 2.5" SAS/SATA backplane

Use this section to understand the cable routing of 8 SAS/SATA front drives for liquid cooling configuration with 10 x 2.5" AnyBay front backplane installed.

To connect power cables for a backplane for standard 2.5" or 3.5" drives, refer to [“Backplane power cable routing” on page 207](#).

To connector cables of RAID flash power modules, refer to [“RAID flash power modules” on page 224](#).

To connect signal cables for a backplane for standard 4 x 3.5" front drives, refer to the following cable routing scenarios depending on your server configuration:

- [“Cable routing for onboard configuration” on page 241](#)
- [“Cable routing with an SFF HBA/RAID adapter” on page 242](#)

Cable routing for onboard configuration

The following illustrations and tables show the mapping relationship between backplane connectors and system board connectors for onboard configuration.

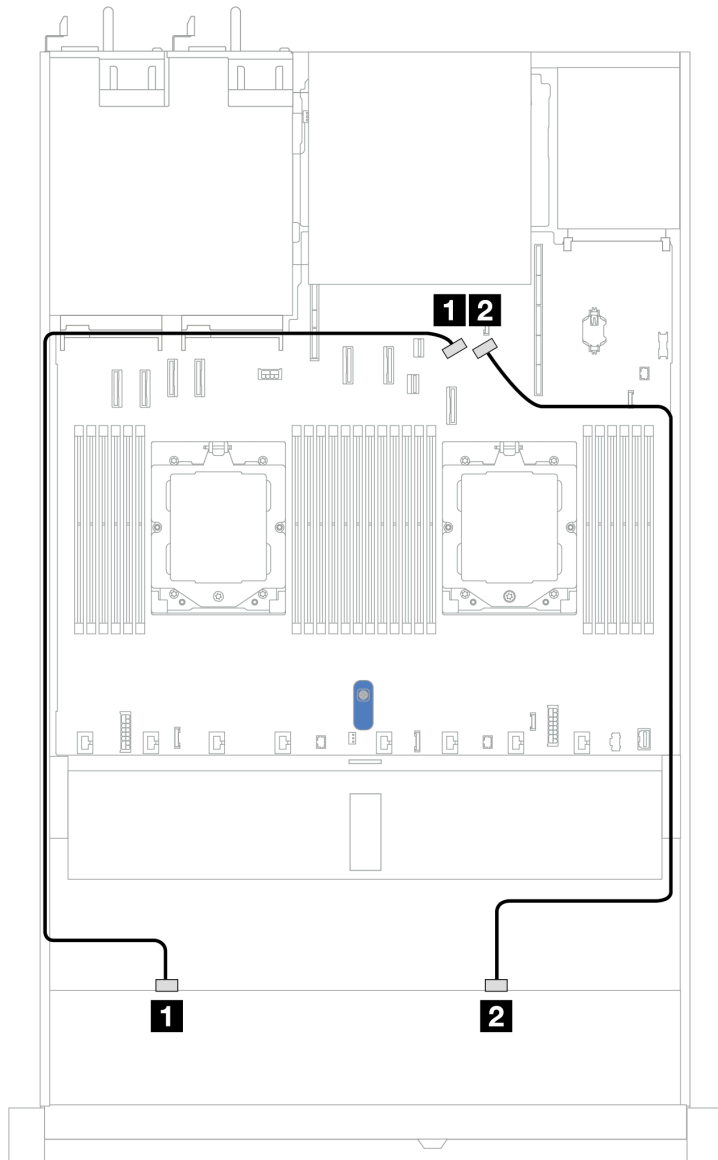


Figure 252. Cable routing for onboard configuration

Table 14. Cable routing for onboard configuration of 8 x 2.5 SAS/SATA front drives

Backplane	From	To
Front BP (SAS)	1 SAS 0	1 PCIe connector 8
	2 SAS 1	2 PCIe connector 9

Cable routing with an SFF HBA/RAID adapter

The following illustrations and tables show the mapping relationship between backplane connectors and an 8i or 16i SFF HBA/RAID adapter (Gen 3 or Gen 4).

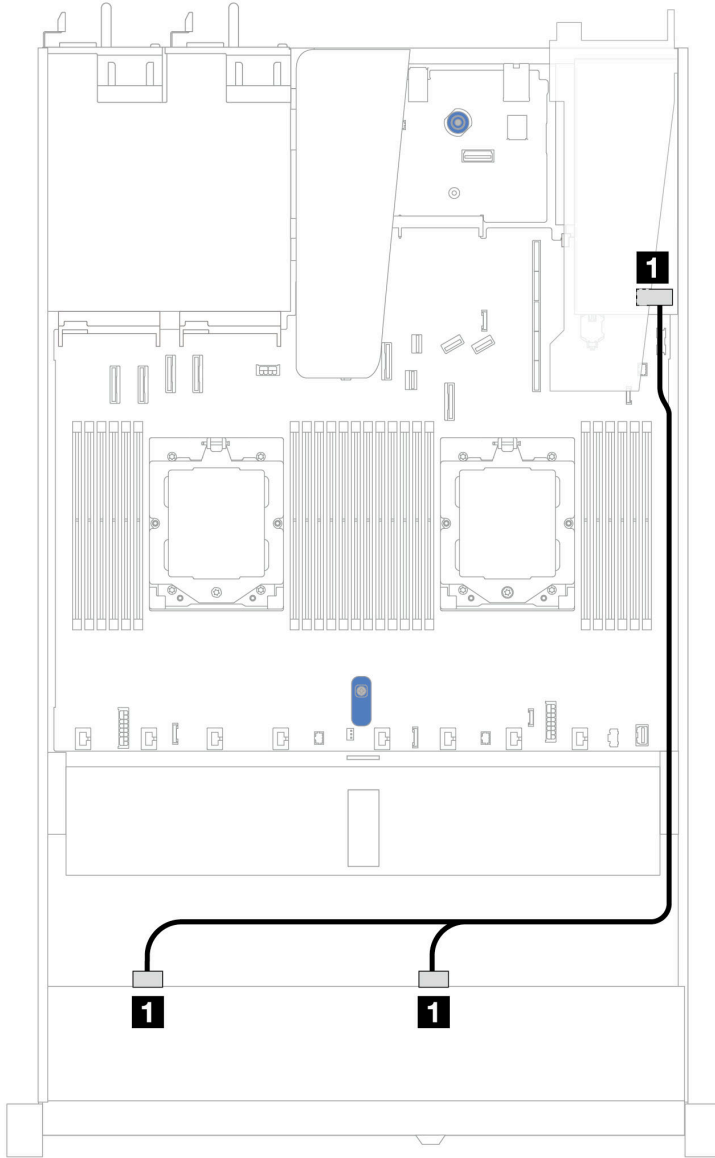


Figure 253. Cable routing for 8 x 2.5" front SAS/SATA drive bays with an 8i or 16i SFF RAID adapter (Gen 3 or Gen 4)

Table 15. Mapping between one front SAS/SATA backplane and an SFF HBA/RAID adapter

Backplane	From	To
Front BP (SAS)	1 SAS 0, SAS 1	1 <ul style="list-style-type: none"> • Gen 3: C0, C1 • Gen 4: C0

10 x 2.5" front drives (liquid cooling)

Use the section to understand the cable routing for signal cable connections for 10 x 2.5" front drive backplanes for liquid assisted cooling module.

6 x 2.5" SAS/SATA + 4 x 2.5" AnyBay backplane

Use this section to understand the cable routing of six SAS/SATA front drives and four AnyBay front drives for liquid cooling configuration with 10 x 2.5" AnyBay front backplane installed.

To connect power cables for a backplane for standard 2.5" or 3.5" drives, refer to [“Backplane power cable routing” on page 207](#).

To connector cables of RAID flash power modules, refer to [“RAID flash power modules” on page 224](#).

To connect signal cables, refer to the following cable routing scenario:

- [“Cable routing with an SFF HBA/RAID adapter” on page 244](#)

Cable routing with an SFF HBA/RAID adapter

The following tables show the mapping relationship between backplane connectors and a 16i SFF HBA/RAID adapter (Gen 3 or Gen 4).

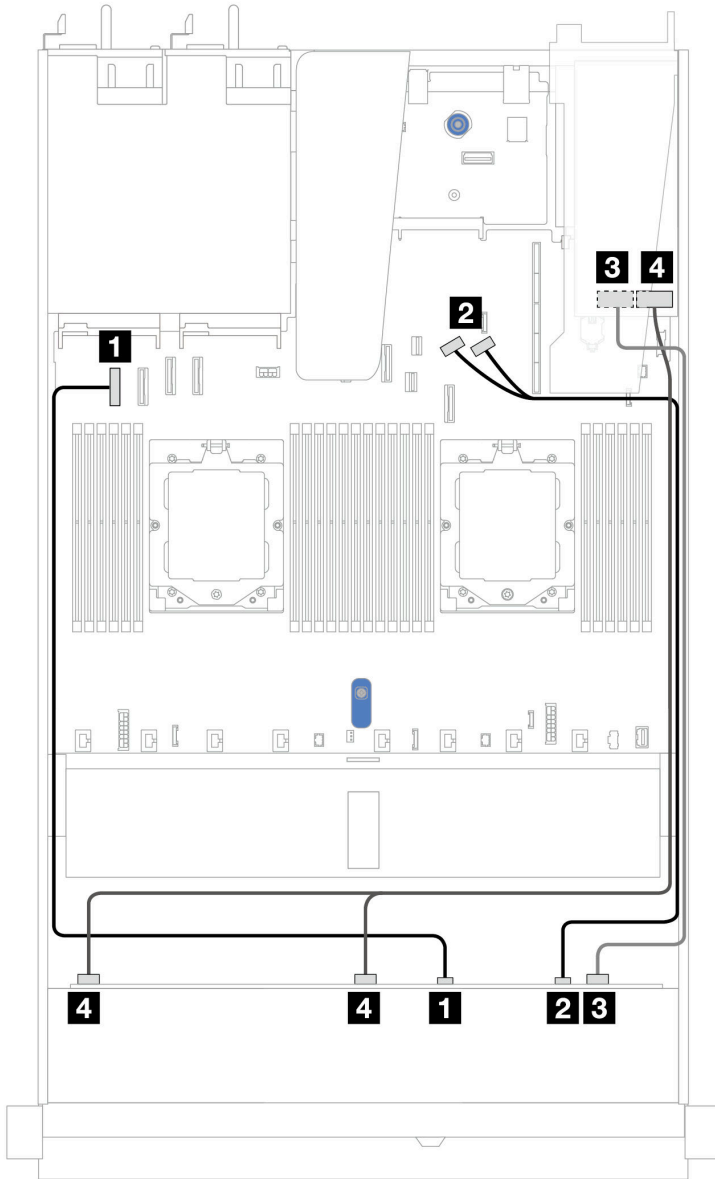


Figure 254. Cable routing for 6 front SAS/SATA drives and 4 front AnyBay drives bays with a 16i SFF RAID adapter (Gen 3 or Gen 4)

Table 16. Mapping between one front AnyBay backplane and an SFF HBA/RAID adapter

Backplane	From	To
Front BP (NVMe)	1 NVMe 0-1	1 PCIe connector 1
	2 NVMe 2-3	2 PCIe connectors 8 and 9
Front BP (SAS)	3 SAS 2	3 <ul style="list-style-type: none"> • Gen 3: C2 • Gen 4: C1
	4 SAS 0, SAS 1	4 <ul style="list-style-type: none"> • Gen 3: C0, C1 • Gen 4: C0

6 x 2.5" SAS/SATA + 2 x 2.5" AnyBay + 2 x 2.5" NVMe backplane

See this section to understand the cable routing of 8 front 2.5" SAS/SATA drives and 2 front 2.5" NVMe drives.

To connect power cables for a backplane for standard 2.5" or 3.5" drives, refer to [“Backplane power cable routing” on page 207](#).

To connector cables of RAID flash power modules, refer to [“RAID flash power modules” on page 224](#).

To connect signal cables for a backplane for standard 6 front 2.5" SAS/SATA drives and 4 front 2.5" NVMe drives, refer to the following cable routing scenarios depending on your server configuration:

- [“Cable routing with an SFF HBA/RAID adapter” on page 246](#)

Cable routing with an SFF HBA/RAID adapter

The following tables show the mapping relationship between backplane connectors and an SFF HBA/RAID adapter.

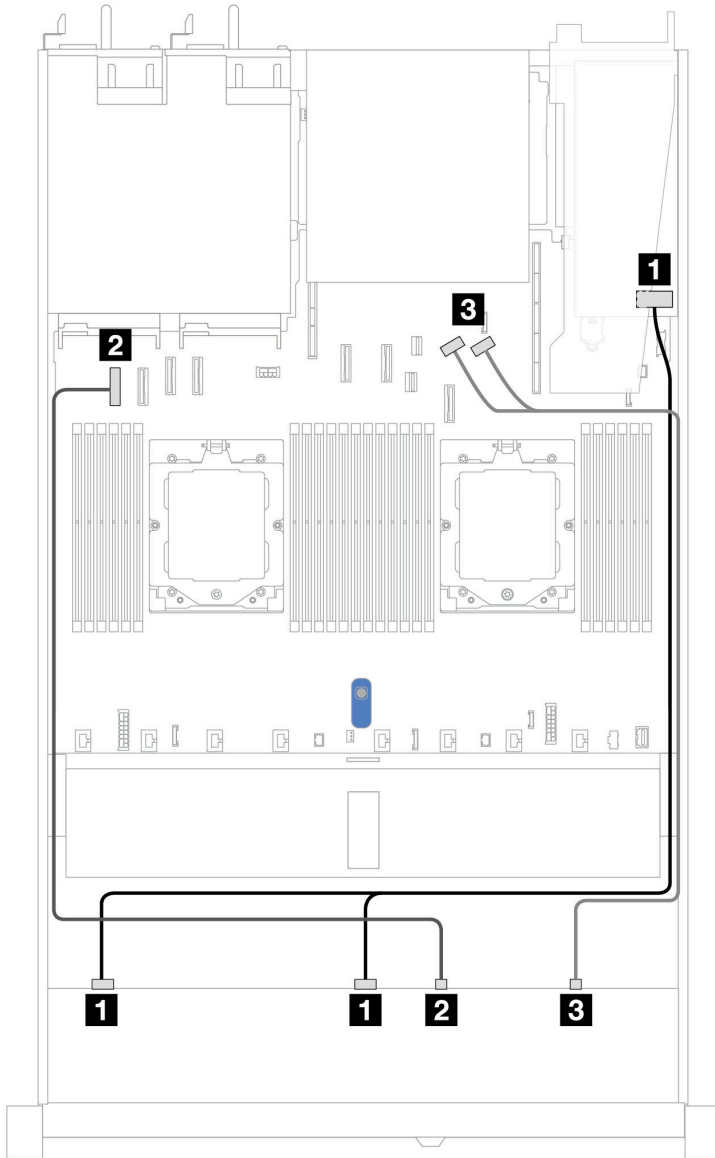


Figure 255. Cable routing for 6 x 2.5" SAS/SATA drives and 2 x 2.5" AnyBay drives and 2 x 2.5" NVMe front drive bays with an 8i SFF RAID/HBA adapter (Gen 3 or Gen 4)

Table 17. Cable routing for 6 x 2.5" SAS/SATA drives and 2 x 2.5" AnyBay drives and 2 x 2.5" NVMe front drive bays with an 8i SFF RAID/HBA adapter (Gen 3 or Gen 4)

Backplane	From	To
Front BP (SAS)	1 SAS 0, SAS 1	1 C0, C1
Front BP (NVMe)	2 NVMe 0-1	2 PCIe connector 1
	3 NVMe 2-3	3 PCIe connectors 8 and 9

8 x 2.5"/10 x 2.5" U.3 drives with 10 x 2.5 AnyBay backplane

Use this section to understand the cable routing for eight or ten U.3 drives with 10 x 2.5 AnyBay backplane.

To connector cables of RAID flash power modules, refer to “RAID flash power modules” on page 224.

Cable routing with an SFF HBA/RAID adapter

The following illustrations and tables show the mapping relationship between backplane connectors and an 8i or 16i SFF RAID adapter (Gen 4).

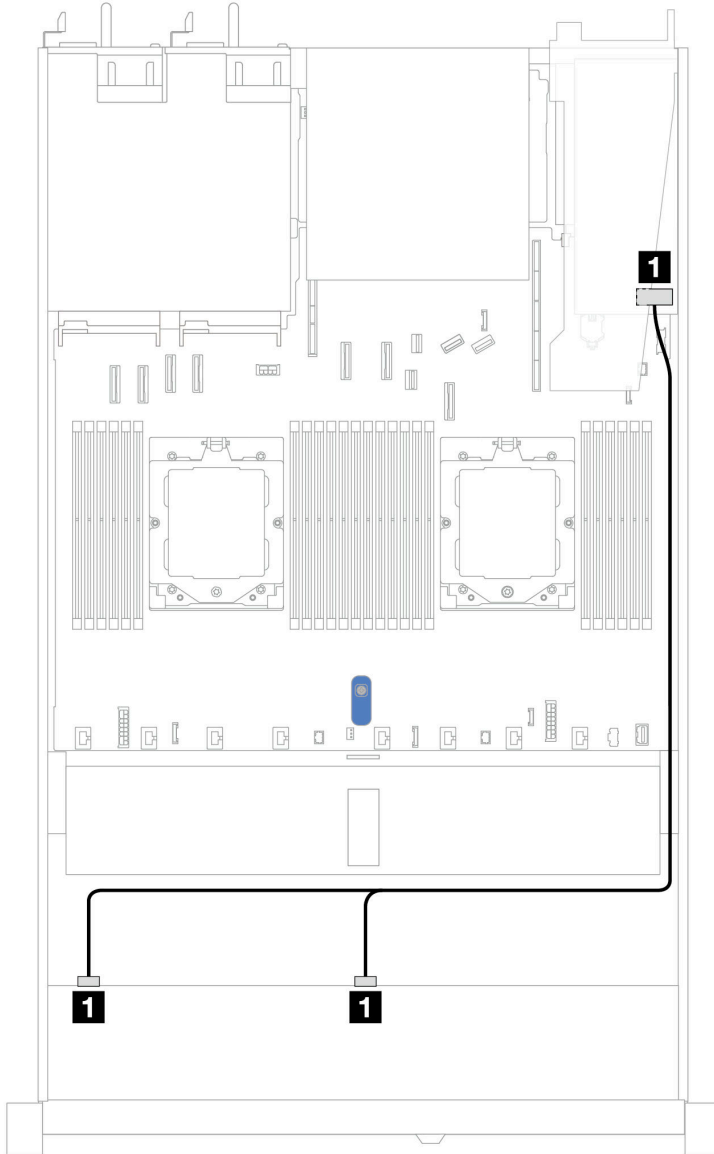


Figure 256. Cable routing for 8 x 2.5" front U.3 drives with an 8i SFF RAID adapter (Gen 4)

Table 18. Mapping between one front AnyBay backplane and an SFF HBA/RAID adapter

Backplane	From	To
Front BP (SAS)	1 SAS 0, SAS 1	1 C0

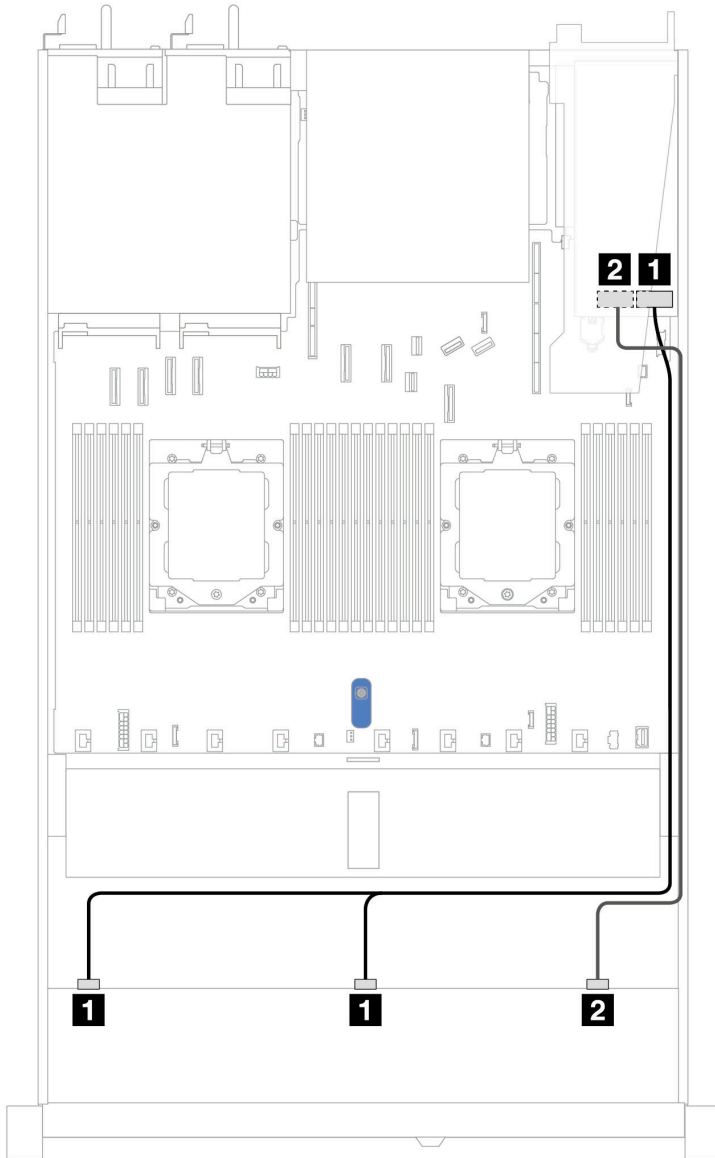


Figure 257. Cable routing for 10 x 2.5" front U.3 drives with an 16i SFF RAID adapter (Gen 4)

Table 19. Mapping between one front AnyBay backplane and an SFF HBA/RAID adapter

Backplane	From	To
Front BP (SAS)	1 SAS 0, SAS 1	1 C0
	2 SAS2	2 C1

10 x 2.5" NVMe backplane

Use this section to understand the cable routing of 10 NVMe front drives for liquid cooling configuration with 10 x 2.5 AnyBay front backplane installed.

To connect power cables for a backplane for standard 2.5" or 3.5" drives, refer to [“Backplane power cable routing” on page 207](#).

The following illustration and table show the cabling between backplane and processor board for onboard configuration.

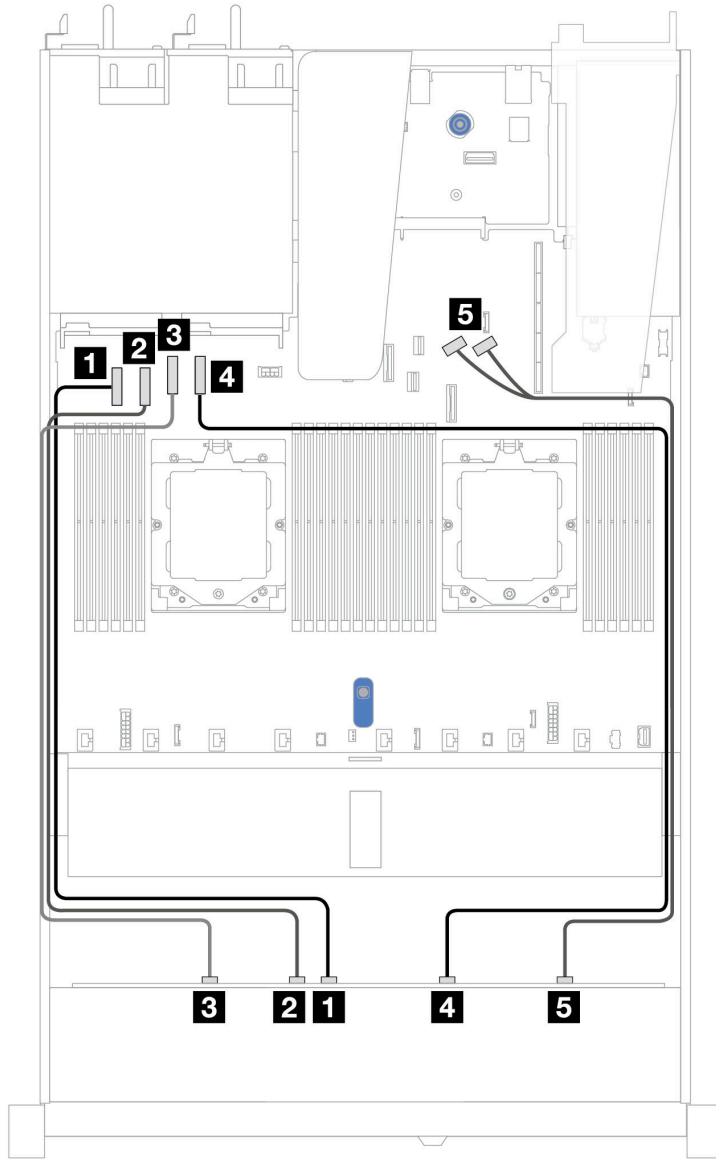


Figure 258. Onboard cabling of 10 NVMe drives for liquid cooling

Table 20. Mapping between one front AnyBay backplane and processor board for onboard configuration

Backplane	From	To
Front BP (NVMe)	1 NVMe 4–5	1 PCIe connector 1
	2 NVMe 2–3	2 PCIe connector 2
	3 NVMe 0–1	3 PCIe connector 3
	4 NVMe 6–7	4 PCIe connector 4
	5 NVMe 8–9	5 PCIe connectors 8 and 9

10 x 2.5" SAS/SATA backplane

Use this section to understand the cable routing of 10 SAS/SATA front drives for liquid cooling configuration with 10 x 2.5 AnyBay front backplane installed.

To connect power cables for a backplane for standard 2.5" or 3.5" drives, refer to [“Backplane power cable routing” on page 207](#).

To connector cables of RAID flash power modules, refer to [“RAID flash power modules” on page 224](#).

To connect signal cables, refer to the following cable routing scenarios:

- [“Cable routing for onboard configuration” on page 251](#)
- [“Cable routing with an SFF HBA/RAID adapter” on page 252](#)

Cable routing for onboard configuration

The following illustrations and tables show the mapping relationship between backplane connectors and system board (system board assembly) connectors for onboard configuration.

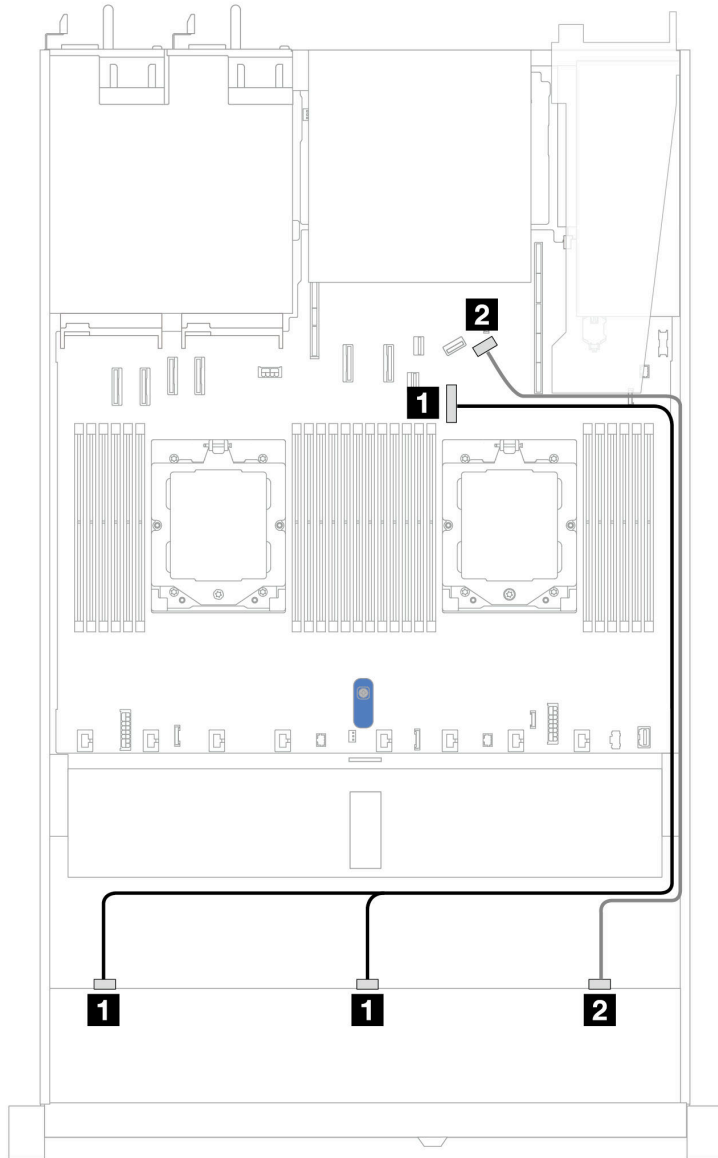


Figure 259. Cable routing for onboard configuration of 10 x 2.5" SAS/SATA front drives

Table 21. Mapping between one front AnyBay backplane and system board for onboard configuration

Backplane	From	To
Front BP (SAS)	1 SAS 0, SAS 1	1 PCIe connector 7
	2 SAS 2	2 PCIe connector 9

Cable routing with an SFF HBA/RAID adapter

The following tables show the mapping relationship between backplane connectors and a 16i SFF HBA/RAID adapter (Gen 3 or Gen 4).

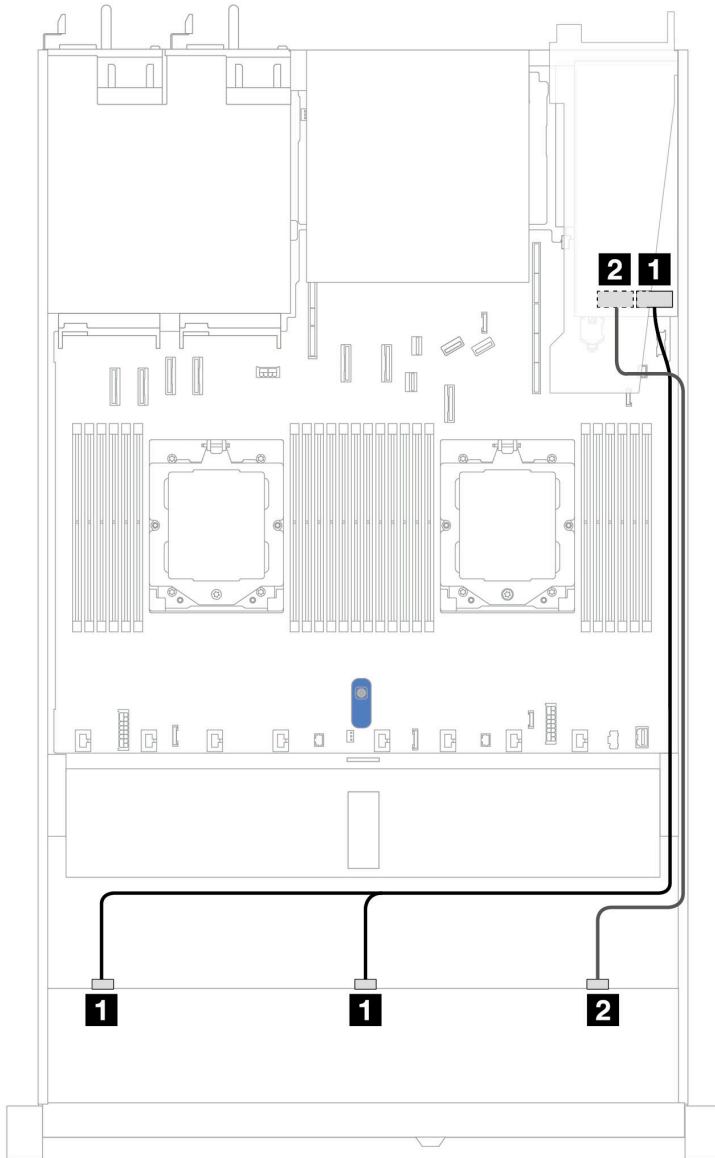


Figure 260. Cable routing for 10 front SAS/SATA drives bays with a 16i SFF RAID adapter (Gen 3 or Gen 4)

Table 22. Mapping between one front AnyBay backplane and an SFF HBA/RAID adapter

Backplane	From	To
Front BP (SAS)	1 SAS 0, SAS 1	1 <ul style="list-style-type: none"> • Gen 3: C0, C1 • Gen 4: C0
	2 SAS 2	2 <ul style="list-style-type: none"> • Gen 3: C2 • Gen 4: C1

10 x 2.5 AnyBay backplane (Gen 5)

Use this section to understand the alternatives that a 10 x 2.5 AnyBay backplane (Gen 5) offers.

With a 10 x 2.5 AnyBay backplane (Gen 5), following front drive combinations are supported:

Note: M.2 SATA Non-RAID, M.2 X4 NVMe Non-RAID, and 7mm SATA Non-RAID configurations are not supported.

6 x 2.5" SAS/SATA + 4 x 2.5" AnyBay backplane

Use this section to understand the cable routing of six SAS/SATA front drives and four AnyBay front drives for liquid cooling configuration with 10 x 2.5" AnyBay front backplane (Gen 5) installed.

To connect power cables for a backplane for standard 2.5" or 3.5" drives, refer to [“Backplane power cable routing” on page 207](#).

To connector cables of RAID flash power modules, refer to [“RAID flash power modules” on page 224](#).

To connect signal cables, refer to the following cable routing scenario:

- [“Cable routing with an SFF HBA/RAID adapter” on page 254](#)

Cable routing with an SFF HBA/RAID adapter

The following tables show the mapping relationship between backplane connectors and a 16i SFF HBA/RAID adapter (Gen 3 or Gen 4).

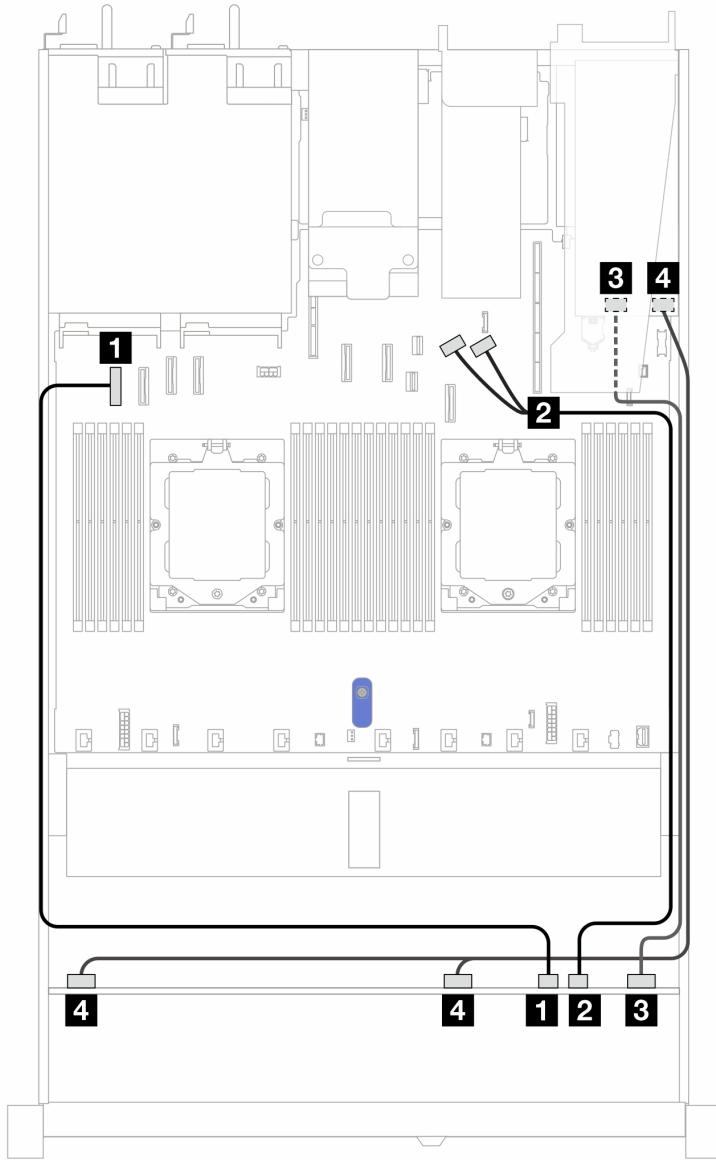


Figure 261. Cable routing for 6 front SAS/SATA drives and 4 front AnyBay drives bays with a 16i SFF RAID adapter (Gen 3 or Gen 4)

Table 23. Mapping between one front AnyBay backplane and an SFF HBA/RAID adapter

Backplane	From	To
Front BP (NVMe)	1 NVMe 6–7	1 PCIe connector 1
	2 NVMe 8–9	2 PCIe connectors 8 and 9
Front BP (SAS)	3 SAS 8–9	3 <ul style="list-style-type: none"> • Gen 3: C2 • Gen 4: C1
	4 SAS 0–3, SAS 4–7	4 <ul style="list-style-type: none"> • Gen 3: C0, C1 • Gen 4: C0

6 x 2.5" SAS/SATA + 2 x 2.5" AnyBay + 2 x 2.5" NVMe backplane

See this section to understand the cable routing of 6 front 2.5" SAS/SATA drives, 2 front 2.5" AnyBay drives, and 2 front 2.5" NVMe drives with 10 x 2.5 backplane (Gen 5) installed.

To connect power cables for a backplane for standard 2.5" or 3.5" drives, refer to [“Backplane power cable routing” on page 207](#).

To connector cables of RAID flash power modules, refer to [“RAID flash power modules” on page 224](#).

To connect signal cables , refer to the following cable routing scenarios depending on your server configuration:

- [“Cable routing with an SFF HBA/RAID adapter” on page 256](#)

Cable routing with an SFF HBA/RAID adapter

The following tables show the mapping relationship between backplane connectors and an 8i SFF HBA/RAID adapter (Gen 3 or Gen 4).

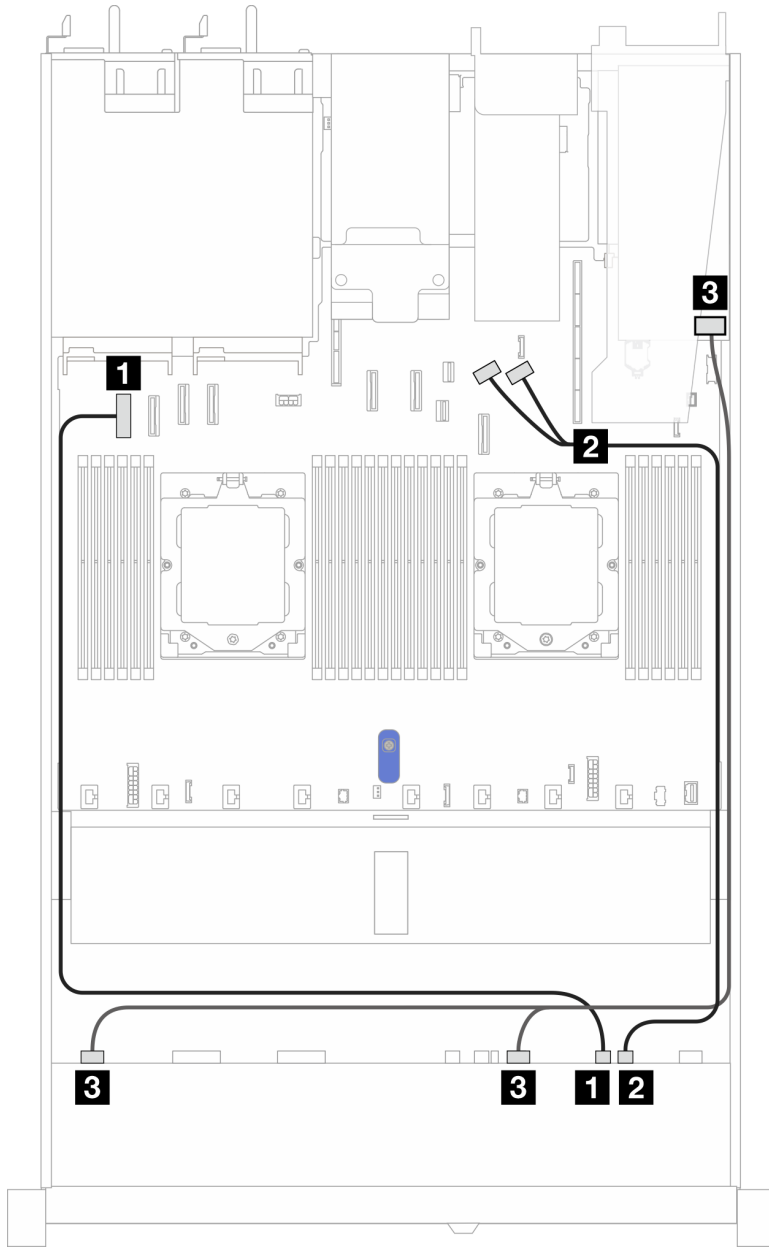


Figure 262. Cable routing for one front AnyBay backplane and an 8i SFF HBA/RAID adapter (Gen 3 or Gen 4)

Table 24. Mapping between one front AnyBay backplane and an 8i SFF HBA/RAID adapter

Backplane	From	To
Front BP (NVMe)	1 NVMe 6–7	1 PCIe connector 1
	2 NVMe 8–9	2 PCIe connectors 8 and 9
Front BP (SAS)	3 SAS 0–3, SAS 4–7	3 <ul style="list-style-type: none"> • Gen 3: C0, C1 • Gen 4: C0

The following tables show the mapping relationship between backplane connectors and a 16i SFF HBA/RAID adapter (Gen 3 or Gen 4).

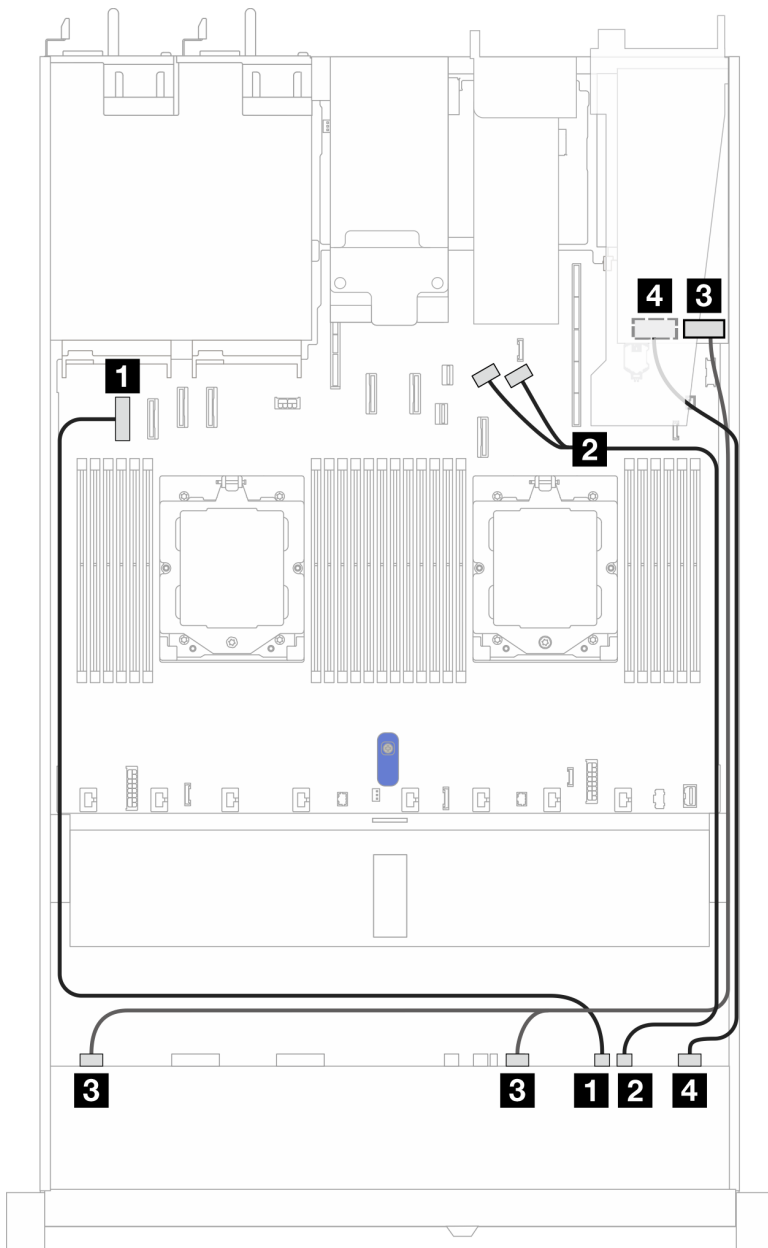


Figure 263. Cable routing for one front AnyBay backplane and a 16i SFF HBA/RAID adapter (Gen 3 or Gen 4)

Table 25. Mapping between one front AnyBay backplane and a 16i SFF HBA/RAID adapter

Backplane	From	To
Front BP (NVMe)	1 NVMe 6–7	1 PCIe connector 1
	2 NVMe 8–9	2 PCIe connectors 8 and 9
Front BP (SAS)	3 SAS 0–3, SAS 4–7	3 <ul style="list-style-type: none"> • Gen 3: C0, C1 • Gen 4: C0
	4 SAS 8–9	4 <ul style="list-style-type: none"> • Gen 3: C2, C3 • Gen 4: C1

Cable routing for backplane signals (one processor)

In this section, you can find cable routing of backplane signals when only one processor installed.

- Each backplane your server supports offers multiple signal connections. This section singles out the signal connection from power connection for better understanding. For backplane power connection, see [“Backplane power cable routing” on page 207](#).
- For the locations of backplane signal connectors on the processor board and adapters, see [“System-board-assembly connectors” on page 367](#) for details.
- For more information about backplanes supported and their connectors, see [“Drive backplane connectors” on page 203](#).

4 x 3.5" front drives (one processor)

Use the section to understand the cable routing for signal cable connections for 4 x 3.5" front drive backplanes when one processor installed.

4 x 3.5" SAS/SATA backplane

Use this section to understand the SAS/SATA backplane cable routing for server model with four 3.5" front drives.

To connect cables for a rear NVMe/SAS/SATA drive backplane, refer to [“Rear NVMe/SAS/SATA drive backplane” on page 227](#).

To connect power cables for a backplane for standard 2.5" or 3.5" drives, refer to [“Backplane power cable routing” on page 207](#).

To connect cables for RAID flash power module, refer to [“RAID flash power modules” on page 224](#).

To connect signal cables, refer to the following cable routing scenarios depending on your server configuration:

- [“Cable routing for onboard configuration” on page 260](#)
- [“Cable routing with an SFF HBA/RAID adapter” on page 261](#)

Cable routing for onboard configuration

The following table shows the mapping relationship between backplane connectors and system board connectors for onboard configuration.

The following figure illustrates the cable routing for the onboard configuration of 4 x 3.5" front SAS/SATA drive bays. Connections between connectors: **1** ↔ **1**, **2** ↔ **2**, **3** ↔ **3**, ... **n** ↔ **n**.

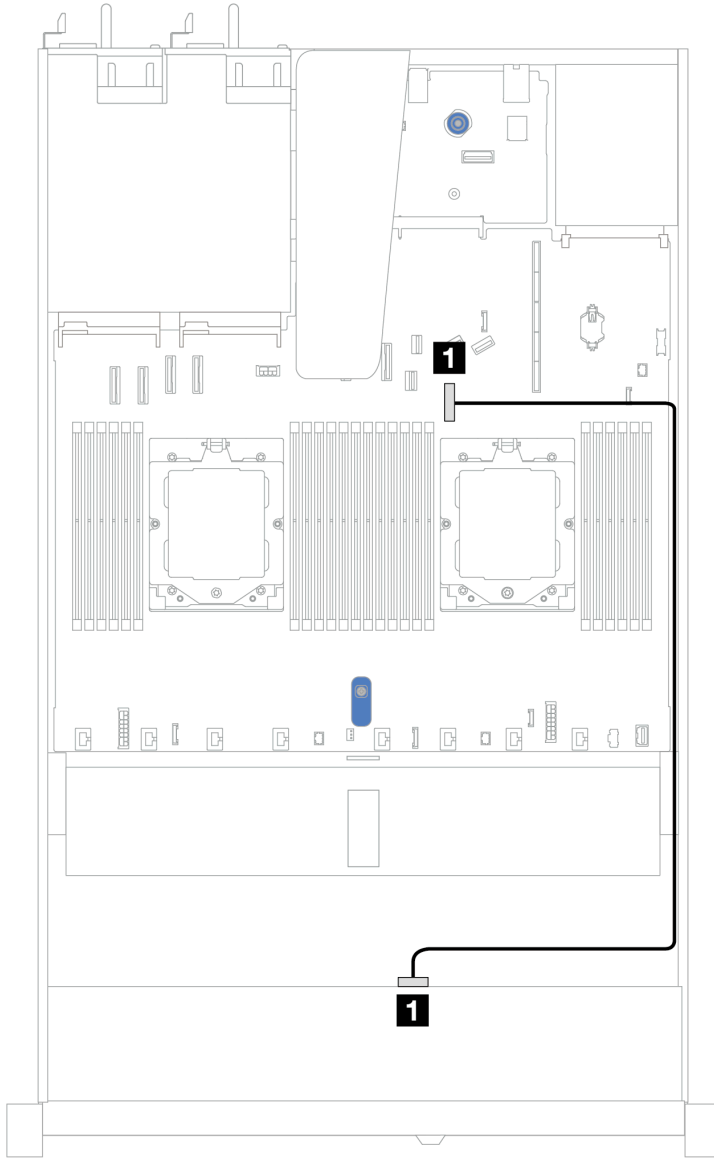


Figure 264. Cable routing for onboard configuration of 4 x 3.5" front SAS/SATA drive bays

Table 26. Cable routing for onboard configuration of 4 x 3.5" front SAS/SATA drive bays

Backplane	From	To
Front BP (SAS)	1 SAS	1 PCIe connector 7

Cable routing with an SFF HBA/RAID adapter

The following table shows the mapping relationship between backplane connectors and system board/adapter connectors when an 8i SFF HBA/RAID adapter (Gen 3 or Gen 4) is installed.

The following figure illustrates the cable routing for the configuration of 4 x 3.5" front SAS/SATA drive bays with an 8i SFF RAID adapter. Connections between connectors: **1** ↔ **1**, **2** ↔ **2**, **3** ↔ **3**, ... **n** ↔ **n**.

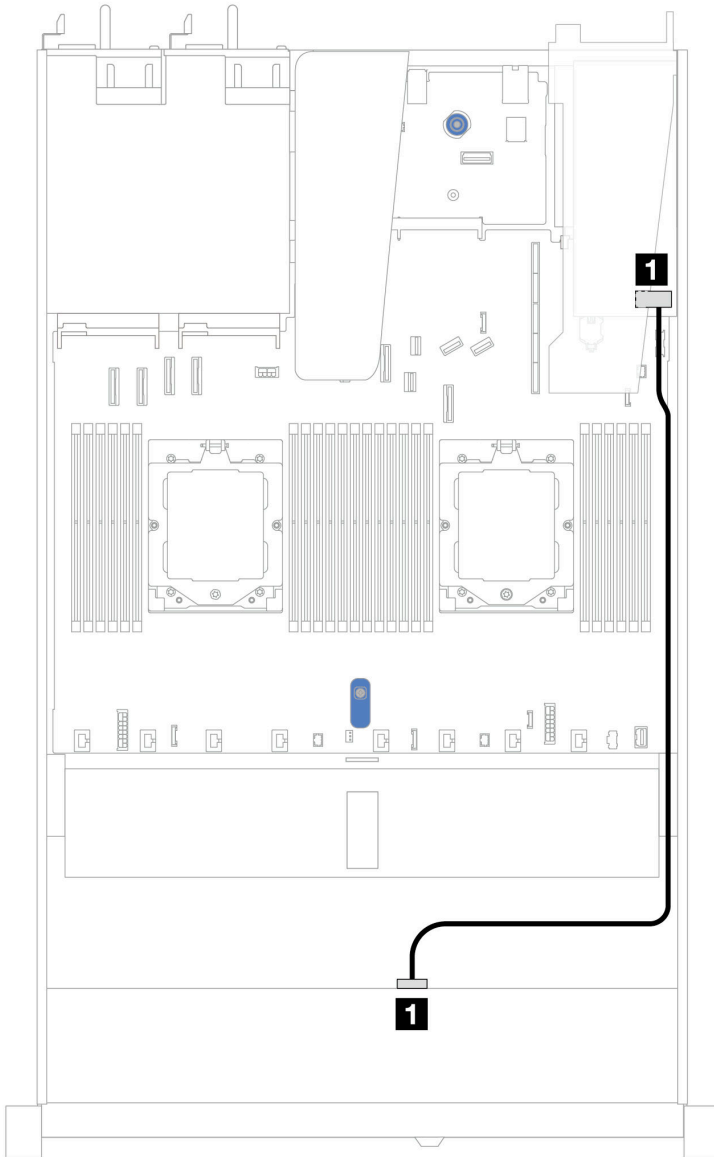


Figure 265. Cable routing for 4 x 3.5" front SAS/SATA drive bays with an 8i SFF RAID adapter (Gen 3 or Gen 4)

Table 27. Mapping between backplane connectors and system board/adapter connectors when an SFF HBA/RAID adapter is installed

Backplane	From	To
Front BP (SAS)	1 SAS	1 C0

Note: Gen 3 and Gen 4 SFF HBA/RAID adapters are slightly different in their connectors, but the cable routing method is similar.

The following table shows the mapping relationship between backplane connectors and system board/adapter connectors when an 8i SFF HBA/RAID adapter (Gen 3) is installed.

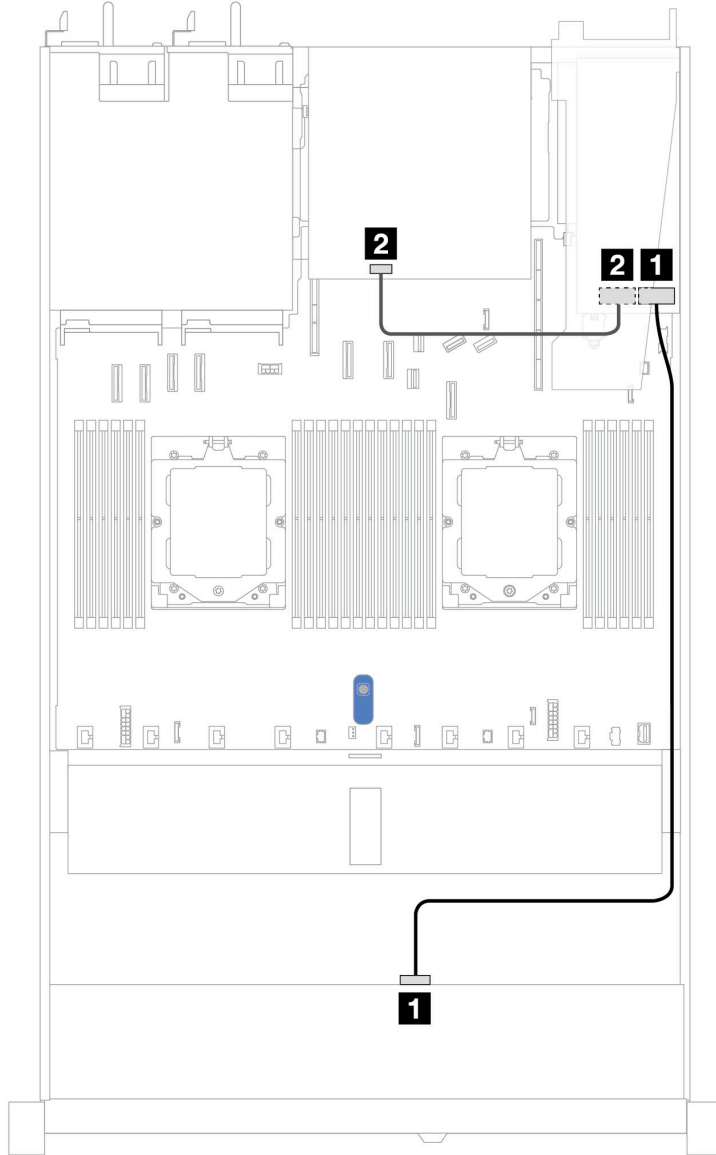


Figure 266. Cable routing for 4 x 3.5" front SAS/SATA drive bays with an 8i SFF RAID adapter (Gen 3) and rear 2 x 2.5-inch SAS/SATA drives

Table 28. Mapping between backplane connectors and system board/adapter connectors when an SFF HBA/RAID adapter is installed

Backplane	From	To
Front BP (SAS)	1 SAS	1 C0
Rear BP (SAS)	2 SAS	2 C1

The following table shows the mapping relationship between backplane connectors and system board/adapter connectors when an 8i SFF HBA/RAID adapter (Gen 4) is installed.

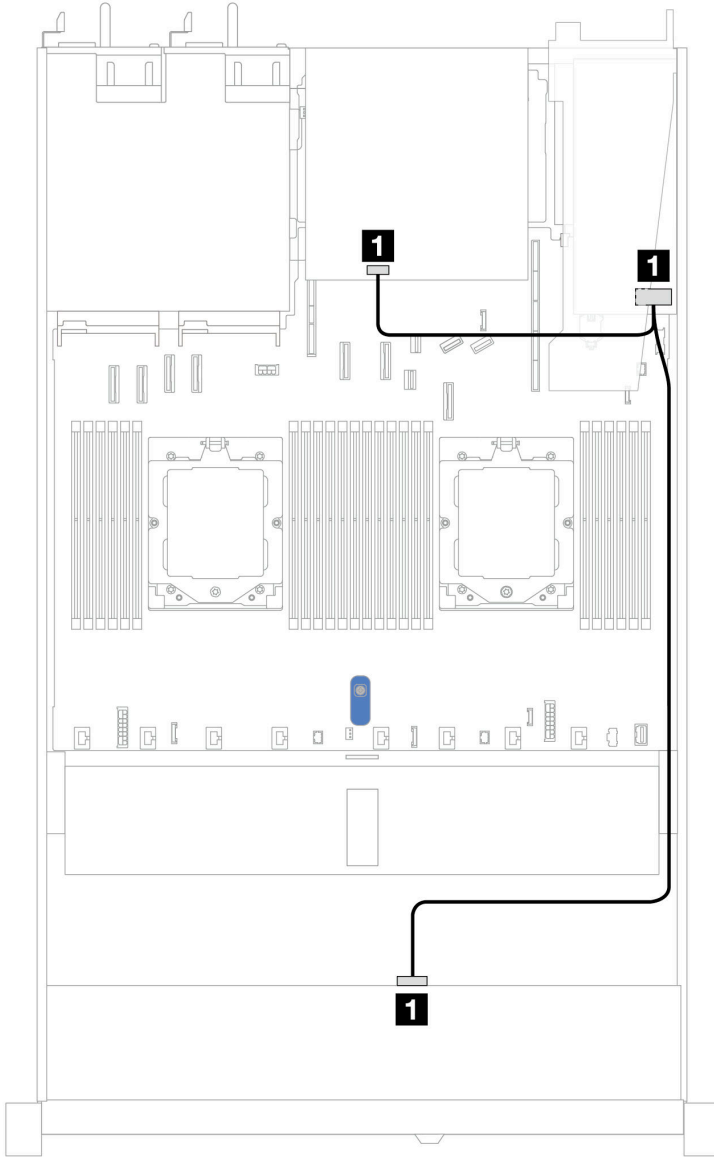


Figure 267. Cable routing for 4 x 3.5" front SAS/SATA drive bays with an 8i SFF RAID adapter (Gen 4) and rear 2 x 2.5-inch SAS/SATA drives

Table 29. Mapping between backplane connectors and system board/adapter connectors when an SFF HBA/RAID adapter is installed

Backplane	From	To
Front and Rear BP (SAS)	1 SAS	1 C0

4 x 3.5" AnyBay backplane

Use this section to understand the AnyBay backplane cable routing for server model with four 3.5" front drives.

To connect power cables for a backplane for standard 2.5" or 3.5" drives, refer to [“Backplane power cable routing” on page 207](#).

To connector cables of RAID flash power modules, refer to [“RAID flash power modules” on page 224](#).

To connect signal cables for a backplane for standard 4 x 3.5" front drives, refer to the following cable routing scenarios depending on your server configuration:

- [“Cable routing with an SFF HBA/RAID adapter” on page 265](#)

Cable routing with an SFF HBA/RAID adapter

The following table shows the mapping relationship between backplane connectors and system board/adapter connectors when an 8i SFF HBA/RAID adapter (Gen 3 or Gen 4) is installed.

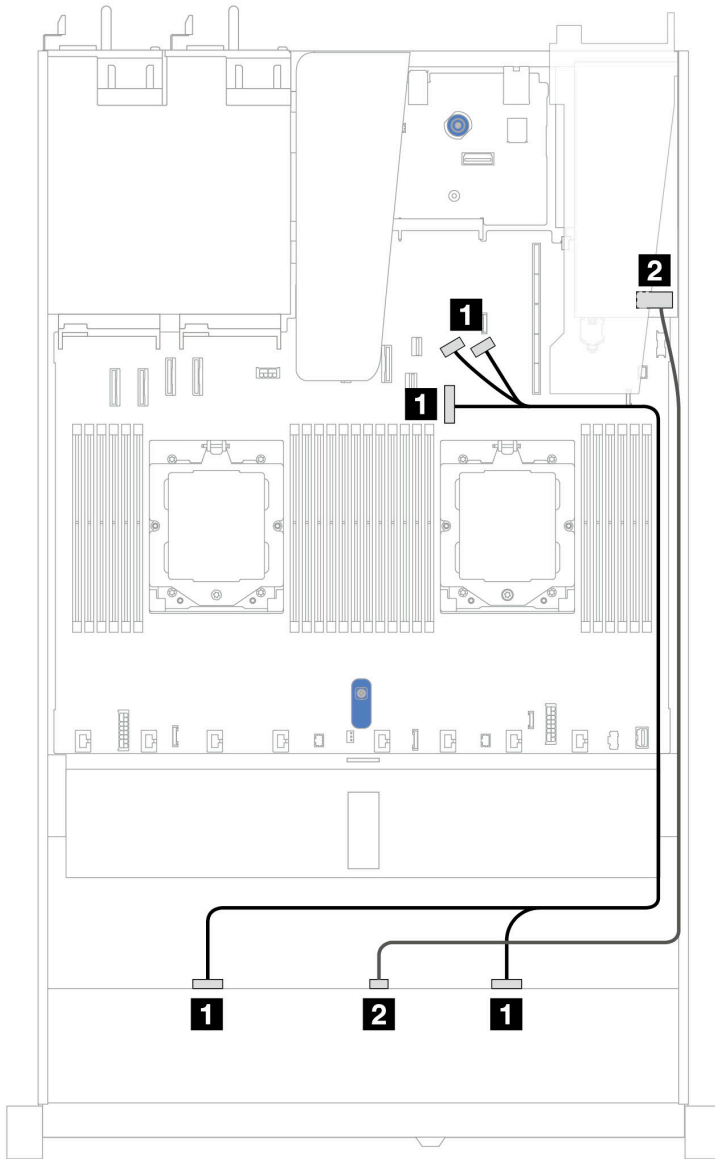


Figure 268. Cable routing for 4 x 3.5" front AnyBay drive bays with an 8i SFF RAID adapter (Gen 3 or Gen 4)

Backplane	From	To
Front BP (NVMe)	1 NVMe 0-1, NVMe 2-3	1 PCIe connectors 7, 8, and 9
Front BP (SAS)	2 SAS	2 C0

4 x 3.5" U.3 drives with 4 x 3.5 AnyBay backplane

Use this section to understand the cable routing for eight U.3 drives with 4 x 3.5" AnyBay backplane and one processor installed.

To connect power cables for a backplane for standard 2.5" or 3.5" drives, refer to [“Backplane power cable routing” on page 207](#).

To connector cables of RAID flash power modules, refer to [“RAID flash power modules” on page 224](#).

To connect the signal cable, refer to the following cable routing scenario:

- [“Cable routing with an SFF HBA/RAID adapter” on page 266](#)

Cable routing with an SFF HBA/RAID adapter

The following illustrations and tables show the mapping relationship between backplane connectors and an 8i or 16i SFF RAID adapter (Gen 4).

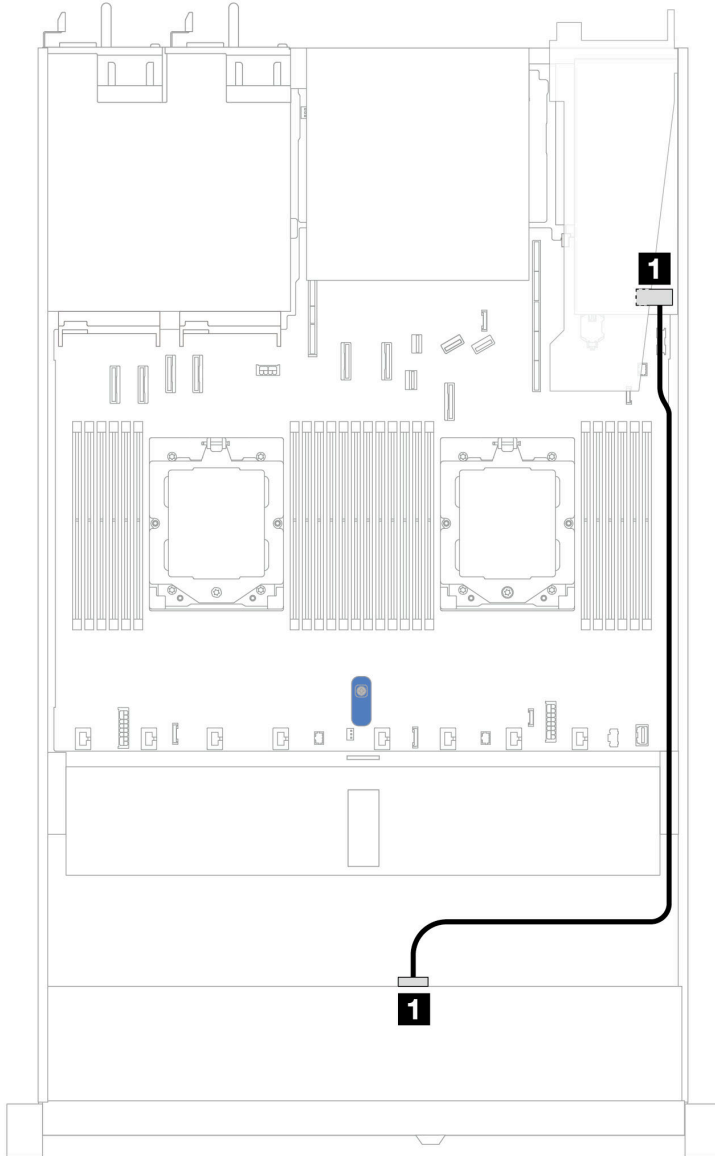


Figure 269. Cable routing for 4 x 3.5" front U.3 drives with an 8i SFF RAID adapter (Gen 4)

Table 30. Mapping between one front AnyBay backplane and an SFF HBA/RAID adapter

Backplane	From	To
Front BP (SAS)	1 SAS	1 C0

4 x 2.5" front drives (one processor)

Use the section to understand the cable routing for signal cable connections for 4 x 2.5" front drive backplanes when one processor installed.

4 x 2.5" SAS/SATA backplane

Use this section to understand the SAS/SATA backplane cable routing for server model with four 2.5" front drives.

To connect power cables for a backplane for standard 2.5" or 3.5" drives, refer to [“Backplane power cable routing” on page 207](#).

To connector cables of RAID flash power modules, refer to [“RAID flash power modules” on page 224](#).

To connect signal cables for a backplane for standard 4 x 2.5" front drives, refer to the following cable routing scenarios depending on your server configuration:

- [“Cable routing for onboard configuration” on page 269](#)
- [“Cable routing with an SFF HBA/RAID adapter” on page 270](#)

Cable routing for onboard configuration

The following table shows the mapping relationship between backplane connectors and system board connectors for onboard configuration.

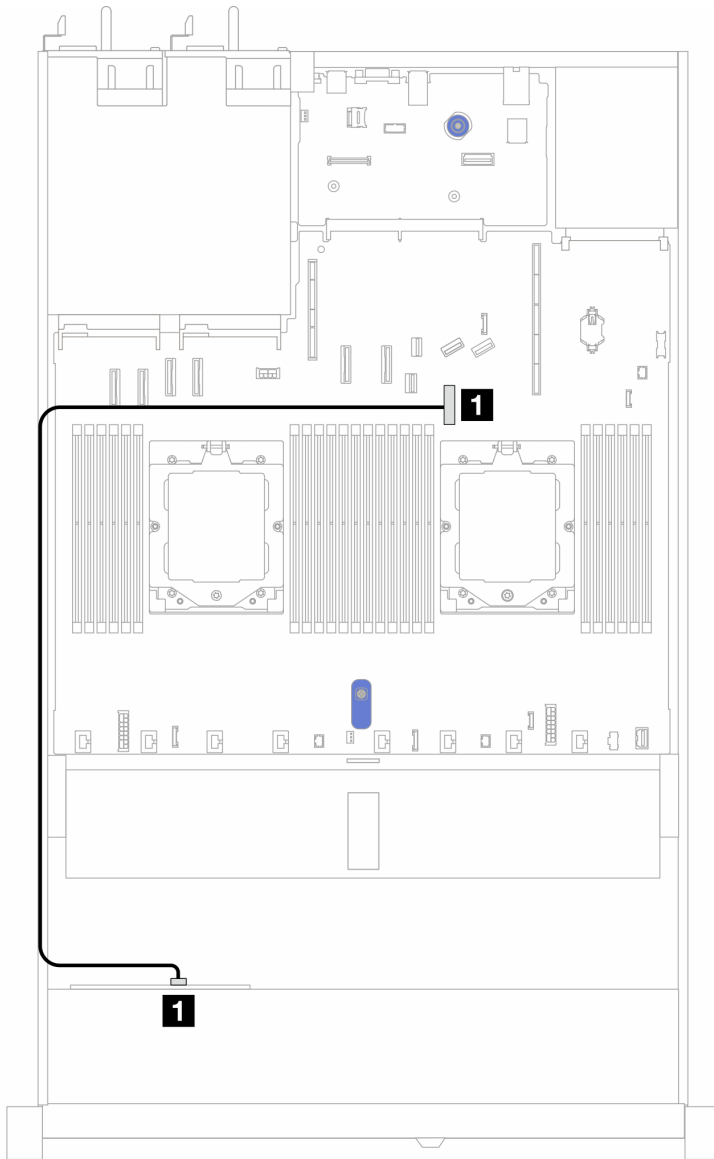


Figure 270. Cable routing for onboard configuration of 4 x 2.5" front SAS/SATA drive bays

Table 31. Mapping between backplane connectors and system board connectors for onboard configuration

Backplanes	From	To
Front BP (SAS)	SAS	PCIe connector 7

Cable routing with an SFF HBA/RAID adapter

The following table shows the mapping relationship between backplane connectors and system board/adapter connectors when an 8i SFF HBA/RAID adapter (Gen 3 or Gen 4) is installed.

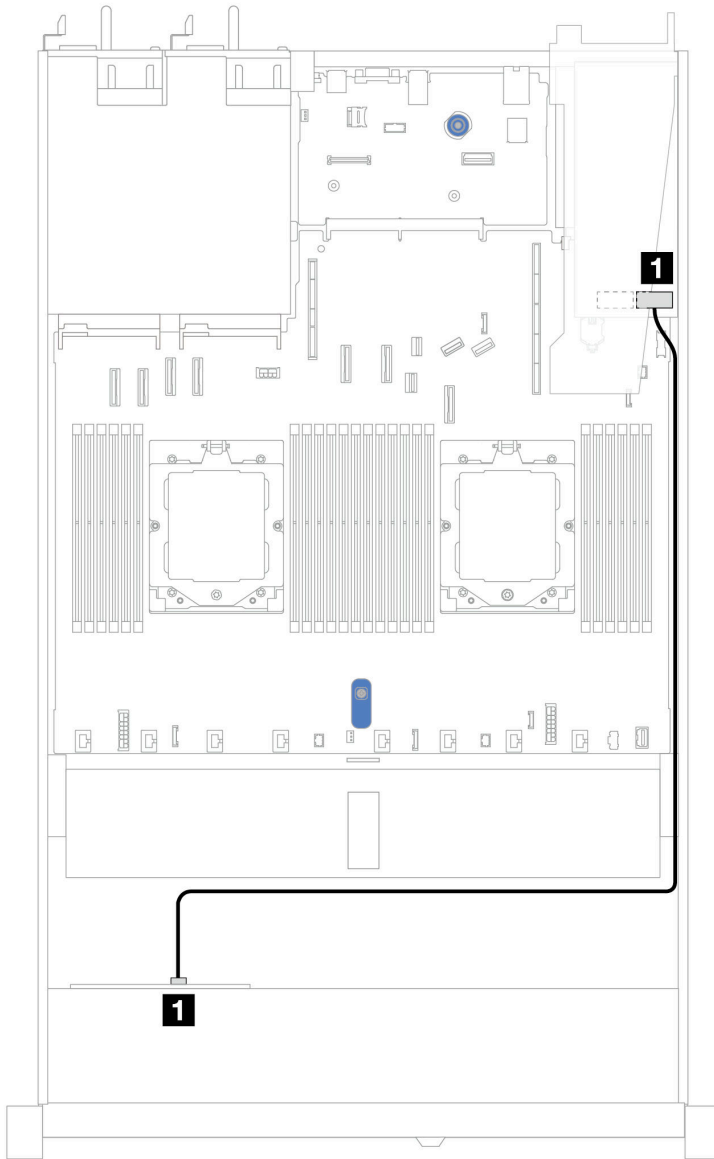


Figure 271. Cable routing for 4 x 2.5" front AnyBay drive bays with an 8i SFF RAID adapter (Gen 3 or Gen 4)

Table 32. Mapping between backplane connectors and system board/adapter connectors when an SFF HBA/RAID adapter is installed

Backplanes	From	To
Front BP (SAS)	SAS	C0

Notes:

- Gen 3 and Gen 4 SFF HBA/RAID adapters are slightly different in their connectors, but the cable routing method is similar.

- To connect cables for RAID flash power module, refer to [“RAID flash power modules” on page 224](#).

4 x 2.5" NVMe backplane (Gen 4)

Use this section to understand the NVMe backplane (Gen 4) cable routing for server model with four 2.5" front drives.

To connect power cables for a backplane for standard 2.5" or 3.5" drives, refer to [“Backplane power cable routing” on page 207](#).

To connect cables for intrusion switch, refer to [“Intrusion switch” on page 216](#).

Cable routing for onboard configuration with one processor

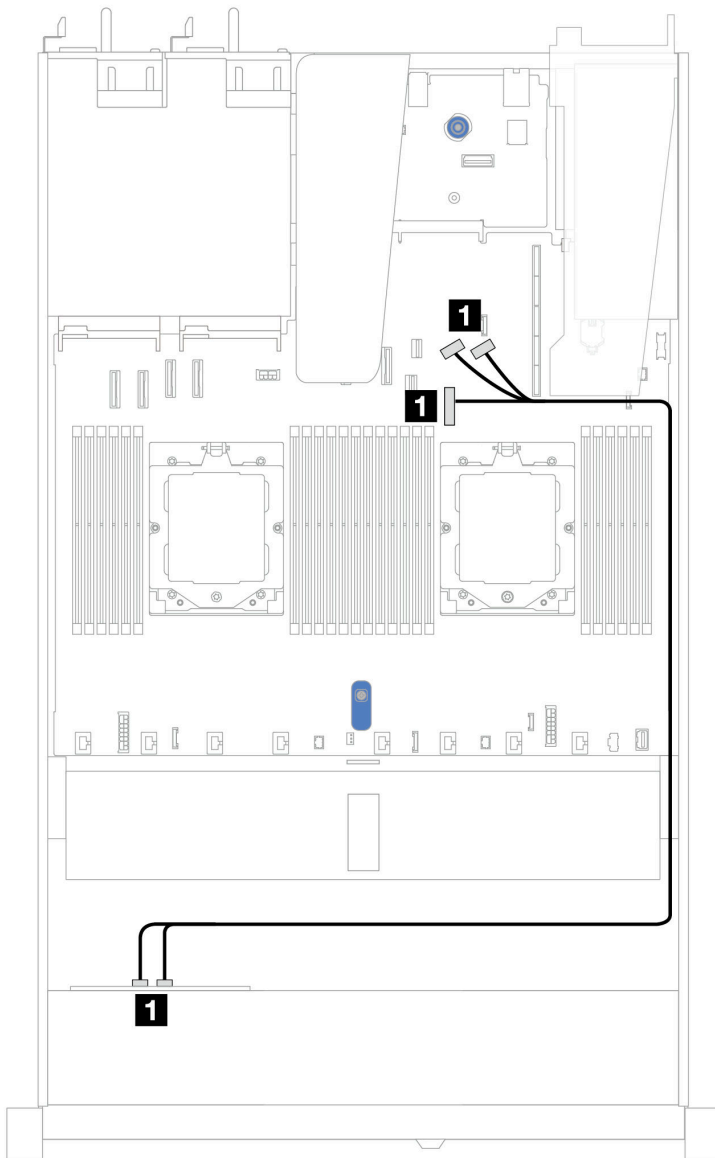


Figure 272. Mapping between 4 x 2.5" front NVMe drive backplane and system board for onboard configuration with one processor (Gen 4)

Note: This cable routing is for the configuration without M.2 SATA/NVMe drive PCIe 4.0 backplane and front I/O module.

Table 33. Mapping between 4 x 2.5" front NVMe drive backplane and system board for onboard configuration with one processor (Gen 4)

Backplane	From	To
Front BP (NVMe)	■ NVMe 0–1, NVMe 2–3	■ PCIe connectors 7, 8, and 9

4 x 2.5" NVMe backplane (Gen 5)

Use this section to understand the NVMe backplane (Gen 5) cable routing for server model with four 2.5" front drives.

To connect power cables for a backplane for standard 2.5" or 3.5" drives, refer to [“Backplane power cable routing” on page 207](#).

To connect cables for intrusion switch, refer to [“Intrusion switch” on page 216](#).

Cable routing for onboard configuration with one processor

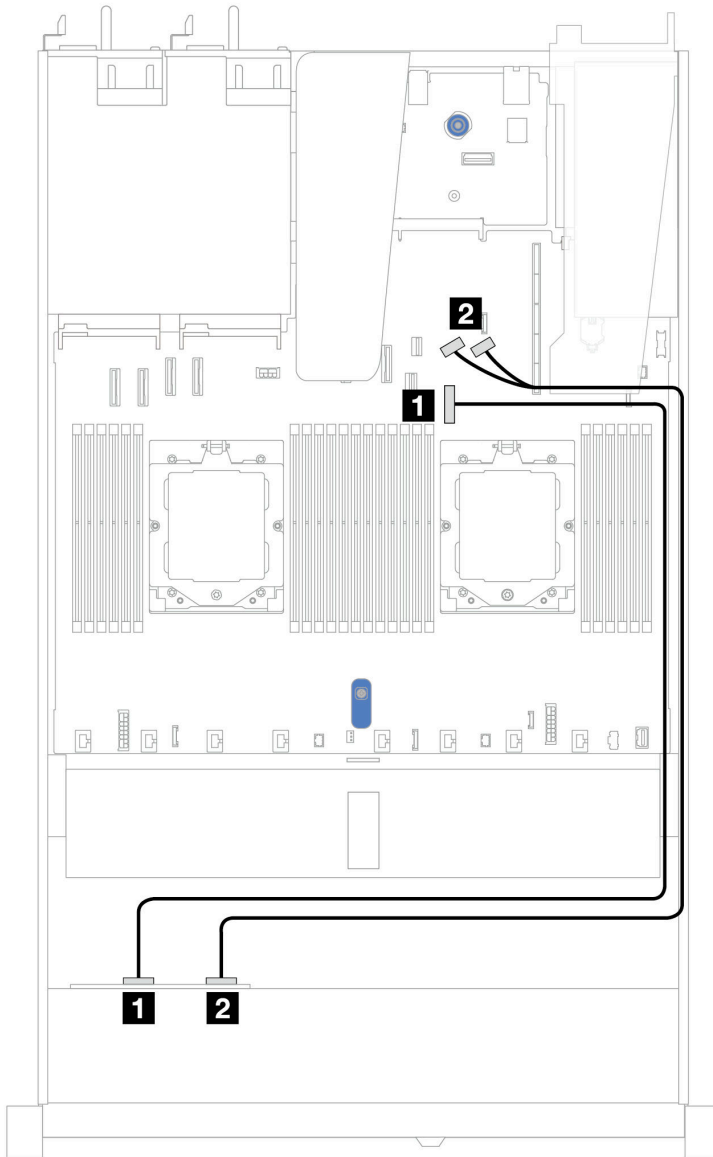


Figure 273. Mapping between 4 x 2.5" front NVMe drive backplane and system board for onboard configuration with one processor (Gen 5)

Table 34. Mapping between 4 x 2.5" front NVMe drive backplane and system board for onboard configuration with one processor (Gen 5)

Backplane	From	To
Front BP (NVMe)	1 NVMe 0-1	1 PCIe connector 7
	2 NVMe 2-3	1 PCIe connectors 8 and 9

8 x 2.5" front drives (one processor)

Use the section to understand the cable routing for signal cable connections for 8 x 2.5" front drive backplanes when one processor installed.

8 x 2.5" SAS/SATA backplane

Use this section to understand the SAS/SATA backplane cable routing for server model with eight 2.5" front drives.

To connect power cables for a backplane for standard 2.5" or 3.5" drives, refer to [“Backplane power cable routing” on page 207](#).

To connect cables for M.2 drive backplane, refer to [“M.2 drive backplane” on page 218](#).

To connector cables of RAID flash power modules, refer to [“RAID flash power modules” on page 224](#).

To connect intrusion switch cable, refer to [“Intrusion switch” on page 216](#).

To connect power cable for CFF RAID adapter, refer to [“CFF RAID adapter” on page 210](#).

To connect signal cables for a backplane for standard 8 x 2.5" front drives, refer to the following cable routing scenarios depending on your server configuration:

- [“Cable routing for onboard configuration” on page 274](#)
- [“Cable routing with an SFF HBA/RAID adapter” on page 275](#)
- [“Cable routing with a CFF RAID adapter” on page 276](#)

Cable routing for onboard configuration

The following illustrations and tables show the mapping relationship between backplane connectors and system board connectors for onboard configuration.

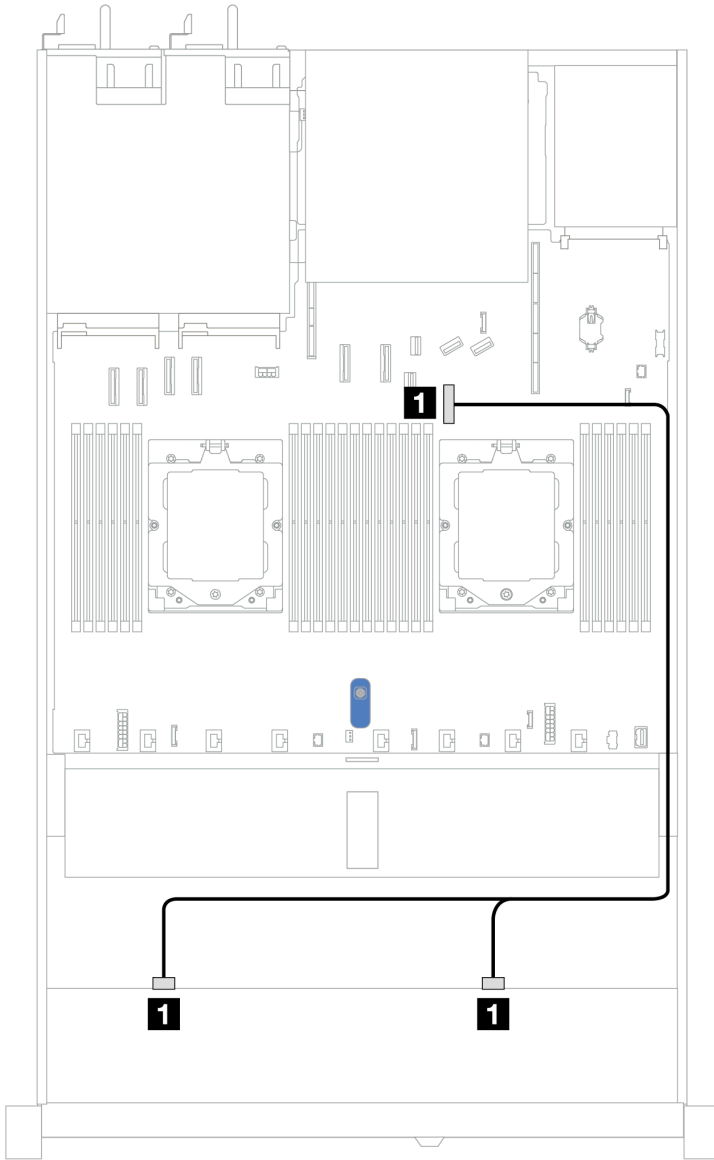


Figure 274. Cable routing for onboard configuration of 8 x 2.5 SAS/SATA front drives

Table 35. Cable routing for onboard configuration of 8 x 2.5 SAS/SATA front drives

Backplane	From	To
Front BP (SAS)	1 SAS 0, SAS 1	1 PCIe connector 7

Cable routing with an SFF HBA/RAID adapter

The following illustrations and tables show the mapping relationship between backplane connectors and an 8i or 16i SFF HBA/RAID adapter (Gen 3 or Gen 4).

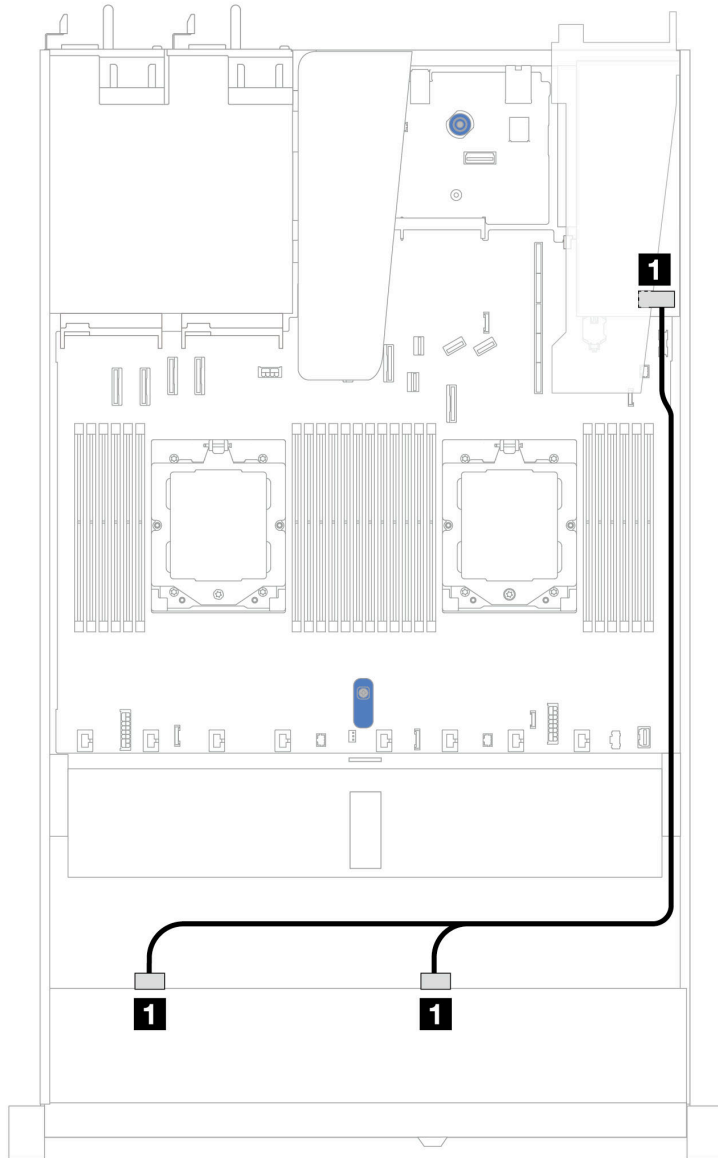


Figure 275. Cable routing for 8 x 2.5" front SAS/SATA drive bays with an 8i or 16i SFF RAID adapter (Gen 3 or Gen 4)

Table 36. Mapping between one front SAS/SATA backplane and an SFF HBA/RAID adapter

Backplane	From	To
Front BP (SAS)	1 SAS 0, SAS 1	1 <ul style="list-style-type: none"> • Gen 3: C0, C1 • Gen 4: C0

Cable routing with a CFF RAID adapter

The following illustration and table show the mapping relationship between backplane connectors and an 8i or 16i CFF RAID adapter (Gen 3 or Gen 4).

Note: The following illustration is for Gen 4 adapters. For Gen 3 adapters, the illustration might be slightly different.

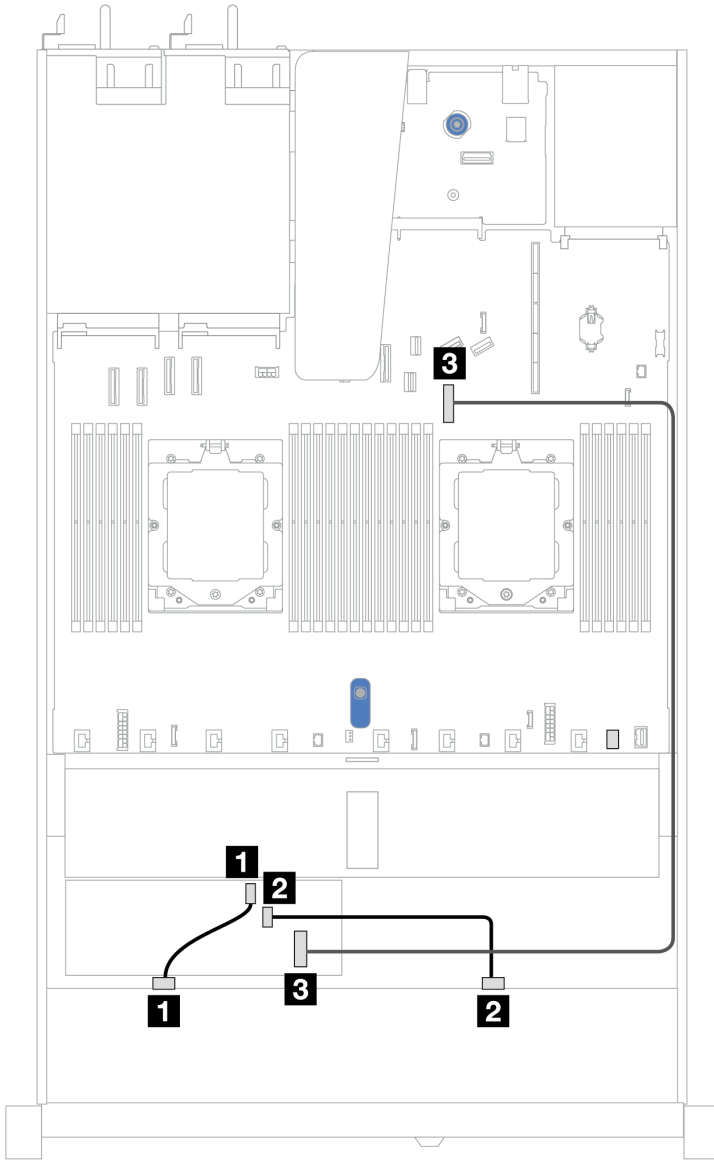


Figure 276. Cable routing for 8 x 2.5" front SAS/SATA drive bays with an 8i or 16i CFF RAID adapter (Gen 3 or Gen 4)

Table 37. Mapping between one front SAS/SATA backplane and a CFF RAID adapter

Backplane/adaptor	From	To
Front BP (SAS)	1 SAS 0	1 C0
	2 SAS 1	2 C1
CFF RAID adapter	3 MB input	3 PCIe connector 7

10 x 2.5" front drives (one processor)

Use the section to understand the cable routing for signal cable connections for 10 x 2.5" front drive backplanes when one processor installed.

6 x 2.5" SAS/SATA + 4 x 2.5" AnyBay backplane

See this section to understand the cable routing of 6 front SAS/SATA drives and 4 front AnyBay drives with 10 x 2.5" backplane (Gen 4) installed.

To connect power cables for a backplane for standard 2.5" or 3.5" drives, refer to [“Backplane power cable routing” on page 207](#).

To connector cables of RAID flash power modules, refer to [“RAID flash power modules” on page 224](#).

To connect signal cables, refer to the following cable routing scenario:

- [“Cable routing with an SFF HBA/RAID adapter” on page 278](#)

Cable routing with an SFF HBA/RAID adapter

The following tables show the mapping relationship between backplane connectors and a 16i SFF HBA/RAID adapter (Gen 3 or Gen 4).

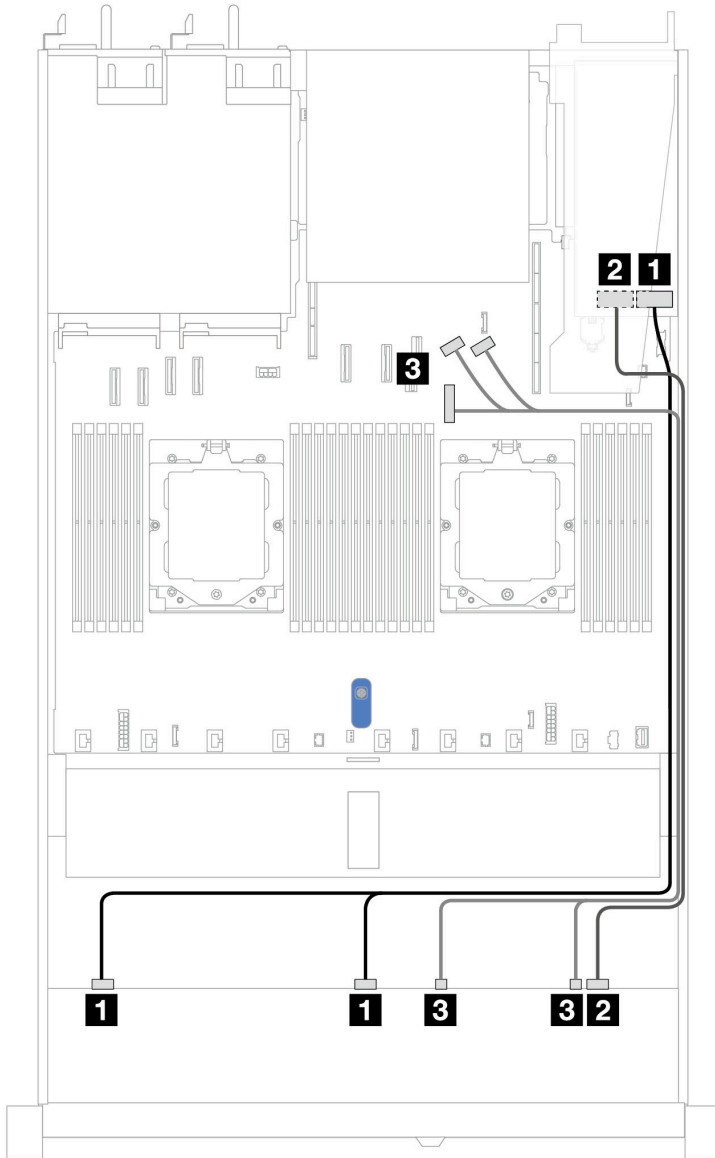


Figure 277. Cable routing for 6 front SAS/SATA drives and 4 front AnyBay drives bays with a 16i SFF RAID adapter (Gen 3 or Gen 4)

Table 38. Mapping between one front AnyBay backplane and an SFF HBA/RAID adapter

Backplane	From	To
Front BP (SAS)	1 SAS 0, SAS 1	1 <ul style="list-style-type: none"> • Gen 3: C0, C1 • Gen 4: C0
	2 SAS 2	2 <ul style="list-style-type: none"> • Gen 3: C2 • Gen 4: C1
Front BP (NVMe)	3 NVMe 0–1, 2–3	3 PCIe connector 7, 8, 9

6 x 2.5" SAS/SATA + 2 x 2.5" AnyBay + 2 x 2.5" NVMe backplane

See this section to understand the cable routing of 6 front SAS/SATA drives, 2 front AnyBay drives and 2 front NVMe drives.

To connect power cables for a backplane for standard 2.5" or 3.5" drives, refer to [“Backplane power cable routing” on page 207](#).

To connector cables of RAID flash power modules, refer to [“RAID flash power modules” on page 224](#).

To connect the signal cables, refer to the following cable routing scenario:

- [“Cable routing with an SFF HBA/RAID adapter” on page 280](#)

Cable routing with an SFF HBA/RAID adapter

The following tables show the mapping relationship between backplane connectors and an SFF HBA/RAID adapter.

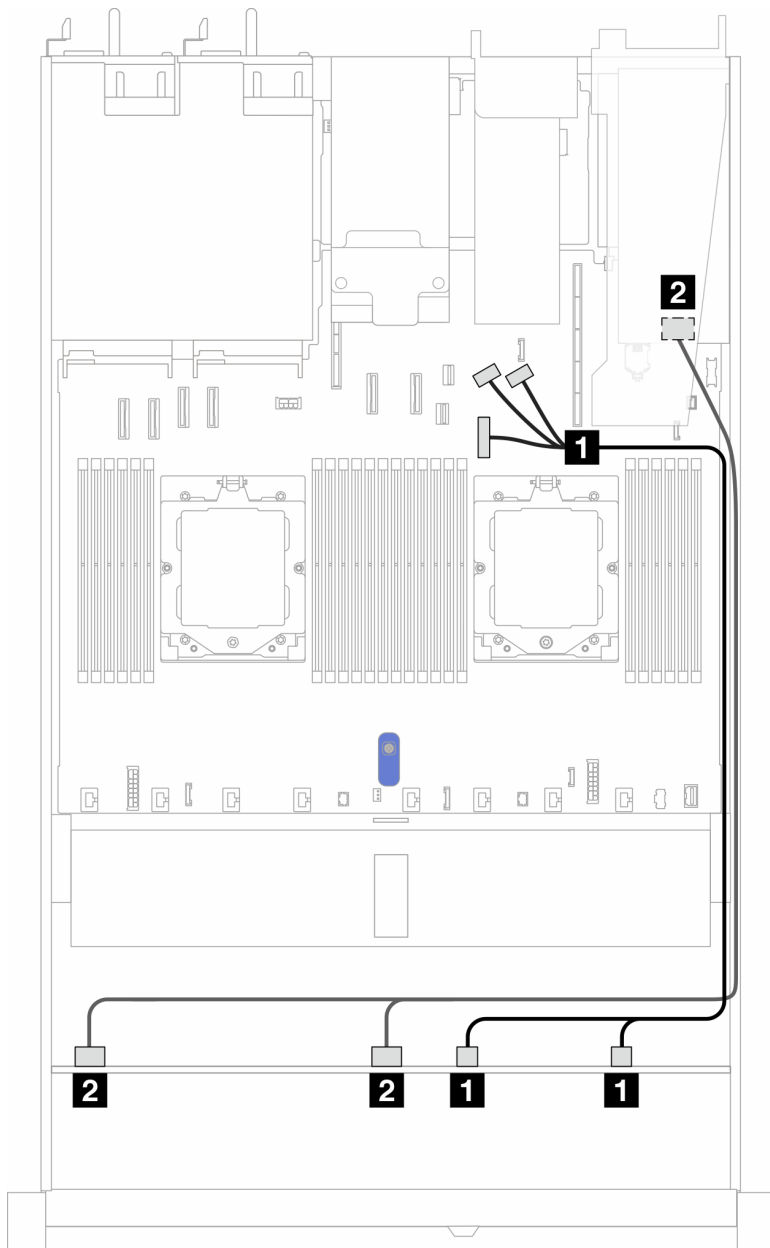


Figure 278. Cable routing for 6 SAS/SATA drives, 2 AnyBay drives, and 2 NVMe drive bays with an 8i SFF RAID/HBA adapter (Gen3 or Gen 4)

Table 39. Mapping between one front AnyBay backplane and an SFF HBA/RAID adapter

Backplane	From	To
Front BP (NVMe)	1 NVMe 0-1, NVMe 2-3	1 PCIe connectors 7, 8, and 9
Front BP (SAS)	2 SAS 0, SAS 1	2 <ul style="list-style-type: none"> • Gen 3: C0, C1 • Gen 4: C0

8 x 2.5"/10 x 2.5" U.3 drives with 10 x 2.5" AnyBay backplane

Use this section to understand the cable routing for eight or ten U.3 drives with 10 x 2.5" AnyBay backplane and one processor installed.

To connect power cables for a backplane for standard 2.5" or 3.5" drives, refer to [“Backplane power cable routing” on page 207](#).

To connector cables of RAID flash power modules, refer to [“RAID flash power modules” on page 224](#).

To connect signal cables for a backplane for standard 6 front SAS/SATA drives and 4 front AnyBay drives, refer to the following cable routing scenarios depending on your server configuration:

- [“Cable routing with an SFF HBA/RAID adapter” on page 282](#)

Cable routing with an SFF HBA/RAID adapter

The following illustrations and tables show the mapping relationship between backplane connectors and an 8i or 16i SFF RAID adapter (Gen 4).

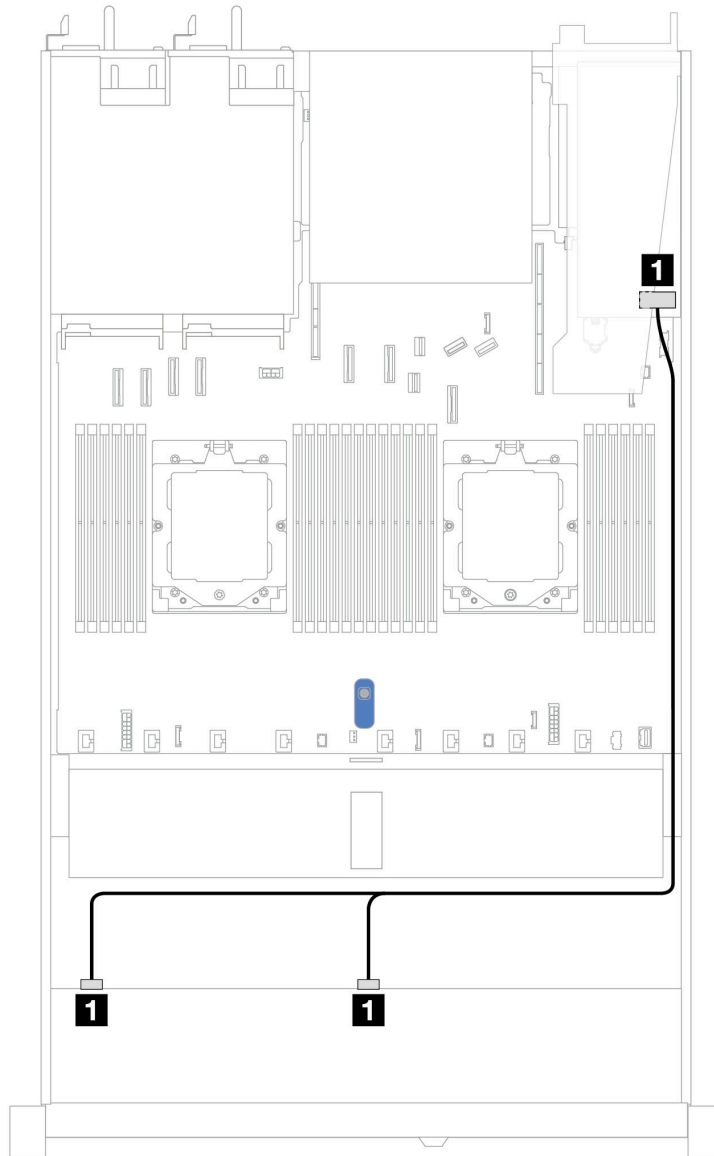


Figure 279. Cable routing for 8 x 2.5" front U.3 drives with an 8i SFF RAID adapter (Gen 4)

Table 40. Mapping between one front AnyBay backplane and an SFF HBA/RAID adapter

Backplane	From	To
Front BP (SAS)	1 SAS 0, SAS 1	1 C0

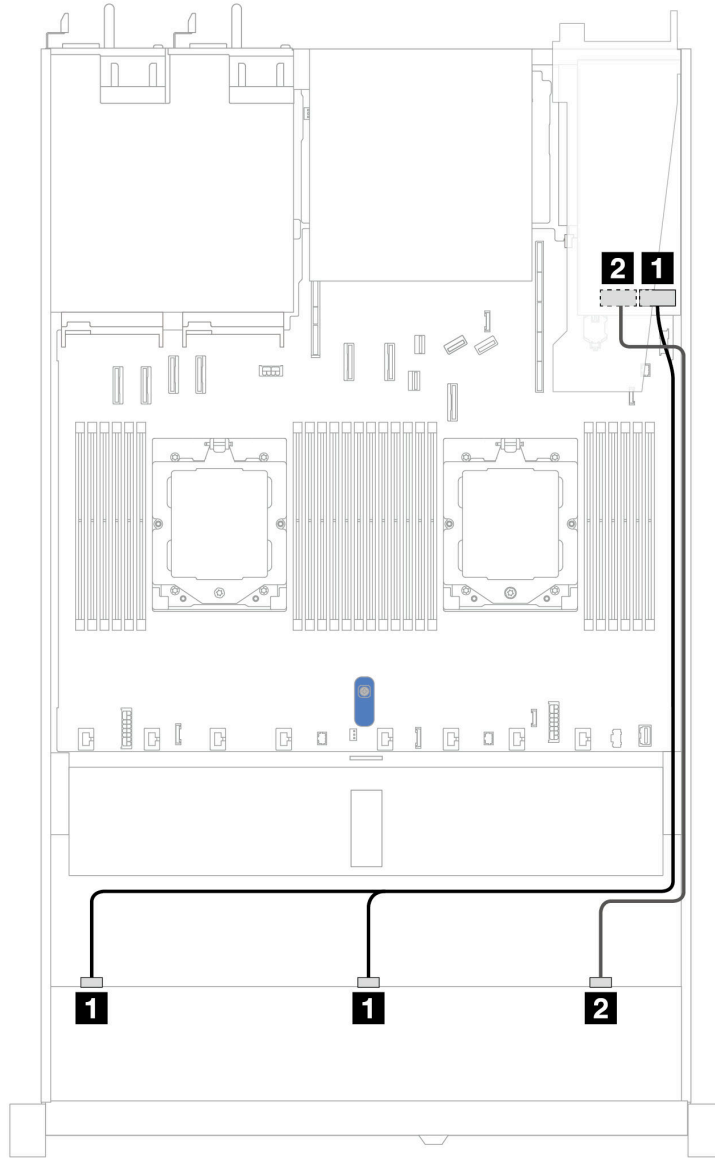


Figure 280. Cable routing for 10 x 2.5" front U.3 drives with an 16i SFF RAID adapter (Gen 4)

Table 41. Mapping between one front AnyBay backplane and an SFF HBA/RAID adapter

Backplane	From	To
Front BP (SAS)	1 SAS 0, SAS 1	1 C0
	2 SAS 2	2 C1

10 x 2.5" SAS/SATA backplane

See this section to understand the cable routing of 10 front SAS/SATA drives with the 10 x 2.5 AnyBay backplane (Gen 4) installed.

To connect power cables for a backplane for standard 2.5" or 3.5" drives, refer to [“Backplane power cable routing” on page 207](#).

To connector cables of RAID flash power modules, refer to [“RAID flash power modules” on page 224](#).

To connect cables for a CFF RAID adapter, refer to [“CFF RAID adapter” on page 210](#)

To connect signal cables, refer to the following cable routing scenarios:

- [“Cable routing for onboard configuration” on page 284](#)
- [“Cable routing with an SFF HBA/RAID adapter” on page 285](#)
- [“Cable routing with a CFF RAID adapter” on page 288](#)

Cable routing for onboard configuration

The following illustrations and tables show the mapping relationship between backplane connectors and system board connectors for onboard configuration.

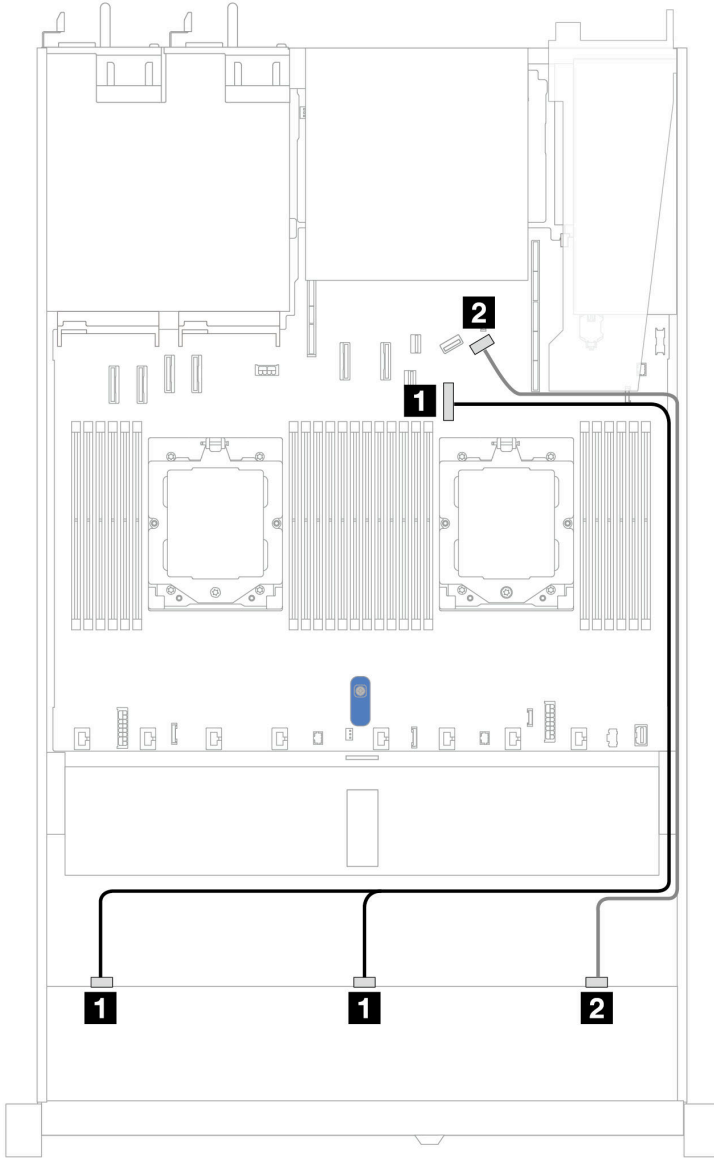


Figure 281. Cable routing for onboard configuration of 10 x 2.5 SAS/SATA front drives

Table 42. Mapping between one front AnyBay backplane and system board for onboard configuration

Backplane	From	To
Front BP (SAS)	1 SAS 0, SAS 1	1 PCIe connector 7
	2 SAS 2	2 PCIe connector 9

Cable routing with an SFF HBA/RAID adapter

The following tables show the mapping relationship between backplane connectors and a 16i SFF HBA/RAID adapter (Gen 3 or Gen 4).

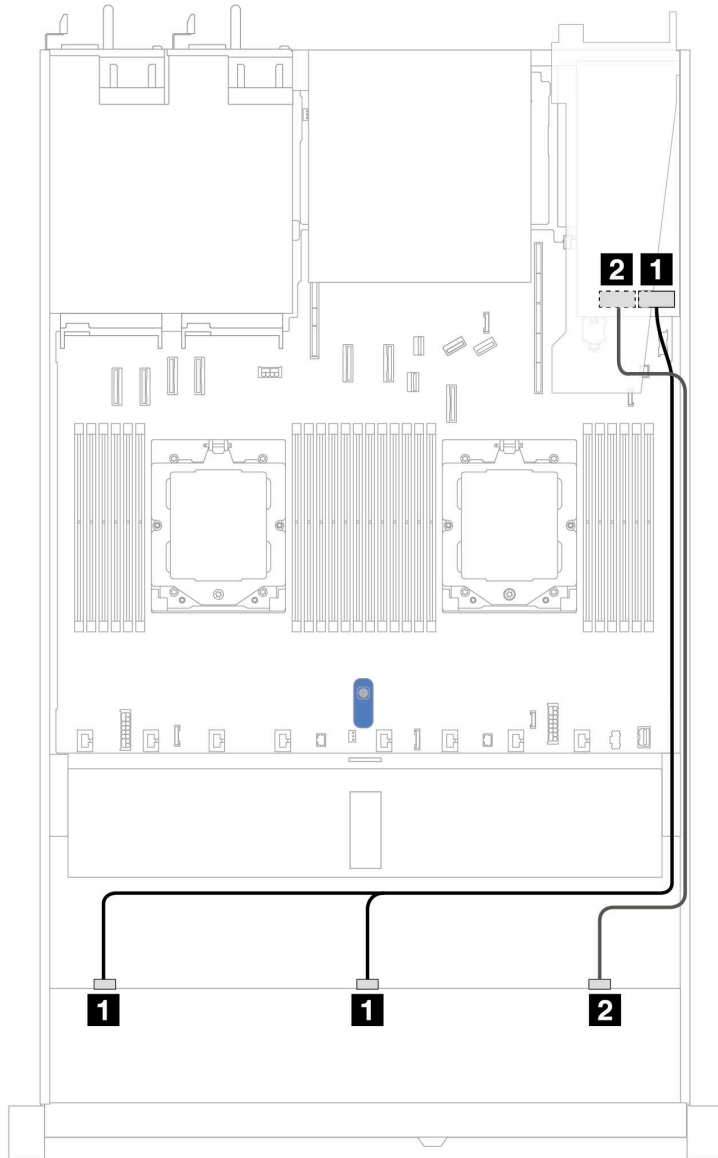


Figure 282. Cable routing for 10 front SAS/SATA drives bays with a 16i SFF RAID adapter (Gen 3 or Gen 4)

Table 43. Mapping between one front AnyBay backplane and an SFF HBA/RAID adapter

Backplane	From	To
Front BP (SAS)	1 SAS 0, SAS 1	1 <ul style="list-style-type: none"> • Gen 3: C0, C1 • Gen 4: C0
	2 SAS 2	2 <ul style="list-style-type: none"> • Gen 3: C2 • Gen 4: C1

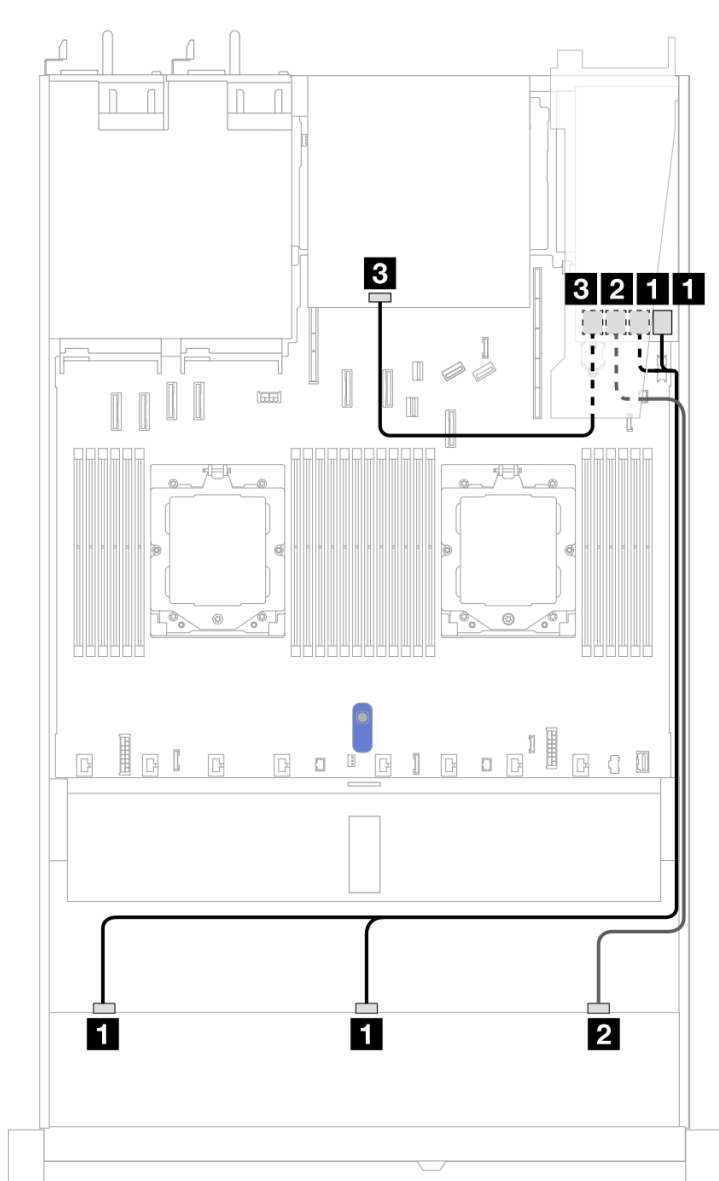


Figure 283. Cable routing for 10 front SAS/SATA drives bays and a 16i SFF RAID adapter (Gen 3) with 2 x 2.5 rear SAS/SATA drives installed

Table 44. Mapping between one front AnyBay and one rear SAS/SATA backplane and an SFF RAID adapter

Backplane/adapter	From	To
Front BP (SAS)	1 SAS 0, SAS 1	1 C0, C1
	2 SAS 2	2 C2
Rear BP (SAS)	3 SAS	3 C3

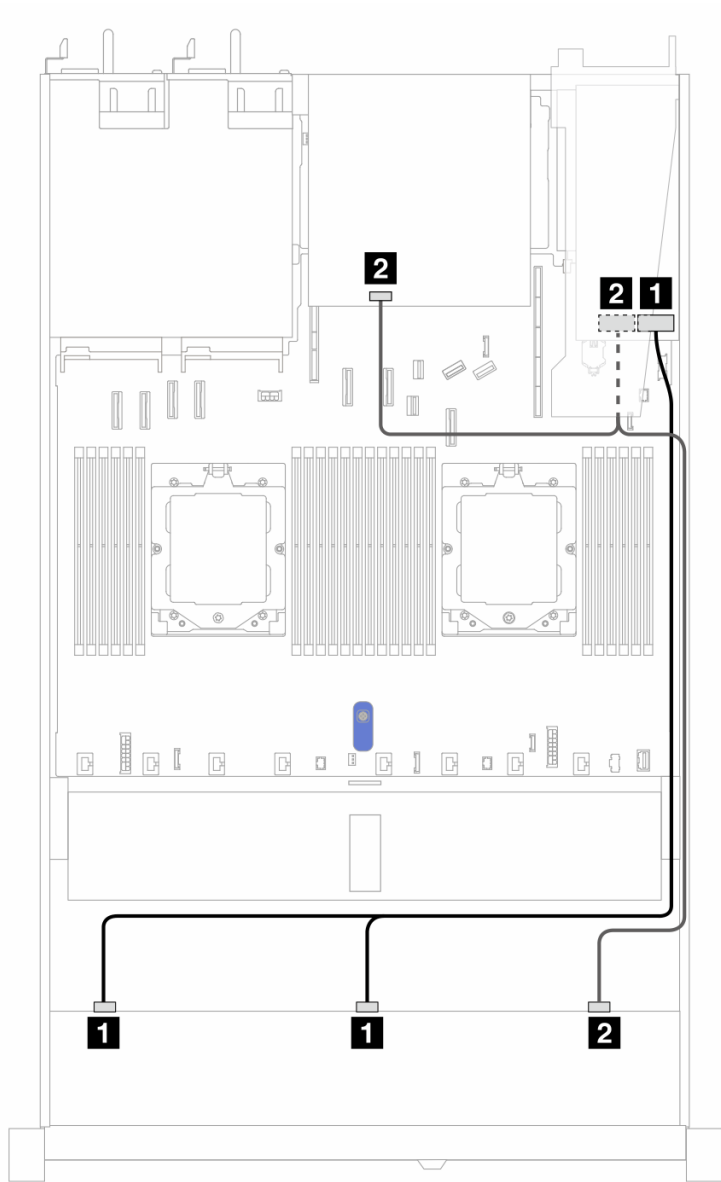


Figure 284. Cable routing for 10 front SAS/SATA drives bays and a 16i SFF RAID adapter (Gen 4) with 2 x 2.5 rear SAS/SATA drives installed

Table 45. Mapping between one front AnyBay and one rear SAS/SATA backplane and an SFF RAID adapter

Backplane/adapter	From	To
Front BP (SAS)	1 SAS 0, SAS 1	1 C0
	2 SAS 2	2 C1
Rear BP (SAS)	2 SAS	2 C1

Cable routing with a CFF RAID adapter

The following tables show the mapping relationship between backplane connectors and an 8i or 16i CFF RAID adapter (Gen 3 or Gen 4).

Note: The following illustrations are for Gen 4 adapters. For Gen 3 adapters, the illustration might be slightly different.

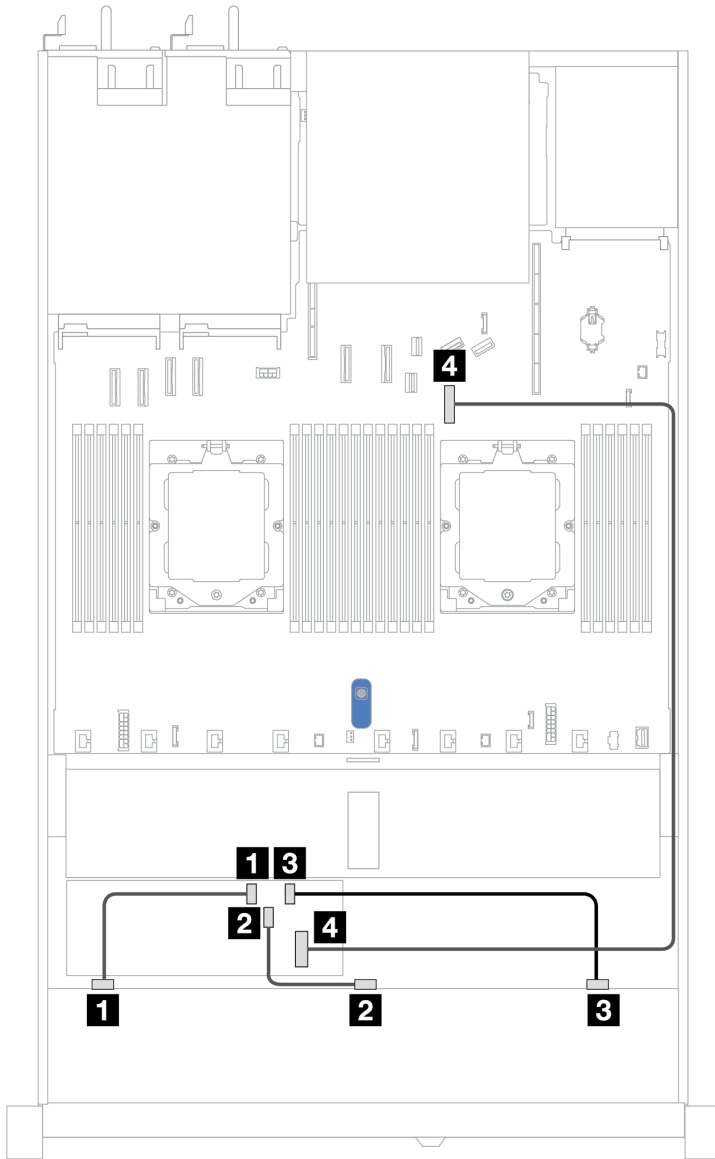


Figure 285. Cable routing for 10 front SAS/SATA drives bays with an 8i or 16i CFF RAID adapter (Gen 3 or Gen 4)

Table 46. Mapping between one front AnyBay and a CFF RAID adapter

Backplane	From	To
Front BP (SAS)	1 SAS 0	1 C0
	2 SAS 1	2 C1
	3 SAS 2	3 C2
CFF RAID adapter	4 MB input	4 PCIe connector 7

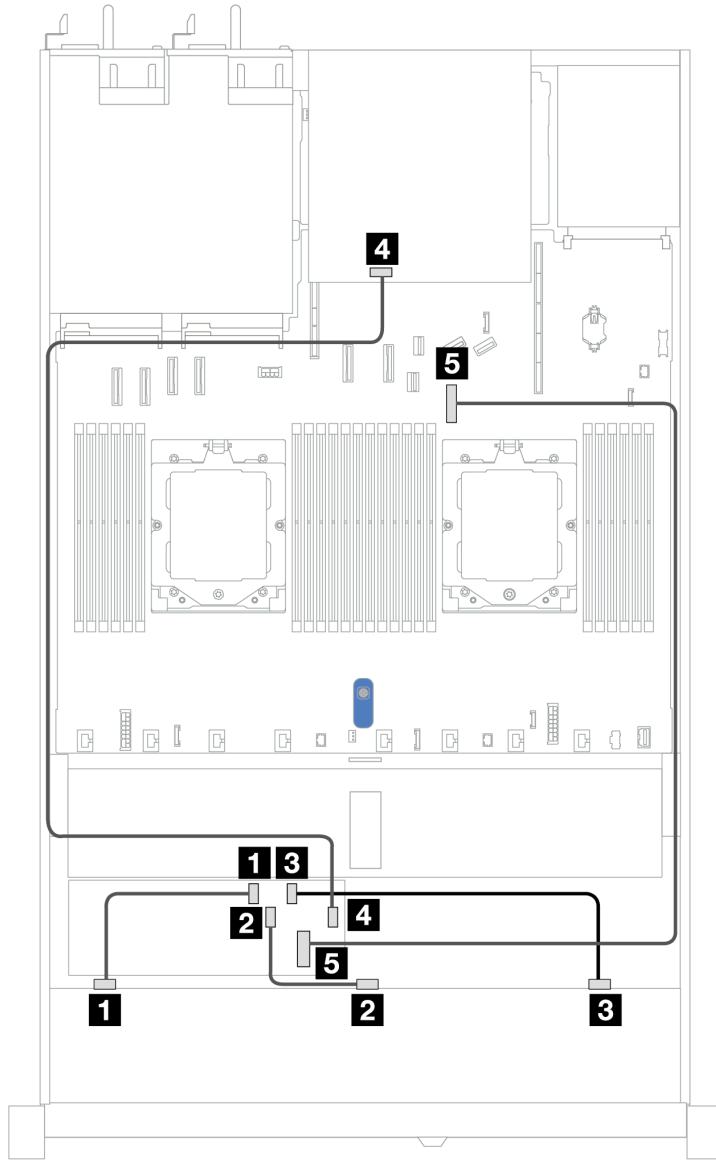


Figure 286. Cable routing for 10 front SAS/SATA drives bays and an 8i or 16i CFF RAID adapter (Gen 3 or Gen 4) with 2 x 2.5 rear SAS/SATA drives installed

Table 47. Mapping between one front AnyBay and one rear NVMe backplane and a CFF RAID adapter

Backplane/adapter	From	To
Front BP (SAS)	1 SAS 0	1 C0
	2 SAS 1	2 C1
	3 SAS 2	3 C2
Rear BP (SAS)	4 SAS	4 C3
CFF RAID adapter	5 MB input	5 PCIe connector 7

10 x 2.5 AnyBay backplane (Gen 5)

Use this section to understand the alternatives that a 10 x 2.5 AnyBay backplane (Gen 5) offers.

With a 10 x 2.5 AnyBay backplane (Gen 5), following front drive combinations are supported:

Note: M.2 SATA Non-RAID, M.2 X4 NVMe Non-RAID, and 7mm SATA Non-RAID configurations are not supported.

6 x 2.5" SAS/SATA + 4 x 2.5" AnyBay backplane

See this section to understand the cable routing of 6 front SAS/SATA drives and 4 front AnyBay drives with 10 x 2.5" backplane (Gen 5) installed.

To connect power cables for a backplane for standard 2.5" or 3.5" drives, refer to [“Backplane power cable routing” on page 207](#).

To connector cables of RAID flash power modules, refer to [“RAID flash power modules” on page 224](#).

To connect signal cables, refer to the following cable routing scenario:

- [“Cable routing with an SFF HBA/RAID adapter” on page 291](#)

Cable routing with an SFF HBA/RAID adapter

The following tables show the mapping relationship between backplane connectors and a 16i SFF HBA/RAID adapter (Gen 3 or Gen 4).

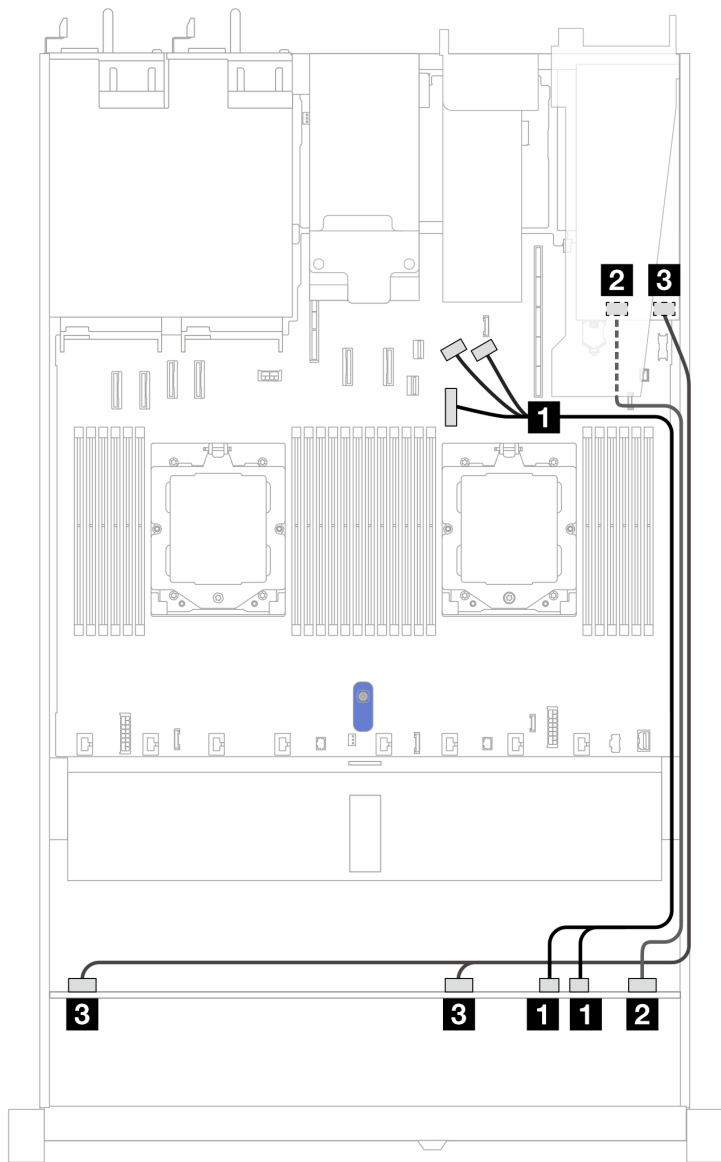


Figure 287. Cable routing for 6 front SAS/SATA drives and 4 front AnyBay drives bays with a 16i SFF RAID adapter (Gen 3 or Gen 4)

Table 48. Mapping between one front AnyBay backplane and an SFF HBA/RAID adapter

Backplane	From	To
Front BP (NVMe)	1 NVMe 6–7, 8–9	1 PCIe connectors 7, 8, 9
Front BP (SAS)	2 SAS 8–9	2 <ul style="list-style-type: none"> • Gen 3: C2 • Gen 4: C1
	3 SAS 0–3, 4–7	3 <ul style="list-style-type: none"> • Gen 3: C0, C1 • Gen 4: C0

6 x 2.5" SAS/SATA + 2 x 2.5" AnyBay + 2 x 2.5" NVMe backplane

See this section to understand the cable routing of 6 front SAS/SATA drives, 2 front AnyBay drives, and 2 front NVMe drives.

To connect power cables for a backplane for standard 2.5" or 3.5" drives, refer to [“Backplane power cable routing” on page 207](#).

To connector cables of RAID flash power modules, refer to [“RAID flash power modules” on page 224](#).

To connect the cables for rear NVMe/SAS/SATA drive backplane, refer to [“Rear NVMe/SAS/SATA drive backplane” on page 227](#).

To connect signal cables, refer to the following cable routing scenario:

- [“Cable routing with an SFF HBA/RAID adapter” on page 293](#)

Cable routing with an SFF HBA/RAID adapter

The following tables show the mapping relationship between backplane connectors and an 8i SFF HBA/RAID adapter.

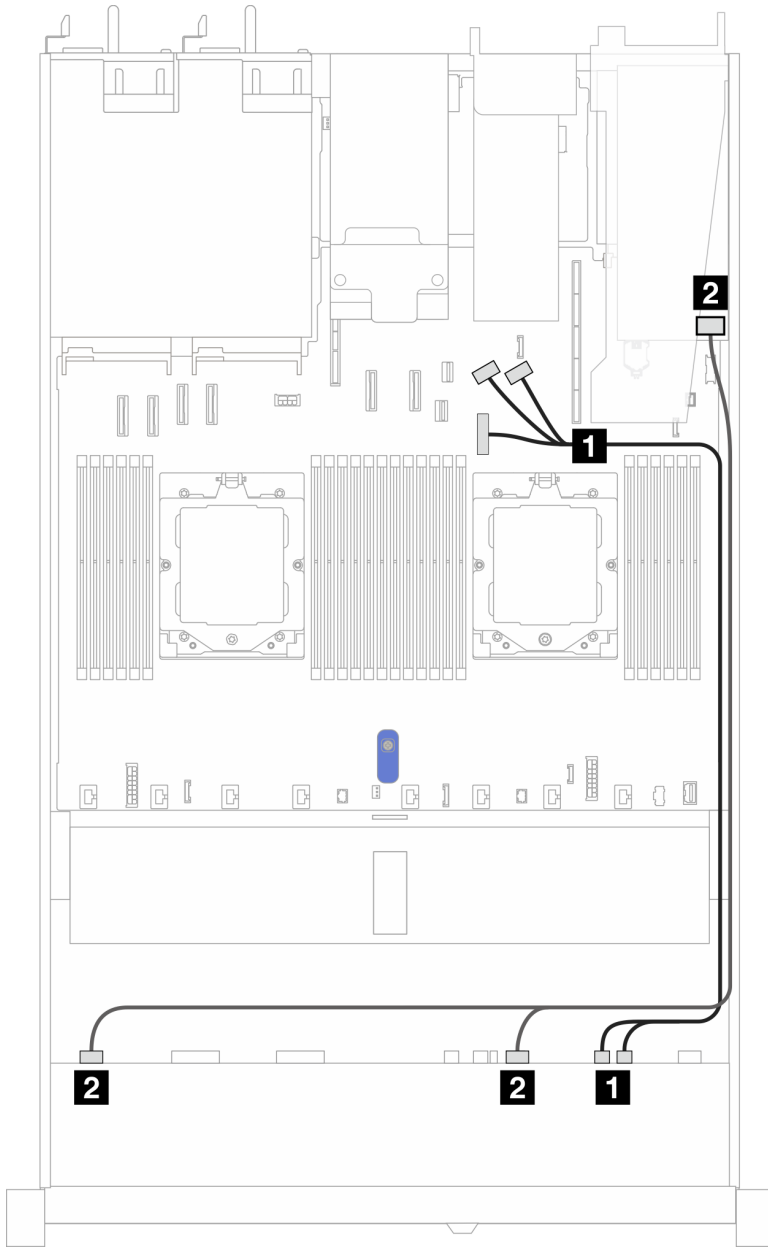


Figure 288. Cable routing with an 8i SFF HBA/RAID adapter

Table 49. Mapping between one front AnyBay backplane and an 8i SFF HBA/RAID adapter

Backplane	From	To
Front BP (NVMe)	1 NVMe 6–7, NVMe 8–9	1 PCIe connectors 7, 8, and 9
Front BP (SAS)	2 SAS 0–3, SAS 4–7	2 <ul style="list-style-type: none"> • Gen 3: C0, C1 • Gen 4: C0

Cable routing for backplane signals (two processors)

In this section, you can find cable routings of backplane signals when two processors installed.

- Each backplane your server supports offers multiple signal connections. This section singles out the signal connection from power connection for better understanding. For backplane power connection, see [“Backplane power cable routing” on page 207](#).
- For the locations of backplane signal connectors on the processor board and adapters, see [“System-board-assembly connectors” on page 367](#) for details.
- For more information about backplanes supported and their connectors, see [“Drive backplane connectors” on page 203](#).

4 x 3.5" front drives (two processors)

Use the section to understand the cable routing for signal cable connections for 4 x 3.5" drive backplanes.

Under the configuration of 4 x 3.5" front drives, your server supports the following front backplanes:

4 x 3.5" SAS/SATA backplane

Use this section to understand the SAS/SATA backplane cable routing for server model with four 3.5" front drives.

To connect cables for a rear NVMe/SAS/SATA drive backplane, refer to [“Rear NVMe/SAS/SATA drive backplane” on page 227](#).

To connect power cables for a backplane for standard 2.5" or 3.5" drives, refer to [“Backplane power cable routing” on page 207](#).

To connect cables for RAID flash power module, refer to [“RAID flash power modules” on page 224](#).

To connect signal cables for a SAS/SATA backplane for standard 4 x 3.5" front drives, refer to the following cable routing scenarios depending on your server configuration:

- [“Cable routing for onboard configuration” on page 296](#)
- [“Cable routing with an SFF HBA/RAID adapter” on page 297](#)

Cable routing for onboard configuration

The following table shows the mapping relationship between backplane connectors and system board connectors for onboard configuration.

The following figure illustrates the cable routing for the onboard configuration of 4 x 3.5" front SAS/SATA drive bays. Connections between connectors: **1** ↔ **1**, **2** ↔ **2**, **3** ↔ **3**, ... **n** ↔ **n**.

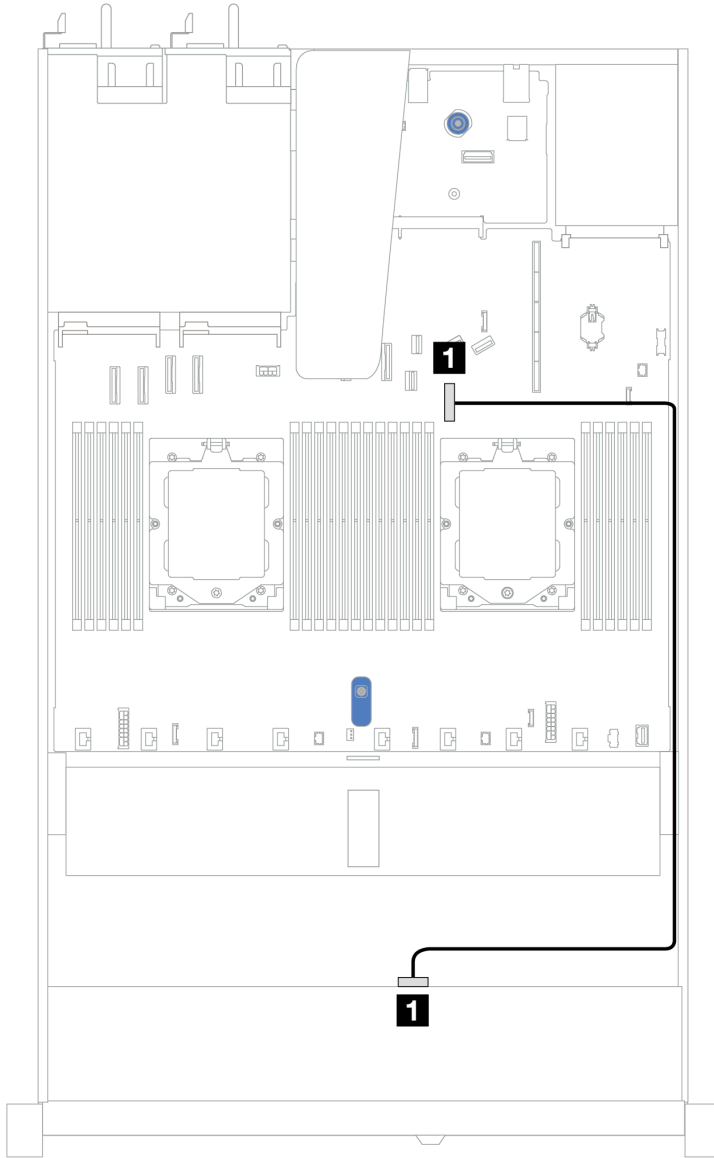


Figure 289. On-board configuration of 4 x 3.5" front SAS/SATA drive bays

Table 50. Cable routing for onboard configuration of 4 x 3.5" front SAS/SATA drive bays

Backplane	From	To
Front BP (SAS)	1 SAS	1 PCIe connector 7

Cable routing with an SFF HBA/RAID adapter

The following table shows the mapping relationship between backplane connectors and system board/adapter connectors when an 8i SFF HBA/RAID adapter (Gen 3 or Gen 4) is installed.

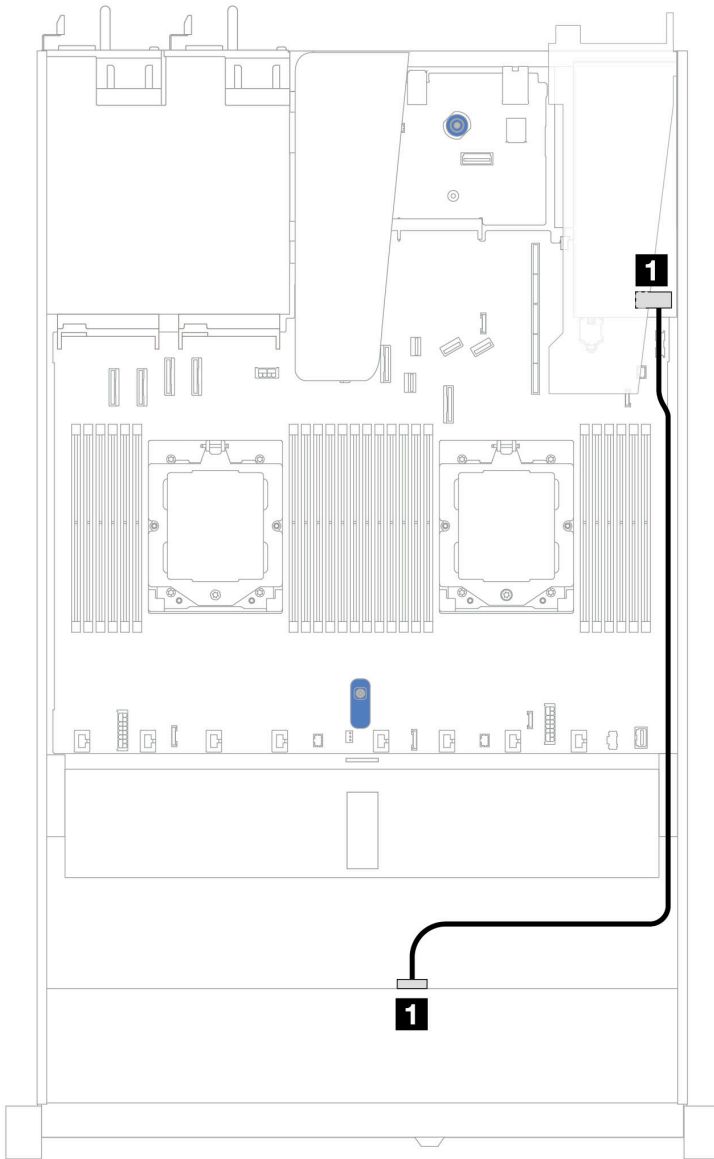


Figure 290. Cable routing for 4 x 3.5" front SAS/SATA drive bays with an 8i SFF RAID adapter (Gen 3 or Gen 4)

Table 51. Mapping between backplane connectors and system board/adapter connectors when an SFF HBA/RAID adapter is installed

Backplane	From	To
Front BP (SAS)	1 SAS	1 C0

Note: Gen 3 and Gen 4 SFF HBA/RAID adapters are slightly different in their connectors, but the cable routing method is similar.

The following table shows the mapping relationship between backplane connectors and system board/adapter connectors when an 8i SFF HBA/RAID adapter (Gen 3) is installed.

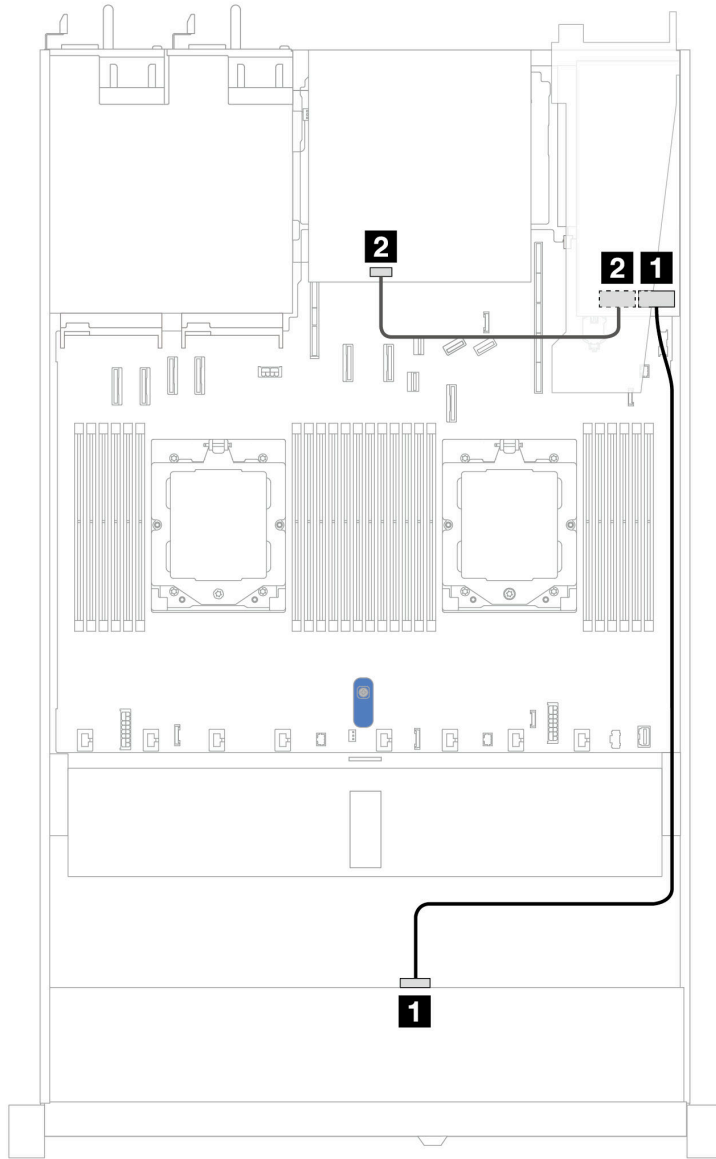


Figure 291. Cable routing for 4 x 3.5" front SAS/SATA drive bays with an 8i SFF RAID adapter (Gen 3) and rear 2 x 2.5-inch SAS/SATA drives

Table 52. Mapping between backplane connectors and system board/adapter connectors when an SFF HBA/RAID adapter is installed

Backplane	From	To
Front BP (SAS)	1 SAS	1 C0
Rear BP (SAS)	2 SAS	2 C1

The following table shows the mapping relationship between backplane connectors and system board/adapter connectors when an 8i SFF HBA/RAID adapter (Gen 4) is installed.

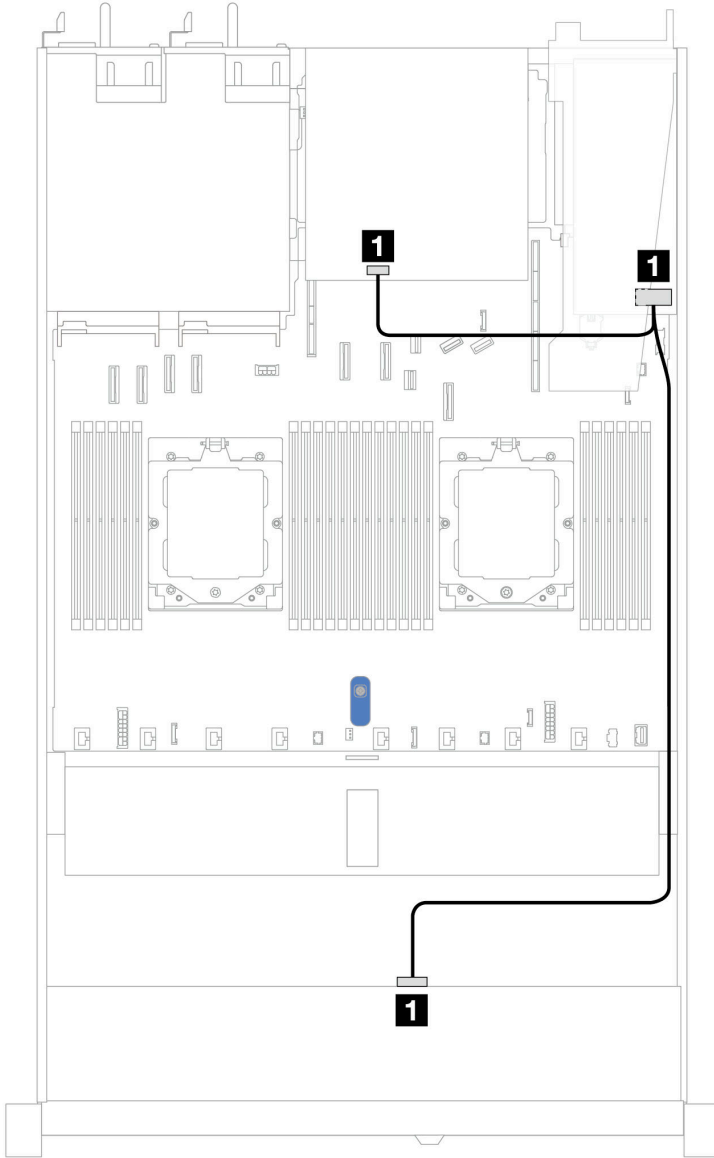


Figure 292. Cable routing for 4 x 3.5" front SAS/SATA drive bays with an 8i SFF RAID adapter (Gen 4) and rear 2 x 2.5-inch SAS/SATA drives

Table 53. Mapping between backplane connectors and system board/adapter connectors when an SFF HBA/RAID adapter is installed

Backplane	From	To
Front and Rear BP (SAS)	1 SAS	1 C0

4 x 3.5" AnyBay backplane

Use this section to understand the AnyBay backplane cable routing for server model with four 3.5" front drives.

To connect power cables for a backplane for standard 2.5" or 3.5" drives, refer to [“Backplane power cable routing” on page 207](#).

To connector cables of RAID flash power modules, refer to [“RAID flash power modules” on page 224](#).

To connect signal cables, refer to the following cable routing scenarios depending on your server configuration:

- [“Cable routing with an SFF HBA/RAID adapter” on page 300](#)

Cable routing with an SFF HBA/RAID adapter

The following table shows the mapping relationship between backplane connectors and system board/ adapter connectors when an 8i SFF HBA/RAID adapter (Gen 3 or Gen 4) is installed.

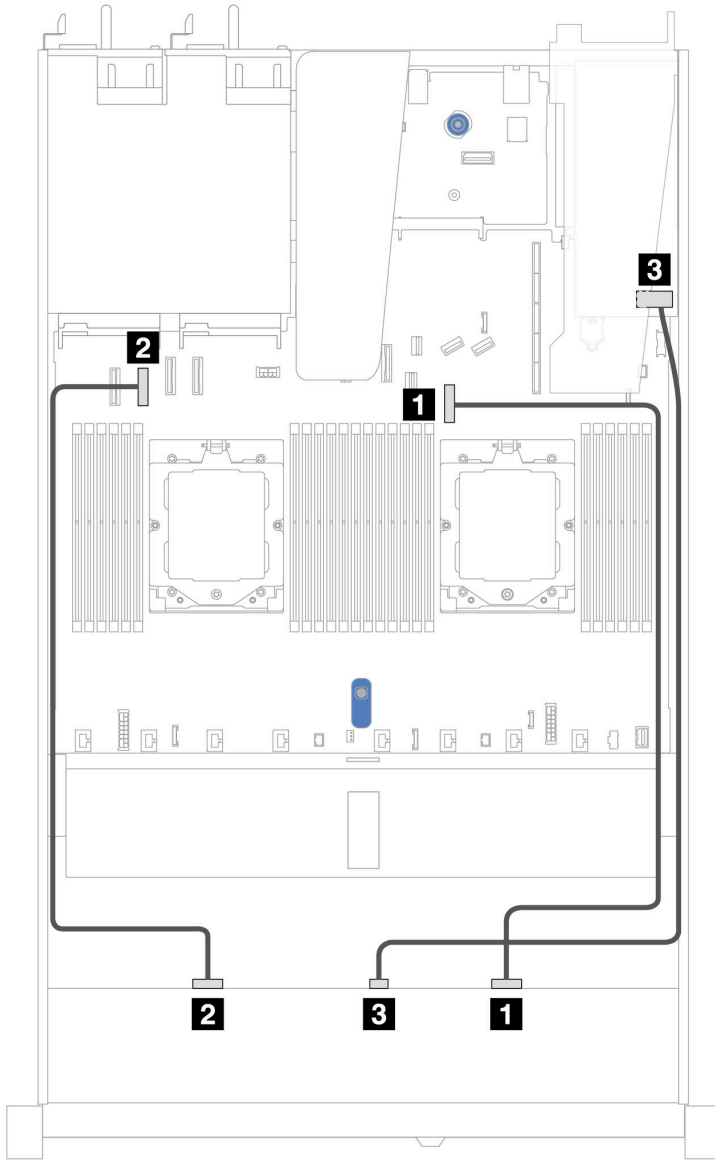


Figure 293. Cable routing for 4 x 3.5" front AnyBay drive bays with an 8i SFF RAID adapter (Gen 3 or Gen 4)

Table 54. Mapping between one front AnyBay backplane and an SFF RAID adapter

Backplane	From	To
Front BP(NVMe)	1 NVMe 2-3	1 PCIe connector 7
	2 NVMe 0-1	2 PCIe connector 2
Front BP(SAS)	3 SAS	3 C0

4 x 3.5" U.3 drives with 4 x 3.5" AnyBay backplane

Use this section to understand the cable routing for eight U.3 drives with 4 x 3.5" AnyBay backplane and two processors installed.

To connect power cables for a backplane for standard 2.5" or 3.5" drives, refer to [“Backplane power cable routing” on page 207](#).

To connector cables of RAID flash power modules, refer to [“RAID flash power modules” on page 224](#).

To connect the signal cable, refer to the following cable routing scenario:

- [“Cable routing with an SFF HBA/RAID adapter” on page 302](#)

Cable routing with an SFF HBA/RAID adapter

The following illustrations and tables show the mapping relationship between backplane connectors and an 8i or 16i SFF RAID adapter (Gen 4).

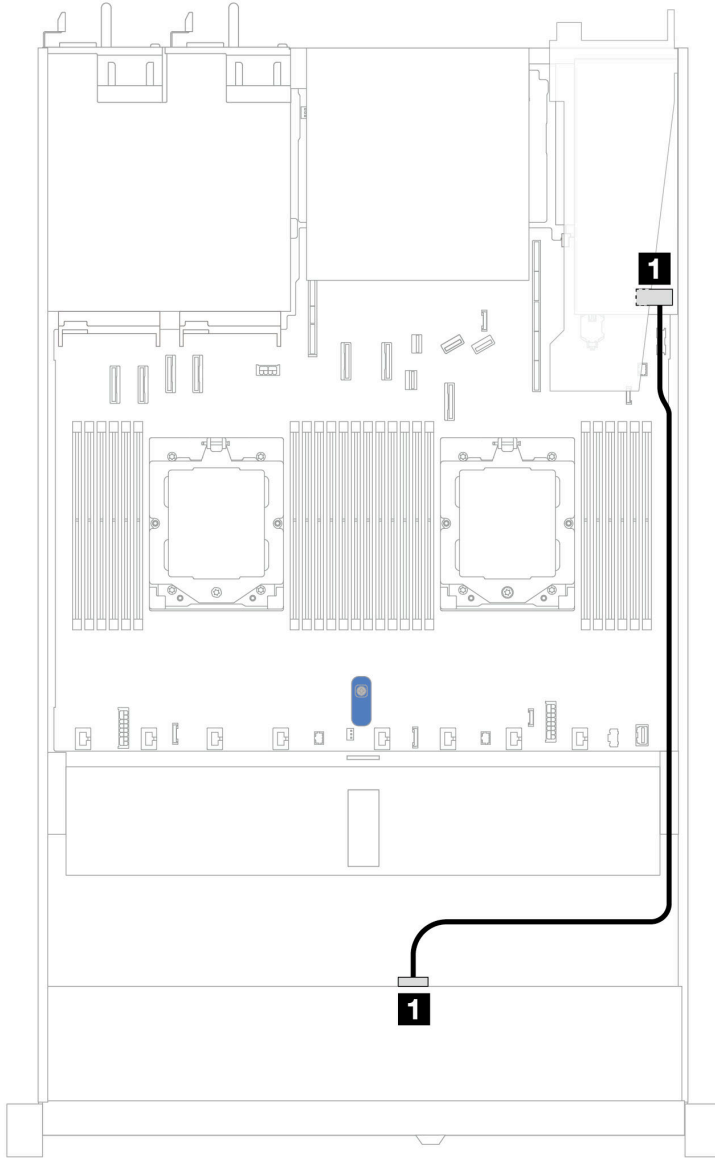


Figure 294. Cable routing for 4 x 3.5" front U.3 drives with an 8i SFF RAID adapter (Gen 4)

Table 55. Mapping between one front AnyBay backplane and an SFF HBA/RAID adapter

Backplane	From	To
Front BP (SAS)	1 SAS	1 C0

4 x 2.5" front drives (two processors)

Use the section to understand the cable routing for signal cable connections for 4 x 2.5" drive backplanes.

Under the configuration of 4 x 2.5" front drives, your server supports the following front backplanes:

4 x 2.5" SAS/SATA backplane

Use this section to understand the SAS/SATA backplane cable routing for server model with four 2.5" front drives.

To connect power cables for a backplane for standard 2.5" or 3.5" drives, refer to [“Backplane power cable routing” on page 207](#).

To connector cables of RAID flash power modules, refer to [“RAID flash power modules” on page 224](#).

To connect signal cables for a backplane for standard 4 x 2.5" front drives, refer to the following cable routing scenarios depending on your server configuration:

- [“Cable routing for onboard configuration” on page 305](#)
- [“Cable routing with an SFF HBA/RAID adapter” on page 306](#)

Cable routing for onboard configuration

The following table shows the mapping relationship between backplane connectors and system board connectors for onboard configuration.

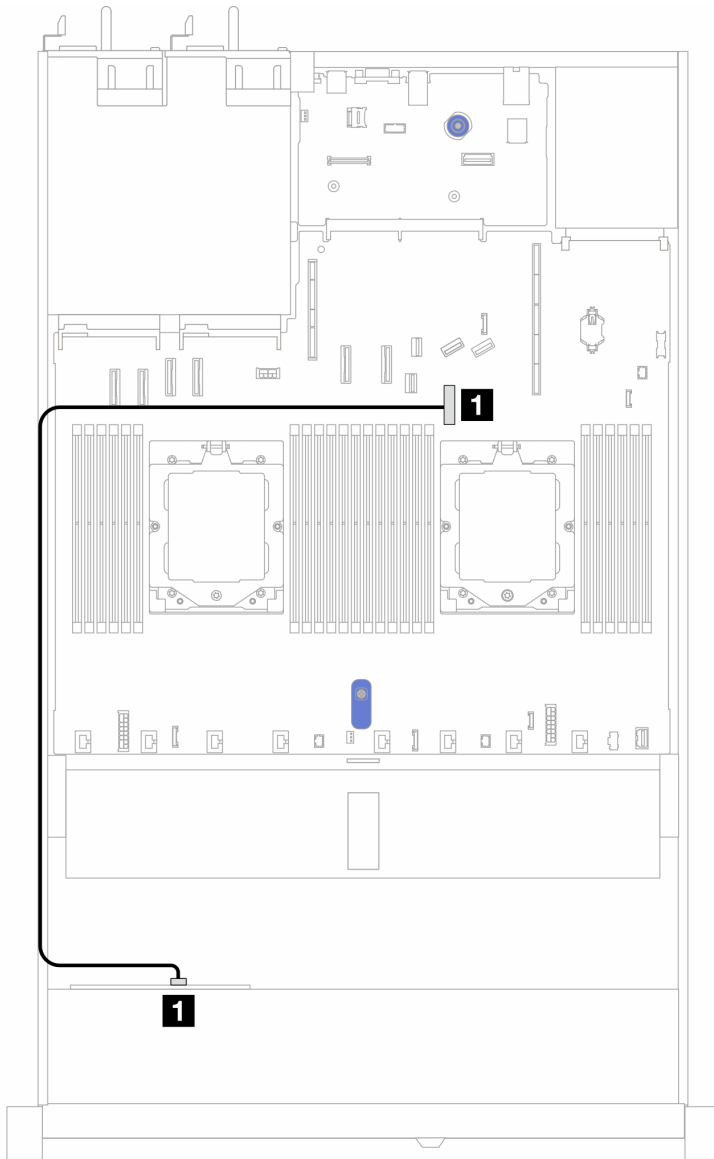


Figure 295. Cable routing for onboard configuration of 4 x 2.5" front SAS/SATA drive bays

Table 56. Mapping between backplane connectors and system board connectors for onboard configuration

Backplanes	From	To
Front BP (SAS)	SAS	PCIe connector 7

Cable routing with an SFF HBA/RAID adapter

The following table shows the mapping relationship between backplane connectors and system board/adapter connectors when an 8i SFF HBA/RAID adapter (Gen 3 or Gen 4) is installed.

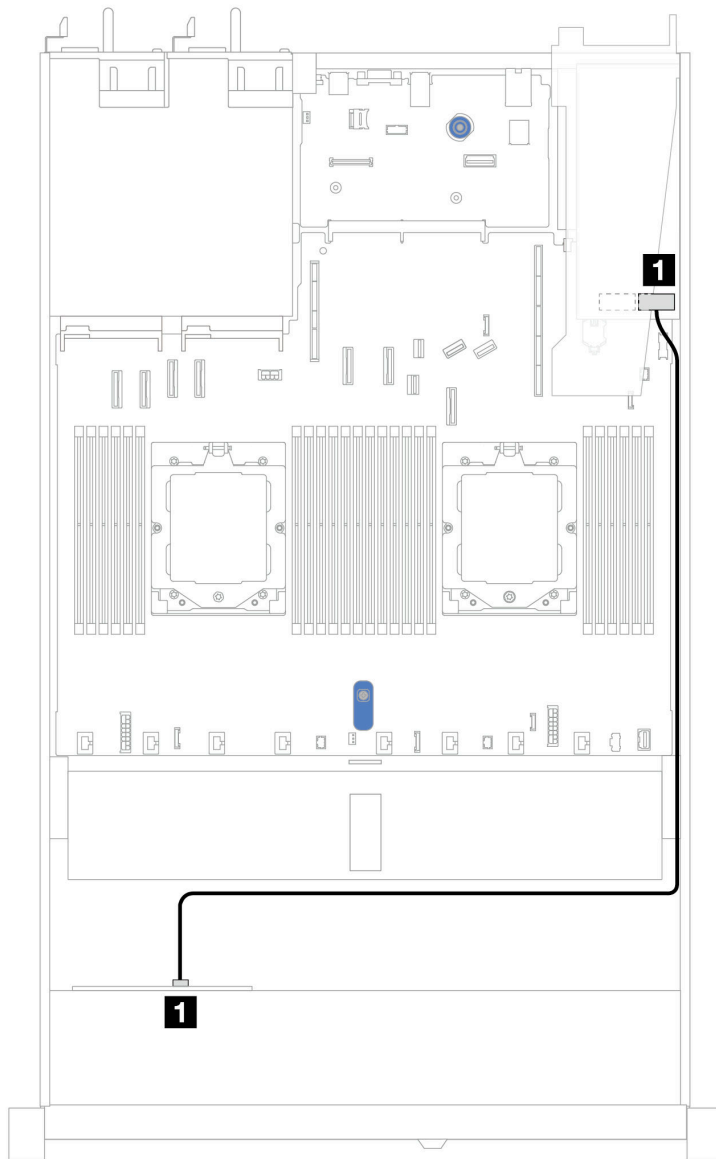


Figure 296. Cable routing for 4 x 2.5" front AnyBay drive bays with an 8i SFF RAID adapter (Gen 3 or Gen 4)

Table 57. Mapping between backplane and system board/adapter when an SFF HBA/RAID adapter is installed

Backplanes	From	To
Front BP (SAS)	1 SAS	1 C0

Note: Gen 3 and Gen 4 SFF HBA/RAID adapters are slightly different in their connectors, but the cable routing method is similar.

4 x 2.5" AnyBay backplane (Gen 5)

Use this section to understand the cable routing for 4 x 2.5" AnyBay backplane (Gen 5) with two processors installed.

To connect cables for backplane power, refer to [“Backplane power cable routing” on page 207](#)

To connector cables of RAID flash power modules, refer to [“RAID flash power modules” on page 224](#).

To connect cables for front riser assembly, refer to [“Front riser assembly” on page 212](#).

To connect cables for OCP interposer, refer to [“OCP interposer” on page 223](#).

To connect cables for rear 2 x 2.5" NVMe drive backplane, refer to [“Rear NVMe/SAS/SATA drive backplane” on page 227](#)

To connect signal cables for a backplane for standard 4 x 2.5" AnyBay front drives, refer to the following cable routing scenarios depending on your server configuration:

- [“Cable routing with an SFF HBA/RAID adapter” on page 307](#)
- [“Cable routing with an SFF HBA/RAID adapter and a rear 2 x 2.5 SAS/SATA backplane \(Gen 3 RAID adapter\)” on page 308](#)
- [“Cable routing with an SFF HBA/RAID adapter and a rear 2 x 2.5 SAS/SATA backplane \(Gen 4 RAID adapter\)” on page 310](#)

Cable routing with an SFF HBA/RAID adapter

The following illustrations and tables show the mapping relationship between backplane connectors and an 8i SFF RAID adapter (Gen 3 or Gen 4).

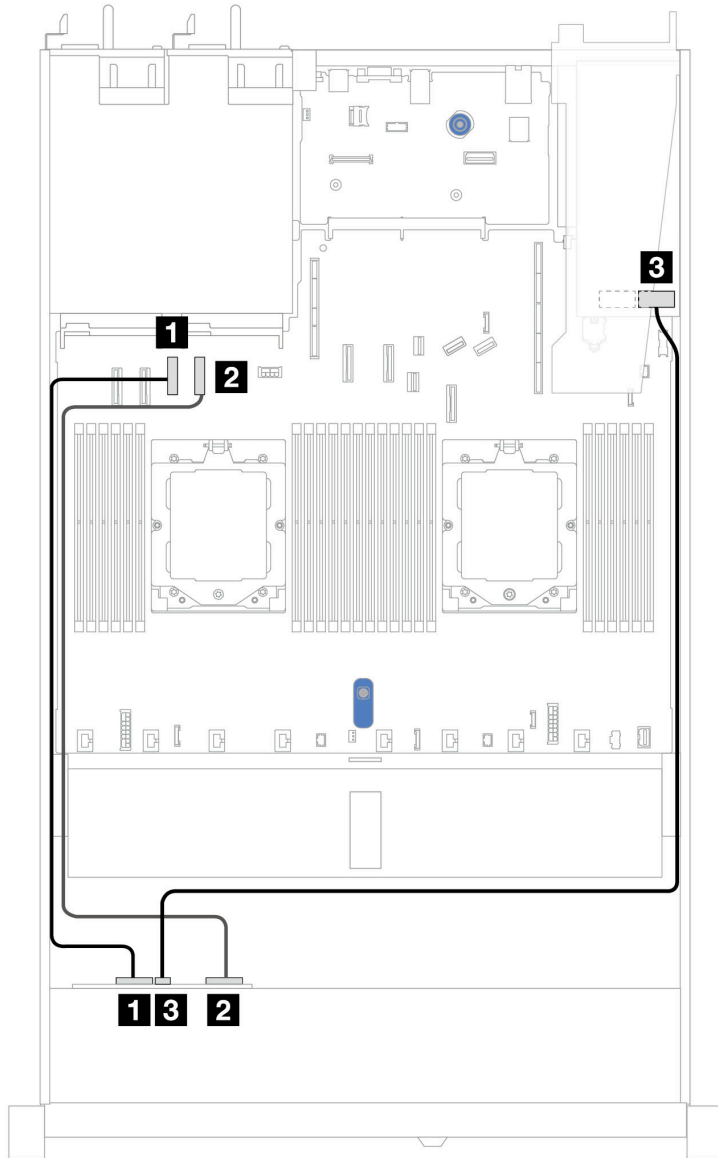


Figure 297. Cable routing for 4 x 2.5" AnyBay backplane drive with an 8i SFF RAID adapter (Gen 3 or Gen 4)

Table 58. Mapping between one front AnyBay backplane and an SFF HBA/RAID adapter (Gen 3 or Gen 4)

Backplane	From	To
Front BP (NVMe)	1 NVMe 0-1	1 PCIe connector 3
	2 NVMe 2-3	2 PCIe connector 4
Front BP (SAS)	3 SAS	3 C0

Cable routing with an SFF HBA/RAID adapter and a rear 2 x 2.5 SAS/SATA backplane (Gen 3 RAID adapter)

The following illustrations and tables show the mapping relationship between backplane connectors and an 8i SFF RAID adapter (Gen 3).

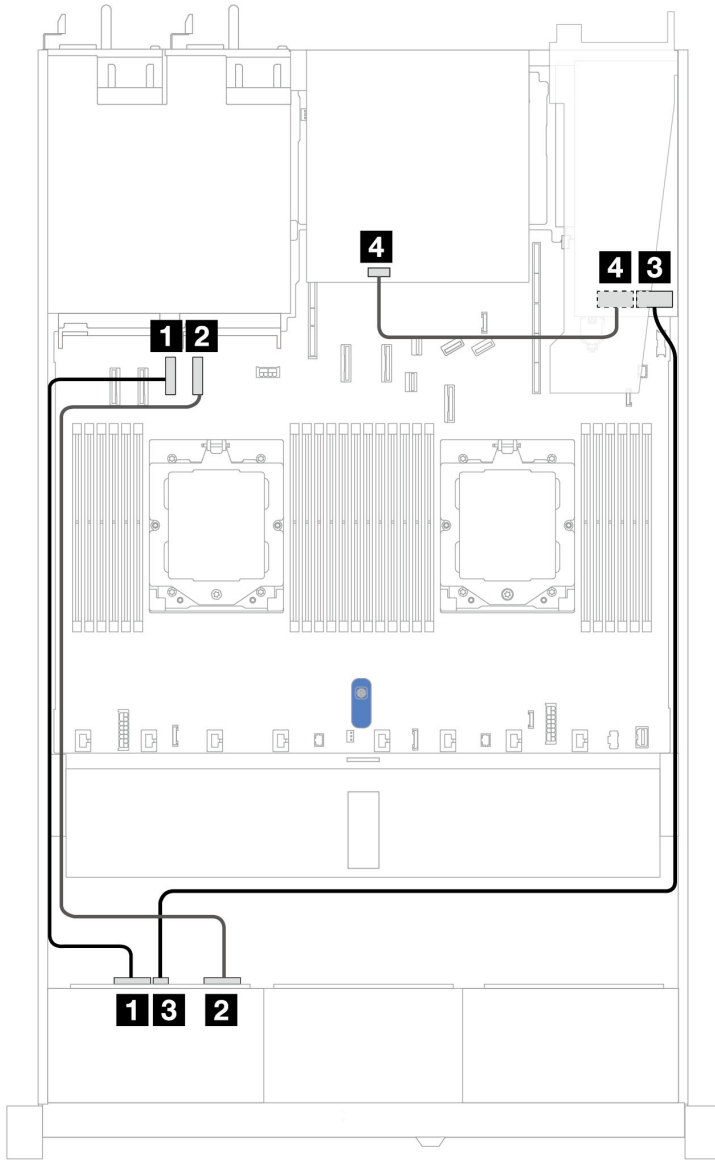


Figure 298. Cable routing for 4 x 2.5" AnyBay backplane drive with an 8i SFF RAID adapter (Gen 3) and a rear 2 x 2.5 SAS/SATA backplane

Table 59. Mapping between one front AnyBay backplane and an SFF HBA/RAID adapter (Gen 3)

Backplane	From	To
Front BP (NVMe)	1 NVMe 0-1	1 PCIe connector 3
	2 NVMe 2-3	2 PCIe connector 4
Front BP (SAS)	3 SAS	3 C0
Rear BP (SAS)	4 SAS	4 C1

Cable routing with an SFF HBA/RAID adapter and a rear 2 x 2.5 SAS/SATA backplane (Gen 4 RAID adapter)

The following illustrations and tables show the mapping relationship between backplane connectors and an 8i SFF RAID adapter (Gen 4).

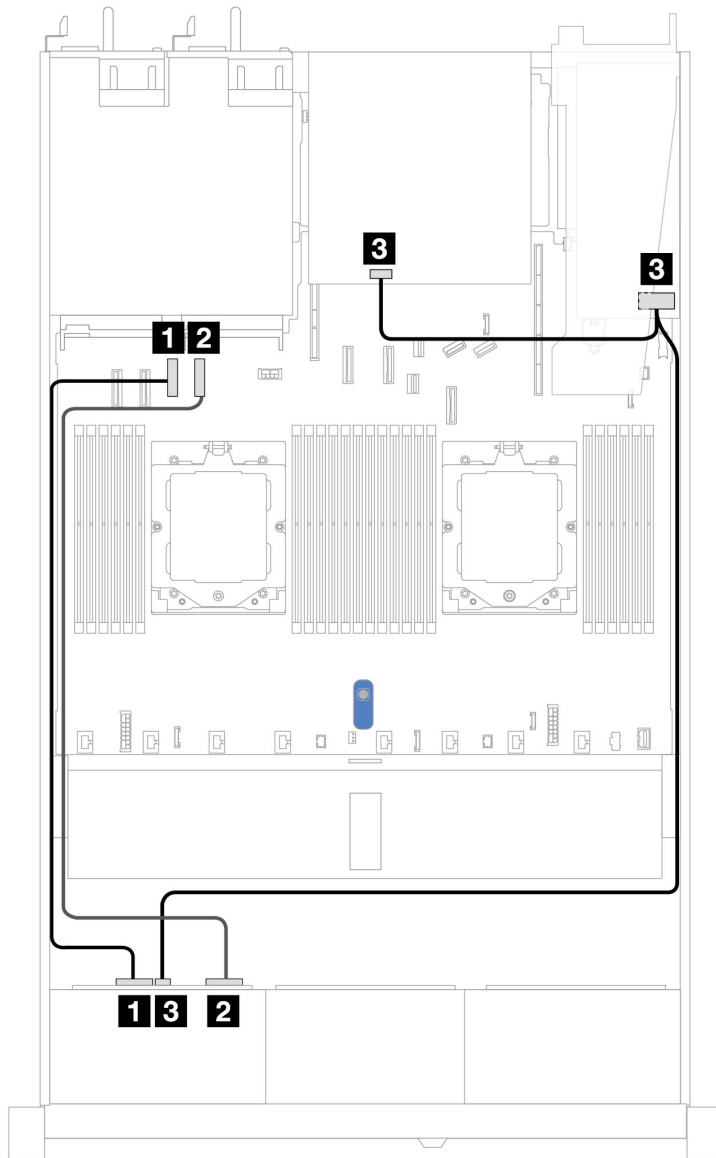


Figure 299. Cable routing for 4 x 2.5" AnyBay backplane drive with an 8i SFF RAID adapter (Gen 4) and a rear 2 x 2.5 SAS/SATA backplane

Table 60. Mapping between one front AnyBay backplane and an SFF HBA/RAID adapter (Gen 4)

Backplane	From	To
Front BP (NVMe)	1 NVMe 0-1	1 PCIe connector 3
	2 NVMe 2-3	2 PCIe connector 4
Front BP/Rear BP (SAS)	3 SAS	3 C0

2 x 2.5" NVMe backplane

Use this section to understand the NVMe backplane cable routing for server model with two 2.5" front drives.

To connect cables for backplane power, refer to [“Backplane power cable routing” on page 207](#)

To connector cables of RAID flash power modules, refer to [“RAID flash power modules” on page 224](#).

To connect cables for front riser assembly, refer to [“Front riser assembly” on page 212](#).

To connect cables for OCP interposer, refer to [“OCP interposer” on page 223](#).

To connect cables for a rear NVMe drive backplane, refer to [“Rear NVMe/SAS/SATA drive backplane” on page 227](#).

To connect power cables for a backplane for standard 2.5" or 3.5" drives, refer to [“Backplane power cable routing” on page 207](#).

To connect cables for intrusion switch, refer to [“Intrusion switch” on page 216](#).

To connect signal cables for a backplane for standard 4 x 2.5" front drives, refer to the following cable routing scenarios depending on your server configuration:

- [“Cable routing for onboard configuration with two processors” on page 312](#)

Cable routing for onboard configuration with two processors

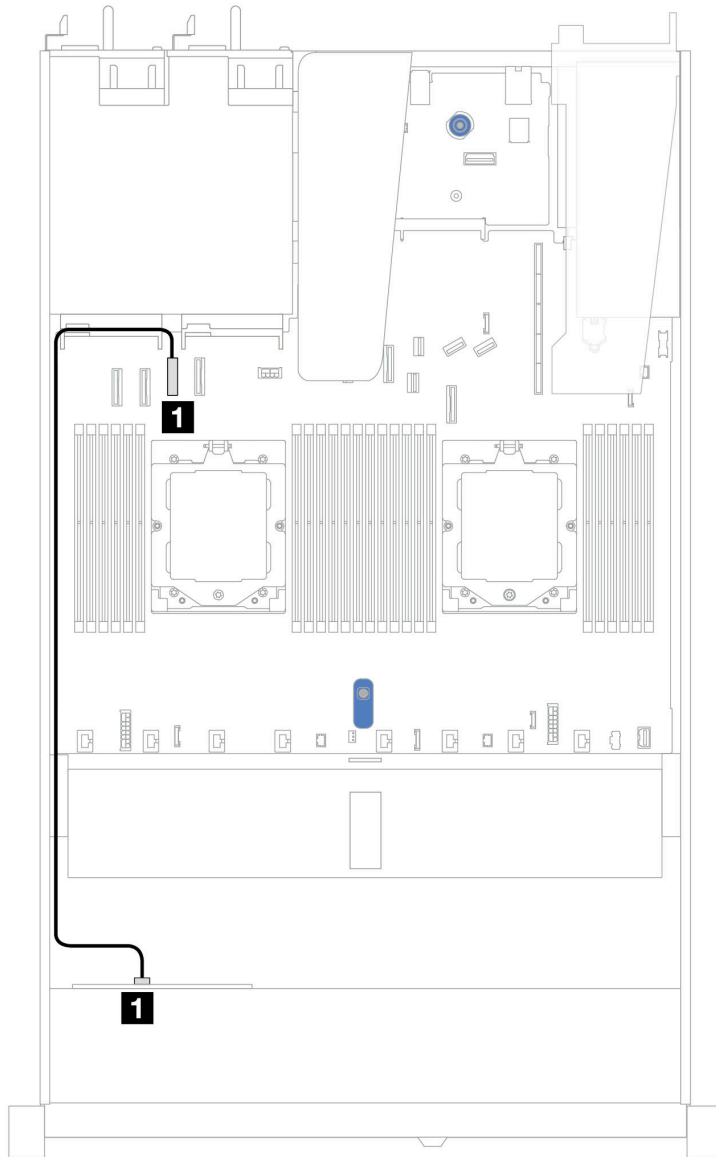


Figure 300. Cable routing for onboard configuration of 2 x 2.5" NVMe front drives

Table 61. Mapping between one front NVMe backplane and system board for onboard configuration

Backplane	From	To
Front BP (NVMe)	1 NVMe 0-1	1 PCIe connector 3

4 x 2.5" NVMe backplane (Gen 4)

Use this section to understand the NVMe backplane (Gen 4) cable routing for server model with four 2.5" front drives.

To connect power cables for a backplane for standard 2.5" or 3.5" drives, refer to [“Backplane power cable routing” on page 207](#).

To connector cables of RAID flash power modules, refer to [“RAID flash power modules”](#) on page 224.


To connect cables for intrusion switch, refer to [“Intrusion switch”](#) on page 216.

To connect cables for a rear NVMe drive backplane, refer to [“Rear NVMe/SAS/SATA drive backplane”](#) on page 227.

To connect signal cables for a backplane for standard 4 x 2.5" front drives, refer to the following cable routing scenarios depending on your server configuration:

- [“Cable routing for onboard configuration with two processors”](#) on page 313
- [Cable routing with front riser assembly and OCP interposer](#)

Cable routing for onboard configuration with two processors

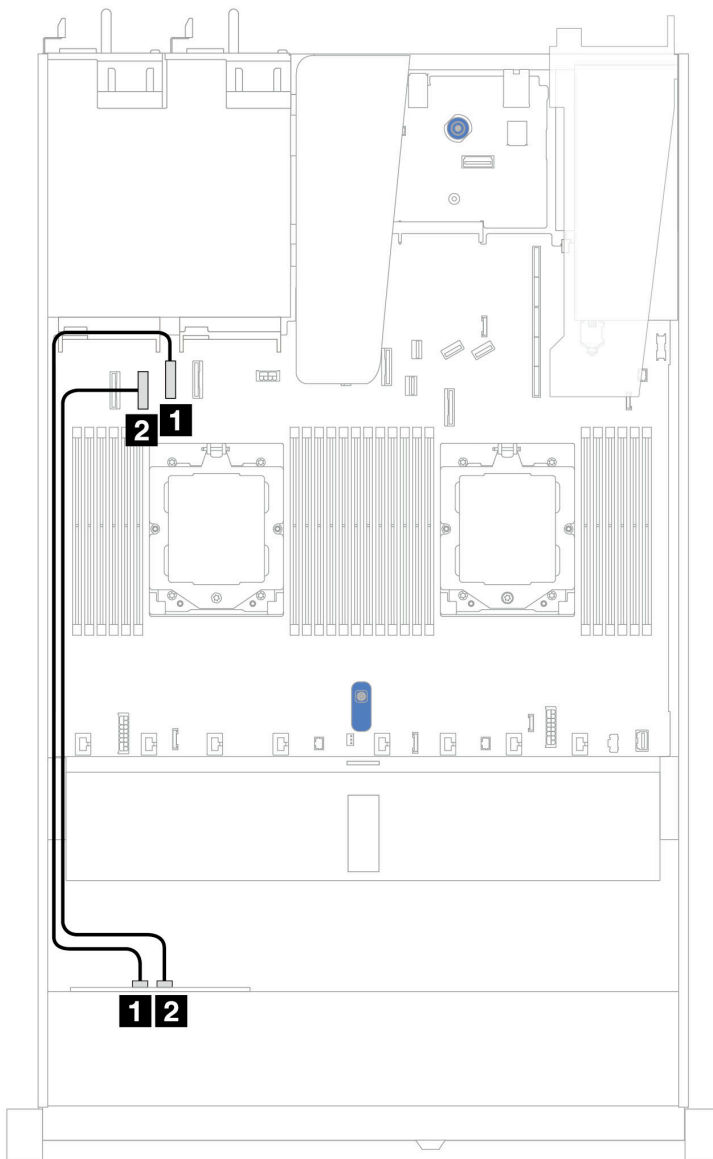

Backplane	From	To
Front BP (NVMe)	1 NVMe 2-3	1 PCIe connector 2
	2 NVMe 0-1	2 PCIe connector 3

Cable routing with front riser assembly and OCP interposer

Ensure the following cables are also connected:

- To connect cables for front riser assembly, refer to [“Front riser assembly” on page 212](#).
- To connect cables for OCP interposer, refer to [“OCP interposer” on page 223](#).

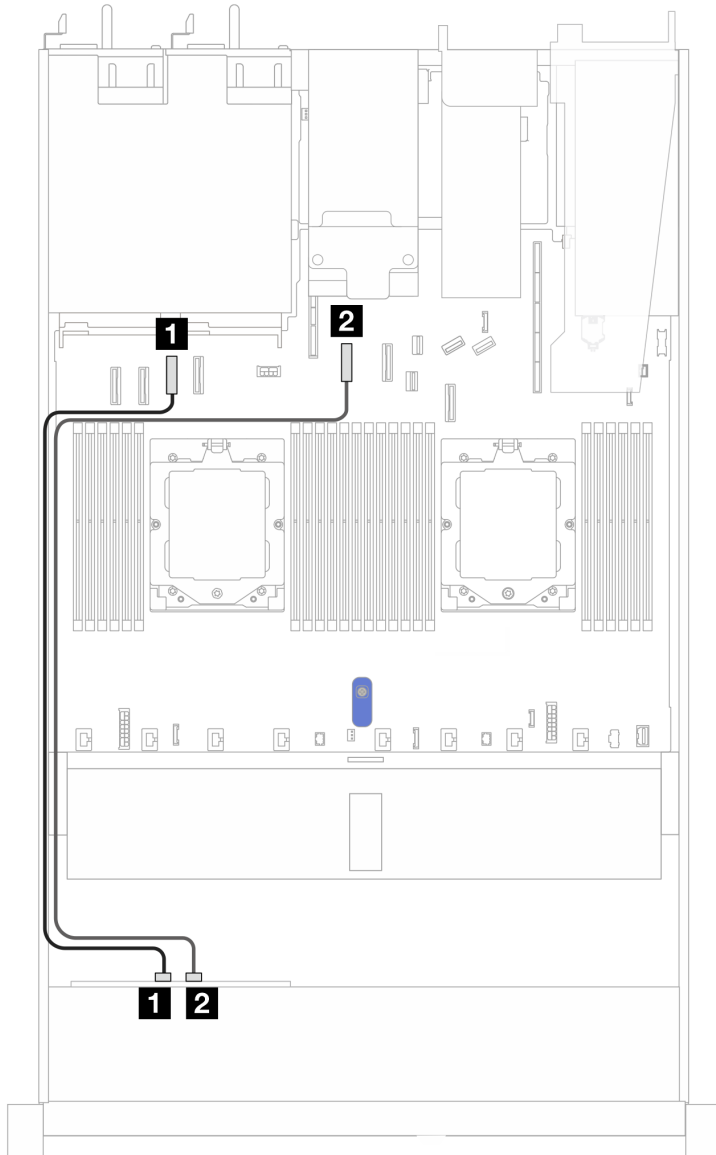


Figure 301. Cable routing for 4 x 2.5" front NVMe drive bays for front riser assembly and OCP interposer configuration

Table 62. Mapping between backplane and system board/adaptor for front riser assembly and OCP interposer configuration

Backplanes	From	To
Front BP (NVMe)	1 NVMe 0–1	1 PCIe connector 3
	2 NVMe 2–3	2 PCIe connector 5

4 x 2.5" NVMe backplane (Gen 5)

Use this section to understand the NVMe backplane (Gen 5) cable routing for server model with four 2.5" front drives.

To connect power cables for a backplane for standard 2.5" or 3.5" drives, refer to [“Backplane power cable routing” on page 207](#).

To connect cables for front riser assembly, refer to [“Front riser assembly” on page 212](#).

To connect cables for OCP interposer, refer to [“OCP interposer” on page 223](#).

To connect cables for a rear NVMe drive backplane, refer to [“Rear NVMe/SAS/SATA drive backplane” on page 227](#).

To connect cables for intrusion switch, refer to [“Intrusion switch” on page 216](#).

To connect signal cables for a backplane for standard 4 x 2.5" front drives, refer to the following cable routing scenarios depending on your server configuration:

- [“Cable routing for onboard configuration with two processors” on page 316](#)

Cable routing for onboard configuration with two processors

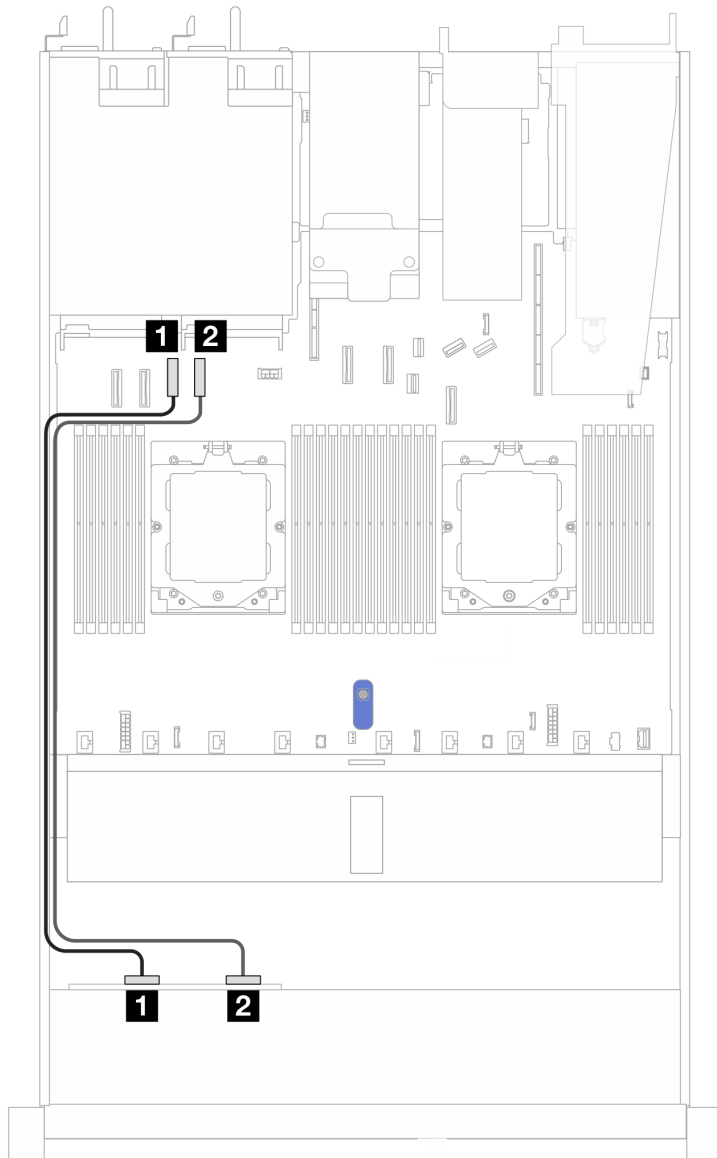


Figure 302. Cable routing for 4 x 2.5" front NVMe drive backplane and system board for onboard configuration with two processors

Table 63. Mapping between backplane and system board/adaptor

Backplanes	From	To
Front BP (NVMe)	1 NVMe 0–1	1 PCIe connector 3
	2 NVMe 2–3	1 PCIe connector 4

8x 2.5" front drives (two processors)

Use the section to understand the cable routing for signal cable connections for 8 x 2.5-inch drive backplanes.

Under the configuration of 8 x 2.5-inch front drives, your server supports the following front backplane:

- [“8 x 2.5" SAS/SATA backplane” on page 317](#)

8 x 2.5" SAS/SATA backplane

Use this section to understand the SAS/SATA backplane cable routing for server model with eight 2.5" front drives.

To connect power cables for a backplane for standard 2.5" or 3.5" drives, refer to [“Backplane power cable routing” on page 207](#).

To connector cables of RAID flash power modules, refer to [“RAID flash power modules” on page 224](#).

To connect cables for M.2 drive backplane, refer to [“M.2 drive backplane” on page 218](#).

To connect intrusion switch cable, refer to [“Intrusion switch” on page 216](#).

To connect power cable for CFF RAID adapter, refer to [“CFF RAID adapter” on page 210](#).

To connect signal cables for a backplane for standard 4 x 3.5" front drives, refer to the following cable routing scenarios depending on your server configuration:

- [“Cable routing for onboard configuration” on page 317](#)
- [“Cable routing with an SFF HBA/RAID adapter” on page 318](#)
- [“Cable routing with a CFF RAID adapter” on page 319](#)

Cable routing for onboard configuration

The following illustrations and tables show the mapping relationship between backplane connectors and system board connectors for onboard configuration.

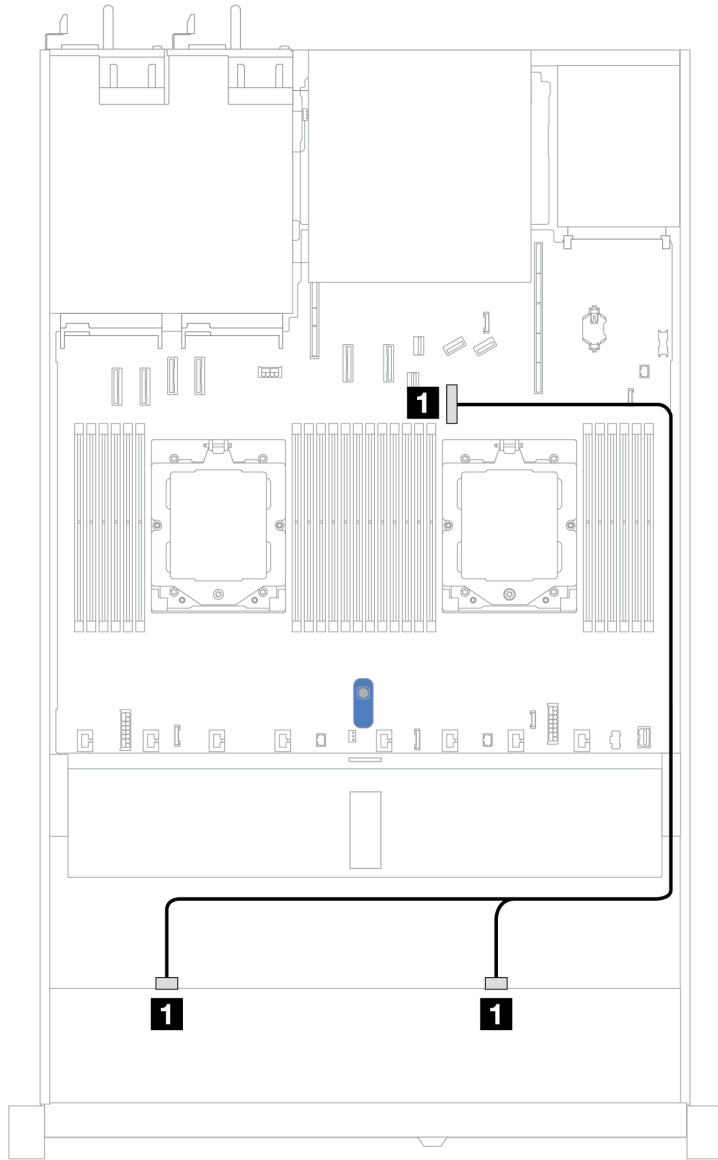


Figure 303. Cable routing for onboard configuration

Table 64. Cable routing for onboard configuration of 8 x 2.5 SAS/SATA front drives

Backplane	From	To
Front BP (SAS)	1 SAS 0, SAS 1	1 PCIe connector 7

Cable routing with an SFF HBA/RAID adapter

The following illustrations and tables show the mapping relationship between backplane connectors and an 8i or 16i SFF HBA/RAID adapter (Gen 3 or Gen 4).

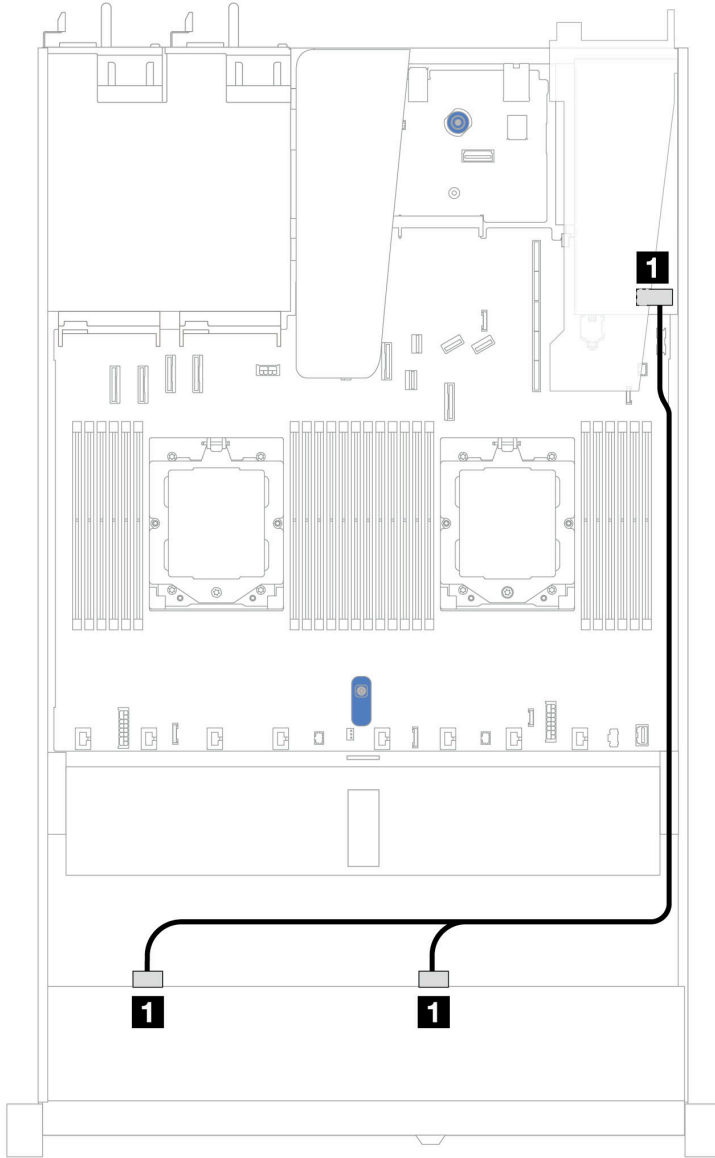


Figure 304. Cable routing for 8 x 2.5" front SAS/SATA drive bays with an 8i or 16i SFF RAID adapter (Gen 3 or Gen 4)

Table 65. Mapping between one front SAS/SATA backplane and an SFF HBA/RAID adapter

Backplane	From	To
Front BP (SAS)	1 SAS 0, SAS 1	1 <ul style="list-style-type: none"> • Gen 3: C0, C1 • Gen 4: C0

Cable routing with a CFF RAID adapter

The following illustrations and tables show the mapping relationship between backplane connectors and an 8i or 16i CFF RAID adapter (Gen 3 or Gen 4).

Note: The following illustration is for Gen 4 adapters. For Gen 3 adapters, the illustration might be slightly different.

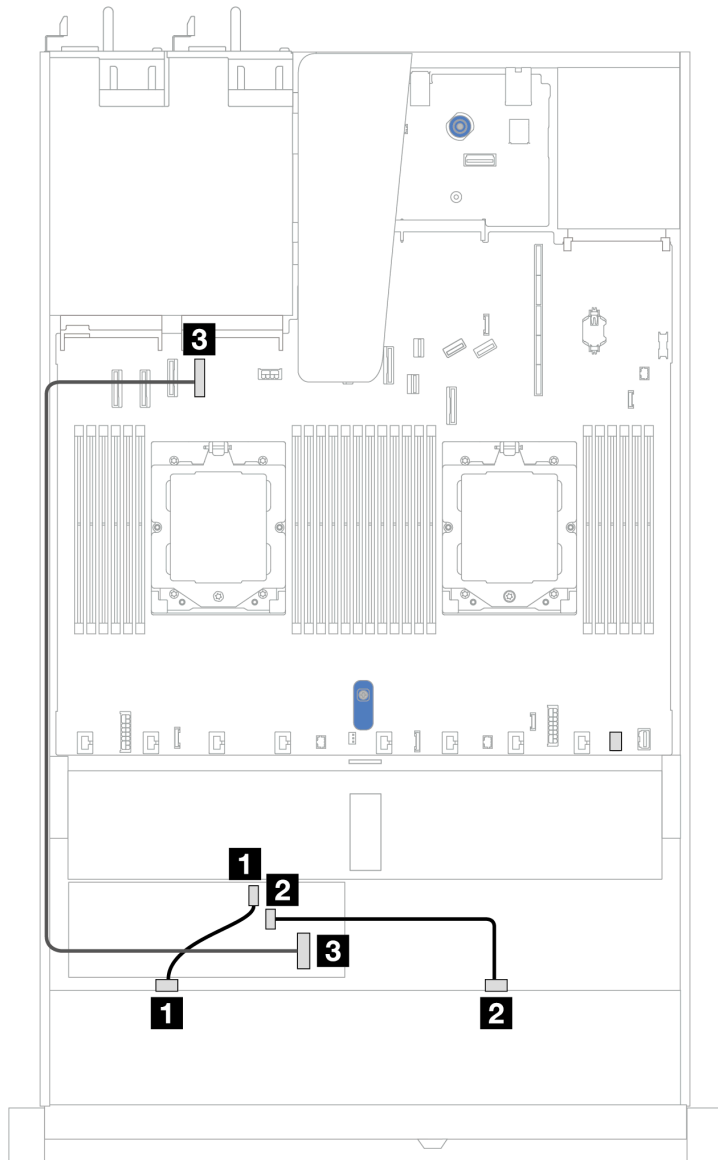


Figure 305. Cable routing for 8 x 2.5" front SAS/SATA drive bays with an 8i or 16i CFF RAID adapter (Gen 3 or Gen 4)

Table 66. Mapping between one front SAS/SATA backplane and a CFF RAID adapter

Backplane/adaptor	From	To
Front BP (SAS)	1 SAS 0	1 C0
	2 SAS 1	2 C1
CFF RAID adapter	3 MB input	3 PCIe connector 4

10 x 2.5" front drives (two processors)

Use the section to understand the cable routing for signal cable connections for 10 x 2.5-inch drive backplanes.

Under the configuration of 10 x 2.5-inch front drives, your server supports the following front backplane:

- [“10 x 2.5” AnyBay backplane” on page 340](#)

6 x 2.5” SAS/SATA + 4 x 2.5” AnyBay backplane

See this section to understand the cable routing of 6 front 2.5” SAS/SATA drives and 4 front 2.5” AnyBay drives with 10 x 2.5 backplane (Gen 4) installed.

To connect power cables for a backplane for standard 2.5” or 3.5” drives, refer to [“Backplane power cable routing” on page 207](#).

To connector cables of RAID flash power modules, refer to [“RAID flash power modules” on page 224](#).

To connect the power cable for CFF RAID adapter, refer to [“CFF RAID adapter” on page 210](#).

To connect cables for a rear NVMe/SAS/SATA drive backplane, refer to [“Rear NVMe/SAS/SATA drive backplane” on page 227](#).

To connect signal cables for a backplane for standard 6 front 2.5” SAS/SATA drives and 4 front 2.5” AnyBay drives, refer to the following cable routing scenarios depending on your server configuration:

- [“Cable routing with an SFF HBA/RAID adapter” on page 321](#)
- [“Cable routing with a CFF RAID adapter” on page 323](#)

Cable routing with an SFF HBA/RAID adapter

The following tables show the mapping relationship between backplane connectors and a 16i SFF HBA/RAID adapter (Gen 3 or Gen 4).

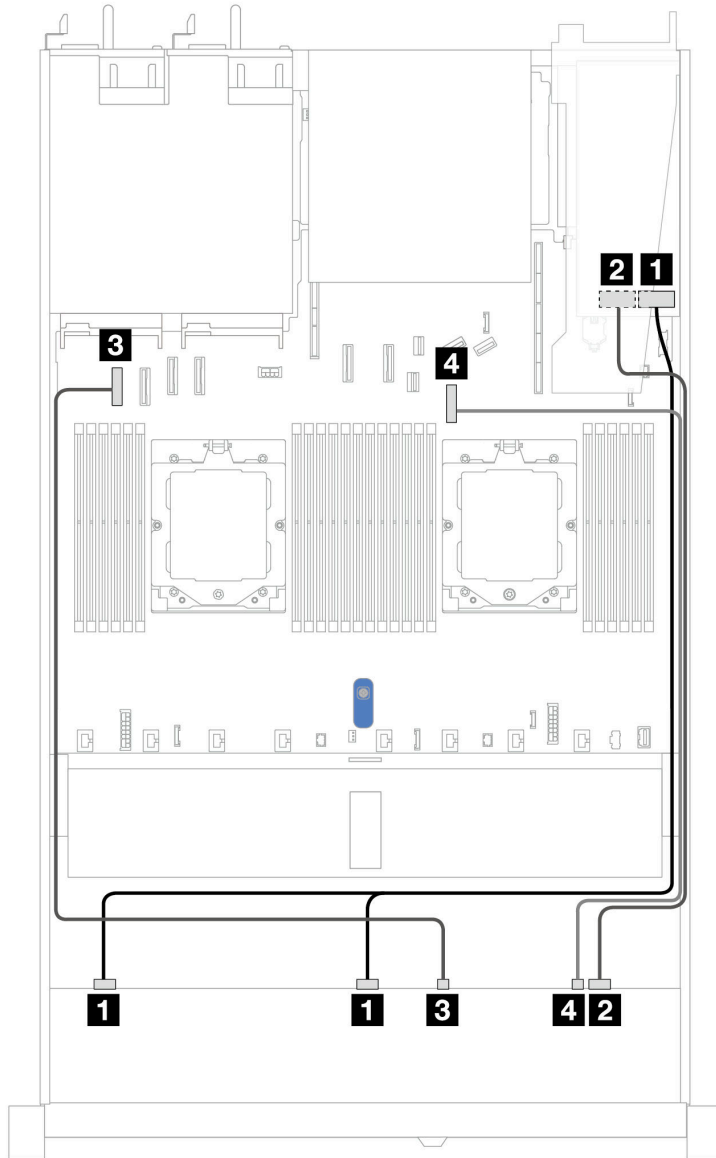


Figure 306. Cable routing for 6 front 2.5'' SAS/SATA drives and 4 front 2.5'' AnyBay drives bays with a 16i SFF RAID adapter (Gen 3 or Gen 4)

Table 67. Cable routing for 6 front 2.5'' SAS/SATA drives and 4 front 2.5'' AnyBay drives bays with a 16i SFF RAID adapter (Gen 3 or Gen 4)

Backplane	From	To
Front BP (SAS)	1 SAS 0, SAS 1	1 • Gen 3: C0, C1 • Gen 4: C0
	2 SAS 2	2 • Gen 3: C2 • Gen 4: C1
Front BP (NVMe)	3 NVMe 0–1	3 PCIe connector 1
	4 NVMe 2–3	4 PCIe connector 7

Cable routing with a CFF RAID adapter

The following tables show the mapping relationship between backplane connectors and a 16i CFF RAID adapter.

Note: The following illustrations are for Gen 4 adapters. For Gen 3 adapters, the illustration might be slightly different.

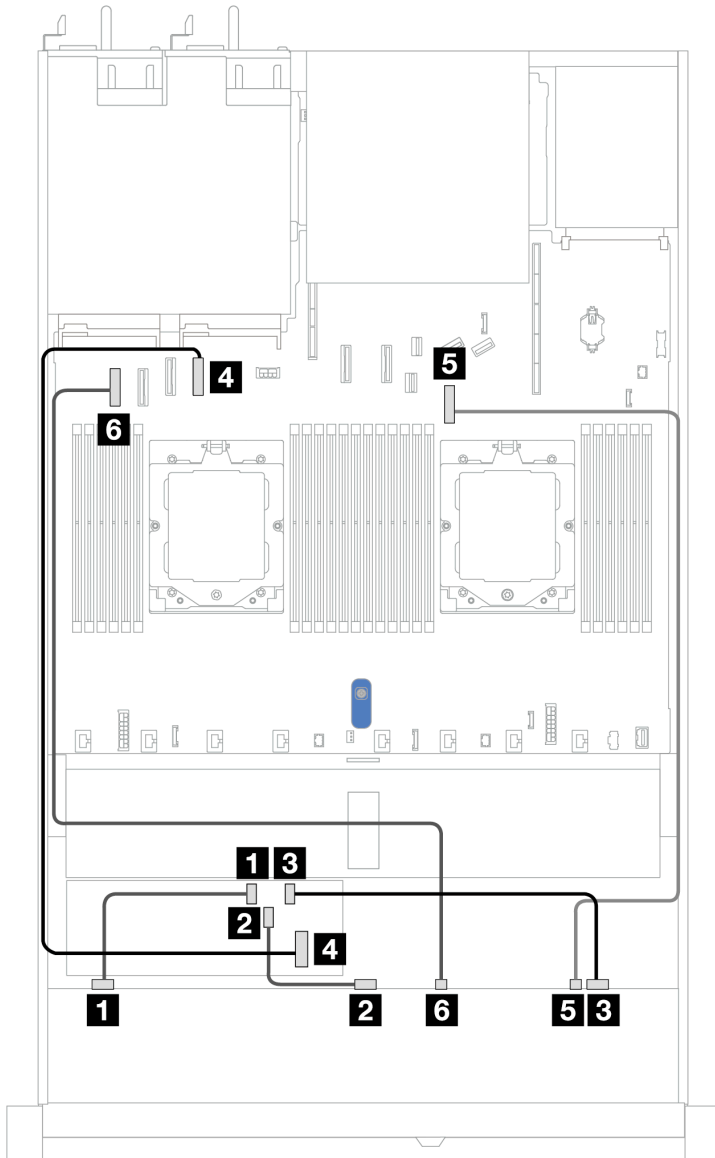


Figure 307. Cable routing for 6 front 2.5" SAS/SATA drives and 4 front 2.5" AnyBay drives bays with a 16i CFF RAID adapter

Table 68. Cable routing for 6 front 2.5" SAS/SATA drives and 4 front 2.5" AnyBay drives bays with a 16i CFF RAID adapter

Backplane	From	To
Front BP (SAS)	1 SAS 0	1 C0

Table 68. Cable routing for 6 front 2.5" SAS/SATA drives and 4 front 2.5" AnyBay drives bays with a 16i CFF RAID adapter (continued)

Backplane	From	To
	2 SAS 1	2 C1
	3 SAS 2	3 C2
CFF RAID adapter	4 MB input	4 PCIe connector 4
Front BP (NVMe)	5 NVMe 2-3	5 PCIe connector 7
	6 NVMe 0-1	6 PCIe connector 1

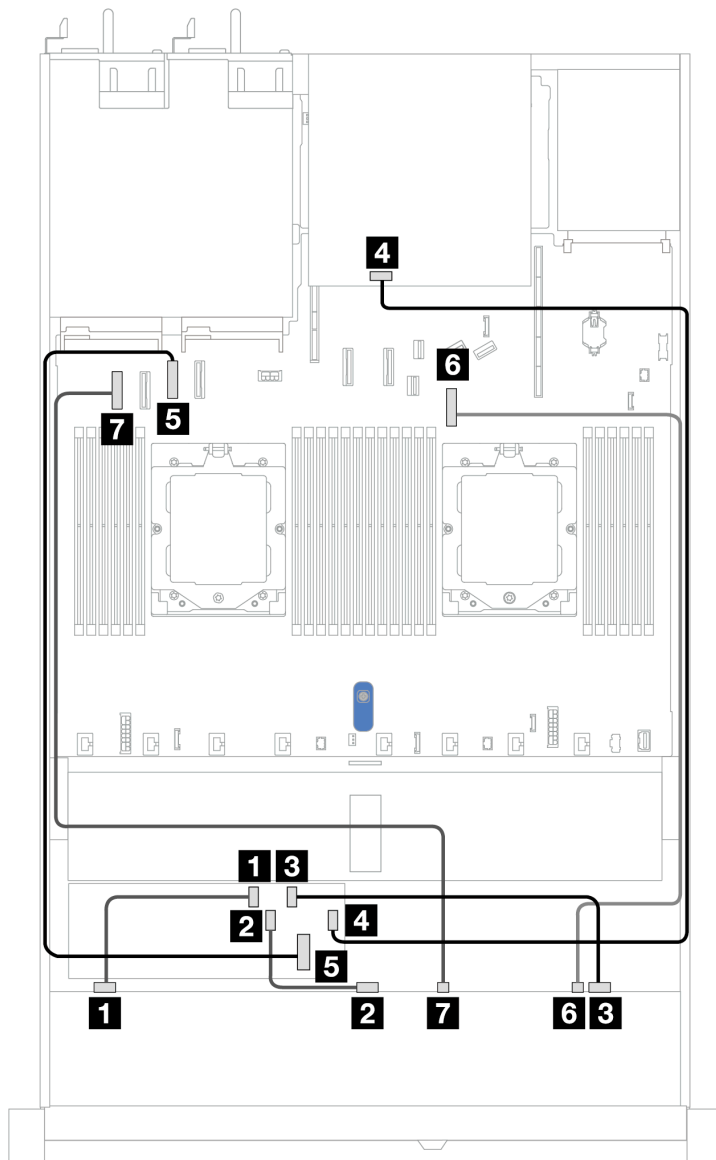


Figure 308. Cable routing for 6 front 2.5" SAS/SATA drives and 4 front 2.5" AnyBay drives bays with an 8i or 16i CFF RAID adapter (Gen 3 or Gen 4) with 2 x 2.5 rear SAS/SATA drives installed

Table 69. Mapping between one front AnyBay and one rear SAS/SATA backplane and a CFF RAID adapter

Backplane/adapter	From	To
Front BP (SAS)	1 SAS 0	1 C0
	2 SAS 1	2 C1
	3 SAS 2	4 C2
Rear BP (SAS)	4 SAS	4 C3
CFF RAID adapter	5 MB input	5 PCIe connector 3
Front BP (NVMe)	6 NVMe 2-3	6 PCIe connector 7
	7 NVMe 0-1	7 PCIe connector 1

6 x 2.5" SAS/SATA + 2 x 2.5" AnyBay + 2 x 2.5" NVMe backplane

See this section to understand the cable routing of 6 front 2.5" SAS/SATA drives, 2 front 2.5" AnyBay drives, and 2 front 2.5" NVMe drives.

To connect power cables for a backplane for standard 2.5" or 3.5" drives, refer to [“Backplane power cable routing” on page 207](#).

To connector cables of RAID flash power modules, refer to [“RAID flash power modules” on page 224](#).

To connect signal cables, refer to the following cable routing scenarios depending on your server configuration:

- [“Cable routing with an SFF HBA/RAID adapter” on page 325](#)
- [“Cable routing with a CFF HBA/RAID adapter” on page 327](#)

Cable routing with an SFF HBA/RAID adapter

The following tables show the mapping relationship between backplane connectors and an SFF HBA/RAID adapter.

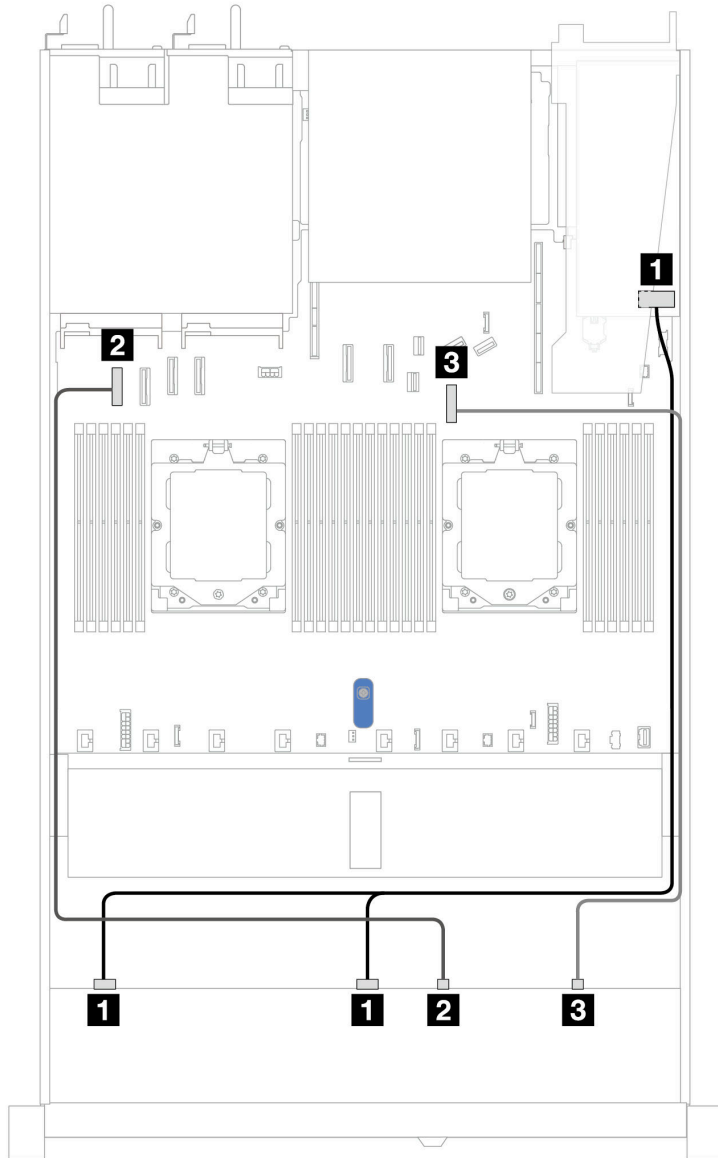


Figure 309. Cable routing for 6 x 2.5" SAS/SATA drives and 2 x 2.5" AnyBay drives and 2 x 2.5" NVMe front drive bays with an 8i SFF RAID/HBA adapter (Gen 3 or Gen 4)

Table 70. Cable routing for 6 x 2.5" SAS/SATA drives and 2 x 2.5" AnyBay drives and 2 x 2.5" NVMe front drive bays with an 8i SFF RAID/HBA adapter (Gen 3 or Gen 4)

Backplane	From	To
Front BP (SAS)	1 SAS 0, SAS 1	1 <ul style="list-style-type: none"> • Gen 3: C0, C1 • Gen 4: C0
Front BP (NVMe)	2 NVMe 0-1	2 PCIe connector 1
	3 NVMe 2-3	3 PCIe connector 7

Cable routing with a CFF HBA/RAID adapter

The following tables show the mapping relationship between backplane connectors and a CFF HBA/RAID adapter.

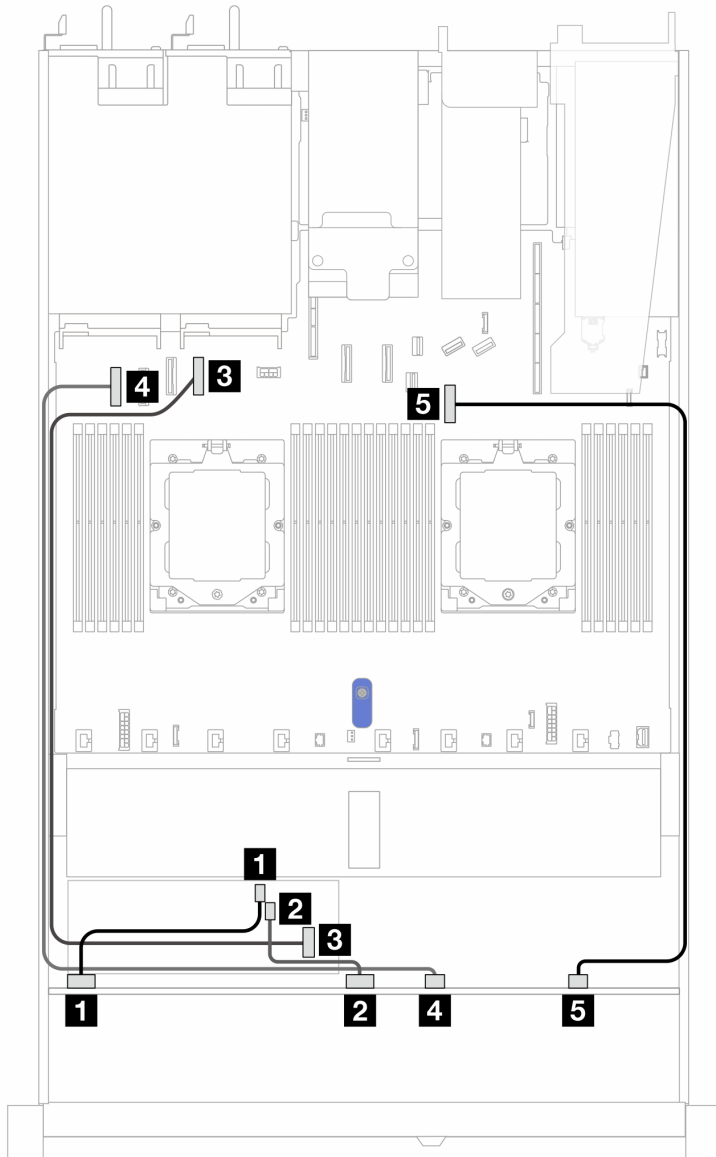


Figure 310. Cable routing for 6 x 2.5" SAS/SATA drives and 2 x 2.5" AnyBay drives and 2 x 2.5" NVMe front drive bays with an 8i CFF RAID/HBA adapter (Gen 3)

Table 71. Cable routing for 6 x 2.5" SAS/SATA drives, 2 x 2.5" AnyBay drives, and 2 x 2.5" NVMe front drive bays with an 8i CFF RAID/HBA adapter (Gen 3)

Backplane	From	To
Front BP (SAS)	1 SAS 0	1 C0
	2 SAS 1	2 C1
CFF RAID adapter	3 MB input	3 PCIe connector 4
Front BP (NVMe)	4 NVMe 0-1	4 PCIe connector 1

Table 71. Cable routing for 6 x 2.5" SAS/SATA drives, 2 x 2.5" AnyBay drives, and 2 x 2.5" NVMe front drive bays with an 8i CFF RAID/HBA adapter (Gen 3) (continued)

Backplane	From	To
	5 NVMe 2-3	5 PCIe connector 7

8 x 2.5"/10 x 2.5" U.3 drives with 10 x 2.5" AnyBay backplane

Use this section to understand the cable routing for eight or ten U.3 drives with 10 x 2.5" AnyBay backplane and two processors installed.

To connect power cables for a backplane for standard 2.5" or 3.5" drives, refer to [“Backplane power cable routing” on page 207](#).

To connector cables of RAID flash power modules, refer to [“RAID flash power modules” on page 224](#).

To connect signal cables for a backplane for standard 8 x 2.5" U.3 drives, refer to the following cable routing scenarios depending on your server configuration:

- [“Cable routing with an SFF HBA/RAID adapter” on page 328](#)

Cable routing with an SFF HBA/RAID adapter

The following illustrations and tables show the mapping relationship between backplane connectors and an 8i or 16i SFF RAID adapter (Gen 4).

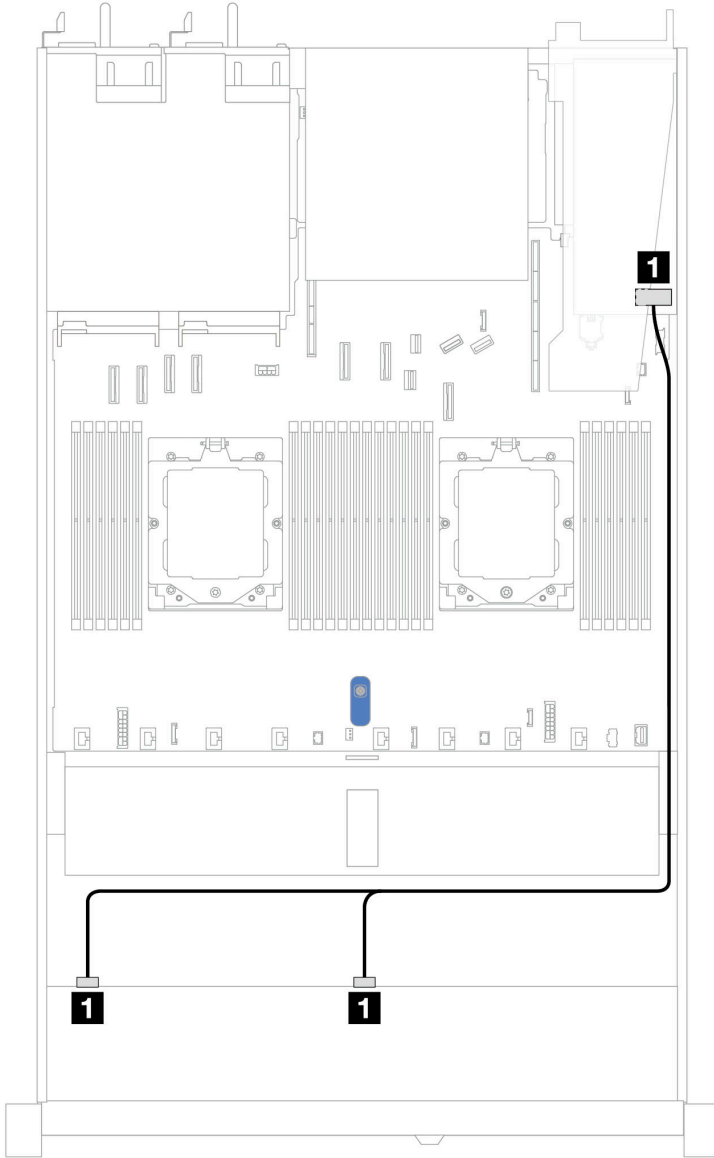


Figure 311. Cable routing for 8 x 2.5" front U.3 drives with an 8i SFF RAID adapter (Gen 4)

Table 72. Mapping between one front AnyBay backplane and an SFF HBA/RAID adapter

Backplane	From	To
Front BP (SAS)	1 SAS 0, SAS 1	1 C0

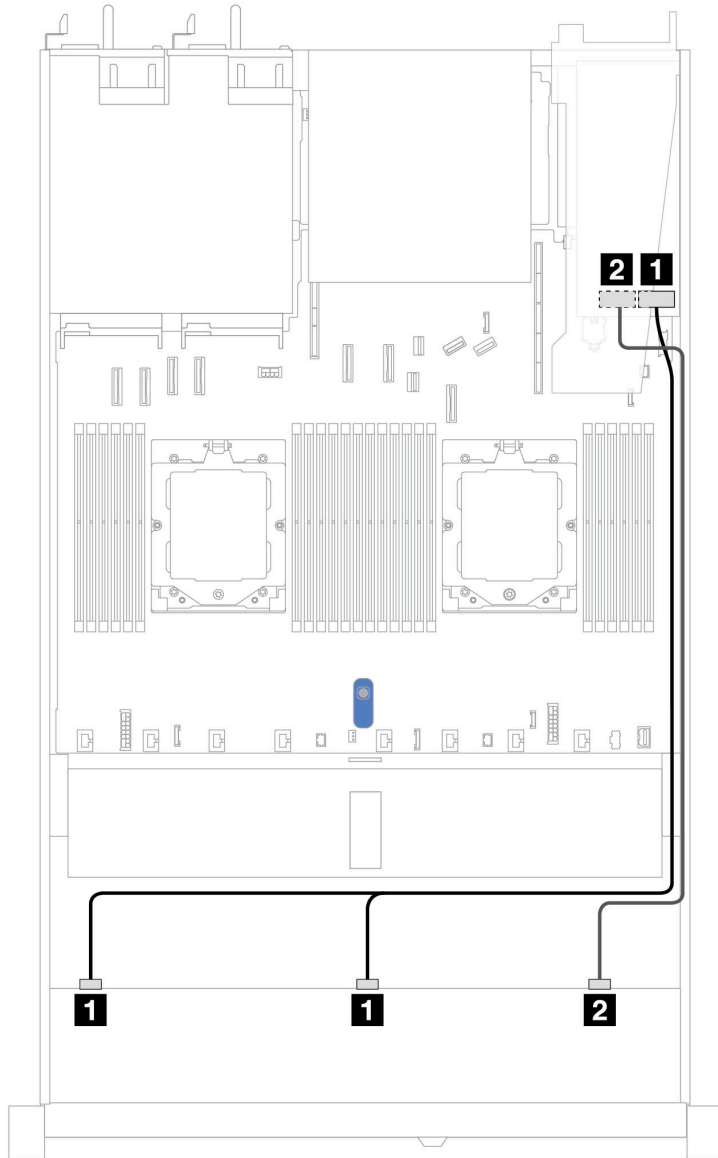


Figure 312. Cable routing for 10 x 2.5" front U.3 drives with an 16i SFF RAID adapter (Gen 4)

Table 73. Mapping between one front AnyBay backplane and an SFF HBA/RAID adapter

Backplane	From	To
Front BP (SAS)	1 SAS 0, SAS 1	1 C0
	2 SAS2	2 C1

10 x 2.5" SAS/SATA backplane

See this section to understand the cable routing of 10 front 2.5" SAS/SATA drives with the 10 x 2.5" AnyBay backplane (Gen 4) installed.

To connect power cables for a backplane for standard 2.5" or 3.5" drives, refer to [“Backplane power cable routing” on page 207](#).

To connector cables of RAID flash power modules, refer to [“RAID flash power modules” on page 224](#).

To connect cables for a rear NVMe/SAS/SATA drive backplane, refer to [“Rear NVMe/SAS/SATA drive backplane” on page 227](#).

To connect cables for a CFF RAID adapter, refer to [“CFF RAID adapter” on page 210](#)

To connect signal cables, refer to the following cable routing scenarios:

- [“Cable routing for onboard configuration” on page 331](#)
- [“Cable routing with an SFF HBA/RAID adapter” on page 334](#)
- [“Cable routing with a CFF RAID adapter” on page 337](#)

Cable routing for onboard configuration

The following illustrations and tables show the mapping relationship between backplane connectors and system board (system board assembly) connectors for onboard configuration.

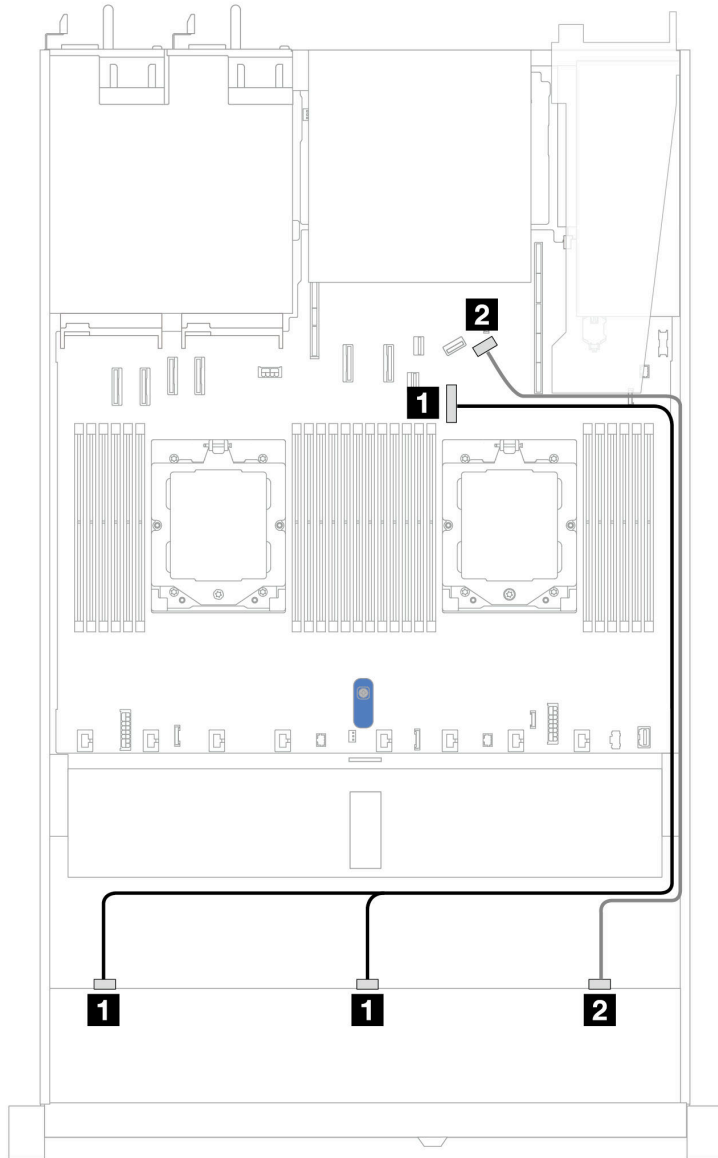


Figure 313. Cable routing for onboard configuration of 10 x 2.5 SAS/SATA front drives

Table 74. Mapping between one front AnyBay backplane and system board for onboard configuration

Backplane	From	To
Front BP (SAS)	1 SAS 0, SAS 1	1 PCIe connector 7
	2 SAS 2	2 PCIe connector 9

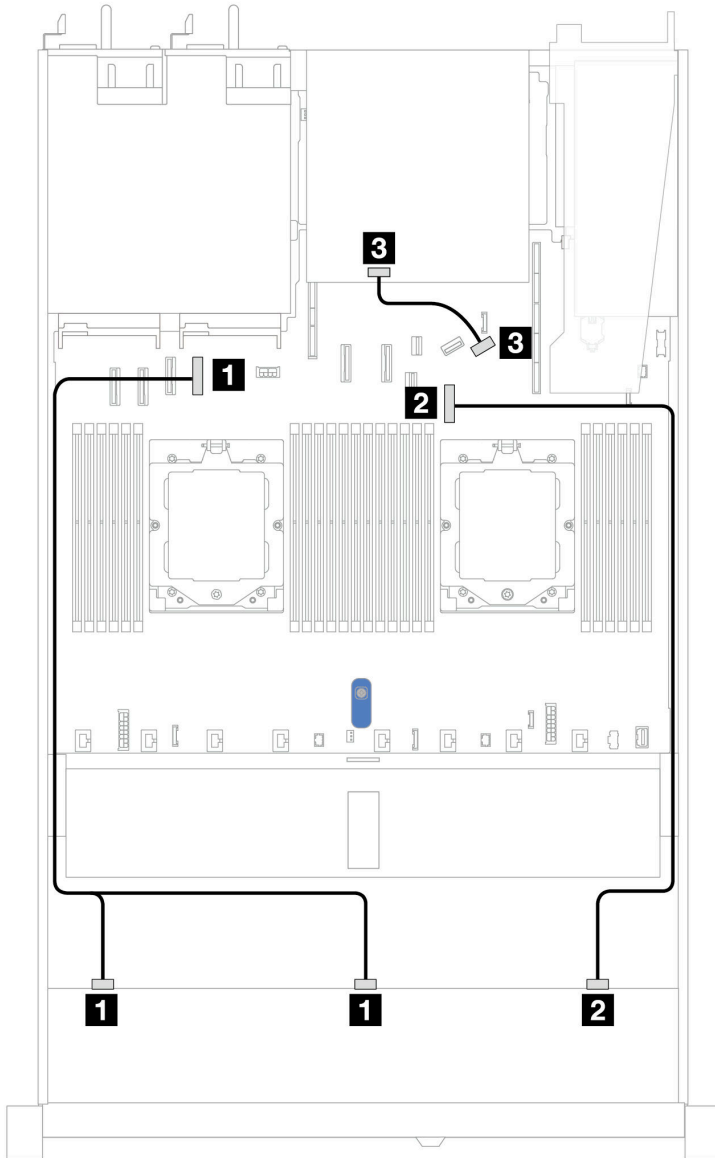


Figure 314. Cable routing for onboard configuration of 10 x 2.5" SAS/SATA front drives and 2 x 2.5" SAS/SATA or 2 x 7mm drive rear drives

Table 75. Mapping between one front AnyBay and one rear SAS/SATA backplanes and processor board for onboard configuration

Backplane	From	To
Front BP (SAS)	1 SAS 0, SAS 1	1 PCIe connector 4
	2 SAS 2	2 PCIe connector 7
Rear BP (SAS)	3 SAS	3 PCIe connector 9

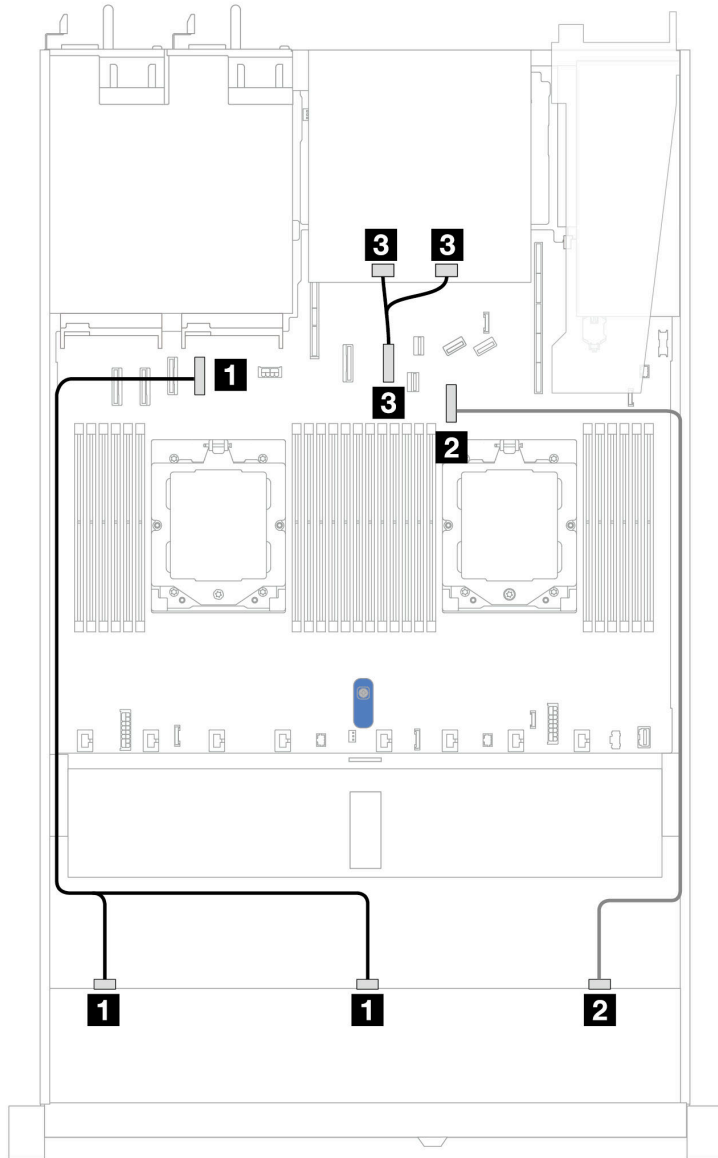


Figure 315. Cable routing for onboard configuration of 10 x 2.5'' SAS/SATA front drives and 2 x 2.5'' NVMe rear drives

Table 76. Mapping between one front AnyBay and one rear NVMe backplanes and system board (system board assembly) for onboard configuration

Backplane	From	To
Front BP (SAS)	1 SAS 0, SAS 1	1 PCIe connector 4
	2 SAS 2	2 PCIe connector 7
Rear BP (SAS)	3 NVMe 0, NVMe 1	3 PCIe connector 6

Cable routing with an SFF HBA/RAID adapter

The following tables show the mapping relationship between backplane connectors and a 16i SFF HBA/RAID adapter (Gen 3 or Gen 4).

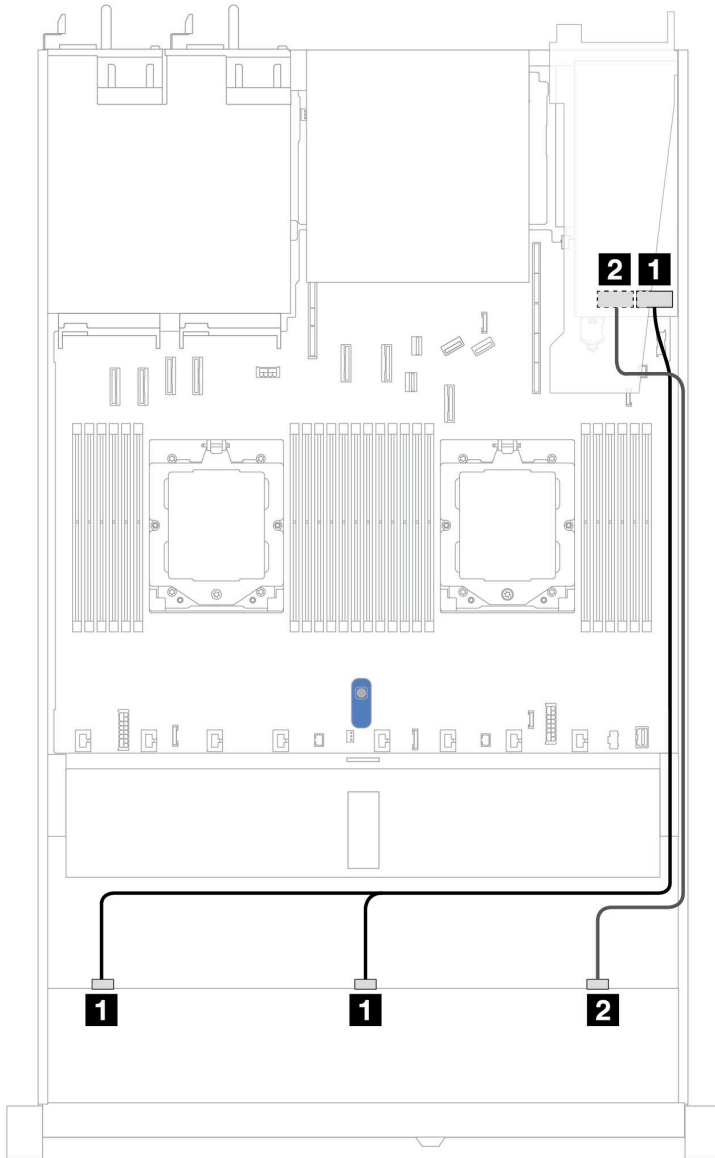


Figure 316. Cable routing for 10 front 2.5" SAS/SATA drives bays with a 16i SFF RAID adapter (Gen 3 or Gen 4)

Table 77. Mapping between one front AnyBay backplane and an SFF HBA/RAID adapter

Backplane	From	To
Front BP (SAS)	1 SAS 0, SAS 1	1 <ul style="list-style-type: none"> • Gen 3: C0, C1 • Gen 4: C0
	2 SAS 2	2 <ul style="list-style-type: none"> • Gen 3: C2 • Gen 4: C1

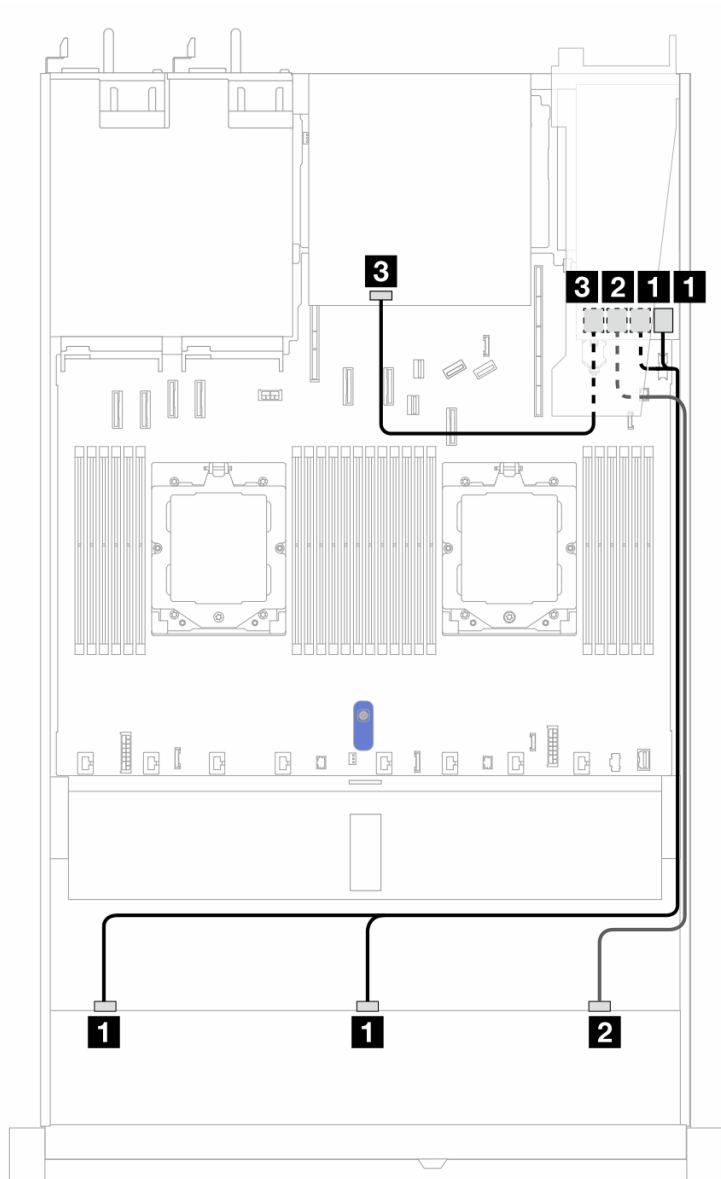


Figure 317. Cable routing for 10 front 2.5" SAS/SATA drives bays and a 16i SFF RAID adapter (Gen 3) with 2 x 2.5" rear SAS/SATA drives installed

Table 78. Mapping between one front AnyBay and one rear SAS/SATA backplane and an SFF RAID adapter

Backplane/adapter	From	To
Front BP (SAS)	1 SAS 0, SAS 1	1 C0, C1
	2 SAS 2	2 C2
Rear BP (SAS)	4 SAS	3 C3

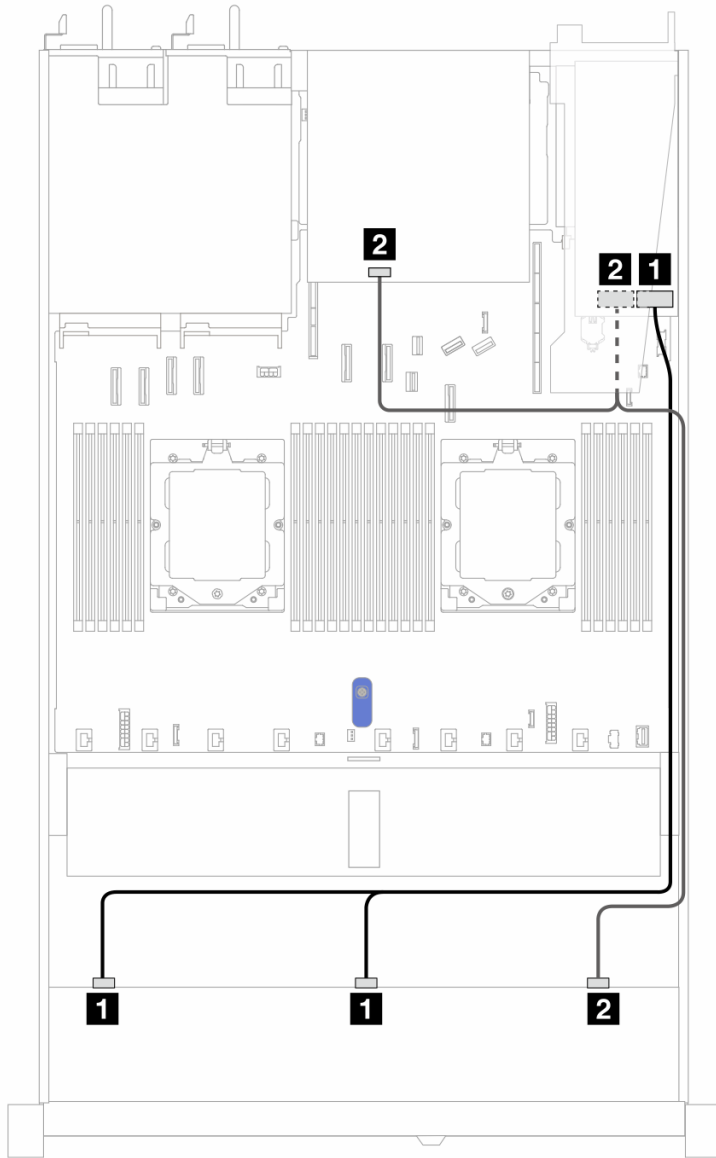


Figure 318. Cable routing for 10 front 2.5" SAS/SATA drives bays and a 16i SFF RAID adapter (Gen 4) with 2 x 2.5" rear SAS/SATA drives installed

Table 79. Mapping between one front AnyBay and one rear SAS/SATA backplane and an SFF RAID adapter

Backplane/adapter	From	To
Front BP (SAS)	1 SAS 0, SAS 1	1 C0
	2 SAS 2	2 C1
Rear BP (SAS)	2 SAS	2 C1

Cable routing with a CFF RAID adapter

The following tables show the mapping relationship between backplane connectors and a CFF RAID adapter.

Note: The following illustrations are for Gen 4 adapters. For Gen 3 adapters, the illustration might be slightly different.

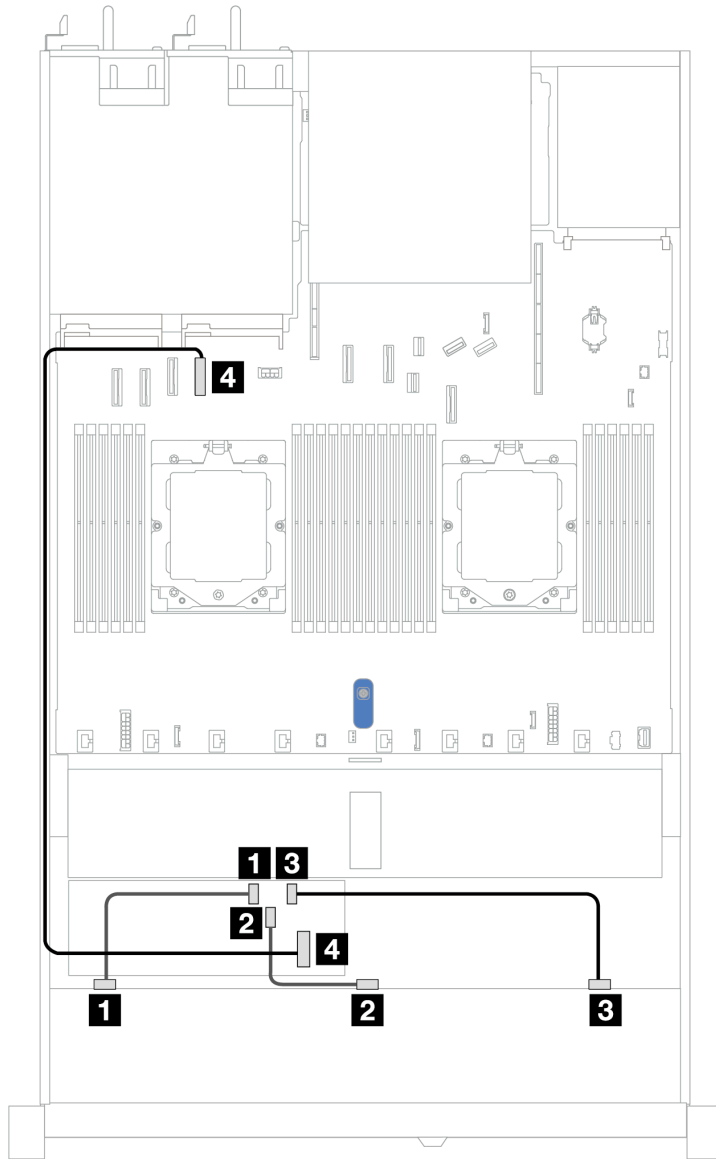


Figure 319. Cable routing for 10 front 2.5" SAS/SATA drives bays with a 16i CFF RAID adapter (Gen 3 or Gen 4)

Table 80. Mapping between one front AnyBay and a CFF RAID adapter

Backplane	From	To
Front BP (SAS)	1 SAS 0	1 C0
	2 SAS 1	2 C1
	3 SAS 2	3 C2
CFF RAID adapter	4 MB input	4 PCIe connector 4

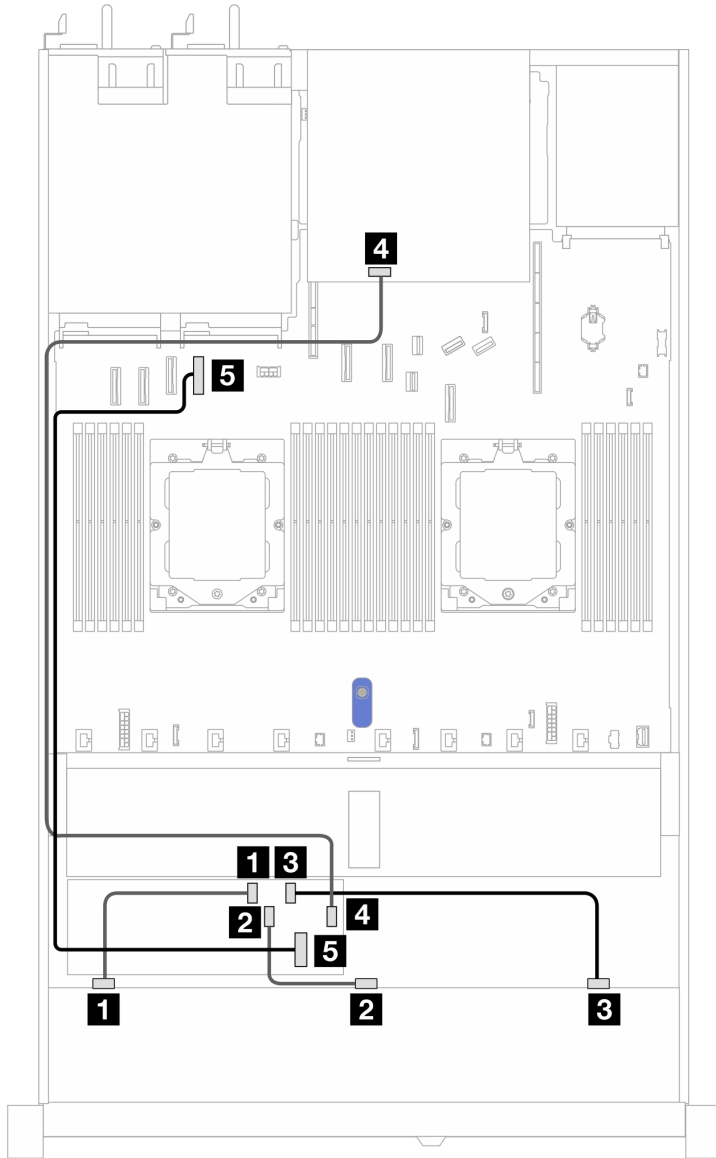


Figure 320. Cable routing for 10 front 2.5" SAS/SATA drives bays and a 16i CFF RAID adapter (Gen 3 or Gen 4) with 2 x 2.5" rear SAS/SATA drives installed

Table 81. Mapping between one front AnyBay and one rear NVMe backplane and a CFF RAID adapter

Backplane/adapter	From	To
Front BP (SAS)	1 SAS 0	1 C0
	2 SAS 1	2 C1
	3 SAS 2	3 C2
Rear BP (SAS)	4 SAS	3 C3
CFF RAID adapter	5 MB input	5 PCIe connector 4

10 x 2.5 AnyBay backplane (Gen 4)

Use this section to understand the alternatives that a 10 x 2.5 AnyBay backplane (Gen 4) offers.

With a 10 x 2.5 AnyBay backplane (Gen 4), following front drive combinations are supported:

10 x 2.5" AnyBay backplane

Use this section to understand the AnyBay backplane cable routing for server model with ten 2.5" front drives.

To connect power cables for a backplane for standard 2.5" drives, refer to [“Backplane power cable routing” on page 207](#).

To connect cables for M.2 drive backplane, refer to [“M.2 drive backplane” on page 218](#).

To connect intrusion switch cable, refer to [“Intrusion switch” on page 216](#).

To connect cables for RAID flash power modules, refer to [“RAID flash power modules” on page 224](#)

To connect signal cables for a backplane for standard 10 x 2.5" front drives, refer to the following cable routing scenarios depending on your server configuration:

- [“Cable routing with an SFF HBA/RAID adapter” on page 340](#)

Cable routing with an SFF HBA/RAID adapter

The following tables show the mapping relationship between backplane connectors and an SFF HBA/RAID adapter (Gen 3 or Gen 4).

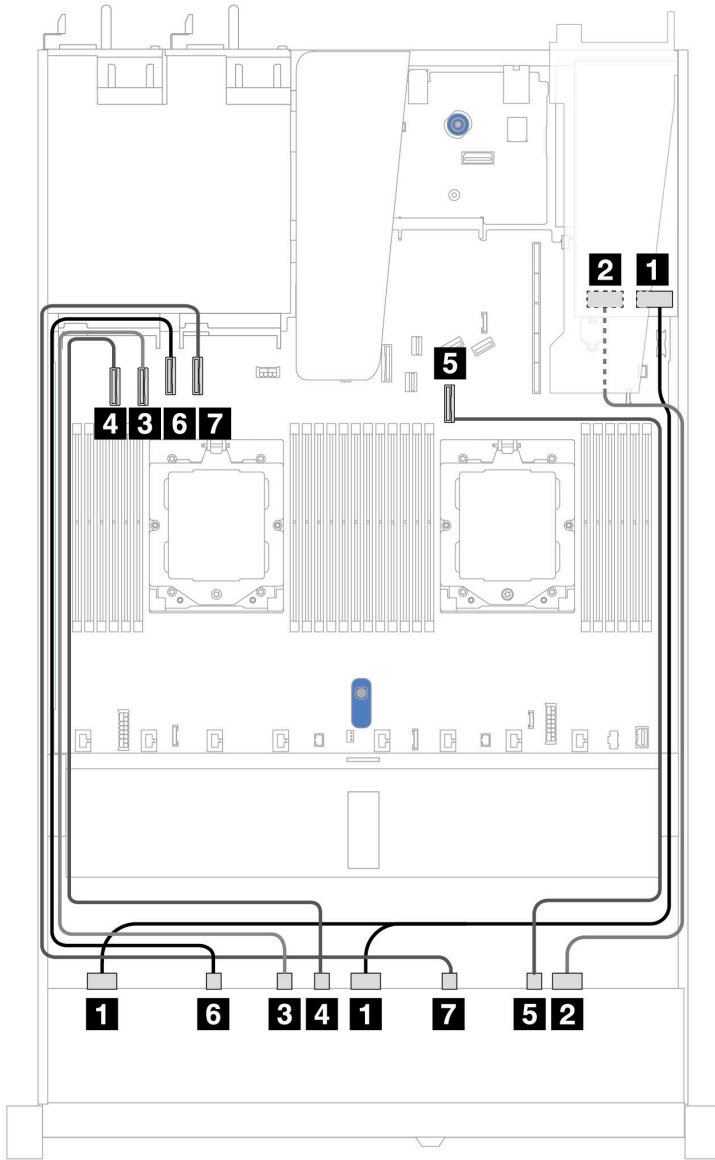


Figure 321. Cable routing for 10 AnyBay drives with a 16i SFF RAID adapter (Gen 3 or Gen 4)

Table 82. Mapping between one front AnyBay backplane and an SFF HBA/RAID adapter

Backplane	From	To
Front BP (SAS)	1 SAS 0, SAS 1	1 • Gen 3: C0, C1 • Gen 4: C0
	2 SAS 2	2 • Gen 3: C2 • Gen 4: C1
Front BP (NVMe)	3 NVMe 2–3	3 PCIe 2
	4 NVMe 4–5	4 PCIe 1
	5 NVMe 8–9	5 PCIe 7

Table 82. Mapping between one front AnyBay backplane and an SFF HBA/RAID adapter (continued)

Backplane	From	To
	6 NVMe 0–1	6 PCIe 3
	7 NVMe 6–7	7 PCIe 4

10 x 2.5" NVMe backplane

Use this section to understand the cable routing of 10 NVMe front drives.

To connect power cables for a backplane for standard 2.5" or 3.5" drives, refer to [“Backplane power cable routing” on page 207](#).

To connect cables for a rear NVMe/SAS/SATA drive backplane, refer to [“Rear NVMe/SAS/SATA drive backplane” on page 227](#).

To connect signal cables, refer to the following cable routing scenario:

- [“Cable routing for onboard configuration” on page 342](#)

Cable routing for onboard configuration

The following illustrations and tables show the mapping relationship between backplane connectors and system board connectors for onboard configuration.

The following figure illustrates the cable routing for the configuration of 10 front SAS/SATA drives bays. Connections between connectors: **1** ↔ **1**, **2** ↔ **2**, **3** ↔ **3**, ... **n** ↔ **n**.

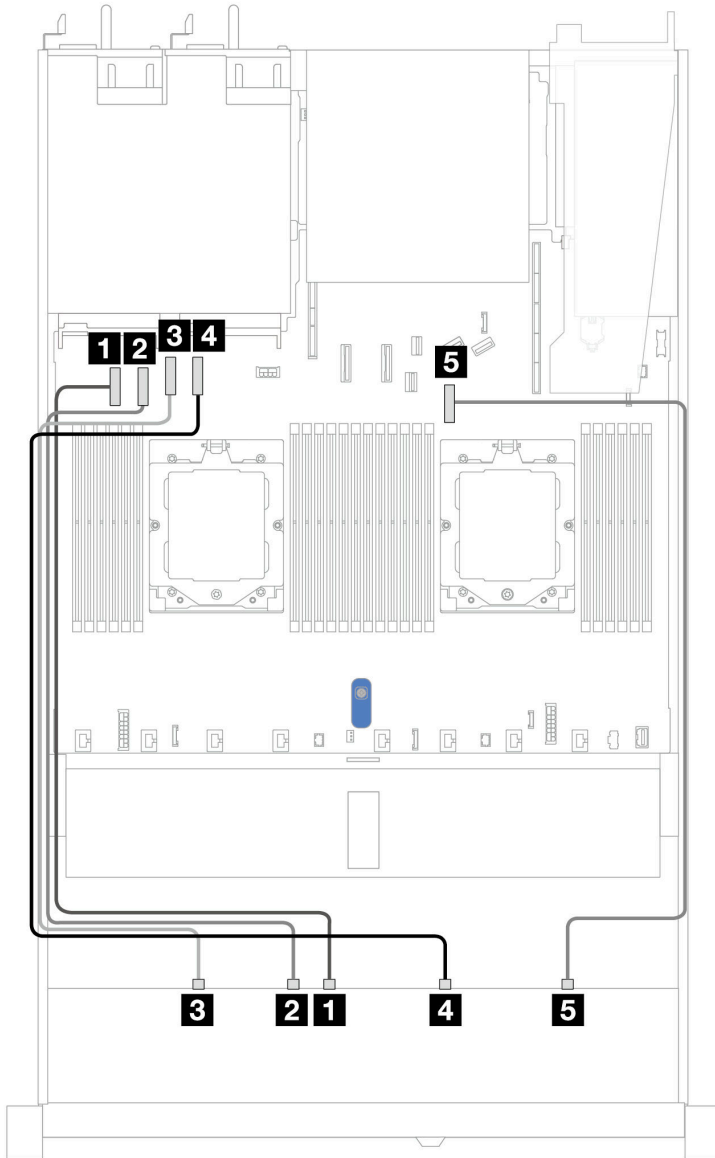


Figure 322. On-board configuration of 10 x 2.5" NVMe drive backplane

Table 83. On-board configuration of 10 x 2.5" NVMe drive backplane

Backplane	From	To
Front BP(NVMe)	1 NVMe 4-5	1 PCIe connector 1
	2 NVMe 2-3	2 PCIe connector 2
	3 NVMe 0-1	3 PCIe connector 3
	4 NVMe 6-7	4 PCIe connector 4
	5 NVMe 8-9	5 PCIe connector 7

10 x 2.5 AnyBay backplane (Gen 5)

Use this section to understand the alternatives that a 10 x 2.5 AnyBay backplane (Gen 5) offers.

With a 10 x 2.5 AnyBay backplane (Gen 5), following front drive combinations are supported:

10 x 2.5" AnyBay backplane

Use this section to understand the AnyBay backplane cable routing for server model with ten 2.5" front drives.

To connect power cables for a backplane for standard 2.5" drives, refer to [“Backplane power cable routing” on page 207](#).

To connector cables of RAID flash power modules, refer to [“RAID flash power modules” on page 224](#).

To connect signal cables for a backplane for standard 10 x 2.5" front drives, refer to the following cable routing scenarios depending on your server configuration:

- [“Cable routing with an SFF HBA/RAID adapter” on page 340](#)

Cable routing with an SFF HBA/RAID adapter

The following tables show the mapping relationship between backplane connectors and an SFF HBA/RAID adapter (Gen 3 or Gen 4).

Note: The following illustrations are for Gen 4 adapters. For Gen 3 adapters, the illustration might be slightly different.

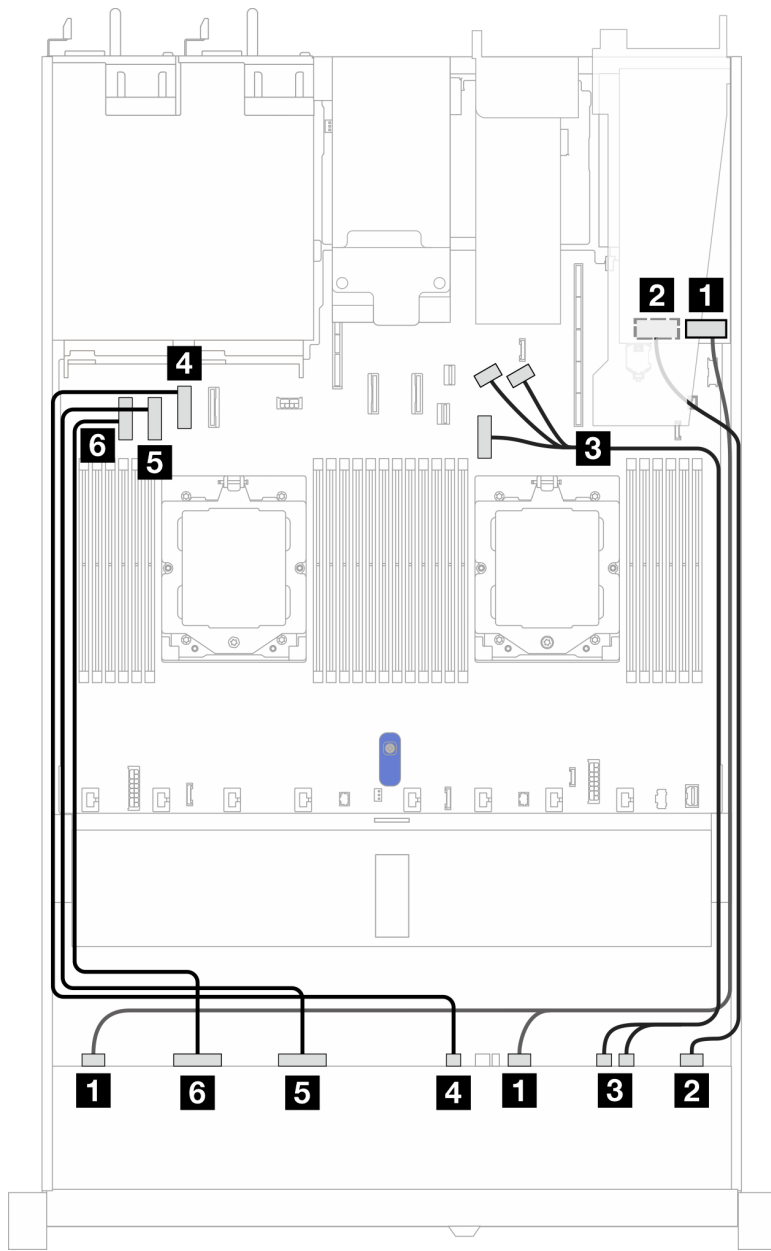


Figure 323. Cable routing for 10 AnyBay drives with a 16i SFF RAID adapter (Gen 3 or Gen 4)

Table 84. Mapping between one front AnyBay backplane and a 16i SFF HBA/RAID adapter (Gen 3 or Gen 4)

Backplane	From	To
Front BP (SAS)	1 SAS 0-3, SAS 4-7	1 • Gen 3: C0, C1 • Gen 4: C0
	2 SAS 8-9	2 • Gen 3: C2, C3 • Gen 4: C1
Front BP (NVMe)	3 NVMe 6-7, NVMe 8-9	3 PCIe connectors 7, 8, and 9
	4 NVMe 4-5	4 PCIe connector 3

Table 84. Mapping between one front AnyBay backplane and a 16i SFF HBA/RAID adapter (Gen 3 or Gen 4) (continued)

Backplane	From	To
	5 NVMe 2–3	5 PCIe connector 2
	6 NVMe 0–1	6 PCIe connector 1

10 x 2.5" NVMe backplane

Use this section to understand the cable routing of 10 NVMe front drives.

To connect power cables for a backplane for standard 2.5" or 3.5" drives, refer to [“Backplane power cable routing” on page 207](#).

To connect cables for a rear NVMe/SAS/SATA drive backplane, refer to [“Rear NVMe/SAS/SATA drive backplane” on page 227](#).

To connect signal cables, refer to the following cable routing scenario:

- [“Cable routing for onboard configuration” on page 346](#)

Cable routing for onboard configuration

The following illustrations and tables show the mapping relationship between backplane connectors and system board connectors for onboard configuration.

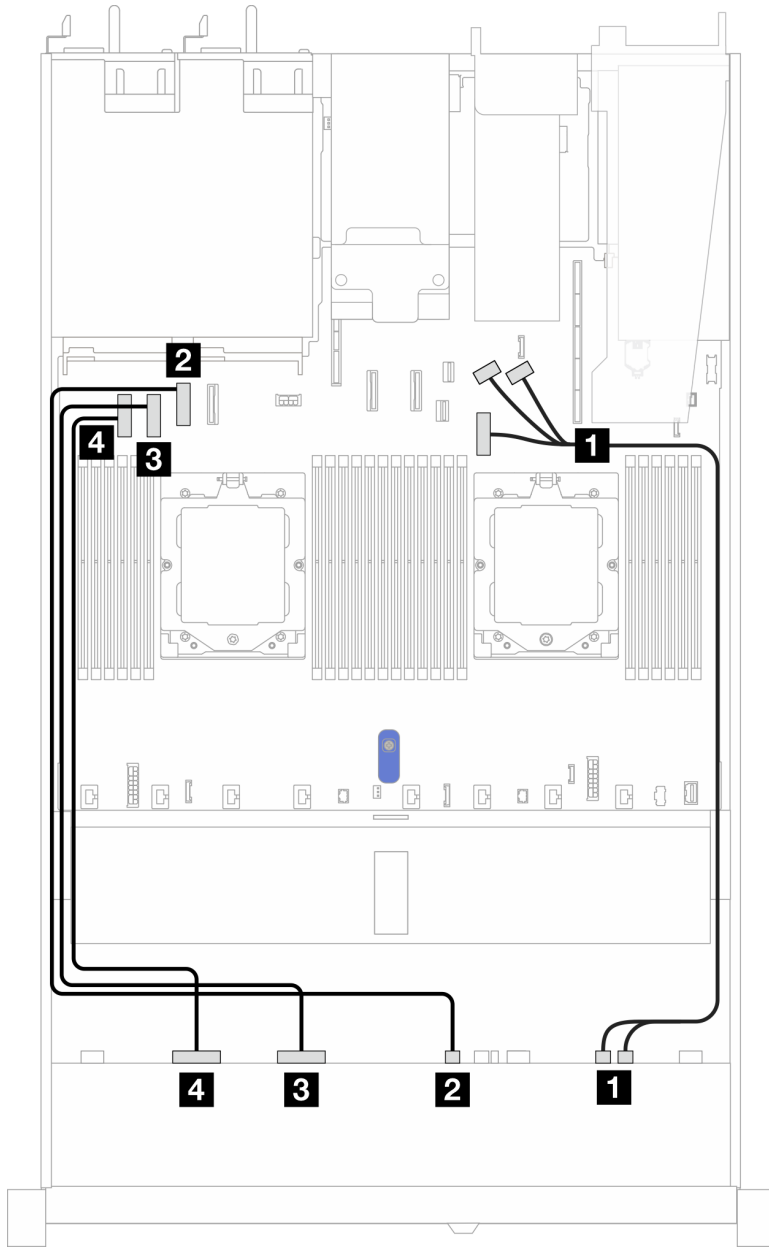


Figure 324. On-board configuration of 10 x 2.5" NVMe drive backplane

Table 85. On-board configuration of 10 x 2.5" NVMe drive backplane

Backplane	From	To
Front BP(NVMe)	1 NVMe 6-7, NVMe 8-9	1 PCIe connectors 7, 8, and 9
	3 NVMe 4-5	3 PCIe connector 3
	4 NVMe 2-3	4 PCIe connector 2
	5 NVMe 0-1	5 PCIe connector 1

6 x 2.5" SAS/SATA + 4 x 2.5" AnyBay backplane

See this section to understand the cable routing of 6 front 2.5" SAS/SATA drives and 4 front 2.5" AnyBay drives with 10 x 2.5 backplane (Gen 5) installed.

To connect power cables for a backplane for standard 2.5" or 3.5" drives, refer to [“Backplane power cable routing” on page 207](#).

To connector cables of RAID flash power modules, refer to [“RAID flash power modules” on page 224](#).

To connect cables for a rear NVMe/SAS/SATA drive backplane, refer to [“Rear NVMe/SAS/SATA drive backplane” on page 227](#).

To connect signal cables for a backplane for standard 6 front 2.5" SAS/SATA drives and 4 front 2.5" AnyBay drives, refer to the following cable routing scenarios depending on your server configuration:

- [“Cable routing with an SFF HBA/RAID adapter” on page 348](#)
- [“Cable routing with a CFF HBA/RAID adapter” on page 350](#)

Cable routing with an SFF HBA/RAID adapter

The following tables show the mapping relationship between backplane connectors and a 16i SFF HBA/RAID adapter (Gen 3 or Gen 4).

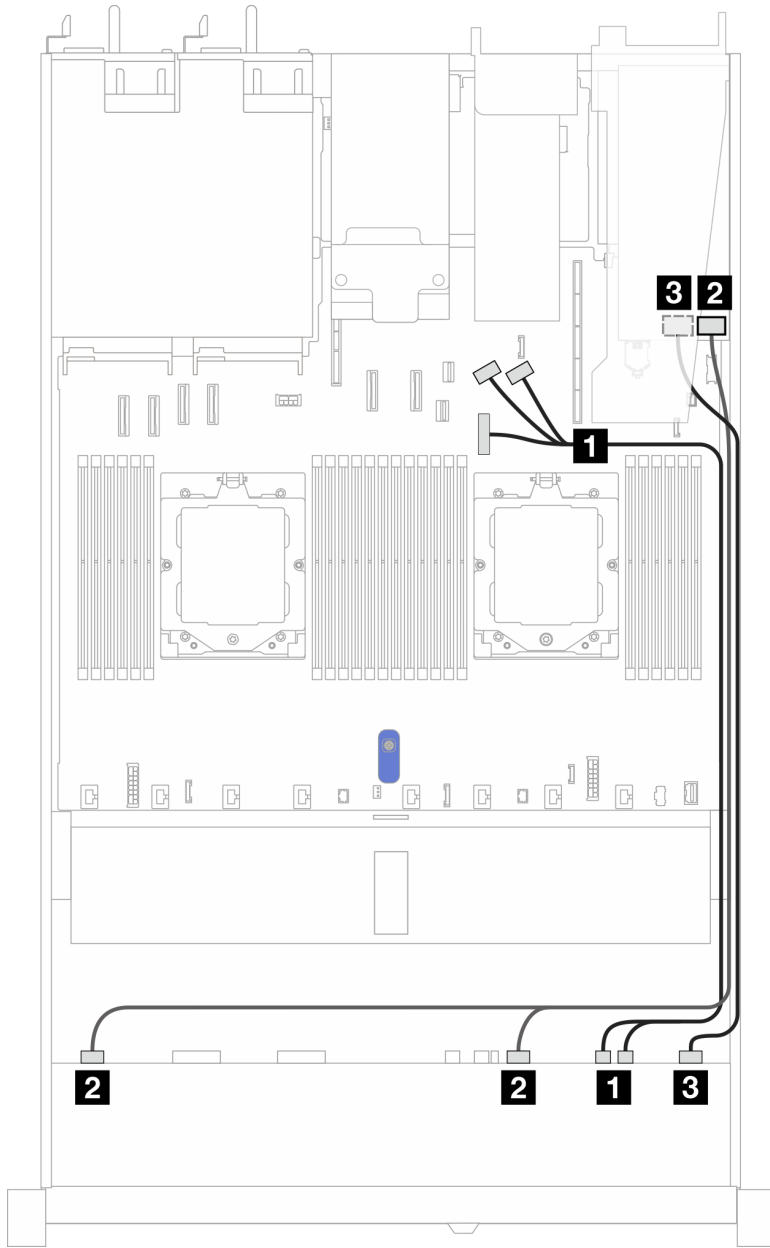


Figure 325. Cable routing for 6 front 2.5" SAS/SATA drives and 4 front 2.5" AnyBay drives bays with a 16i SFF RAID adapter (Gen 3 or Gen 4)

Table 86. Mapping between 6 front 2.5" SAS/SATA drives and 4 front 2.5" AnyBay drives bays and a 16i SFF HBA/RAID adapter (Gen 3 or Gen 4)

Backplane	From	To
Front BP (NVMe)	1 NVMe 6-7, NVMe 8-9	1 PCIe connectors 7, 8, and 9
Front BP (SAS)	2 SAS 0-3, SAS 4-7	2 <ul style="list-style-type: none"> • Gen 3: C0, C1 • Gen 4: C0
	3 SAS 8-9	3 <ul style="list-style-type: none"> • Gen 3: C2 • Gen 4: C1

Cable routing with a CFF HBA/RAID adapter

The following tables show the mapping relationship between backplane connectors and a CFF HBA/RAID adapter (Gen 3 or Gen 4).

Note: The following illustrations are for Gen 4 adapters. For Gen 3 adapters, the illustration might be slightly different.

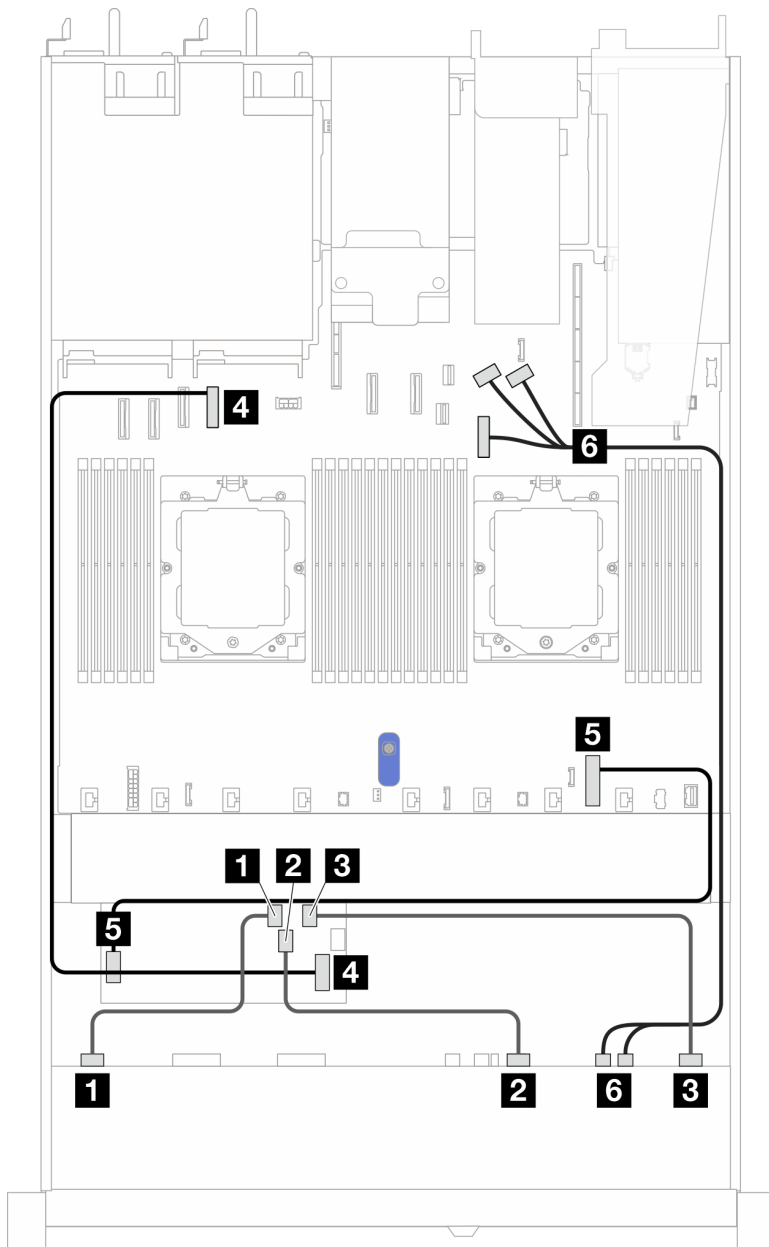


Figure 326. Cable routing for 10 AnyBay drives with a 16i CFF RAID adapter (Gen 3 or Gen 4)

Table 87. Mapping between one front AnyBay backplane and a 16i SFF HBA/RAID adapter (Gen 3 or Gen 4)

Backplane	From	To
Front BP (SAS)	1 SAS 0-3	1 C0
	2 SAS 4-7	2 C1

Table 87. Mapping between one front AnyBay backplane and a 16i SFF HBA/RAID adapter (Gen 3 or Gen 4) (continued)

Backplane	From	To
	3 SAS 8-9	3 C2
CFF RAID adapter	4 MB input	4 PCIe connector 4
	5 Power connector	5 Internal RAID power connector
Front BP (NVMe)	6 NVMe 6-7, NVMe 8-9	6 PCIe connectors 7, 8, and 9

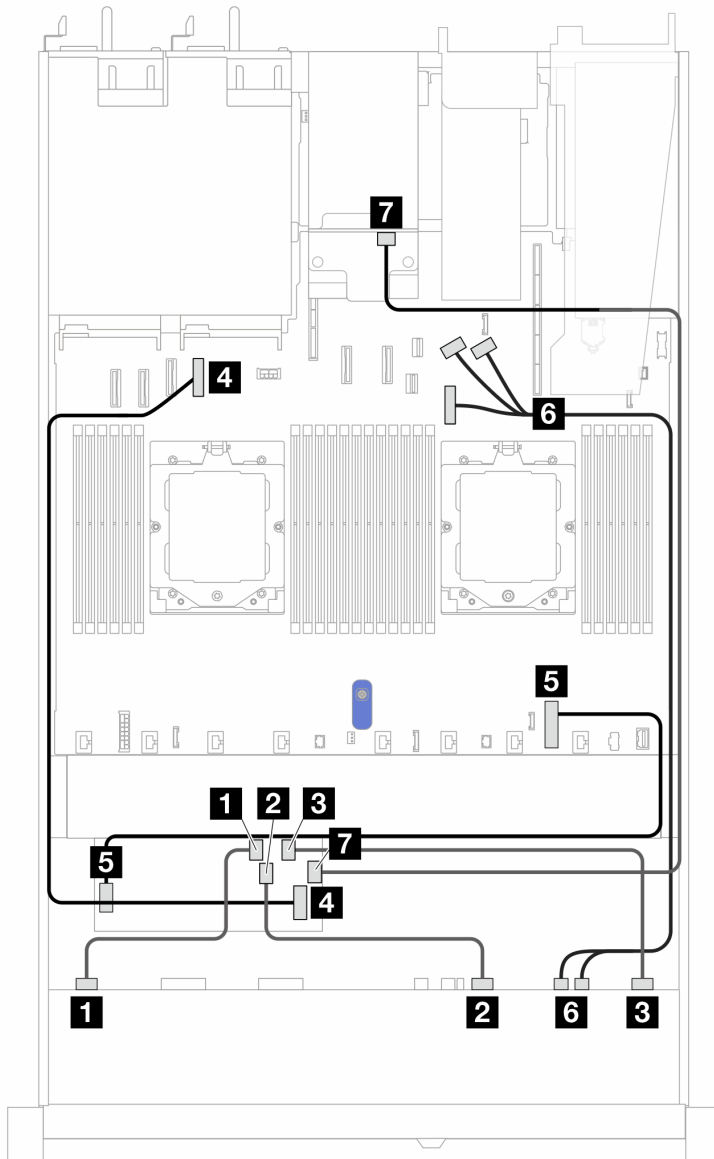


Figure 327. Cable routing for 10 AnyBay drives and 2x2.5" rear SAS/SATA with a 16i CFF RAID adapter (Gen 3 or Gen 4)

Table 88. Mapping between one front AnyBay backplane and a 16i SFF HBA/RAID adapter (Gen 3 or Gen 4)

Backplane	From	To
Front BP (SAS)	1 SAS 0-3	1 C0

Table 88. Mapping between one front AnyBay backplane and a 16i SFF HBA/RAID adapter (Gen 3 or Gen 4) (continued)

Backplane	From	To
	2 SAS 4-7	2 C1
	3 SAS 8-9	3 C2
CFF RAID adapter	4 MB input	4 PCIe connector 4
	5 Power connector	5 Internal RAID power connector
Front BP (NVMe)	6 NVMe 6-7, NVMe 8-9	6 PCIe connectors 7, 8, and 9
Rear BP	7 SAS	7 C3

6 x 2.5" SAS/SATA + 2 x 2.5" AnyBay + 2 x 2.5" NVMe backplane

See this section to understand the cable routing of 6 front SAS/SATA drives, 2 front AnyBay drives, and 2 front NVMe drives with 10 x 2.5 backplane (Gen 5) installed.

To connect power cables for a backplane for standard 2.5" or 3.5" drives, refer to [“Backplane power cable routing” on page 207](#).

To connector cables of RAID flash power modules, refer to [“RAID flash power modules” on page 224](#).

To connect cables for a rear NVMe/SAS/SATA drive backplane, refer to [“Rear NVMe/SAS/SATA drive backplane” on page 227](#).

To connect signal cables, refer to the following cable routing scenarios depending on your server configuration:

- [“Cable routing with an SFF HBA/RAID adapter” on page 352](#)
- [“Cable routing with a CFF HBA/RAID adapter” on page 353](#)

Cable routing with an SFF HBA/RAID adapter

The following tables show the mapping relationship between backplane connectors and an 8i SFF HBA/RAID adapter (Gen 3 or Gen 4).

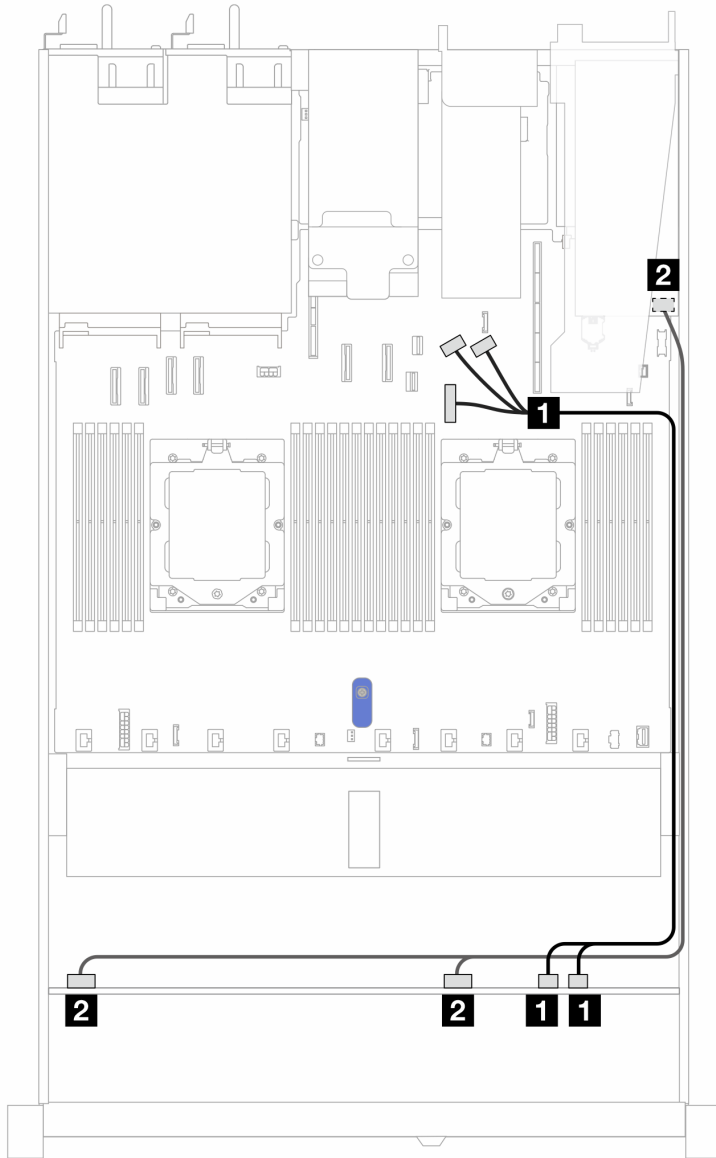


Figure 328. Cable routing for 6 front 2.5" SAS/SATA drives, 2 front 2.5" AnyBay drives, and 2 front 2.5" NVMe drives with an 8i SFF RAID adapter (Gen 3 or Gen 4)

Table 89. Mapping between 6 front 2.5" SAS/SATA drives, 2 front 2.5" AnyBay drives, and 2 front 2.5" NVMe drives with an 8i SFF RAID adapter (Gen 3 or Gen 4)

Backplane	From	To
Front BP (NVMe)	1 NVMe 6-7, NVMe 8-9	1 PCIe connectors 7, 8, and 9
Front BP (SAS)	2 SAS 0-3, SAS 4-7	2 <ul style="list-style-type: none"> • Gen 3: C0, C1 • Gen 4: C0

Cable routing with a CFF HBA/RAID adapter

The following table show the mapping relationship between backplane connectors and an 8i CFF HBA/RAID adapter (Gen 3).

To connector the power cable for CFF RAID adapter, refer to “CFF RAID adapter” on page 210.

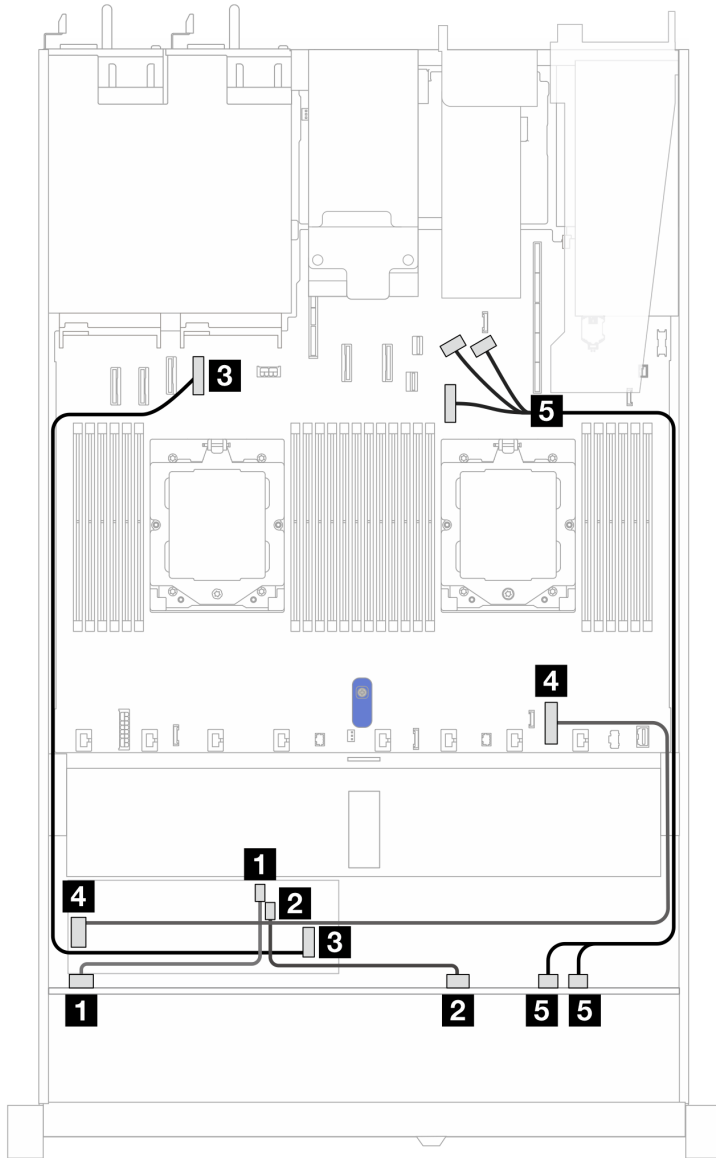


Figure 329. Cable routing for 6 front 2.5" SAS/SATA drives, 2 front 2.5" AnyBay drives, and 2 front 2.5" NVMe drives with an 8i CFF RAID adapter (Gen 3)

Table 90. Mapping between 6 front 2.5" SAS/SATA drives, 2 front 2.5" AnyBay drives, and 2 front 2.5" NVMe drives and an 8i CFF RAID adapter (Gen 3)

Backplane	From	To
Front BP (SAS)	1 SAS 0-3	1 C0
	2 SAS 4-7	2 C1
CFF RAID adapter	3 MB input	3 PCIe connector 4
	4 Power connector	4 Internal RAID power connector
Front BP (NVMe)	5 NVMe 6-7, NVMe 8-9	5 PCIe connectors 7, 8, and 9

16-EDSFF drive backplane

Use this section to understand the backplane cable routing for server model with 16 E1.S EDSFF front drives.

Cable routing with a re-timer adapter

The following table shows the mapping relationship between backplane, re-timer adapter and system board connectors.

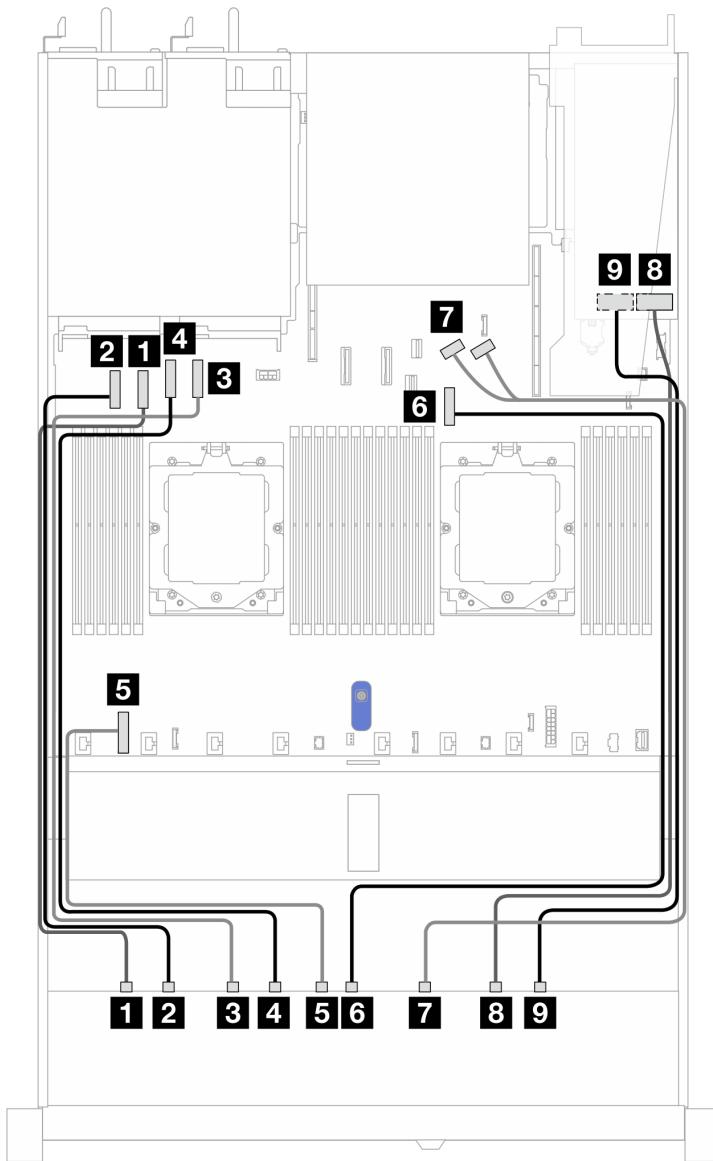


Table 91. Mapping between one front AnyBay backplane and a re-timer adapter with onboard connectors

From	To
1 EDSFF 0-1	1 PCIe connector 2
2 EDSFF 2-3	2 PCIe connector 1
3 EDSFF 4-5	3 PCIe connector 4

Table 91. Mapping between one front AnyBay backplane and a re-timer adapter with onboard connectors (continued)

From	To
4 EDSFF 6–7	4 PCIe connector 3
5 Power	5 Backplane power connector on the system board
6 EDSFF 8–9	6 PCIe connector 7
7 EDSFF 10–11	7 PCIe connector 8 and 9
8 EDSFF 12–13	8 C0
9 EDSFF 14–15	9 C1

Chapter 3. Problem determination

Use the information in this section to isolate and resolve issues that you might encounter while using your server.

Lenovo servers can be configured to automatically notify Lenovo Support if certain events are generated. You can configure automatic notification, also known as Call Home, from management applications, such as the Lenovo XClarity Administrator. If you configure automatic problem notification, Lenovo Support is automatically alerted whenever a server encounters a potentially significant event.

To isolate a problem, you should typically begin with the Lenovo XClarity Controller event log.

To isolate a problem, you should typically begin with the event log of the application that is managing the server:

- If you are managing the server from the Lenovo XClarity Administrator, begin with the Lenovo XClarity Administrator event log.
- If you are using some other management application, begin with the Lenovo XClarity Controller event log.

Web resources

- **Tech tips**

Lenovo continually updates the support website with the latest tips and techniques that you can use to solve issues that your server might encounter. These Tech Tips (also called retain tips or service bulletins) provide procedures to work around issues or solve problems related to the operation of your server.

To find the Tech Tips available for your server:

1. Go to <http://datacentersupport.lenovo.com>, and input the model name or machine type of your server in the search bar to navigate to the support page.
2. Click on **How To's** from the navigation pane.
3. Click **Article Type** → **Solution** from the drop-down menu.

Follow the on-screen instructions to choose the category for the problem that you are having.

- **Lenovo Data Center Forum**

- Check https://forums.lenovo.com/t5/Datacenter-Systems/ct-p/sv_eg to see if someone else has encountered a similar problem.

Event logs

An *alert* is a message or other indication that signals an event or an impending event. Alerts are generated by the Lenovo XClarity Controller or by UEFI in the servers. These alerts are stored in the Lenovo XClarity Controller Event Log. If the server is managed by the Lenovo XClarity Administrator, alerts are automatically forwarded to this management application.

Note: For a listing of events, including user actions that might need to be performed to recover from an event, see the *Messages and Codes Reference*, which is available at https://thinksystem.lenovofiles.com/help/topic/SR645V3/pdf_files.html.

Lenovo XClarity Controller event log

The Lenovo XClarity Controller monitors the physical state of the server and its components using sensors that measure internal physical variables such as temperature, power-supply voltages, fan speeds, and component status. The Lenovo XClarity Controller provides various interfaces to systems management software and to system administrators and users to enable remote management and control of a server.

The Lenovo XClarity Controller monitors all components of the server and posts events in the Lenovo XClarity Controller event log.

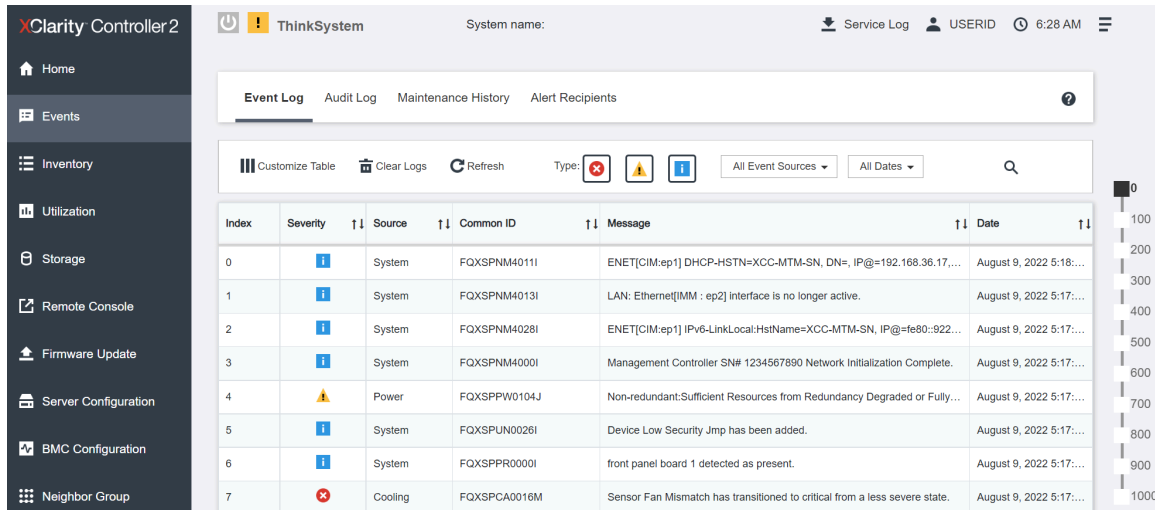


Figure 330. Lenovo XClarity Controller event log

For more information about accessing the Lenovo XClarity Controller event log, see:

“Viewing Event Logs” section in the XCC documentation compatible with your server at https://sysmgt.lenovofiles.com/help/topic/lxcc_frontend/lxcc_overview.html

Lenovo XClarity Administrator event log

If you are using Lenovo XClarity Administrator to manage server, network, and storage hardware, you can view the events from all managed devices through the XClarity Administrator.

Logs

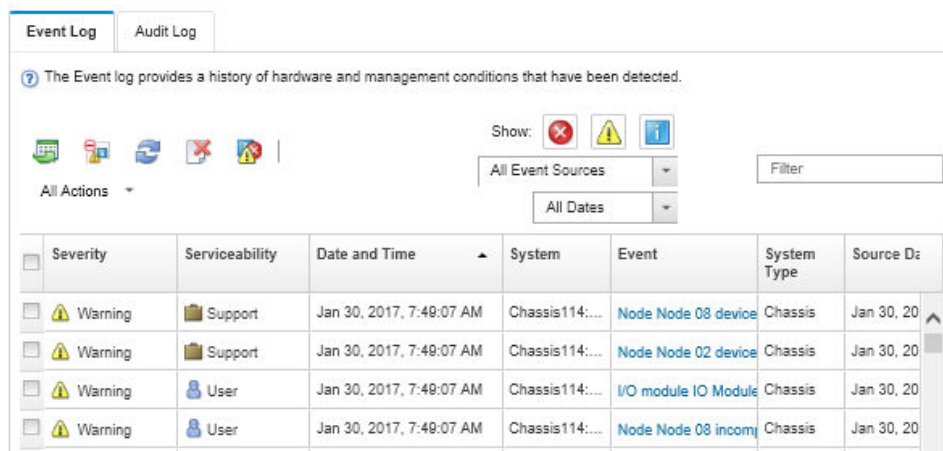


Figure 331. Lenovo XClarity Administrator event log

For more information about working with events from XClarity Administrator, see:

http://sysmgt.lenovofiles.com/help/topic/com.lenovo.lxca.doc/events_vieweventlog.html

Specifications

Summary of the features and specifications of the server. Depending on the model, some features might not be available, or some specifications might not apply.

Refer to the below table for specifications categories and the content of each category.

Specification category	Technical specifications	Mechanical specifications	Environmental specifications
Content	<ul style="list-style-type: none"> • Processor • Memory • Internal Drive • Expansion slots • Graphics processing units (GPU) • Integrated functions and I/O connectors • Network • Rear button • RAID adapter • Host bus adapter • System fan • Electrical input • Minimal configuration for debugging • Operating systems 	<ul style="list-style-type: none"> • Dimension • Weight 	<ul style="list-style-type: none"> • Acoustical noise emissions • Ambient temperature management • Environmental

Technical specifications

Summary of the technical specifications of server. Depending on the model, some features might not be available, or some specifications might not apply.

Processor
<p>Supports 4th Gen AMD® EPYC™ processors, with 5nm process technology.</p> <ul style="list-style-type: none"> • Up to two processors with the new LGA 6096 (SP5) socket • Up to 96 Zen4 cores (192 threads) per socket • Up to 4 xGMI3 links at up to 32 GT/s • Thermal Design Power (TDP): up to 360 watts • Maximum CPU Thermal Design Power (cTDP): up to 400 watts <p>For a list of supported processors, see: https://serverproven.lenovo.com/.</p>

Memory

See for detailed information about memory configuration and setup.

- Slots: 24 dual inline memory module (DIMM) connectors that support up to:
 - 24 RDIMMs
 - 24 3DS RDIMMs
- Memory module types:
 - TruDDR5 RDIMM: 16 GB (1Rx8), 32 GB (2Rx8)
 - TruDDR5 10x4 RDIMM: 32 GB (1Rx4), 64 GB (2Rx4), 96 GB (2Rx4)
 - TruDDR5 9x4 RDIMM: 32 GB (1Rx4), 64 GB (2Rx4)
 - TruDDR5 3DS RDIMM: 128 GB (4Rx4), 256 GB (8Rx4)
- Speed: Operating speed depends on processor model and UEFI settings.
 - Maximum speed: 4800 MT/s
- Minimum memory: 16 GB
- Maximum memory:
 - RDIMM: 2.25 TB: 24 x 96 GB RDIMMs
 - 3DS RDIMM: 6 TB: 24 x 256 GB 3DS RDIMMs

For a list of supported memory options, see <https://serverproven.lenovo.com/>.

Internal drives

Front:

- Up to two 3.5" hot-swap SATA and two 3.5" hot-swap NVMe/SATA drives
- Up to four 3.5" hot-swap SATA drives
- Up to four 3.5" hot-swap SAS/SATA drives
- Up to four 3.5" hot-swap AnyBay (SAS/SATA/NVMe) drives
- Up to four 3.5" hot-swap AnyBay (SAS/SATA/NVMe) drives for U.3 configuration
- Up to four 2.5" hot-swap SATA drives
- Up to four 2.5" hot-swap SAS/SATA drives
- Up to four 2.5" hot-swap NVMe drives
- Up to four 2.5" hot-swap AnyBay (SAS/SATA/NVMe) drives
- Up to eight 2.5" hot-swap SATA drives
- Up to eight 2.5" hot-swap SAS/SATA drives
- Up to eight 2.5" hot-swap AnyBay (SAS/SATA/NVMe) drives for U.3 configuration
- Up to six 2.5" hot-swap SAS/SATA and two 2.5" hot-swap AnyBay (SAS/SATA/NVMe) and two 2.5" hot-swap NVMe drives
- Up to six 2.5" hot-swap SAS/SATA and four 2.5" hot-swap AnyBay (SAS/SATA/NVMe) drives
- Up to ten 2.5" hot-swap SATA drives
- Up to ten 2.5" hot-swap SAS/SATA drives
- Up to ten 2.5" hot-swap NVMe drives
- Up to ten 2.5" hot-swap AnyBay (SAS/SATA/NVMe) drives
- Up to ten 2.5" hot-swap AnyBay (SAS/SATA/NVMe) drives for U.3 configuration
- Up to 16 hot-swap EDSFF drives

Inside:

- Up to two internal SATA or NVMe M.2 drives

Rear:

- Up to two 2.5" hot-swap SAS/SATA drives
- Up to two 2.5" hot-swap NVMe drives
- Up to two 7mm hot-swap SATA or RAID NVMe drives

Expansion slots

Depending on the model, your server supports up to three PCIe slots in the rear.

- PCIe x16/x8, low-profile
- PCIe x16/x8, full-height

Note: The two PCIe slots in the front are only supported when 4 x 2.5" chassis is used. They are not supported for 10 x 2.5" chassis.

Maximum five external slots are supported.

Riser	Slot	Expansion slots
Riser 1	Slot 1	<ul style="list-style-type: none"> • PCIe x16, low-profile, Gen 4 • PCIe x16, low-profile, Gen 5
	Slot 2	<ul style="list-style-type: none"> • PCIe x16, low-profile, Gen 4 • PCIe x16, full-height, Gen 4
Riser 2	Slot 3	<ul style="list-style-type: none"> • PCIe x16, low-profile, Gen 4 • PCIe x16, full-height, Gen 4 • PCIe x16, low-profile, Gen 5
Riser 3	Slot 4	<ul style="list-style-type: none"> • PCIe x8, low-profile, Gen 4
Riser 4	Slot 5	<ul style="list-style-type: none"> • PCIe x16/x8, full-height, Gen 4

Graphics processing unit (GPU)

Your server supports the following GPUs:

- Half-length, single-wide:
 - NVIDIA® A2
 - NVIDIA® L4

Integrated functions and I/O connectors

- Lenovo XClarity Controller (XCC), which provides service processor control and monitoring functions, video controller, and remote keyboard, video, mouse, and remote drive capabilities.
 - The server supports Lenovo XClarity Controller 2 (XCC2). For additional information about Lenovo XClarity Controller 2 (XCC2), refer to https://sysmgmt.lenovofiles.com/help/topic/lxcc_frontend/lxcc_overview.html.
- One XCC system management port on the rear to connect to a systems-management network. This RJ-45 connector is dedicated to the Lenovo XClarity Controller functions and runs at 1 GB speed.
- A group of two or four Ethernet connectors on OCP 3.0 module
- Up to four USB 3.2 Gen1 (5 Gbps) ports:
 - Three on the rear of the server
 - (Optional) One on the front of the server¹.
- One internal USB 3.2 Gen1 (5 Gbps) port
- (Optional) One USB 2.0 port on the front of the server¹.
- (Optional) External LCD diagnostics handset connector on the front of the server¹
- Up to two VGA connectors
 - One on the rear of the server
 - (Optional) One on the front of the server¹.
- (Optional) One serial port connector on the rear of the server².

Notes:

1. Available when the front I/O module is installed in the server.
2. Available when the serial port cable is installed in the server.

Network

OCP module

Note: If ThinkSystem V3 Management NIC Adapter Kit is installed on the server, it will not be displayed on the PCIe card list of system management software, such as XCC, LXPM, and so on.

Rear button

NMI button on the rear of the server

RAID adapter

Hardware RAID 0, 1, 10:

- ThinkSystem RAID 540-8i PCIe Gen4 12Gb Adapter
- ThinkSystem RAID 540-16i PCIe Gen4 12Gb Adapter

Hardware RAID 0, 1, 5, 10:

- ThinkSystem RAID 5350-8i PCIe 12Gb Adapter

Hardware RAID 0, 1, 5, 6, 10, 50, 60:

- ThinkSystem RAID 9350-8i 2GB Flash PCIe 12Gb Internal Adapter
- ThinkSystem RAID 9350-8i 2GB Flash PCIe 12Gb Adapter
- ThinkSystem RAID 9350-16i 4GB Flash PCIe 12Gb Internal Adapter
- ThinkSystem RAID 940-8i 4GB Flash PCIe Gen4 12Gb Adapter
- ThinkSystem RAID 940-16i 4GB Flash PCIe Gen4 12Gb Adapter
- ThinkSystem RAID 940-16i 8GB Flash PCIe Gen4 12Gb Adapter
- ThinkSystem RAID 940-16i 8GB Flash PCIe Gen4 12Gb Internal Adapter
- ThinkSystem RAID 940-8e 4GB Flash PCIe Gen4 12Gb Adapter

Other RAID adapters without RAID levels:

- ThinkSystem 4350-8i SAS/SATA 12Gb HBA
- ThinkSystem 4350-16i SAS/SATA 12Gb HBA
- ThinkSystem 440-8i SAS/SATA PCIe Gen4 12Gb HBA
- ThinkSystem 440-16i SAS/SATA PCIe Gen4 12Gb HBA
- ThinkSystem 440-16i SAS/SATA PCIe Gen4 12Gb Internal HBA
- ThinkSystem 440-8e SAS/SATA PCIe Gen4 12Gb HBA
- ThinkSystem 440-16e SAS/SATA PCIe Gen4 12Gb HBA

Host bus adapter

Support the following HBAs:

- ThinkSystem 4350-8i SAS/SATA 12Gb HBA^{note}
- ThinkSystem 4350-16i SAS/SATA 12Gb HBA
- ThinkSystem 440-8e SAS/SATA PCIe Gen4 12Gb HBA
- ThinkSystem 440-8i SAS/SATA PCIe Gen4 12Gb HBA
- ThinkSystem 440-16e SAS/SATA 12Gb HBA
- ThinkSystem 440-16i SAS/SATA PCIe Gen4 12Gb HBA
- ThinkSystem 440-16i SAS/SATA PCIe Gen4 12Gb Internal HBA
- ThinkSystem Emulex 16Gb Gen6 FC Single-port HBA
- ThinkSystem Emulex 16Gb Gen6 FC Dual-port HBA
- ThinkSystem QLogic 16Gb Enhanced Gen5 FC Single-port HBA
- ThinkSystem QLogic 16Gb Enhanced Gen5 FC Dual-port HBA

Note: ThinkSystem 4350-8i SAS/SATA 12GB HBA and ThinkSystem Intel E810-DA2 10/25GbE SFP28 2-Port PCIe Ethernet Adapter cannot be mixed.

System fan

Supported fan types:

- Standard fan 4056 (dual-rotor, 21000 RPM)
- Performance fan 4056 (dual-rotor, 28000 RPM)

Fan redundancy: N+1 redundancy, one redundant fan rotor

- One processor: six hot-swap dual-rotor system fans (one redundant fan rotor)
- Two processors: eight hot-swap dual-rotor system fans (one redundant fan rotor)

Notes:

- The redundant cooling by the fans in the server enables continued operation if one rotor of a fan fails.
- When the system is powered off but still plugged in to AC power, fans 1 and 2 may continue to spin at a much lower speed. This is the system design to provide proper cooling.

Electrical input

One or two hot-swap power supplies for redundancy support:

Power supply	100-127 V ac	200-240 V ac	240 V dc	-48 V dc
750-watt 80 PLUS Platinum		√	√	
750-watt 80 PLUS Titanium		√	√	
1100-watt 80 PLUS Platinum	√	√	√	
1100-watt 80 PLUS Titanium		√	√	
1100-watt -48 V DC				√
1800-watt 80 PLUS Platinum		√	√	
1800-watt 80 PLUS Titanium		√	√	

CAUTION:

- **240 V dc input is supported in Chinese Mainland ONLY.**
- **Power supply with 240 V dc input cannot support hot plugging power cord function. Before removing the power supply with dc input, please turn off server or disconnect dc power sources at the breaker panel or by turning off the power source. Then, remove the power cord.**

Minimal configuration for debugging

- One processor in processor socket 1
- One memory module in slot 7
- One power supply
- One HDD/SSD drive or one M.2 drive, or one 7mm drive (if OS is needed for debugging)
- Six system fans (with one processor)

Operating systems
Supported and certified operating systems: <ul style="list-style-type: none"> • Canonical Ubuntu • Microsoft Windows • Microsoft Windows Server • Red Hat Enterprise Linux • SUSE Linux Enterprise Server • VMware ESXi References: <ul style="list-style-type: none"> • Complete list of available operating systems: https://lenovopress.com/osig. • OS deployment instructions, see “Deploy the operating system” in <i>User Guide</i>.

Mechanical specifications

Summary of the mechanical specifications of server. Depending on the model, some features might not be available, or some specifications might not apply.

Dimension
1 U server <ul style="list-style-type: none"> • Height: 43 mm (1.69 inches) • Width (with EIA flange): 481.7 mm (18.96 inches) • Depth: 827.3 mm (32.57 inches)

Weight
<ul style="list-style-type: none"> • Up to 26.3 kg (57.98 lb)

Environmental specifications

Summary of the environmental specifications of server. Depending on the model, some features might not be available, or some specifications might not apply.

Acoustical noise emissions				
The server has the following acoustic noise emissions declaration:				
Configuration	Minimal	Typical	Storage rich	GPU rich
Sound power level (L_{WA}d)	<ul style="list-style-type: none"> • Idling: 5.6 Bel • Operating: 7.6 Bel 	<ul style="list-style-type: none"> • Idling: 6.7 Bel • Operating: 8.7 Bel 	<ul style="list-style-type: none"> • Idling: 7.5 Bel • Operating: 7.7 Bel 	<ul style="list-style-type: none"> • Idling: 6.7 Bel • Operating: 8.3 Bel
Sound pressure (L_{pAm})	<ul style="list-style-type: none"> • Idling: 41.3 dBA • Operating: 61.5 dBA 	<ul style="list-style-type: none"> • Idling: 52.5 dBA • Operating: 72.5 dBA 	<ul style="list-style-type: none"> • Idling: 60.1 dBA • Operating: 62.8 dBA 	<ul style="list-style-type: none"> • Idling: 52.5 dBA • Operating: 67.8 dBA
The declared sound levels are based on the following configurations, which may change depending on configurations or conditions.				
Component	Minimal configuration	Typical configuration	Storage rich configuration	GPU rich configuration
Fan	Eight standard fans	Eight performance fans	Eight performance fans	Eight performance fans
Processor	Two 240 W processors	Two 300 W processors	Two 240 W processors	Two 300 W processors
Heat sink	Two 1U performance heat sinks	Two 1U performance heat sinks	Two 1U performance heat sinks	Two 1U performance heat sinks

Acoustical noise emissions				
Memory	Twenty-four 64 GB RDIMMs	Twenty-four 64 GB RDIMMs	Twelve 64 GB RDIMMs	Twenty-four 64 GB RDIMMs
Drive	Eight SAS hard disk drives	Ten SAS hard disk drives	Twelve SAS hard disk drives	Ten SAS hard disk drives
RAID adapter	One 440-16i CFF RAID adapter	One 940-16i SFF RAID adapter	One 940-16i SFF RAID adapter	One 940-16i SFF RAID adapter
OCP adapter	One Broadcom 5719 1GbE RJ45 4-port OCP Ethernet adapter	One Broadcom 5719 1GbE RJ45 4-port OCP Ethernet adapter	One Broadcom 5719 1GbE RJ45 4-port OCP Ethernet adapter	One Broadcom 5719 1GbE RJ45 4-port OCP Ethernet adapter
Power supply unit	Two 1100 W power supply units	Two 1100 W power supply units	Two 750 W power supply units	Two 1100 W power supply units
GPU adapter	None	None	None	One NVIDIA® A2 GPU
<p>Notes:</p> <ul style="list-style-type: none"> • These sound power levels are measured in controlled acoustical environments according to procedures specified by ISO 7779 and are reported in accordance with ISO 9296. • The declared sound levels may change depending on configuration/conditions, for example, with high-power NICs, high-power processors and GPUs, such as ThinkSystem Mellanox ConnectX-6 HDR/200GbE QSFP56 1-port/2-port PCIe Adapter, ThinkSystem Broadcom 57454 10GBASE-T 4-port OCP module. • Government regulations (such as those prescribed by OSHA or European Community Directives) may govern noise level exposure in the workplace and may apply to you and your server installation. The actual sound pressure levels in your installation depend upon a variety of factors, including the number of racks in the installation; the size, materials, and configuration of the room; the noise levels from other equipment; the room ambient temperature, and employee's location in relation to the equipment. Further, compliance with such government regulations depends on a variety of additional factors, including the duration of employees' exposure and whether employees wear hearing protection. Lenovo recommends that you consult with qualified experts in this field to determine whether you are in compliance with the applicable regulations. 				

Ambient temperature management

The server is supported in the following environment:

- Air temperature:
 - Operating:
 - ASHRAE class H1: 5–25°C (41–77°F); when the altitude exceeds 900 m (2953 ft), the maximum ambient temperature value decreases by 1°C (1.8°F) with every 500 m (984 ft) of altitude increase.
 - ASHRAE class A2: 10–35°C (50–95°F); when the altitude exceeds 900 m (2953 ft), the maximum ambient temperature value decreases by 1°C (1.8°F) with every 300 m (984 ft) of altitude increase.
 - ASHRAE class A3: 5–40°C (41–104°F); when the altitude exceeds 900 m (2953 ft), the maximum ambient temperature value decreases by 1°C (1.8°F) with every 175 m (574 ft) of altitude increase.
 - ASHRAE class A4: 5–45°C (41–113°F); when the altitude exceeds 900 m (2953 ft), the maximum ambient temperature value decreases by 1°C (1.8°F) with every 125 m (410 ft) of altitude increase.
 - Server off: 5–45°C (41–113°F)
 - Shipping or storage: -40–60°C (-40–140°F)
- Maximum altitude: 3050 m (10 000 ft)
- Relative humidity (non-condensing):
 - Operating:
 - ASHRAE Class H1: 8%–80%, maximum dew point: 17°C (62.6°F)
 - ASHRAE Class A2: 8%–80%, maximum dew point: 21°C (70°F)
 - ASHRAE Class A3: 8%–85%, maximum dew point: 24°C (75°F)
 - ASHRAE Class A4: 8%–90%, maximum dew point: 24°C (75°F)
 - Shipment or storage: 8%–90%
- Particulate contamination

Attention: Airborne particulates and reactive gases acting alone or in combination with other environmental factors such as humidity or temperature might pose a risk to the server. For information about the limits for particulates and gases, see [“Particulate contamination” on page 367](#).

Environment

ThinkSystem SR645 V3 complies with ASHRAE Class A2 specifications. System performance may be impacted when operating temperature is outside ASHRAE A2 specification.

- Air temperature:
 - Operating
 - ASHRAE Class A2: 10°C to 35°C (50°F to 95°F); the maximum ambient temperature decreases by 1°C for every 300 m (984 ft) increase in altitude above 900 m (2,953 ft).
 - Server off: 5°C to 45°C (41°F to 113°F)
 - Shipment/storage: -40°C to 60°C (-40°F to 140°F)
- Maximum altitude: 3,050 m (10,000 ft)
- Relative Humidity (non-condensing):
 - Operating
 - ASHRAE Class A2: 8% to 80%; maximum dew point: 21°C (70°F)
 - Shipment/storage: 8% to 90%
- Particulate contamination

Attention: Airborne particulates and reactive gases acting alone or in combination with other environmental factors such as humidity or temperature might pose a risk to the server. For information about the limits for particulates and gases, see [“Particulate contamination” on page 367](#).

Notes:

- The server is designed for standard data center environment and recommended to be placed in industrial data center.
- When the ambient temperature is greater than the supported maximum temperature (ASHRAE A4 45°C), the server will shut down. The server will not power on again until the ambient temperature falls within the supported temperature range.

The server is designed for standard data center environment and is recommended to be placed in industrial data center. Depending on hardware configurations, the server complies with ASHRAE Class A2, A3, or A4 specifications with certain thermal restrictions. System performance may be impacted when operating temperature is out of permitted conditions.

Particulate contamination

Attention: Airborne particulates (including metal flakes or particles) and reactive gases acting alone or in combination with other environmental factors such as humidity or temperature might pose a risk to the device that is described in this document.

Risks that are posed by the presence of excessive particulate levels or concentrations of harmful gases include damage that might cause the device to malfunction or cease functioning altogether. This specification sets forth limits for particulates and gases that are intended to avoid such damage. The limits must not be viewed or used as definitive limits, because numerous other factors, such as temperature or moisture content of the air, can influence the impact of particulates or environmental corrosives and gaseous contaminant transfer. In the absence of specific limits that are set forth in this document, you must implement practices that maintain particulate and gas levels that are consistent with the protection of human health and safety. If Lenovo determines that the levels of particulates or gases in your environment have caused damage to the device, Lenovo may condition provision of repair or replacement of devices or parts on implementation of appropriate remedial measures to mitigate such environmental contamination. Implementation of such remedial measures is a customer responsibility.

Table 92. Limits for particulates and gases

Contaminant	Limits
Reactive gases	Severity level G1 as per ANSI/ISA 71.04-1985 ¹ : <ul style="list-style-type: none"> • The copper reactivity level shall be less than 200 Angstroms per month ($\text{\AA}/\text{month} \approx 0.0035 \mu\text{g}/\text{cm}^2\text{-hour}$ weight gain).² • The silver reactivity level shall be less than 200 Angstroms per month ($\text{\AA}/\text{month} \approx 0.0035 \mu\text{g}/\text{cm}^2\text{-hour}$ weight gain).³ • The reactive monitoring of gaseous corrosivity must be conducted approximately 5 cm (2 in.) in front of the rack on the air inlet side at one-quarter and three-quarter frame height off the floor or where the air velocity is much higher.
Airborne particulates	Data centers must meet the cleanliness level of ISO 14644-1 class 8. For data centers without airside economizer, the ISO 14644-1 class 8 cleanliness might be met by choosing one of the following filtration methods: <ul style="list-style-type: none"> • The room air might be continuously filtered with MERV 8 filters. • Air entering a data center might be filtered with MERV 11 or preferably MERV 13 filters. For data centers with airside economizers, the choice of filters to achieve ISO class 8 cleanliness depends on the specific conditions present at that data center. <ul style="list-style-type: none"> • The deliquescent relative humidity of the particulate contamination should be more than 60% RH.⁴ • Data centers must be free of zinc whiskers.⁵
<p>¹ ANSI/ISA-71.04-1985. <i>Environmental conditions for process measurement and control systems: Airborne contaminants</i>. Instrument Society of America, Research Triangle Park, North Carolina, U.S.A.</p> <p>² The derivation of the equivalence between the rate of copper corrosion growth in the thickness of the corrosion product in $\text{\AA}/\text{month}$ and the rate of weight gain assumes that Cu_2S and Cu_2O grow in equal proportions.</p> <p>³ The derivation of the equivalence between the rate of silver corrosion growth in the thickness of the corrosion product in $\text{\AA}/\text{month}$ and the rate of weight gain assumes that Ag_2S is the only corrosion product.</p> <p>⁴ The deliquescent relative humidity of particulate contamination is the relative humidity at which the dust absorbs enough water to become wet and promote ionic conduction.</p> <p>⁵ Surface debris is randomly collected from 10 areas of the data center on a 1.5 cm diameter disk of sticky electrically conductive tape on a metal stub. If examination of the sticky tape in a scanning electron microscope reveals no zinc whiskers, the data center is considered free of zinc whiskers.</p>	

System-board-assembly connectors

The following illustrations show the internal connectors on the system board (system board assembly).

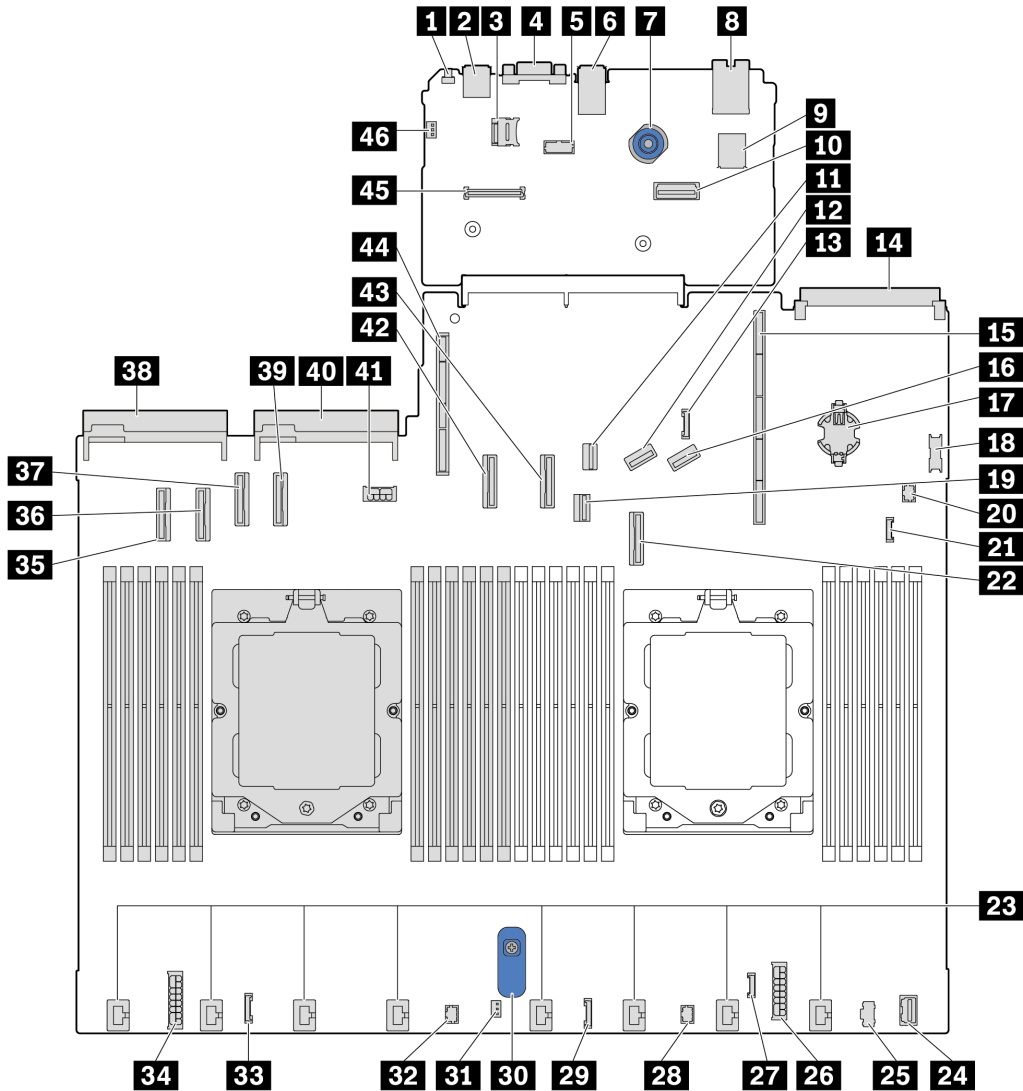


Figure 332. System-board-assembly connectors

Table 93. System-board-assembly connectors

1 NMI button	2 Rear USB connector 1
3 Micro SD socket	4 VGA connector
5 Serial port connector	6 Rear USB connector 2
7 Plunger	8 Management NIC connector
9 Internal USB connector	10 Second management Ethernet connector
11 M.2 signal connector	12 PCIe connector 8 / SATA connector 3
13 7mm/Rear backplane sideband connector	14 OCP 3.0 module connector
15 Riser 1 slot	16 PCIe connector 9 / SATA connector 4
17 CMOS battery (CR2032)	18 Front USB connector

Table 93. System-board-assembly connectors (continued)

19 7mm backplane signal connector	20 Pump 1 connector
21 Leak detection connector	22 PCIe connector 7 / SATA connector 2
23 Fan 1–8 connectors	24 Front VGA connector
25 M.2 power connector	26 Internal RAID power connector
27 External LCD connector	28 FIO_Y cable connector
29 FIO connector	30 Lift handle
31 Intrusion switch connector	32 Pump 2 connector
33 CFF retimer connector	34 Backplane power connector
35 PCIe connector 1	36 PCIe connector 2
37 PCIe connector 3 / SATA connector 0	38 Power supply 1 connector
39 PCIe connector 4 / SATA connector 1	40 Power supply 2 connector
41 GPU/7mm/Rear backplane power connector	42 PCIe connector 5
43 PCIe connector 6	44 Riser 2 slot
45 RoT connector	46 Intrusion switch connector (reserved)

Troubleshooting by system LEDs and diagnostics display


See the following section for information on available system LEDs and diagnostics display.

External diagnostics handset


The external diagnostics handset is an external device that is connected to the server with a cable, and it allows quick access to system information such as errors, system status, firmware, network, and health information.

Note: The external diagnostics handset is an optional part that needs to be purchased separately.

Location of the external diagnostics handset

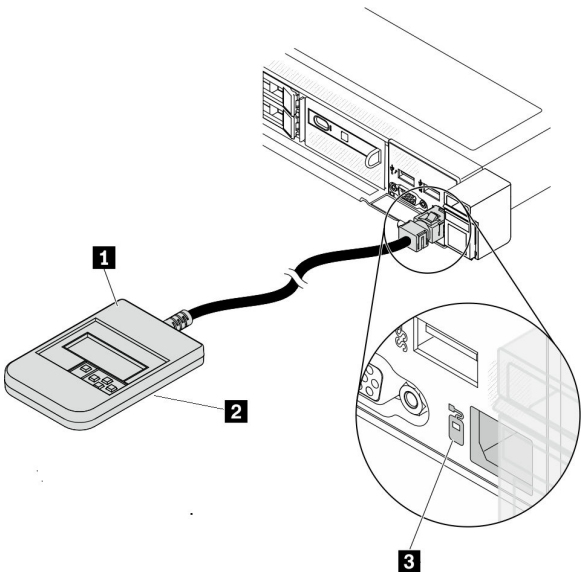Location	Callouts
<p>The external diagnostics handset is connected to the server with an external cable.</p>  <p>The diagram shows a server rack with a handset connected to it. Callout 1 points to the handset, callout 2 points to the magnetic bottom, and callout 3 points to the external diagnostics connector on the server front panel.</p>	<p>1 External diagnostics handset</p> <p>2 Magnetic bottom With this component, the diagnostic handset can be attached to the top or side of the rack with hands spared for service tasks.</p> <p>3 External diagnostics connector This connector is located on the front of the server, and is used to connect an external diagnostics handset.</p>


Note: When unplugging the external handset, see the following instructions:

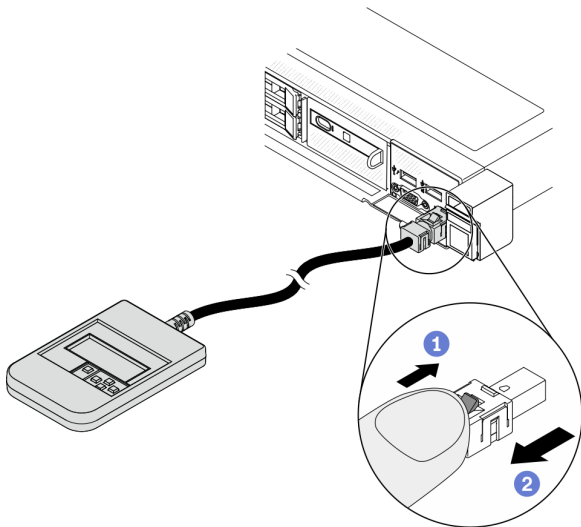

- 1** Press the plastic clip on the plug forward.
- 2** Hold the clip and remove the cable from the connector.

Display panel overview

The diagnostics device consists of an LCD display and 5 navigation buttons.

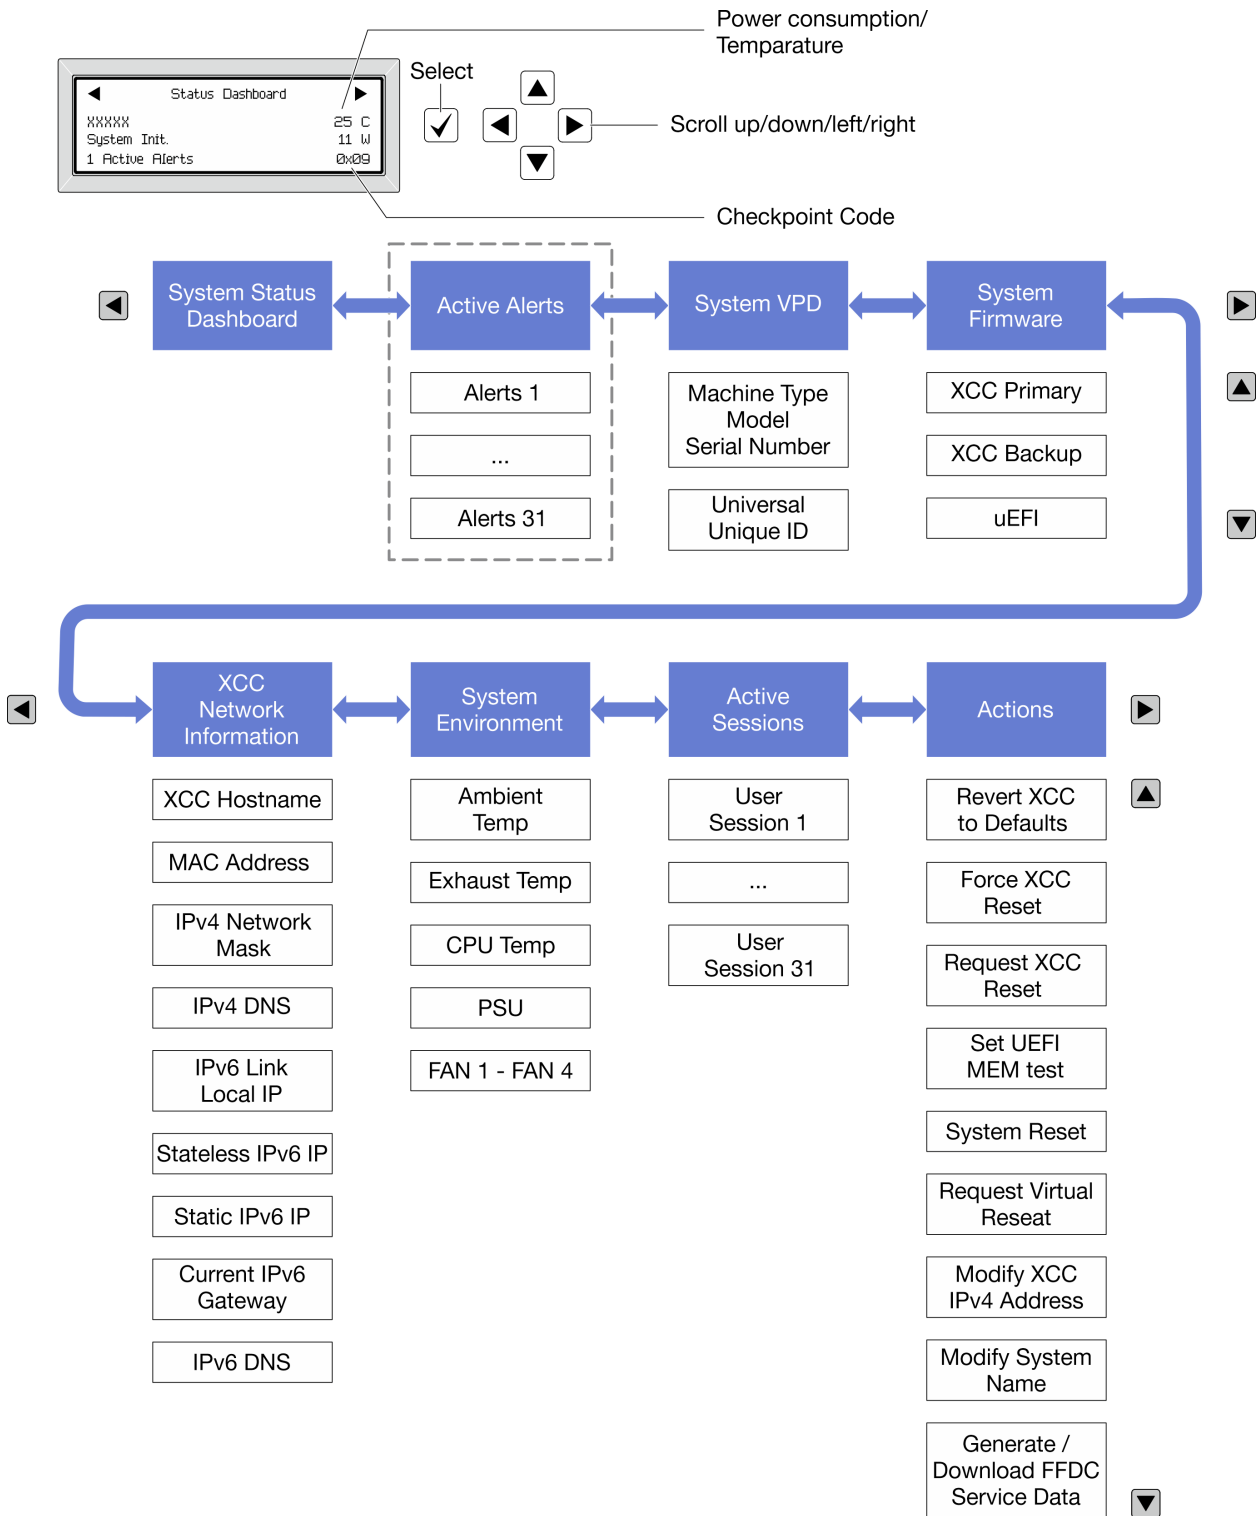

Full menu list

Following is the list of available options. Switch between an option and the subordinate information entries with the select button, and switch among options or information entries with the scroll buttons.

Depending on the model, the options and entries on the LCD display might be different.

Home Menu (System Status Dashboard)

Home Menu	Example
<ul style="list-style-type: none"> 1 System name 2 System status 3 Active alert quantity 4 Temperature 5 Power consumption 6 Checkpoint code 	<p>The screenshot shows a 'Status Dashboard' window with the following content: <ul style="list-style-type: none"> 1: A left-pointing arrow. 2: 'xxxxxx' (System name). 3: 'System Init.' (System status). 4: '25 C' (Temperature). 5: '11 W' (Power consumption). 6: '0x09' (Checkpoint code). The text '1 Active Alerts' is also visible in the center of the dashboard. </p>

Active Alerts

Sub Menu	Example
Home screen: Active error quantity Note: The “Active Alerts” menu displays only the quantity of active errors. If no errors occur, the “Active Alerts” menu will not be available during navigation.	1 Active Alerts
Details screen: <ul style="list-style-type: none"> • Error message ID (Type: Error/Warning/Information) • Occurrence time • Possible sources of the error 	Active Alerts: 1 Press ▼ to view alert details FQXSPPU009N(Error) 04/07/2020 02:37:39 PM CPU 1 Status: Configuration Error

System VPD Information

Sub Menu	Example
<ul style="list-style-type: none"> • Machine type and serial number • Universal Unique ID (UUID) 	Machine Type: xxxx Serial Num: xxxxxx Universal Unique ID: xxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxx

System Firmware

Sub Menu	Example
XCC Primary <ul style="list-style-type: none"> Firmware level (status) Build ID Version number Release date 	XCC Primary (Active) Build: DVI399T Version: 4.07 Date: 2020-04-07
XCC Backup <ul style="list-style-type: none"> Firmware level (status) Build ID Version number Release date 	XCC Backup (Active) Build: D8BT05I Version: 1.00 Date: 2019-12-30
UEFI <ul style="list-style-type: none"> Firmware level (status) Build ID Version number Release date 	UEFI (Inactive) Build: D0E101P Version: 1.00 Date: 2019-12-26

XCC Network Information

Sub Menu	Example
<ul style="list-style-type: none"> XCC hostname MAC address IPv4 Network Mask IPv4 DNS IPv6 Link Local IP Stateless IPv6 IP Static IPv6 IP Current IPv6 Gateway IPv6 DNS <p>Note: Only the MAC address that is currently in use is displayed (extension or shared).</p>	XCC Network Information XCC Hostname: XCC-xxxx-SN MAC Address: xx:xx:xx:xx:xx:xx IPv4 IP: xx.xx.xx.xx IPv4 Network Mask: x.x.x.x IPv4 Default Gateway: x.x.x.x

System Environmental Information

Sub Menu	Example
<ul style="list-style-type: none">• Ambient temperature• Exhaust temperature• CPU temperature• PSU status• Spinning speed of fans by RPM	Ambient Temp: 24 C Exhaust Temp: 30 C CPU1 Temp: 50 C PSU1: Vin= 213 w Inlet= 26 C FAN1 Front: 21000 RPM FAN2 Front: 21000 RPM FAN3 Front: 21000 RPM FAN4 Front: 21000 RPM

Active Sessions

Sub Menu	Example
Quantity of active sessions	Active User Sessions: 1


Actions

Sub Menu	Example
Several quick actions are available: <ul style="list-style-type: none">• Revert XCC to Defaults• Force XCC Reset• Request XCC Reset• Set UEFI Memory Test• Clear CMOS• Request Virtual Reseat• Modify XCC Static IPv4 Address/Net mask/Gateway• Modify System Name• Generate/Download FFDC Service Data	Request XCC Reset? This will request the BMC to reboot itself. Hold √ for 3 seconds

Integrated Diagnostics Panel


The Integrated Diagnostics Panel is attached to the front of the server, while it allows quick access to system information such as errors, system status, firmware, network, and health information. The Integrated Diagnostics Panel may also provide front operator panel function.

Location of the Integrated Diagnostics Panel
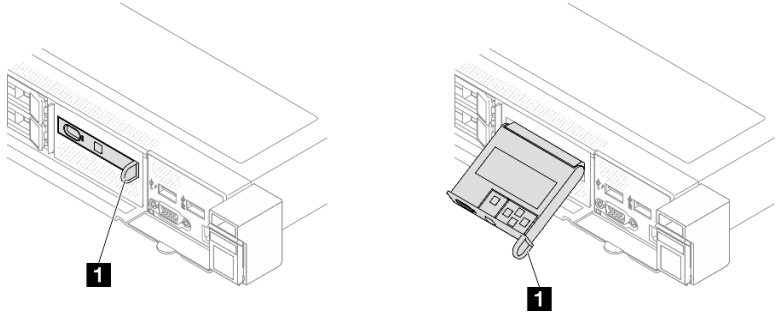
<p>Location</p>	<p>The Integrated Diagnostics Panel is attached to the front of the server.</p> 
<p>Callout</p>	<p>1 The handle with which the panel can be pulled out from the server.</p> <p>Notes:</p> <ul style="list-style-type: none"> • The panel can be pushed in or pulled out regardless of the system power status. • When pulling it out, do it gently to avoid damage.

Display panel overview


The diagnostics device consists of an LCD display and 5 navigation buttons.

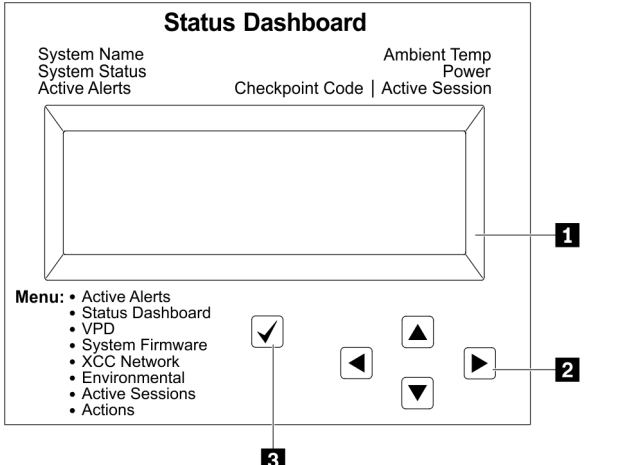	<p>1 LCD display</p> <p>2 Scroll buttons (up/down/left/right) Press the scroll buttons to locate and select system information.</p> <p>3 Select button Press the select button to select from the options in the menu.</p>
--	---

Option flow diagram

The LCD panel displays various system information. Navigate through the options with the scroll keys.

Depending on the model, the options and entries on the LCD display might be different.

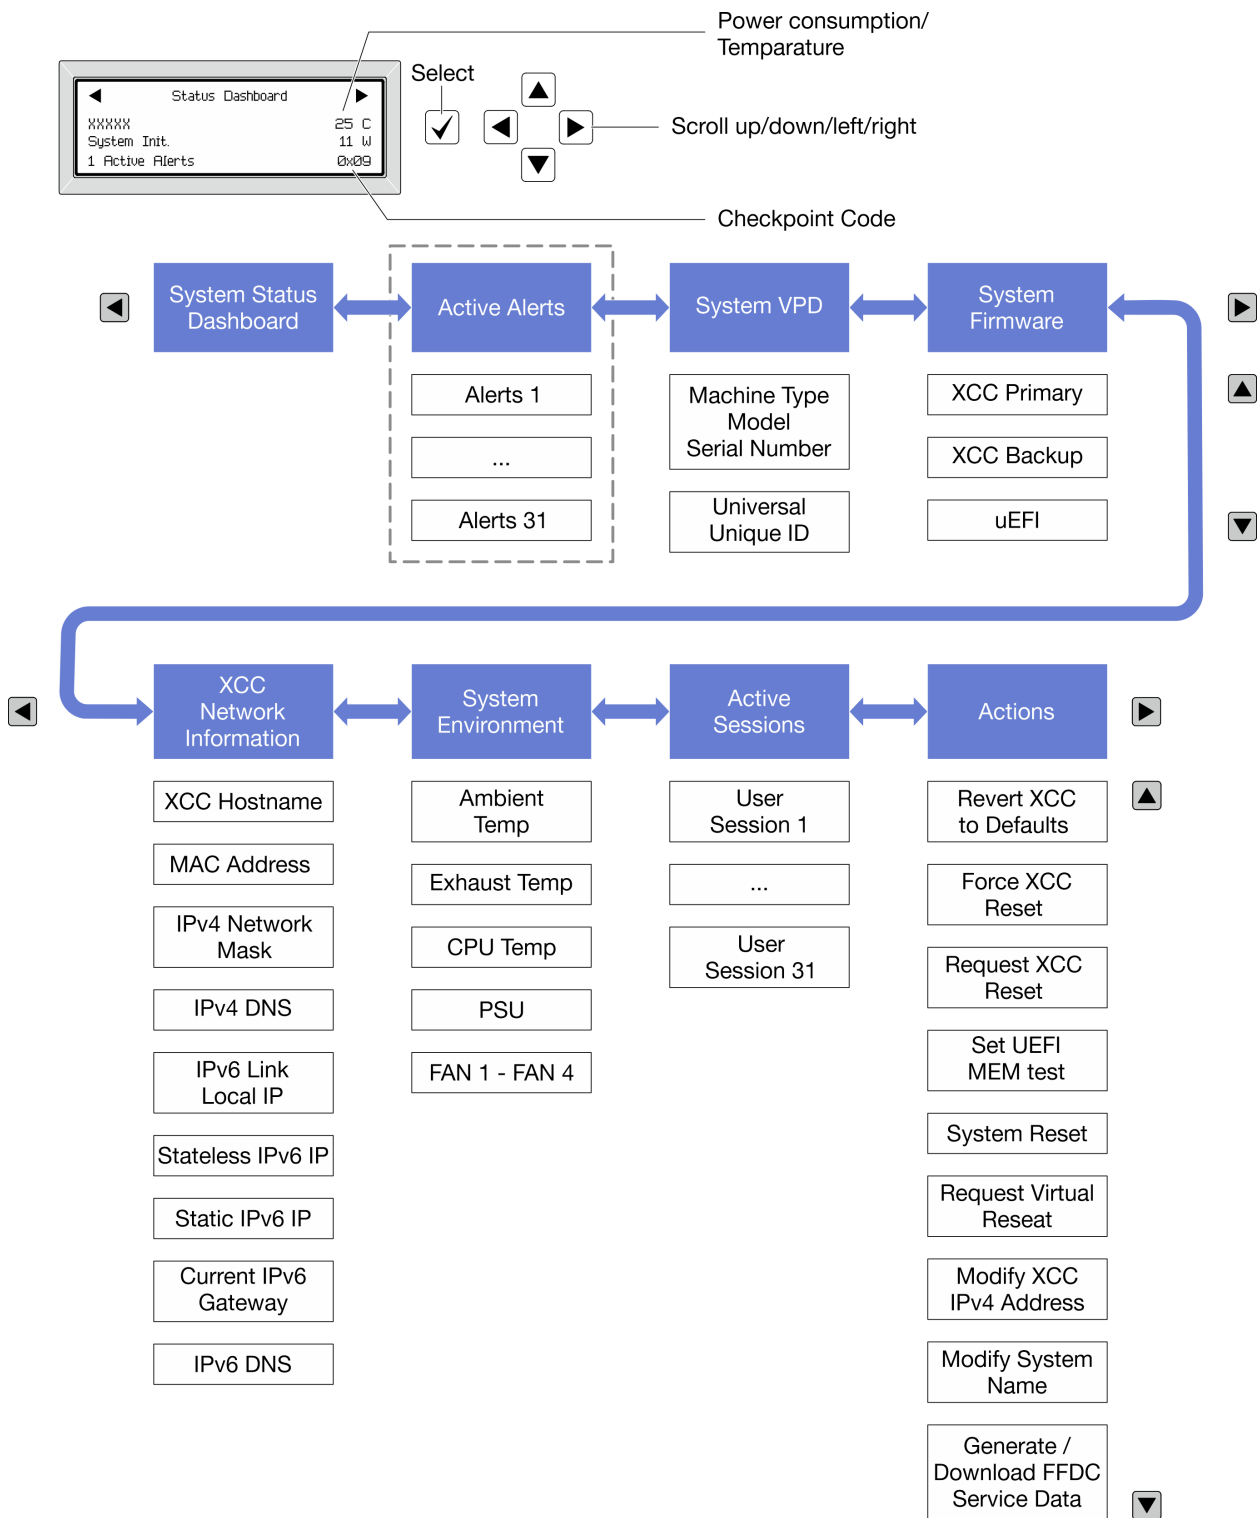

Full menu list

Following is the list of available options. Switch between an option and the subordinate information entries with the select button, and switch among options or information entries with the scroll buttons.

Depending on the model, the options and entries on the LCD display might be different.

Home Menu (System Status Dashboard)

Home Menu	Example
<p>1 System name</p> <p>2 System status</p> <p>3 Active alert quantity</p> <p>4 Temperature</p> <p>5 Power consumption</p> <p>6 Checkpoint code</p>	<p>The screenshot shows a 'Status Dashboard' window with the following content:</p> <ul style="list-style-type: none"> 1: System name (xxxxxx) 2: System status (System Init.) 3: Active alert quantity (1 Active Alerts) 4: Temperature (25 C) 5: Power consumption (11 W) 6: Checkpoint code (0x09)

Active Alerts

Sub Menu	Example
<p>Home screen:</p> <p>Active error quantity</p> <p>Note: The “Active Alerts” menu displays only the quantity of active errors. If no errors occur, the “Active Alerts” menu will not be available during navigation.</p>	<p>1 Active Alerts</p>
<p>Details screen:</p> <ul style="list-style-type: none"> • Error message ID (Type: Error/Warning/Information) • Occurrence time • Possible sources of the error 	<p>Active Alerts: 1</p> <p>Press ▼ to view alert details</p> <p>FQXSPPU009N(Error)</p> <p>04/07/2020 02:37:39 PM</p> <p>CPU 1 Status:</p> <p>Configuration Error</p>

System VPD Information

Sub Menu	Example
<ul style="list-style-type: none"> • Machine type and serial number • Universal Unique ID (UUID) 	<p>Machine Type: xxxx</p> <p>Serial Num: xxxxxx</p> <p>Universal Unique ID:</p> <p>xxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxx</p>

System Firmware

Sub Menu	Example
XCC Primary <ul style="list-style-type: none"> • Firmware level (status) • Build ID • Version number • Release date 	XCC Primary (Active) Build: DVI399T Version: 4.07 Date: 2020-04-07
XCC Backup <ul style="list-style-type: none"> • Firmware level (status) • Build ID • Version number • Release date 	XCC Backup (Active) Build: D8BT05I Version: 1.00 Date: 2019-12-30
UEFI <ul style="list-style-type: none"> • Firmware level (status) • Build ID • Version number • Release date 	UEFI (Inactive) Build: D0E101P Version: 1.00 Date: 2019-12-26

XCC Network Information

Sub Menu	Example
<ul style="list-style-type: none"> • XCC hostname • MAC address • IPv4 Network Mask • IPv4 DNS • IPv6 Link Local IP • Stateless IPv6 IP • Static IPv6 IP • Current IPv6 Gateway • IPv6 DNS <p>Note: Only the MAC address that is currently in use is displayed (extension or shared).</p>	XCC Network Information XCC Hostname: XCC-xxxx-SN MAC Address: xx:xx:xx:xx:xx:xx IPv4 IP: xx.xx.xx.xx IPv4 Network Mask: x.x.x.x IPv4 Default Gateway: x.x.x.x

System Environmental Information

Sub Menu	Example
<ul style="list-style-type: none"> • Ambient temperature • Exhaust temperature • CPU temperature • PSU status • Spinning speed of fans by RPM 	Ambient Temp: 24 C Exhaust Temp: 30 C CPU1 Temp: 50 C PSU1: Vin= 213 w Inlet= 26 C FAN1 Front: 21000 RPM FAN2 Front: 21000 RPM FAN3 Front: 21000 RPM FAN4 Front: 21000 RPM

Active Sessions

Sub Menu	Example
Quantity of active sessions	Active User Sessions: 1

Actions

Sub Menu	Example
Several quick actions are available: <ul style="list-style-type: none"> • Revert XCC to Defaults • Force XCC Reset • Request XCC Reset • Set UEFI Memory Test • Clear CMOS • Request Virtual Reseat • Modify XCC Static IPv4 Address/Net mask/Gateway • Modify System Name • Generate/Download FFDC Service Data 	Request XCC Reset? This will request the BMC to reboot itself. Hold ✓ for 3 seconds

LEDs and buttons on the front operator panel

The front operator panel of the server provides controls, connectors, and LEDs.

Note: Diagnostics panel with an LCD display is available for some models. For details, see [“Integrated Diagnostics Panel” on page 375](#) and [“External diagnostics handset” on page 369](#).

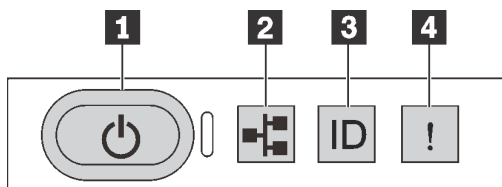


Figure 333. Front operator panel

1 Power button with power status LED

You can press the power button to power on the server when you finish setting up the server. You also can hold the power button for several seconds to power off the server if you cannot shut down the server from the operating system. The power status LED helps you determine the current power status.

Status	Color	Description
Solid on	Green	The server is on and running.
Slow blinking (about one flash per second)	Green	The server is off and is ready to be powered on (standby state).
Fast blinking (about four flashes per second)	Green	<ul style="list-style-type: none"> The server is off, but the XClarity Controller is initializing, and the server is not ready to be powered on. System-board-assembly power has failed.
Off	None	Power is not present, or the power supply has failed.

2 Network activity LED

Compatibility of the NIC adapter and the network activity LED

NIC adapter	Network activity LED
OCP module	Support
PCIe NIC adapter	Not support

When an OCP module is installed, the network activity LED on the front I/O module helps you identify the network connectivity and activity. If no OCP module is installed, this LED is off.

Status	Color	Description
On	Green	The server is connected to a network.
Blinking	Green	The network is connected and active.
Off	None	<p>The server is disconnected from the network.</p> <p>Note: If the network activity LED is off when an OCP 3.0 module is installed, check the network ports in the rear of your server to determine which port is disconnected.</p>

3 System ID button with system ID LED

Use this system ID button and the blue system ID LED to visually locate the server. A system ID LED is also located on the rear of the server. Each time you press the system ID button, the state of both the system ID LEDs changes. The LEDs can be changed to on, blinking, or off. You can also use the Lenovo XClarity Controller or a remote management program to change the state of the system ID LEDs to assist in visually locating the server among other servers.

If the XClarity Controller USB connector is set to have both the USB 2.0 function and XClarity Controller management function, you can press the system ID button for three seconds to switch between the two functions.

4 System error LED

The system error LED helps you to determine if there are any system errors.

Status	Color	Description	Action
On	Yellow	<p>An error has been detected on the server. Causes might include but are not limited to the following errors:</p> <ul style="list-style-type: none"> • The temperature of the server reached the non-critical temperature threshold. • The voltage of the server reached the non-critical voltage threshold. • A fan has been detected to be running at low speed. • A hot-swap fan has been removed. • The power supply has a critical error. • The power supply is not connected to the power. • A processor error. • A system I/O board or processor board error. • Abnormal status is detected on the Liquid to Air Module (L2AM). 	<ul style="list-style-type: none"> • Check the Lenovo XClarity Controller event log and the system event log to determine the exact cause of the error. • Check if additional LEDs in the server are lit. It will direct you to the error source. See “Troubleshooting by system LEDs and diagnostics display” on page 369. • Save the log if necessary. <p>Note: For server models with L2AM installed, it is required to open the top cover to check the status of liquid detection sensor module LED. For more instructions, see “LED on the leak detection sensor module” on page 389.</p>
Off	None	The server is off or the server is on and is working correctly.	None.

LEDs on drives

This topic provides information on drive LEDs.

Each drive comes with an activity LED and a status LED. Different colors and speeds indicate different activities or status of the drive. The following illustrations and tables describe the problems that are indicated by the activity LED and the status LED.

- [“LEDs on hard disk drives or solid-state drives” on page 382](#)
- [“LEDs on EDSFF drives” on page 383](#)

LEDs on hard disk drives or solid-state drives

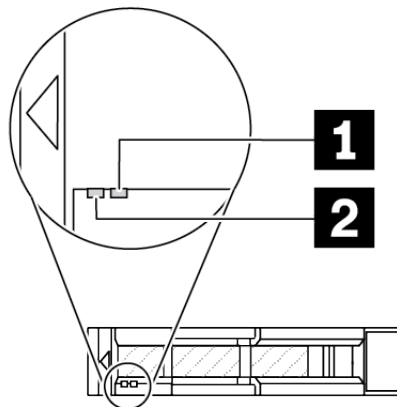


Figure 334. LEDs on hard disk drives or solid-state drives

Drive LED	Status	Description
1 Drive status LED (right)	Solid yellow	The drive has an error.
	Blinking yellow (blinking slowly, about one flash per second)	The drive is being rebuilt.
	Blinking yellow (blinking rapidly, about four flashes per second)	The RAID adapter is locating the drive.
2 Drive activity LED (left)	Solid green	The drive is powered but not active.
	Blinking green	The drive is active.

LEDs on EDSFF drives

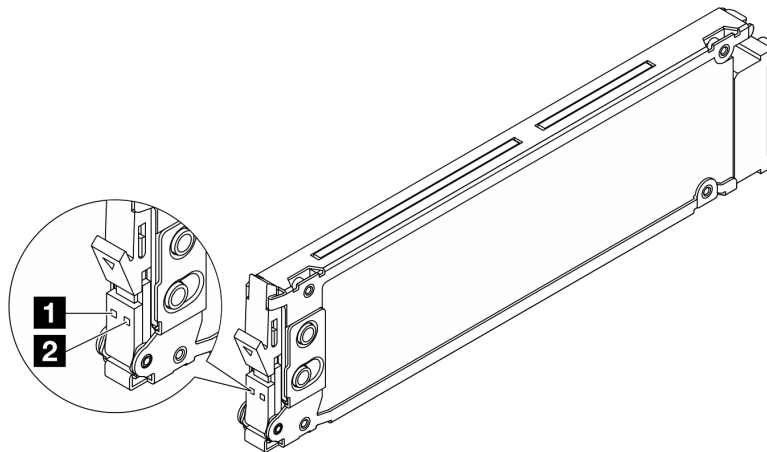


Figure 335. LEDs on EDSFF drives

Drive LED	Status	Description
1 Drive activity LED	Solid green	The drive is powered but not active.
	Blinking green (about four flashed per second)	The drive is active.
	Off	The drive is not powered.
2 Drive status LED	Solid amber	The drive has an error.
	Blinking amber (blinking slowly, about one flash per second)	The drive is being rebuilt.
	Blinking amber (blinking rapidly, about four flashes per second)	The RAID adapter is locating the drive.

LEDs on the firmware and RoT security module

The following illustrations show the light-emitting diodes (LEDs) on the ThinkSystem V3 Firmware and Root of Trust Security Module (firmware and RoT security module).

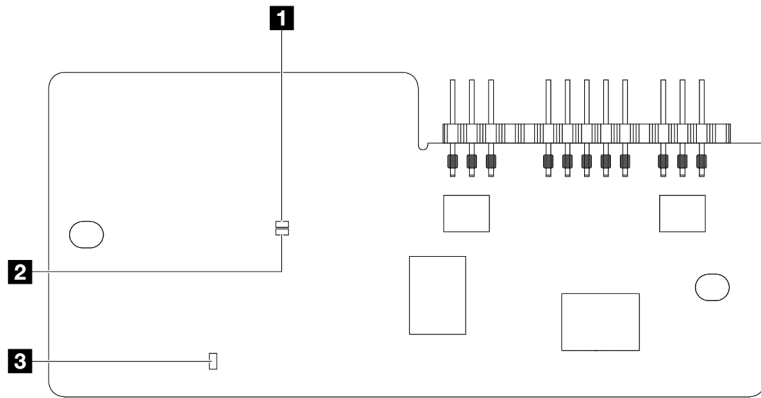


Figure 336. LEDs on the firmware and RoT security module

1 AP0 LED (Green)	2 AP1 LED (Green)	3 Fatal Error LED (Yellow)
--------------------------	--------------------------	-----------------------------------

Table 94. LEDs description

Scenario	AP0 LED	AP1 LED	Fatal Error LED	FPGA heart-beat LED ^{note}	XCC heart-beat LED ^{note}	Actions
RoT security module fatal firmware failure	Off	Off	On	N/A	N/A	Replace the firmware and RoT security module.
	Blink	N/A	On	N/A	N/A	Replace the firmware and RoT security module.
	Blink	N/A	On	On	N/A	Replace the firmware and RoT security module.
No system power (FPGA heartbeat LED off)	Off	Off	Off	Off	Off	If the AC power is on, but the system board assembly does not have power, then: <ol style="list-style-type: none"> 1. Check the power supply unit (PSU) or power interposer board (PIB) if any. If the PSU or PIB has any error, replace it. 2. If the PSU or PIB is good, do the following: <ol style="list-style-type: none"> a. Replace the system I/O board. b. Replace the processor board.
XCC firmware recoverable error	Blink	N/A	Off	N/A	N/A	Information only. No action is required.
XCC firmware is recovered from error	Blink	N/A	Off	N/A	N/A	Information only. No action is required.
UEFI firmware authentication failure	N/A	Blink	Off	N/A	N/A	Information only. No action is required.

Table 94. LEDs description (continued)

Scenario	AP0 LED	AP1 LED	Fatal Error LED	FPGA heart-beat LED ^{note}	XCC heart-beat LED ^{note}	Actions
UEFI firmware is recovered from authentication failure	N/A	On	Off	N/A	N/A	Information only. No action is required.
System is OK (FPGA heartbeat LED is On)	On	On	Off	On	On	Information only. No action is required.

Note: For locations of the FPGA LED and XCC heartbeat LED, see [“LEDs on the system board assembly” on page 386](#).

LEDs on the power supply unit

This topic provides information about various power supply LED status and corresponding action suggestions.

The following minimal configuration is required for the server to start:

- One processor in processor socket 1
- One memory module in slot 7
- One power supply
- One HDD/SSD drive or one M.2 drive, or one 7mm drive (if OS is needed for debugging)
- Six system fans (with one processor)

The following table describes the problems that are indicated by various combinations of the power-supply LEDs and the power-on LED and suggested actions to correct the detected problems.

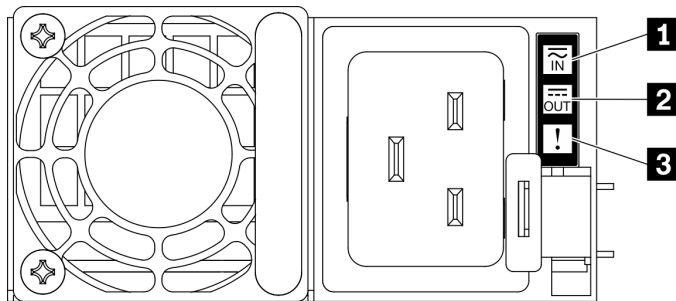


Figure 337. Power supply LEDs

LED	Description
1 Input status	<p>The input status LED can be in one of the following states:</p> <ul style="list-style-type: none"> • Off: The power supply is disconnected from the input power source. • Green: The power supply is connected to the input power source.
2 Output status	<p>The output status LED can be in one of the following states:</p> <ul style="list-style-type: none"> • Off: The server is powered off, or the power supply unit is not working properly. If the server is powered on but the output status LED is off, replace the power supply unit. • Blinking green: The power supply is in zero-output mode (standby). When the server power load is low, one of the installed power supplies enters into the standby state while the other one delivers entire load. When the power load increases, the standby power supply will switch to active state to provide sufficient power to the server. <p>To disable zero-output mode, log in to the Lenovo XClarity Controller web interface, choose Server Configuration → Power Policy, disable Zero Output Mode, and then click Apply. If you disable zero-output mode, both power supplies will be in the active state.</p> <ul style="list-style-type: none"> • Green: The server is on and the power supply unit is working normally. <p>Zero-output mode can be disabled via Lenovo XClarity Controller web interface. If you disable zero-output mode, both power supplies will be in the active state.</p> <ul style="list-style-type: none"> • Log in to the Lenovo XClarity Controller web interface, choose Server Configuration → Power Policy, disable Zero Output Mode, and then click Apply.
3 Fault LED	<ul style="list-style-type: none"> • Off: The power supply unit is working normally. • Yellow: The power supply unit may have failed. Dump the FFDC log from the system and contact Lenovo back end support team for PSU data log reviewing.

LEDs on the system board assembly

The following illustrations show the light-emitting diodes (LEDs) on the system board (system board assembly).

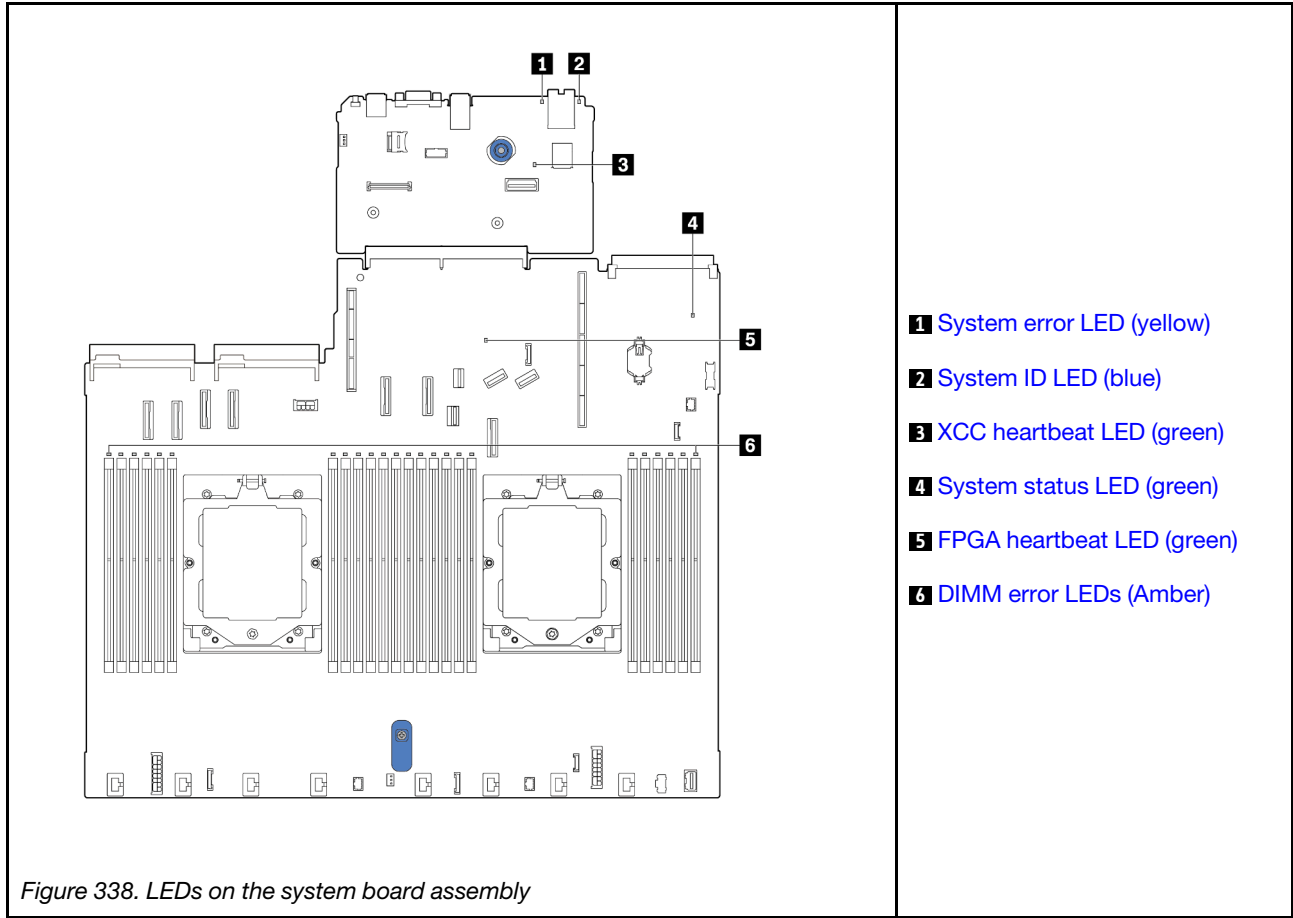


Figure 338. LEDs on the system board assembly

Descriptions of LEDs on the system board assembly

1 System error LED (yellow)	
Description	When this yellow LED is lit, another one or more LEDs in the server might also be lit to direct you to the error source.
Action	Check system logs or internal error LEDs to identify the failed part. For more information, see “LEDs and buttons on the front operator panel” on page 380.

2 System ID LED (blue)	
Description	The front system ID LED helps you locate the server.
Action	Each time you press the system ID button, the state of both system ID LEDs changes, and the state can be on, blinking, or off.

3 XCC heartbeat LED (green)

Description	<p>The XCC heartbeat LED helps you identify the XCC status.</p> <ul style="list-style-type: none">• Blinking (about one flash per second) : XCC is working normally.• Blinking at other speeds or always on: XCC is at the initial phase or is working abnormally.• Off: XCC is not working.
Action	<ul style="list-style-type: none">• If the XCC heartbeat LED is always off or always on, do the following:<ul style="list-style-type: none">– If XCC cannot be accessed:<ol style="list-style-type: none">1. Re-plug the power cord.2. Check and ensure that the system I/O board and the firmware and RoT security module are installed correctly. (Trained technicians only) Reinstall them if needed.3. (Trained technicians only) Replace the firmware and RoT security module.4. (Trained technicians only) Replace the system I/O board.– If XCC can be accessed, replace the system I/O board.• If the XCC heartbeat LED is always blinking fast over 5 minutes, do the following:<ol style="list-style-type: none">1. Re-plug the power cord.2. Check and ensure that the system I/O board and the firmware and RoT security module are installed correctly. (Trained technicians only) Reinstall them if needed.3. (Trained technicians only) Replace the firmware and RoT security module.4. (Trained technicians only) Replace the system I/O board.• If the XCC heartbeat LED is always blinking slow over 5 minutes, do the following:<ol style="list-style-type: none">1. Re-plug the power cord.2. Check and ensure that the system I/O board and the firmware and RoT security module are installed correctly. (Trained technicians only) Reinstall them if needed.3. If the problem remains, contact Lenovo Support.

4 System status LED (green)

Description	<p>The system status LED indicates the working status of the system.</p> <ul style="list-style-type: none">• Fast blinking (about four flashes per second): Power fault or is waiting for XCC power permission ready.• Slow blinking (about one flash per second): Power off and is ready to be powered on (standby state).• On: Power on.
Action	<ul style="list-style-type: none">• If the system status LED is blinking fast over 5 minutes and cannot power on, check the XCC heartbeat LED and follow the actions for the XCC heartbeat LED.• If the system status LED remains off or is blinking fast (about four flashes per second) and the system error LED on the front panel is on (yellow), the system is in a power fault status. Do the following:<ol style="list-style-type: none">1. Re-plug the power cord.2. Remove installed adapters/devices, one at a time, until you reach the minimal configuration for debugging.3. (Trained technicians only) If the problem remains, capture FFDC log, and replace the processor board.4. If the problem still remains, contact Lenovo Support.

5 FPGA heartbeat LED (green)

Description	<p>The FPGA heartbeat LED helps you identify the FPGA status.</p> <ul style="list-style-type: none">• Blinking (about one flash per second): FPGA is working normally.• On or off: FPGA is not working.
Action	<p>If FPGA heartbeat LED is always off or always on, do the following:</p> <ol style="list-style-type: none">1. Replace the processor board.2. If the problem remains, contact Lenovo Support.

6 DIMM error LEDs (yellow)	
Description	When a memory module error LED is lit, it indicates that the corresponding memory module has failed.
Action	For more information, see “Memory problems” on page 397 .

LEDs on the XCC system management port

This topic provides information on LEDs of XCC system management port.

The following table describes the problems that are indicated by LEDs on XCC system management port.

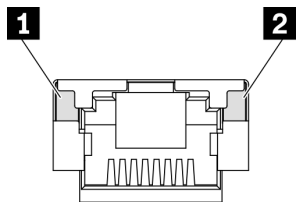


Figure 339. XCC system management port LEDs

LED	Description
1 XCC system management port (1 GB RJ-45) Ethernet port link LED	Use this green LED to distinguish the network connectivity status: <ul style="list-style-type: none"> • Off: The network link is disconnected. • Green: The network link is established.
2 XCC system management port (1 GB RJ-45) Ethernet port activity LED	Use this green LED to distinguish the network activity status: <ul style="list-style-type: none"> • Off: The server is disconnected from a LAN. • Green: The network is connected and active.

LED on the leak detection sensor module

This topic provides information on the liquid cooling leak detection module LED.

The liquid detection sensor module on the L2AM (The Lenovo Neptune Liquid to Air Module). The following illustration shows the LED on the module.

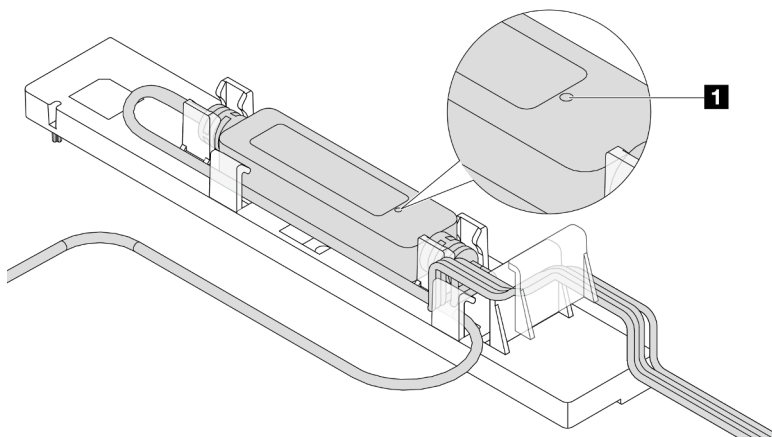


Figure 340. Leak detection LED

The following table describes the status that are indicated by liquid detection sensor module LED.

Leakage detection sensor LED	
Description	<ul style="list-style-type: none"> • Solid green: No coolant leakage detected. • Blinking green: Abnormal status detected.
Action	<ul style="list-style-type: none"> • For L2AM problem determination and troubleshooting, see .

General problem determination procedures

Use the information in this section to resolve problems if the event log does not contain specific errors or the server is inoperative.

If you are not sure about the cause of a problem and the power supplies are working correctly, complete the following steps to attempt to resolve the problem:

1. Power off the server.
2. Make sure that the server is cabled correctly.
3. Remove or disconnect the following devices if applicable, one at a time, until you find the failure. Power on and configure the server each time you remove or disconnect a device.
 - Any external devices.
 - Surge-suppressor device (on the server).
 - Printer, mouse, and non-Lenovo devices.
 - Each adapter.
 - Hard disk drives.
 - Memory modules until you reach the minimal configuration for debugging that is supported for the server.

To determine the minimal configuration for your server, see “Minimal configuration for debugging” in [“Technical specifications” on page 359](#).

4. Power on the server.

If the problem is solved when you remove an adapter from the server, but the problem recurs when you install the same adapter again, suspect the adapter. If the problem recurs when you replace the adapter with a different one, try a different PCIe slot.

If the problem appears to be a networking problem and the server passes all system tests, suspect a network cabling problem that is external to the server.

Resolving suspected power problems

Power problems can be difficult to solve. For example, a short circuit can exist anywhere on any of the power distribution buses. Usually, a short circuit will cause the power subsystem to shut down because of an overcurrent condition.

Complete the following steps to diagnose and resolve a suspected power problem.

Step 1. Check the event log and resolve any errors related to the power.

Note: Start with the event log of the application that is managing the server. For more information about event logs, see [“Event logs” on page 357](#).

Step 2. Check for short circuits, for example, if a loose screw is causing a short circuit on a circuit board.

Step 3. Remove the adapters and disconnect the cables and power cords to all internal and external devices until the server is at the minimal configuration for debugging that is required for the server to start. To determine the minimal configuration for your server, see “Minimal configuration for debugging” in [“Technical specifications” on page 359](#).

Step 4. Reconnect all AC power cords and turn on the server. If the server starts successfully, reseal the adapters and devices one at a time until the problem is isolated.

If the server does not start from the minimal configuration, replace the components in the minimal configuration one at a time until the problem is isolated.

Resolving suspected Ethernet controller problems

The method that you use to test the Ethernet controller depends on which operating system you are using. See the operating-system documentation for information about Ethernet controllers, and see the Ethernet controller device-driver readme file.

Complete the following steps to attempt to resolve suspected problems with the Ethernet controller.

Step 1. Make sure that the correct device drivers are installed and that they are at the latest level.

Step 2. Make sure that the Ethernet cable is installed correctly.

- The cable must be securely attached at all connections. If the cable is attached but the problem remains, try a different cable.
- Make sure that the cable used is supported by the adapter. For more information about the supported adapters, cables, and transceivers of the specific servers, go to .
- Make sure that the cable rating is sufficient for the data rate of the network. For example, a 1 GB RJ45 network requires a cable of Cat5e or higher rating.

Step 3. Determine whether the switch supports auto-negotiation. If not, try configuring the integrated Ethernet controller manually to match the speed of the switch port. Also, if forward error correction (FEC) modes are supported, make sure that both the adapter and the switch port have matching settings.

Step 4. Check the Ethernet controller LEDs on the server. These LEDs indicate whether there is a problem with the connector, cable, or switch.

If the Ethernet function is implemented on the system board (system board assembly), the Ethernet controller LED locations are specified in [“Troubleshooting by system LEDs and diagnostics display” on page 369](#).

- The Ethernet link status LED is lit when the Ethernet controller has established link with the switch port. If the LED is off, there might be a defective connector or cable or a problem with the switch port. In some cases, a bi-color link LED is used. Green indicates a link at the highest network speed. Yellow indicates a link lower than the highest network speed.
- The Ethernet transmit/receive activity LED is lit or blinks when the Ethernet controller sends or receives data over the Ethernet network. If the Ethernet transmit/receive activity is off, make sure that the switch is powered on, the network is operating, and the correct device drivers are installed.

Step 5. Check for operating-system-specific causes of the problem, and make sure that the operating system drivers are installed correctly.

Step 6. Make sure that the device drivers on the client and server are using the same protocol.

If the Ethernet controller still cannot connect to the network but the hardware appears to be working, the network administrator must investigate other possible causes of the error.

Troubleshooting by symptom

Use this information to find solutions to problems that have identifiable symptoms.

To use the symptom-based troubleshooting information in this section, complete the following steps:

1. Check the event log of the application that is managing the server and follow the suggested actions to resolve any event codes.

- If you are managing the server from the Lenovo XClarity Administrator, begin with the Lenovo XClarity Administrator event log.
- If you are using some other management application, begin with the Lenovo XClarity Controller event log.

For more information about event logs (see “Event logs” on page 357).

2. Review this section to find the symptoms that you are experiencing and follow the suggested actions to resolve the issue.
3. If the problem persists, contact support (see “Contacting Support” on page 411).

Coolant leak problems (Liquid to Air Module)

Use this information to resolve coolant leak problems with the L2AM (The Lenovo Neptune Liquid to Air Module).

Options to identify coolant leaks

Coolant leaks can be identified through the following practices:

- If the server is on remote maintenance,
 - A Lenovo XClarity Controller event shows:

FQXSPUN0019M: Sensor Liquid Leak has transitioned to critical from a less severe state.

Index	Severity	Source	Common ID	Message	Date
0	✖	System	FQXSPUN0019M	Sensor Liquid Leak has transitioned to critical from a less severe state.	December 26, 2022...

Health Summary

Active System Events (1)

✖ Others Sensor Liquid Leak has transitioned to critical from a less severe state.
FQXSPUN0019M FRU: December 26, 2022 10:38:22 AM

[View all event logs](#)

- Lenovo XClarity Controller has defined lots of system conditions as IPMI sensors. Users can use IPMI commands to check system running status. Here are examples of executing ipmitool, an open-source common tool which follows Intel’s IPMI standard. Check for coolant leakage status with command lines as shown.

```
sysadmin@Dev-Server:~$ ipmitool -C 17 -I lanplus -H 10.132.225.164 -U USERID -P ***** sel elist
1 | 12/26/2022 | 10:38:17 | Event Logging Disabled SEL Fullness | Log area reset/cleared | Asserted
2 | 12/26/2022 | 10:38:22 | Cooling Device Liquid Leak | Transition to Critical from less severe | Asserted
```

The event logs shown with the parameter sel elist.

```
sysadmin@Dev-Server:~$ ipmitool -C 17 -I lanplus -H 10.132.225.164 -U USERID -P ***** sdr elist |grep "Liquid Leak"
Liquid Leak | EAh | ok | 30.1 | Transition to Critical from less severe
```


The status of all sensors can be fetched with the parameter `sdr elist`. If coolant leakage happens, the log above will show up.

- If the server is within reach, and the amber LED is lit on the front operator panel, potential coolant leaks may have occurred. It is required to open the top cover to check the LED status of the liquid detection sensor module. See “LEDs and buttons on the front operator panel” and “The LED on the liquid detection sensor module” in *User Guide* for more details.

Steps to resolve coolant leaks

If the LED on the liquid detection sensor module is blinking green, follow the procedures to get help.

1. Check for green coolant leakage around the radiator, coolant pipes and pumps.
2. If green coolant found, power off the server and remove the L2AM.
3. Clean up the coolant from any components in the chassis. Inspect the server for any signs of moisture in sockets or gaps.
4. Contact Lenovo Support.

Storage drive problems

Use this information to resolve issues related to the storage drives.

- [“Server cannot recognize a drive” on page 393](#)
- [“Multiple drives fail” on page 394](#)
- [“Multiple drives are offline” on page 394](#)
- [“A replacement drive does not rebuild” on page 394](#)
- [“Green drive activity LED does not represent actual state of associated drive” on page 394](#)
- [“Yellow drive status LED does not represent actual state of associated drive” on page 395](#)

Server cannot recognize a drive

Complete the following steps until the problem is solved.

1. Observe the associated yellow drive status LED. If the LED is lit, it indicates a drive fault.
2. If the status LED is lit, remove the drive from the bay, wait 45 seconds, and reinsert the drive, making sure that the drive assembly connects to the drive backplane.
3. Observe the associated green drive activity LED and the yellow status LED and perform corresponding operations in different situations:
 - If the green activity LED is flashing and the yellow status LED is not lit, the drive is recognized by the controller and is working correctly. Run the diagnostics tests for the drives. When you start a server and press the key according to the on-screen instructions, the LXPM is displayed by default. (For more information, see the “Startup” section in the LXPM documentation compatible with your server at https://sysmgt.lenovofiles.com/help/topic/lxpm_frontend/lxpm_product_page.html.) You can perform drive diagnostics from this interface. From the Diagnostic page, click **Run Diagnostic → Disk Drive Test**.
 - If the green activity LED is flashing and the yellow status LED is flashing slowly, the drive is recognized by the controller and is rebuilding.
 - If neither LED is lit or flashing, check whether the drive backplane is correctly seated. For details, go to step 4.
 - If the green activity LED is flashing and the yellow status LED is lit, replace the drive.

4. Make sure that the drive backplane is correctly seated. When it is correctly seated, the drive assemblies correctly connect to the backplane without bowing or causing movement of the backplane.
5. Reseat the backplane power cable and repeat steps 1 through 3.
6. Reseat the backplane signal cable and repeat steps 1 through 3.
7. Suspect the backplane signal cable or the backplane:
 - Replace the affected backplane signal cable.
 - Replace the affected backplane.
8. Run the diagnostics tests for the drives. When you start a server and press the key according to the on-screen instructions, the LXPM is displayed by default. (For more information, see the “Startup” section in the LXPM documentation compatible with your server at https://sysmgmt.lenovofiles.com/help/topic/lxpm_frontend/lxpm_product_page.html.) You can perform drive diagnostics from this interface. From the Diagnostic page, click **Run Diagnostic → Disk Drive Test**.

Based on those tests:

- If the backplane passes the test but the drives are not recognized, replace the backplane signal cable and run the tests again.
- Replace the backplane.
- If the adapter fails the test, disconnect the backplane signal cable from the adapter and run the tests again.
- If the adapter fails the test, replace the adapter.

Multiple drives fail

Complete the following steps until the problem is solved:

- View the Lenovo XClarity Controller event log for events related to power supplies or vibration issues and resolve those events.
- Make sure that the device drivers and firmware for the drive and server are at the latest level.

Important: Some cluster solutions require specific code levels or coordinated code updates. If the device is part of a cluster solution, verify that the latest level of code is supported for the cluster solution before you update the code.

Multiple drives are offline

Complete the following steps until the problem is solved:

- View the Lenovo XClarity Controller event log for events related to power supplies or vibration issues and resolve those events.
- View the storage subsystem log for events related to the storage subsystem and resolve those events.

A replacement drive does not rebuild

Complete the following steps until the problem is solved:

1. Make sure that the drive is recognized by the adapter (the green drive activity LED is flashing).
2. Review the SAS/SATA RAID adapter documentation to determine the correct configuration parameters and settings.

Green drive activity LED does not represent actual state of associated drive

Complete the following steps until the problem is solved:

1. If the green drive activity LED does not flash when the drive is in use, run the diagnostics tests for the drives. When you start a server and press the key according to the on-screen instructions, the LXPM is

displayed by default. (For more information, see the “Startup” section in the LXPM documentation compatible with your server at https://sysmgt.lenovofiles.com/help/topic/lxpm_frontend/lxpm_product_page.html.) You can perform drive diagnostics from this interface. From the Diagnostic page, click **Run Diagnostic → Disk Drive Test**

2. If the drive passes the test, replace the backplane.
3. If the drive fails the test, replace the drive.

Yellow drive status LED does not represent actual state of associated drive

Complete the following steps until the problem is solved:

1. Turn off the server.
2. Reseat the SAS/SATA adapter.
3. Reseat the backplane signal cable and backplane power cable.
4. Reseat the drive.
5. Power on the server and observe the activity of the drive LEDs.

Intermittent problems

Use this information to solve intermittent problems.

- “Intermittent external device problems” on page 395
- “Intermittent KVM problems” on page 395
- “Intermittent unexpected reboots” on page 396

Intermittent external device problems

Complete the following steps until the problem is solved.

1. Update the UEFI and XCC firmware to the latest versions.
2. Make sure that the correct device drivers are installed. See the manufacturer's website for documentation.
3. For a USB device:
 - a. Make sure that the device is configured correctly.

Restart the server and press the key according to the on-screen instructions to display the LXPM system setup interface. (For more information, see the “Startup” section in the LXPM documentation compatible with your server at https://sysmgt.lenovofiles.com/help/topic/lxpm_frontend/lxpm_product_page.html.) Then, click **System Settings → Devices and I/O Ports → USB Configuration**.

- b. Connect the device to another port. If using a USB hub, remove the hub and connect the device directly to the server. Make sure that the device is configured correctly for the port.

Intermittent KVM problems

Complete the following steps until the problem is solved.

Video problems:

1. Make sure that all cables and the console breakout cable are properly connected and secure.
2. Make sure that the monitor is working properly by testing it on another server.
3. Test the console breakout cable on a working server to ensure that it is operating properly. Replace the console breakout cable if it is defective.

Keyboard problems:

Make sure that all cables and the console breakout cable are properly connected and secure.

Mouse problems:

Make sure that all cables and the console breakout cable are properly connected and secure.

Intermittent unexpected reboots

Note: Some uncorrectable errors require that the server reboot so that it can disable a device, such as a memory DIMM or a processor to allow the machine to boot up properly.

1. If the reset occurs during POST and the POST watchdog timer is enabled, make sure that sufficient time is allowed in the watchdog timeout value (POST Watchdog Timer).

To check the POST watchdog time, restart the server and press the key according to the on-screen instructions to display the LXPM system setup interface. (For more information, see the “Startup” section in the LXPM documentation compatible with your server at https://sysmgt.lenovofiles.com/help/topic/lxpm_frontend/lxpm_product_page.html.) Then, click **BMC Settings → POST Watchdog Timer**.

2. If the reset occurs after the operating system starts, do one of the followings:
 - Enter the operating system when the system operates normally and set up operating system kernel dump process (Windows and Linux base operating systems will be using different method). Enter the UEFI setup menus and disable the feature, or disable it with the following OneCli command.

```
OneCli.exe config set SystemRecovery.RebootSystemOnNMI Disable --bmc XCC_USER:XCC_PASSWORD@XCC_IPAddress
```
 - Disable any automatic server restart (ASR) utilities, such as the Automatic Server Restart IPMI Application for Windows, or any ASR devices that are installed.
3. See the management controller event log to check for an event code that indicates a reboot. See “[Event logs](#)” on page 357 for information about viewing the event log. If you are using Linux base operating system, capture all logs back to Lenovo support for further investigation.

Keyboard, mouse, KVM switch or USB-device problems

Use this information to solve problems related to a keyboard, mouse, KVM switch or USB-device problems.

- “[All or some keys on the keyboard do not work](#)” on page 396
- “[Mouse does not work](#)” on page 396
- “[KVM switch problems](#)” on page 396
- “[USB-device does not work](#)” on page 397

All or some keys on the keyboard do not work

1. Make sure that:
 - The keyboard cable is securely connected.
 - The server and the monitor are turned on.
2. If you are using a USB keyboard, run the Setup utility and enable keyboardless operation.
3. If you are using a USB keyboard and it is connected to a USB hub, disconnect the keyboard from the hub and connect it directly to the server.
4. Replace the keyboard.

Mouse does not work

1. Make sure that:
 - The mouse cable is securely connected to the server.
 - The mouse device drivers are installed correctly.
 - The server and the monitor are turned on.
 - The mouse option is enabled in the Setup utility.
2. If you are using a USB mouse and it is connected to a USB hub, disconnect the mouse from the hub and connect it directly to the server.
3. Replace the mouse.

KVM switch problems

1. Make sure that the KVM switch is supported by your server.
2. Make sure that the KVM switch is powered on correctly.

3. If the keyboard, mouse or monitor can be operated normally with direct connection to the server, then replace the KVM switch.

USB-device does not work

1. Make sure that:
 - The server is turned on and there is power supplied to the server.
 - The correct USB device driver is installed.
 - The operating system supports the USB device.
2. Make sure that the USB configuration options are set correctly in system setup.

Restart the server and press the key according to the on-screen instructions to display the LXPM system setup interface. ((For more information, see the “Startup” section in the LXPM documentation compatible with your server at https://sysmgt.lenovofiles.com/help/topic/lxpm_frontend/lxpm_product_page.html.) Then, click **System Settings → Devices and I/O Ports → USB Configuration**.

3. If you are using a USB hub, disconnect the USB device from the hub and connect it directly to the server.
4. If the USB device is still not working, try to use a different USB device, or try to connect the USB device that is being tested to another working USB connector.
5. If the USB device works well on another USB connector, the original USB connector may have a problem.
 - If the USB connector is on the front of the server:
 - a. Remove and reconnect the USB cable. Ensure that the USB cable is correctly connected to the system board (system board assembly). See [Chapter 2 “Internal cable routing” on page 203](#)
 - b. Replace the front panel or front I/O module.
 - If the USB connector is at the rear of the server:
 - a. (Trained technician only) Replace the system I/O board.

Memory problems

See this section to resolve issues related to memory.

Common memory problems

- [“Displayed system memory is less than installed physical memory” on page 397](#)
- [“Invalid memory population detected” on page 398](#)
- [“DIMM PFA issue” on page 398](#)

Displayed system memory is less than installed physical memory

Complete the following procedure to solve the problem.

Note: Each time you install or remove a memory module, you must disconnect the server from the power source.

1. See [“Memory module installation rules and order” on page 4](#) to make sure that the present memory module population sequence is supported and you have installed the correct type of memory module.
2. Check whether any DIMM error LED is lit on the processor board and whether any memory module is not displayed in Setup Utility. If yes, check the customer/L1 actions by following the error event triggered in XCC or UEFI.
3. If the problem persists, replace the failing memory module with one that functions well.
 - If the new memory module still functions well, it indicates that the original memory module is damaged. In this case, replace the memory module with a good one.
 - If the new memory module cannot function well, it indicates that the memory slot is damaged. In this case, replace the processor board (trained technician only).
 - There are few cases in which the memory error is relative to processors. Replace the affected processors if the above actions does not help on customer’s situation (trained technician only).
4. Run the memory module diagnostics. When you start a server and press the key according to the on-screen instructions, the Lenovo XClarity Provisioning Manager interface is displayed by default. From

the Diagnostic page, click **Run Diagnostic → Memory Test → Advanced Memory Test**. If any memory module fails the test, repeat steps 2 and 3.

Invalid memory population detected

If this warning message appears, complete the following steps:

Invalid memory population (unsupported DIMM population) detected. Please verify memory configuration is valid.

1. See [“Memory module installation rules and order” on page 4](#) to make sure the present memory module population sequence is supported.
2. If the present sequence is indeed supported, see if any of the modules is displayed as “disabled” in Setup Utility.
3. Reseat the module that is displayed as “disabled,” and reboot the system.
4. If the problem persists, replace the memory module.

DIMM PFA issue

1. Update the UEFI and XCC firmware to the latest version.
2. Reseat the failing memory modules.
3. Swap processors and make sure that there are no damages to processor socket pins.
4. (Train service only) Ensure there is no abnormal material in any memory module slot.
5. Run the memory module diagnostics. When you start a server and press the key according to the on-screen instructions, the Lenovo XClarity Provisioning Manager interface is displayed by default. You can perform memory diagnostics from this interface. From the Diagnostic page, click **Run Diagnostic → Memory test → Advanced Memory Test**.
6. Replace the memory modules that fail Memory Test.

Monitor and video problems

Use this information to solve problems related to a monitor or video.

- [“Incorrect characters are displayed” on page 398](#)
- [“Screen is blank” on page 398](#)
- [“Screen goes blank when you start some application programs” on page 399](#)
- [“The monitor has screen jitter, or the screen image is wavy, unreadable, rolling, or distorted” on page 399](#)
- [“The wrong characters appear on the screen” on page 399](#)
- [“Monitor display fails when connected to the VGA connector of the server” on page 399](#)

Incorrect characters are displayed

Complete the following steps:

1. Verify that the language and locality settings are correct for the keyboard and operating system.
2. If the wrong language is displayed, update the server firmware to the latest level. See “Update the firmware” in *User Guide* or *System Configuration Guide*.

Screen is blank

Note: Make sure that the expected boot mode has not been changed from the UEFI to Legacy or vice versa.

1. If the server is attached to a KVM switch, bypass the KVM switch to eliminate it as a possible cause of the problem: connect the monitor cable directly to the correct connector on the rear of the server.
2. The management controller remote presence function is disabled if you install an optional video adapter. To use the management controller remote presence function, remove the optional video adapter.
3. If the server is installed with the graphical adapters while turning on the server, the Lenovo logo is displayed on the screen after approximately 3 minutes. This is normal operation while the system loads.
4. Make sure that:
 - The server is turned on and there is power supplied to the server.
 - The monitor cables are connected correctly.
 - The monitor is turned on and the brightness and contrast controls are adjusted correctly.

5. Make sure that the correct server is controlling the monitor, if applicable.
6. Make sure that the video output is not affected by corrupted server firmware; See “Update the firmware” in *User Guide* or *System Configuration Guide*.
7. If the problem remains, contact Lenovo Support.

Screen goes blank when you start some application programs

1. Make sure that:
 - The application program is not setting a display mode that is higher than the capability of the monitor.
 - You installed the necessary device drivers for the application.

The monitor has screen jitter, or the screen image is wavy, unreadable, rolling, or distorted

1. If the monitor self-tests show that the monitor is working correctly, consider the location of the monitor. Magnetic fields around other devices (such as transformers, appliances, fluorescents, and other monitors) can cause screen jitter or wavy, unreadable, rolling, or distorted screen images. If this happens, turn off the monitor.

Attention: Moving a color monitor while it is turned on might cause screen discoloration.

Move the device and the monitor at least 305 mm (12 in.) apart, and turn on the monitor.

Notes:

- a. To prevent diskette drive read/write errors, make sure that the distance between the monitor and any external diskette drive is at least 76 mm (3 in.).
- b. Non-Lenovo monitor cables might cause unpredictable problems.
2. Reseat the monitor cable.
3. Replace the components listed in step 2 one at a time, in the order shown, restarting the server each time:
 - a. Monitor cable
 - b. Video adapter (if one is installed)
 - c. Monitor

The wrong characters appear on the screen

Complete the following steps until the problem is solved:

1. Verify that the language and locality settings are correct for the keyboard and operating system.
2. If the wrong language is displayed, update the server firmware to the latest level. See “Update the firmware” in *User Guide* or *System Configuration Guide*.

Monitor display fails when connected to the VGA connector of the server

Complete the following steps until the problem is solved:

1. Check and ensure that the server is turned on.
2. If there is a KVM connected between the monitor and server, remove the KVM.
3. Reconnect the monitor cables and ensure that the cables are connected correctly.
4. Try to use a monitor that has been verified without a problem.
5. If the monitor display still fails, do the following:
 - If the VGA connector is on the front of the server:
 - a. Remove and reconnect the internal VGA cable. Ensure that the VGA cable is correctly connected to the system board (system board assembly). See [Chapter 2 “Internal cable routing” on page 203](#)
 - b. Replace the left rack latch with VGA. See [“Rack latches replacement” on page 137](#).
 - c. (Trained technician only) Replace the system I/O board.
 - If the VGA connector is on the rear of the server:
 - a. (Trained technician only) Replace the system I/O board.

Observable problems

Use this information to solve observable problems.

- “Server hangs during the UEFI boot process” on page 400
- “The server immediately displays the POST Event Viewer when it is turned on” on page 400
- “Server is unresponsive (POST is complete and operating system is running)” on page 400
- “Server is unresponsive (POST failed and cannot start System Setup)” on page 401
- “Voltage planar fault is displayed in the event log” on page 401
- “Unusual smell” on page 401
- “Server seems to be running hot” on page 401
- “Cannot enter legacy mode after installing a new adapter” on page 402
- “Cracked parts or cracked chassis” on page 402

Server hangs during the UEFI boot process

If the system hangs during the UEFI boot process with the message UEFI: DXE INIT on the display, make sure that Option ROMs were not configured with a setting of **Legacy**. You can remotely view the current settings for Option ROMs by running the following command using the Lenovo XClarity Essentials OneCLI:

```
onecli config show EnableDisableAdapterOptionROMSupport --bmc xcc_userid:xcc_password@xcc_ipaddress
```

To recover a system that hangs during the boot process with Legacy Option ROM settings, see the following Tech Tip:

<https://datacentersupport.lenovo.com/solutions/ht506118>

If legacy Option ROMs must be used, do not set slot Option ROMs to **Legacy** on the Devices and I/O Ports menu. Instead, set slot Option ROMs to **Auto** (the default setting), and set the System Boot Mode to **Legacy Mode**. Legacy option ROMs will be invoked shortly before the system boots.

The server immediately displays the POST Event Viewer when it is turned on

Complete the following steps until the problem is solved.

1. Correct any errors that are indicated by the system LEDs and diagnostics display.
2. Make sure that the server supports all the processors and that the processors match in speed and cache size.

You can view processor details from system setup.

To determine if the processor is supported for the server, see <https://serverproven.lenovo.com/>.

3. (Trained technician only) Make sure that processor 1 is seated correctly.
4. (Trained technician only) Remove processor 2 and restart the server.
5. Replace the following components one at a time, in the order shown, restarting the server each time:
 - a. (Trained technician only) Processor
 - b. (Trained technician only) System board (system board assembly)

Server is unresponsive (POST is complete and operating system is running)

Complete the following steps until the problem is solved.

- If you are in the same location as the server, complete the following steps:
 1. If you are using a KVM connection, make sure that the connection is operating correctly. Otherwise, make sure that the keyboard and mouse are operating correctly.
 2. If possible, log in to the server and verify that all applications are running (no applications are hung).
 3. Restart the server.
 4. If the problem remains, make sure that any new software has been installed and configured correctly.
 5. Contact your place of purchase of the software or your software provider.
- If you are accessing the server from a remote location, complete the following steps:

1. Make sure that all applications are running (no applications are hung).
2. Attempt to log out of the system and log back in.
3. Validate the network access by pinging or running a trace route to the server from a command line.
 - a. If you are unable to get a response during a ping test, attempt to ping another server in the chassis to determine whether it is a connection problem or server problem.
 - b. Run a trace route to determine where the connection breaks down. Attempt to resolve a connection issue with either the VPN or the point at which the connection breaks down.
4. Restart the server remotely through the management interface.
5. If the problem remains, verify that any new software has been installed and configured correctly.
6. Contact your place of purchase of the software or your software provider.

Server is unresponsive (POST failed and cannot start System Setup)

Configuration changes, such as added devices or adapter firmware updates, and firmware or application code problems can cause the server to fail POST (the power-on self-test).

If this occurs, the server responds in either of the following ways:

- The server restarts automatically and attempts POST again.
- The server hangs, and you must manually restart the server for the server to attempt POST again.

After a specified number of consecutive attempts (automatic or manual), the server reverts to the default UEFI configuration and starts System Setup so that you can make the necessary corrections to the configuration and restart the server. If the server is unable to successfully complete POST with the default configuration, there might be a problem with the processor board or system I/O board. Do the following:

1. Remove any newly added devices and revert the system to the default hardware configuration.
2. Try to restart the system and check if it can boot to the System Setup successfully.
 - If no, do the following:
 - a. Replace the processor board.
 - b. Replace the system I/O board.
 - If yes, try to move the suspected device to another system under test (SUT).
 - If the SUT system works normally, the issue maybe is caused by the processor board or system I/O board.
 - If the SUT system works abnormally, there might be a problem with the suspected device.
3. If all the suspected parts are isolated and the issue still remains unchanged, please run the affected system to be minimum configuration for further detail issue isolation and add them back step by step.

Voltage planar fault is displayed in the event log

Complete the following steps until the problem is solved.

1. Revert the system to the minimum configuration. See [“Specifications” on page 359](#) for the minimally required number of processors and DIMMs.
2. Restart the system.
 - If the system restarts, add each of the removed items one at a time and restart the system each time until the error occurs. Replace the item for which the error occurs.
 - If the system does not restart, suspect the processor board first and then the system I/O board.

Unusual smell

Complete the following steps until the problem is solved.

1. An unusual smell might be coming from newly installed equipment.
2. If the problem remains, contact Lenovo Support.

Server seems to be running hot

Complete the following steps until the problem is solved.

Multiple servers or chassis:

1. Make sure that the room temperature is within the specified range (see [“Specifications” on page 359](#)).
2. Make sure that the fans are installed correctly.
3. Update the UEFI and XCC to the latest versions.
4. Make sure that the fillers in the server are installed correctly (see [Chapter 1 “Hardware replacement procedures” on page 1](#) for detailed installation procedures).
5. Use the IPMI command to ramp up the fan speed to the full fan speed to see whether the issue can be resolved.

Note: The IPMI raw command should only be used by trained technician and the each system has its own specific PMI raw command.

6. Check the management processor event log for rising temperature events. If there are no events, the server is running within normal operating temperatures. Note that you can expect some variation in temperature.

Cannot enter legacy mode after installing a new adapter

Complete the following procedure to solve the problem.

1. Go to **UEFI Setup → Devices and I/O Ports → Set Option ROM Execution Order**.
2. Move the RAID adapter with operation system installed to the top of the list.
3. Select **Save**.
4. Reboot the system and auto boot to operation system.

Cracked parts or cracked chassis

Contact Lenovo Support.

Optional-device problems

Use this information to solve problems related to optional devices.

- [“External USB device is not recognized” on page 402](#)
- [“PCIe adapter is not recognized or is not functioning” on page 402](#)
- [“Insufficient PCIe resources are detected.” on page 403](#)
- [“A Lenovo optional device that was just installed does not work.” on page 403](#)
- [“A Lenovo optional device that worked previously does not work now” on page 403](#)

External USB device is not recognized

Complete the following steps until the problem is resolved:

1. Update the UEFI firmware to the latest version.
2. Make sure that the proper drivers are installed on the server. See the product documentation for the USB device for information about device drivers.
3. Use the Setup utility to make sure that the device is configured correctly.
4. If the USB device is plugged into a hub or the console breakout cable, unplug the device and plug it directly into the USB port on the front of the server.

PCIe adapter is not recognized or is not functioning

Complete the following steps until the problem is resolved:

1. Update the UEFI firmware to the latest version.
2. Check the event log and resolve any issues related to the device.
3. Validate that the device is supported for the server (see <https://serverproven.lenovo.com/>). Make sure that the firmware level on the device is at the latest supported level and update the firmware if applicable.
4. Make sure that the adapter is installed in a correct slot.
5. Make sure that the proper device drivers are installed for the device.
6. Resolve any resource conflicts if running legacy mode (UEFI). Check legacy ROM boot orders and modify the UEFI setting for MM config base.

Note: Ensure that you modify the ROM boot order associated with the PCIe adapter to the first execution order.

7. Check <http://datacentersupport.lenovo.com> for any tech tips (also known as retain tips or service bulletins) that might be related to the adapter.
8. Ensure any adapter external connections are correct and that the connectors are not physically damaged.
9. Make sure that the PCIe adapter is installed with the supported operating system.

Insufficient PCIe resources are detected.

If you see an error message stating “Insufficient PCI Resources Detected,” complete the following steps until the problem is resolved:

1. Press Enter to access System Setup Utility.
2. Select **System Settings → Devices and I/O Ports → PCI 64-Bit Resource Allocation**, then; modify the setting from **Auto** to **Enable**.
3. If the Boot Device does not support MMIO above 4 GB for Legacy Boot, use UEFI Boot Mode or remove/disable some PCIe devices.
4. DC cycle the system and ensure the system is enter UEFI boot menu or the operating system; then, capture the FFDC log.
5. Contact Lenovo technical support.

A Lenovo optional device that was just installed does not work.

1. Make sure that:
 - The device is supported for the server (see <https://serverproven.lenovo.com/>).
 - You followed the installation instructions that came with the device and the device is installed correctly.
 - You have not loosened any other installed devices or cables.
 - You updated the configuration information in system setup. When you start a server and press the key according to the on-screen instructions to display the Setup Utility. ((For more information, see the “Startup” section in the LXPM documentation compatible with your server at https://sysmgt.lenovofiles.com/help/topic/lxpm_frontend/lxpm_product_page.html.) Whenever memory or any other device is changed, you must update the configuration.
2. Reseat the device that you have just installed.
3. Replace the device that you have just installed.
4. Reseat the cable connection and check there is no physical damage to the cable.
5. If there is any cable damages, then replace the cable.

A Lenovo optional device that worked previously does not work now

1. Make sure that all of the cable connections for the device are secure.
2. If the device comes with test instructions, use those instructions to test the device.
3. Reseat the cable connection and check if any physical parts have been damaged.
4. Replace the cable.
5. Reseat the failing device.
6. Replace the failing device.

Performance problems

Use this information to solve performance problems.

- “Network performance” on page 403
- “Operating system performance” on page 404

Network performance

Complete the following steps until the problem is solved:

1. Isolate which network is operating slowly (such as storage, data, and management). You might find it helpful to use ping tools or operating-system tools such as ethtool, task manager, or resource manager.
2. Check for traffic congestion on the network.
3. Utilize flow control settings to avoid overloading a port.
4. Update the NIC device driver, or the storage device controller device driver.
5. Use any traffic-diagnostic tools provided by the adapter manufacturer.
6. Balance the workload across multiple processor cores by using functions such as Receive Side Scaling (RSS).
7. Limit the inter-processor communication by using parameters such as interrupt affinity and NUMA settings.
8. Follow the instructions of adapter-specific tuning guides provided by the adapter manufacturer.

Operating system performance

Complete the following steps until the problem is solved:

1. If you have recently made changes to the server (for example, updated device drivers or installed software applications), remove the changes.
2. Check for any networking issues.
3. Check the operating system logs for performance related errors.
4. Check for events related to high temperatures and power issues as the server might be throttled to help with cooling. If it is throttled, reduce the workload on the server to help improve performance.
5. Check for events related to disabled DIMMs. If you do not have enough memory for the application workload, your operating system will have poor performance.
6. Ensure that the workload is not too high for the configuration.

Power on and power off problems

Use this information to resolve issues when powering on or powering off the server.

- [“The power button does not work \(server does not start\)” on page 404](#)
- [“Server does not power on” on page 405](#)
- [“Server does not power off” on page 405](#)

The power button does not work (server does not start)

Note: The power button will not function until approximately 1 to 3 minutes after the server has been connected to ac power to allow time for BMC to initialize.

Complete the following steps until the problem is resolved:

1. Make sure that the power button on the server is working correctly:
 - a. Disconnect the server power cords.
 - b. Reconnect the server power cords.
 - c. Reseat the front operator panel cable, and then repeat steps 1a and 1b.
 - If the server starts, reseat the front operator panel.
 - If the problem remains, replace the front operator panel.
2. Make sure that:
 - The power cords are correctly connected to the server and to a working electrical outlet.
 - The LEDs on the power supply do not indicate a problem.
 - The Power button LED is lit on and flash slowly.
 - The push force is enough and with button force response.
3. If the power button LED didn't lit on or flash correctly, reseat all the power supplies and make sure AC LED on PSU rear side are lit on.
4. If you have just installed an optional device, remove it, and restart the server.
5. If the issue is still observed or without power button LED lit on, implement the minimum configuration to check whether any specific components lock the power permission. Replace the each power supply and check the power button function after installing the each one.

6. If everything is still done and the issue cannot be resolved, collect the failure information with system logs captured to Lenovo support.

Server does not power on

Complete the following steps until the problem is resolved:

1. Check the event log for any events related to the server not powering on.
2. Check for any LEDs that are blinking amber, yellow, or red.
3. Check the system status LED on the system board (system board assembly). See [“LEDs on the system board assembly” on page 386](#).
4. Check if the power input status LED is off or the yellow LED is lit on the power supply unit.
5. AC cycle the system.
6. Remove the CMOS battery for at least ten seconds, then, reinstall the CMOS battery.
7. Try to power on the system by IPMI command through XCC or by the power button.
8. Implement the minimum configuration (one processor, one DIMM and one PSU without any adapter and any drive installed).
9. Reseat all power supplies and make sure that AC LEDs on the PSU rear side are lit.
10. Replace the each power supply and check the power button function after installing the each one.
11. If the issue cannot be resolved by above actions, call service to review the issue symptom and see whether the system I/O board or processor board replacement is necessary.

Server does not power off

Complete the following steps until the problem is resolved:

1. Determine whether you are using an Advanced Configuration and Power Interface (ACPI) or a non-ACPI operating system. If you are using a non-ACPI operating system, complete the following steps:
 - a. Press Ctrl+Alt+Delete.
 - b. Turn off the server by pressing the power-control button and holding it down for 5 seconds.
 - c. Restart the server.
 - d. If the server fails POST and the power-control button does not work, disconnect the power cord for 20 seconds; then, reconnect the power cord and restart the server.
2. If the problem remains or if you are using an ACPI-aware operating system, suspect the system board (system board assembly).

Power problems

Use this information to resolve issues related to power.

System error LED is on and event log "Power supply has lost input" is displayed

To resolve the problem, ensure that:

1. The power supply is properly connected to a power cord.
2. The power cord is connected to a properly grounded electrical outlet for the server.
3. Make sure that the power supply AC source is stable within the supported range.
4. Swap the power supply to see if the issue follows the power supply, if it follows the power supply, then replace the failing one.
5. Review the event log and see how the problem it is to follow the event log actions to resolve the problems.

Serial-device problems

Use this information to solve problems with serial ports or devices.

- [“Number of displayed serial ports is less than the number of installed serial ports” on page 406](#)
- [“Serial device does not work” on page 406](#)

Number of displayed serial ports is less than the number of installed serial ports

Complete the following steps until the problem is solved.

1. Make sure that:
 - Each port is assigned a unique address in the Setup utility and none of the serial ports is disabled.
 - The serial-port adapter (if one is present) is seated correctly.
2. Reseat the serial port adapter.
3. Replace the serial port adapter.

Serial device does not work

1. Make sure that:
 - The device is compatible with the server.
 - The serial port is enabled and is assigned a unique address.
 - The device is connected to the correct connector (see [“System-board-assembly connectors” on page 367](#)).
2. Reseat the following components:
 - a. Failing serial device.
 - b. Serial cable.
3. Replace the following components:
 - a. Failing serial device.
 - b. Serial cable.
4. If the problem remains, contact Lenovo Support.

Software problems

Use this information to solve software problems.

1. To determine whether the problem is caused by the software, make sure that:
 - The server has the minimum memory that is needed to use the software. For memory requirements, see the information that comes with the software.

Note: If you have just installed an adapter or memory, the server might have a memory-address conflict.

 - The software is designed to operate on the server.
 - Other software works on the server.
 - The software works on another server.
2. If you receive any error messages while you use the software, see the information that comes with the software for a description of the messages and suggested solutions to the problem.
3. Contact your place of purchase of the software.

Storage drive problems

Use this information to resolve issues related to the storage drives.

- [“Server cannot recognize a drive” on page 406](#)
- [“Multiple drives fail” on page 407](#)
- [“Multiple drives are offline” on page 408](#)
- [“A replacement drive does not rebuild” on page 408](#)
- [“Green drive activity LED does not represent actual state of associated drive” on page 408](#)
- [“Yellow drive status LED does not represent actual state of associated drive” on page 408](#)

Server cannot recognize a drive

Complete the following steps until the problem is solved.

1. Observe the associated yellow drive status LED. If the LED is lit, it indicates a drive fault.
2. If the status LED is lit, remove the drive from the bay, wait 45 seconds, and reinsert the drive, making sure that the drive assembly connects to the drive backplane.
3. Observe the associated green drive activity LED and the yellow status LED and perform corresponding operations in different situations:
 - If the green activity LED is flashing and the yellow status LED is not lit, the drive is recognized by the controller and is working correctly. Run the diagnostics tests for the drives. When you start a server and press the key according to the on-screen instructions, the LXPM is displayed by default. (For more information, see the “Startup” section in the LXPM documentation compatible with your server at https://sysmgt.lenovofiles.com/help/topic/lxpm_frontend/lxpm_product_page.html.) You can perform drive diagnostics from this interface. From the Diagnostic page, click **Run Diagnostic → Disk Drive Test**.
 - If the green activity LED is flashing and the yellow status LED is flashing slowly, the drive is recognized by the controller and is rebuilding.
 - If neither LED is lit or flashing, check whether the drive backplane is correctly seated. For details, go to step 4.
 - If the green activity LED is flashing and the yellow status LED is lit, replace the drive.
4. Make sure that the drive backplane is correctly seated. When it is correctly seated, the drive assemblies correctly connect to the backplane without bowing or causing movement of the backplane.
5. Reseat the backplane power cable and repeat steps 1 through 3.
6. Reseat the backplane signal cable and repeat steps 1 through 3.
7. Suspect the backplane signal cable or the backplane:
 - Replace the affected backplane signal cable.
 - Replace the affected backplane.
8. Run the diagnostics tests for the drives. When you start a server and press the key according to the on-screen instructions, the LXPM is displayed by default. (For more information, see the “Startup” section in the LXPM documentation compatible with your server at https://sysmgt.lenovofiles.com/help/topic/lxpm_frontend/lxpm_product_page.html.) You can perform drive diagnostics from this interface. From the Diagnostic page, click **Run Diagnostic → Disk Drive Test**.

Based on those tests:

- If the backplane passes the test but the drives are not recognized, replace the backplane signal cable and run the tests again.
- Replace the backplane.
- If the adapter fails the test, disconnect the backplane signal cable from the adapter and run the tests again.
- If the adapter fails the test, replace the adapter.

Multiple drives fail

Complete the following steps until the problem is solved:

- View the Lenovo XClarity Controller event log for events related to power supplies or vibration issues and resolve those events.
- Make sure that the device drivers and firmware for the drive and server are at the latest level.

Important: Some cluster solutions require specific code levels or coordinated code updates. If the device is part of a cluster solution, verify that the latest level of code is supported for the cluster solution before you update the code.

Multiple drives are offline

Complete the following steps until the problem is solved:

- View the Lenovo XClarity Controller event log for events related to power supplies or vibration issues and resolve those events.
- View the storage subsystem log for events related to the storage subsystem and resolve those events.

A replacement drive does not rebuild

Complete the following steps until the problem is solved:

1. Make sure that the drive is recognized by the adapter (the green drive activity LED is flashing).
2. Review the SAS/SATA RAID adapter documentation to determine the correct configuration parameters and settings.

Green drive activity LED does not represent actual state of associated drive

Complete the following steps until the problem is solved:

1. If the green drive activity LED does not flash when the drive is in use, run the diagnostics tests for the drives. When you start a server and press the key according to the on-screen instructions, the LXPM is displayed by default. (For more information, see the “Startup” section in the LXPM documentation compatible with your server at https://sysmgt.lenovofiles.com/help/topic/lxpm_frontend/lxpm_product_page.html.) You can perform drive diagnostics from this interface. From the Diagnostic page, click **Run Diagnostic → Disk Drive Test**
2. If the drive passes the test, replace the backplane.
3. If the drive fails the test, replace the drive.

Yellow drive status LED does not represent actual state of associated drive

Complete the following steps until the problem is solved:

1. Turn off the server.
2. Reseat the SAS/SATA adapter.
3. Reseat the backplane signal cable and backplane power cable.
4. Reseat the drive.
5. Power on the server and observe the activity of the drive LEDs.

Appendix A. Getting help and technical assistance

If you need help, service, or technical assistance or just want more information about Lenovo products, you will find a wide variety of sources available from Lenovo to assist you.

On the World Wide Web, up-to-date information about Lenovo systems, optional devices, services, and support are available at:

<http://datacentersupport.lenovo.com>

Note: IBM is Lenovo's preferred service provider for ThinkSystem.

Before you call

Before you call, there are several steps that you can take to try and solve the problem yourself. If you decide that you do need to call for assistance, gather the information that will be needed by the service technician to more quickly resolve your problem.

Attempt to resolve the problem yourself

You can solve many problems without outside assistance by following the troubleshooting procedures that Lenovo provides in the online help or in the Lenovo product documentation. The online help also describes the diagnostic tests that you can perform. The documentation for most systems, operating systems, and programs contains troubleshooting procedures and explanations of error messages and error codes. If you suspect a software problem, see the documentation for the operating system or program.

You can find the product documentation for your ThinkSystem products at the following location:

<https://pubs.lenovo.com/>

You can take these steps to try to solve the problem yourself:

- Check all cables to make sure that they are connected.
- Check the power switches to make sure that the system and any optional devices are turned on.
- Check for updated software, firmware, and operating-system device drivers for your Lenovo product. (See the following links) The Lenovo Warranty terms and conditions state that you, the owner of the Lenovo product, are responsible for maintaining and updating all software and firmware for the product (unless it is covered by an additional maintenance contract). Your service technician will request that you upgrade your software and firmware if the problem has a documented solution within a software upgrade.
 - Drivers and software downloads
 - <https://datacentersupport.lenovo.com/tw/en/products/servers/thinksystem/sr645v3/7d9c/downloads/driver-list/>
 - Operating system support center
 - <https://datacentersupport.lenovo.com/solutions/server-os>
 - Operating system installing instructions
 - <https://pubs.lenovo.com/#os-installation>
- If you have installed new hardware or software in your environment, check <https://serverproven.lenovo.com/> to make sure that the hardware and software are supported by your product.
- Refer to [Chapter 3 “Problem determination” on page 357](#) for instructions on isolating and solving issues.

- Go to <http://datacentersupport.lenovo.com> and check for information to help you solve the problem.

To find the Tech Tips available for your server:

1. Go to <http://datacentersupport.lenovo.com>, and input the model name or machine type of your server in the search bar to navigate to the support page.
2. Click on **How To's** from the navigation pane.
3. Click **Article Type** → **Solution** from the drop-down menu.

Follow the on-screen instructions to choose the category for the problem that you are having.

- Check Lenovo Data Center Forum at https://forums.lenovo.com/t5/Datacenter-Systems/ct-p/sv_eg to see if someone else has encountered a similar problem.

Gathering information needed to call Support

If you require warranty service for your Lenovo product, the service technicians will be able to assist you more efficiently if you prepare the appropriate information before you call. You can also go to <http://datacentersupport.lenovo.com/warrantylookup> for more information about your product warranty.

Gather the following information to provide to the service technician. This data will help the service technician quickly provide a solution to your problem and ensure that you receive the level of service for which you might have contracted.

- Hardware and Software Maintenance agreement contract numbers, if applicable
- Machine type number (Lenovo 4-digit machine identifier). Machine type number can be found on the ID label, see “Identifying the server and access the Lenovo XClarity Controller” in *User Guide* or *System Configuration Guide*.
- Model number
- Serial number
- Current system UEFI and firmware levels
- Other pertinent information such as error messages and logs

As an alternative to calling Lenovo Support, you can go to <https://support.lenovo.com/servicerequest> to submit an Electronic Service Request. Submitting an Electronic Service Request will start the process of determining a solution to your problem by making the pertinent information available to the service technicians. The Lenovo service technicians can start working on your solution as soon as you have completed and submitted an Electronic Service Request.

Collecting service data

To clearly identify the root cause of a server issue or at the request of Lenovo Support, you might need collect service data that can be used for further analysis. Service data includes information such as event logs and hardware inventory.

Service data can be collected through the following tools:

- **Lenovo XClarity Provisioning Manager**

Use the Collect Service Data function of Lenovo XClarity Provisioning Manager to collect system service data. You can collect existing system log data or run a new diagnostic to collect new data.

- **Lenovo XClarity Controller**

You can use the Lenovo XClarity Controller web interface or the CLI to collect service data for the server. The file can be saved and sent to Lenovo Support.

- For more information about using the web interface to collect service data, see the “Backing up the BMC configuration” section in the XCC documentation compatible with your server at https://sysmgt.lenovofiles.com/help/topic/lxcc_frontend/lxcc_overview.html.
- For more information about using the CLI to collect service data, see the “XCC `ffdc` command” section in the XCC documentation compatible with your server at https://sysmgt.lenovofiles.com/help/topic/lxcc_frontend/lxcc_overview.html.

- **Lenovo XClarity Administrator**

Lenovo XClarity Administrator can be set up to collect and send diagnostic files automatically to Lenovo Support when certain serviceable events occur in Lenovo XClarity Administrator and the managed endpoints. You can choose to send diagnostic files to Lenovo Support using Call Home or to another service provider using SFTP. You can also manually collect diagnostic files, open a problem record, and send diagnostic files to the Lenovo Support.

You can find more information about setting up automatic problem notification within the Lenovo XClarity Administrator at http://sysmgt.lenovofiles.com/help/topic/com.lenovo.lxca.doc/admin_setupcallhome.html.

- **Lenovo XClarity Essentials OneCLI**

Lenovo XClarity Essentials OneCLI has inventory application to collect service data. It can run both in-band and out-of-band. When running in-band within the host operating system on the server, OneCLI can collect information about the operating system, such as the operating system event log, in addition to the hardware service data.

To obtain service data, you can run the `getinfor` command. For more information about running the `getinfor`, see http://sysmgt.lenovofiles.com/help/topic/toolsctr_cli_lenovo/onecli_r_getinfor_command.html.

Contacting Support

You can contact Support to obtain help for your issue.

You can receive hardware service through a Lenovo Authorized Service Provider. To locate a service provider authorized by Lenovo to provide warranty service, go to <https://datacentersupport.lenovo.com/serviceprovider> and use filter searching for different countries. For Lenovo support telephone numbers, see <https://datacentersupport.lenovo.com/supportphonenumber> for your region support details.

Appendix B. Documents and supports

This section provides handy documents, driver and firmware downloads, and support resources.

Documents download

This section provides introduction and download link handy documents.

Documents

Download the following product documentations at:

https://thinksystem.lenovofiles.com/help/topic/SR645V3/pdf_files.html

- **Rail Installation Guides**
 - Rail installation in a rack
- **User Guide**
 - Complete overview, system configuration, hardware components replacing, and troubleshooting.
Selected chapters from *User Guide*:
 - **System Configuration Guide** : Server overview, components identification, system LEDs and diagnostics display, product unboxing, setting up and configuring the server.
 - **Hardware Maintenance Guide** : Installing hardware components, cable routing, and troubleshooting.
- **Messages and Codes Reference**
 - XClarity Controller, LXPM, and uEFI events
- **UEFI Manual**
 - UEFI setting introduction

Note: SR645 V3 configured with Direct Water Cooling Module (DWCM) can be installed in the ThinkSystem Heavy Duty Full Depth Rack Cabinets. For ThinkSystem Heavy Duty Full Depth Rack Cabinets User Guide, see https://pubs.lenovo.com/hdc_rackcabinet/.

Support websites

This section provides driver and firmware downloads and support resources.

Support and downloads

- Drivers and Software download website for ThinkSystem SR645 V3
 - <https://datacentersupport.lenovo.com/tw/en/products/servers/thinksystem/sr645v3/7d9c/downloads/driver-list/>
- Lenovo Data Center Forum
 - https://forums.lenovo.com/t5/Datacenter-Systems/ct-p/sv_eg
- Lenovo Data Center Support for ThinkSystem SR645 V3
 - <https://datacentersupport.lenovo.com/products/servers/thinksystem/sr645v3/7d9c>
- Lenovo License Information Documents
 - <https://datacentersupport.lenovo.com/documents/Invo-eula>
- Lenovo Press website (Product Guides/Datasheets/White papers)
 - <http://lenovopress.com/>
- Lenovo Privacy Statement
 - <https://www.lenovo.com/privacy>
- Lenovo Product Security Advisories
 - https://datacentersupport.lenovo.com/product_security/home
- Lenovo Product Warranty Plans

- <http://datacentersupport.lenovo.com/warrantylookup>
- Lenovo Server Operating Systems Support Center website
 - <https://datacentersupport.lenovo.com/solutions/server-os>
- Lenovo ServerProven website (Options compatibility lookup)
 - <https://serverproven.lenovo.com/>
- Operating System Installation Instructions
 - <https://pubs.lenovo.com/#os-installation>
- Submit an eTicket (service request)
 - <https://support.lenovo.com/servicerequest>
- Subscribe to Lenovo Data Center Group product notifications (Stay up to date on firmware updates)
 - <https://datacentersupport.lenovo.com/solutions/ht509500>

Appendix C. Notices

Lenovo may not offer the products, services, or features discussed in this document in all countries. Consult your local Lenovo representative for information on the products and services currently available in your area.

Any reference to a Lenovo product, program, or service is not intended to state or imply that only that Lenovo product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any Lenovo intellectual property right may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any other product, program, or service.

Lenovo may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document is not an offer and does not provide a license under any patents or patent applications. You can send inquiries in writing to the following:

*Lenovo (United States), Inc.
8001 Development Drive
Morrisville, NC 27560
U.S.A.
Attention: Lenovo Director of Licensing*

LENOVO PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some jurisdictions do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. Lenovo may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time without notice.

The products described in this document are not intended for use in implantation or other life support applications where malfunction may result in injury or death to persons. The information contained in this document does not affect or change Lenovo product specifications or warranties. Nothing in this document shall operate as an express or implied license or indemnity under the intellectual property rights of Lenovo or third parties. All information contained in this document was obtained in specific environments and is presented as an illustration. The result obtained in other operating environments may vary.

Lenovo may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

Any references in this publication to non-Lenovo Web sites are provided for convenience only and do not in any manner serve as an endorsement of those Web sites. The materials at those Web sites are not part of the materials for this Lenovo product, and use of those Web sites is at your own risk.

Any performance data contained herein was determined in a controlled environment. Therefore, the result obtained in other operating environments may vary significantly. Some measurements may have been made on development-level systems and there is no guarantee that these measurements will be the same on generally available systems. Furthermore, some measurements may have been estimated through extrapolation. Actual results may vary. Users of this document should verify the applicable data for their specific environment.

Trademarks

LENOVO and THINKSYSTEM are trademarks of Lenovo.

All other trademarks are the property of their respective owners.

Important notes

Processor speed indicates the internal clock speed of the processor; other factors also affect application performance.

CD or DVD drive speed is the variable read rate. Actual speeds vary and are often less than the possible maximum.

When referring to processor storage, real and virtual storage, or channel volume, KB stands for 1 024 bytes, MB stands for 1 048 576 bytes, and GB stands for 1 073 741 824 bytes.

When referring to hard disk drive capacity or communications volume, MB stands for 1 000 000 bytes, and GB stands for 1 000 000 000 bytes. Total user-accessible capacity can vary depending on operating environments.

Maximum internal hard disk drive capacities assume the replacement of any standard hard disk drives and population of all hard-disk-drive bays with the largest currently supported drives that are available from Lenovo.

Maximum memory might require replacement of the standard memory with an optional memory module.

Each solid-state memory cell has an intrinsic, finite number of write cycles that the cell can incur. Therefore, a solid-state device has a maximum number of write cycles that it can be subjected to, expressed as total bytes written (TBW). A device that has exceeded this limit might fail to respond to system-generated commands or might be incapable of being written to. Lenovo is not responsible for replacement of a device that has exceeded its maximum guaranteed number of program/erase cycles, as documented in the Official Published Specifications for the device.

Lenovo makes no representations or warranties with respect to non-Lenovo products. Support (if any) for the non-Lenovo products is provided by the third party, not Lenovo.

Some software might differ from its retail version (if available) and might not include user manuals or all program functionality.

Electronic emission notices

When you attach a monitor to the equipment, you must use the designated monitor cable and any interference suppression devices that are supplied with the monitor.

Additional electronic emissions notices are available at:

https://pubs.lenovo.com/important_notices/

Taiwan Region BSMI RoHS declaration

單元 Unit	限用物質及其化學符號 Restricted substances and its chemical symbols					
	鉛Lead (Pb)	汞Mercury (Hg)	鎘Cadmium (Cd)	六價鉻 Hexavalent chromium (Cr ⁶⁺)	多溴聯苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)
機架	○	○	○	○	○	○
外部蓋板	○	○	○	○	○	○
機械組零件	-	○	○	○	○	○
空氣傳動設備	-	○	○	○	○	○
冷卻組零件	-	○	○	○	○	○
內存模組	-	○	○	○	○	○
處理器模組	-	○	○	○	○	○
電纜組零件	-	○	○	○	○	○
電源供應器	-	○	○	○	○	○
儲備設備	-	○	○	○	○	○
印刷電路板	-	○	○	○	○	○

備考1. “超出0.1 wt %”及“超出0.01 wt %”係指限用物質之百分比含量超出百分比含量基準值。
 Note1: “exceeding 0.1wt%” and “exceeding 0.01 wt%” indicate that the percentage content of the restricted substance exceeds the reference percentage value of presence condition.

備考2. “○”係指該項限用物質之百分比含量未超出百分比含量基準值。
 Note2: “○”indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence.

備考3. “-”係指該項限用物質為排除項目。
 Note3: The “-” indicates that the restricted substance corresponds to the exemption.

Taiwan Region import and export contact information

Contacts are available for Taiwan Region import and export information.

委製商/進口商名稱: 台灣聯想環球科技股份有限公司
 進口商地址: 台北市南港區三重路 66 號 8 樓
 進口商電話: 0800-000-702

Lenovo[™]