



ThinkSystem SR680a V3 Hardware Maintenance Guide



Machine Types: 7DHE

Note

Before using this information and the product it supports, be sure to read and understand the safety information and the safety instructions, which are available at:

https://pubs.lenovo.com/safety_documentation/

In addition, be sure that you are familiar with the terms and conditions of the Lenovo warranty for your server, which can be found at:

<http://datacentersupport.lenovo.com/warrantylookup>

First Edition (July 2024)

© Copyright Lenovo 2024.

LIMITED AND RESTRICTED RIGHTS NOTICE: If data or software is delivered pursuant to a General Services Administration (GSA) contract, use, reproduction, or disclosure is subject to restrictions set forth in Contract No. GS-35F-05925.

Contents

Contents	i
---------------------------	----------

Safetyiii
-------------------------	-------------

Safety inspection checklist	iv
---------------------------------------	----

Chapter 1. Hardware replacement procedures. **1**

Installation Guidelines	1
Safety inspection checklist.	2
System reliability guidelines	3
Handling static-sensitive devices	4
Memory module installation rules and order	5
Power on and power off the server	6
Power on the server	6
Power off the server	7
Chassis replacement.	7
Remove the chassis from rack	7
Install the chassis to rack	14
Common components	22
2.5-inch hot-swap drive replacement	22
2U compute shuttle replacement (trained technician only)	26
8U GPU shuttle replacement (trained technician only)	28
Cable cover replacement (trained technician only)	32
CMOS battery (CR2032) replacement	34
Fan replacement	38
Fan control board assembly replacement (trained technician only)	42
GPU air baffle replacement (trained technician only)	50
Integrated diagnostics panel replacement	53
M.2 drive replacement (trained technician only)	55
Memory module replacement (trained technician only)	59
MicroSD card replacement (trained technician only)	64
PCIe riser air baffle replacement (trained technician only)	66
PCIe riser assembly replacement (trained technician only)	69
Power complex replacement (trained technician only)	75
Power distribution board replacement (trained technician only)	79
Power supply unit replacement	82

Processor air baffle replacement (trained technician only)	86
System I/O board replacement (trained technician only)	88
Processor and heat sink replacement (trained technician only)	91
PSU cage replacement (trained technician only)	103
PSU interposer replacement (trained technician only)	107
System board replacement (trained technician only)	110
The H100/H200 GPU Model components.	120
2.5-inch drive backplane replacement (trained technician only)	120
GPU air duct replacement (trained technician only)	125
GPU baseboard replacement (trained technician only)	127
GPU complex replacement (trained technician only)	136
GPU complex adapter plate replacement (trained technician only)	145
GPU and heat sink module replacement (trained technician only)	151
HMC card replacement (trained technician only)	159
I/O cover replacement (trained technician only)	161
PCIe switch board and heat sink replacement (trained technician only)	164
PCIe adapter replacement (trained technician only)	169
PCIe switch cable harness replacement (trained technician only)	175
PCIe switch shuttle replacement (trained technician only)	187
Complete the parts replacement	191

Chapter 2. Internal cable routing . . . **193**

Identifying connectors	193
Drive backplane connectors	193
Fan control board connectors	193
PCIe riser card connectors.	194
PCIe switch board connectors	194
PCIe switch cable harness cables	195
Power distribution board connectors.	196
PSU interposer connectors	197
System board connectors for cable routing	197

Common components cable routing	198
PCIe riser cable routing	199
Fan control board cable routing	202
Front I/O module and integrated diagnostics panel cable routing	203
System I/O board cable routing	205
Power cable routing	205
PSU interposer cable routing	207
The H100/H200 GPU Model cable routing	208
2.5-inch drive backplane cable routing	208
GPU baseboard cable routing	211
PCIe switch board cable routing	212

Chapter 3. Problem determination219

Event logs	219
Specifications	221
Technical specifications	221
Mechanical specifications	224
Environmental specifications	224
System board connectors	226
Troubleshooting by system LEDs and diagnostics display	227
Drive LEDs	227
Power supply LEDs	228
Rear system LEDs	229
XCC system management port LEDs	230
Integrated diagnostics panel	231
General problem determination procedures	236
Resolving suspected power problems	237
Resolving suspected Ethernet controller problems	237
Troubleshooting by symptom	238
GPU problems	238

Intermittent problems	243
Keyboard, mouse, KVM switch or USB-device problems	244
Memory problems	245
Monitor and video problems	247
Network problems	248
Observable problems	249
Optional-device problems	251
Performance problems	253
Power on and power off problems	253
Power problems	254
Serial-device problems	255
Software problems	255
Storage drive problems	256

Appendix A. Getting help and technical assistance259

Before you call	259
Collecting service data	260
Contacting Support	261

Appendix B. Documents and supports263

Documents download	263
Support websites	263

Appendix C. Notices265

Trademarks	266
Important notes	266
Electronic emission notices	266
Taiwan Region BSMI RoHS declaration	267
Taiwan Region import and export contact information	267

Safety

Before installing this product, read the Safety Information.

قبل تركيب هذا المنتج، يجب قراءة الملاحظات الأمنية

Antes de instalar este produto, leia as Informações de Segurança.

在安装本产品之前，请仔细阅读 Safety Information（安全信息）。

安裝本產品之前，請先閱讀「安全資訊」。

Prije instalacije ovog produkta obavezno pročitajte Sigurnosne Upute.

Před instalací tohoto produktu si přečtěte příručku bezpečnostních instrukcí.

Læs sikkerhedsforskrifterne, før du installerer dette produkt.

Lees voordat u dit product installeert eerst de veiligheidsvoorschriften.

Ennen kuin asennat tämän tuotteen, lue turvaohjeet kohdasta Safety Information.

Avant d'installer ce produit, lisez les consignes de sécurité.

Vor der Installation dieses Produkts die Sicherheitshinweise lesen.

Πριν εγκαταστήσετε το προϊόν αυτό, διαβάστε τις πληροφορίες ασφάλειας (safety information).

לפני שתתקינו מוצר זה, קראו את הוראות הבטיחות.


A termék telepítése előtt olvassa el a Biztonsági előírásokat!

Prima di installare questo prodotto, leggere le Informazioni sulla Sicurezza.

製品の設置の前に、安全情報をお読みください。

본 제품을 설치하기 전에 안전 정보를 읽으십시오.

Пред да се инсталира овој продукт, прочитајте информацијата за безбедност.

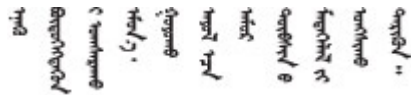

Les sikkerhetsinformasjonen (Safety Information) før du installerer dette produktet.

Przed zainstalowaniem tego produktu, należy zapoznać się z książką "Informacje dotyczące bezpieczeństwa" (Safety Information).

Antes de instalar este produto, leia as Informações sobre Segurança.

Перед установкой продукта прочтите инструкции по технике безопасности.

Pred inštaláciou tohto zariadenia si pečítajte Bezpečnostné predpisy.

Pred namestitvijo tega proizvoda preberite Varnostne informacije.

Antes de instalar este producto, lea la información de seguridad.

Läs säkerhetsinformationen innan du installerar den här produkten.

ཐོན་ཇུས་འདི་བདེ་སྤྱོད་མ་བྱས་གོང་། སྐྱོར་གྱི་ཡིད་གཟབ་
བྱ་འདྲ་མིན་ཡོད་པའི་འོད་སྟེར་བལྟ་དགོས།

Bu ürünü kurmadan önce güvenlik bilgilerini okuyun.

مەزكۇر مەھسۇلاتنى ئورنىتىشتىن بۇرۇن بىخەتەرلىك ئۇچۇرلىرىنى ئوقۇپ چىقىڭ.

Youq mwngz yungh canjbinj neix gaxgonq, itdingh aeu doeg aen
canjbinj soengq cungj vahgangj ancien siusik.

Safety inspection checklist

Use the information in this section to identify potentially unsafe conditions with your server. As each machine was designed and built, required safety items were installed to protect users and service technicians from injury.

Note: The product is not suitable for use at visual display workplaces according to §2 of the Workplace Regulations.

Note: The set-up of the server is made in the server room only.

CAUTION:

This equipment must be serviced by trained personnel, as defined by the IEC 62368-1, the standard for Safety of Electronic Equipment within the Field of Audio/Video, Information Technology and Communication Technology. Lenovo assumes you are qualified in the servicing of equipment and trained in recognizing hazards energy levels in products. Equipment must be installed in a restricted access location and access to the equipment is controlled by the authority responsible for the location.

Important: Electrical grounding of the server is required for operator safety and correct system function. Proper grounding of the electrical outlet can be verified by a certified electrician.

Use the following checklist to verify that there are no potentially unsafe conditions:

1. Make sure that the power is off and the power cord is disconnected.
2. Check the power cord.
 - Make sure that the third-wire ground connector is in good condition. Use a meter to measure third-wire ground continuity for 0.1 ohm or less between the external ground pin and the frame ground.
 - Make sure that the power cord is the correct type.

To view the power cords that are available for the server:

- a. Go to:

<http://dcsc.lenovo.com/#/>

- b. Click **Preconfigured Model** or **Configure to order**.
 - c. Enter the machine type and model for your server to display the configurator page.
 - d. Click **Power → Power Cables** to see all line cords.
- Make sure that the insulation is not frayed or worn.
3. Check for any obvious non-Lenovo alterations. Use good judgment as to the safety of any non-Lenovo alterations.
 4. Check inside the server for any obvious unsafe conditions, such as metal filings, contamination, water or other liquid, or signs of fire or smoke damage.
 5. Check for worn, frayed, or pinched cables.
 6. Make sure that the power-supply cover fasteners (screws or rivets) have not been removed or tampered with.
 7. The design of the electrical distribution system must take into consideration the total grounding leakage current from all power supplies in the server.

CAUTION:



High touch current. Connect to earth before connecting to supply.

8. Use the PDUs (power distribution units) with pluggable equipment type B to distribute electrical power to servers.

Chapter 1. Hardware replacement procedures

This section provides installation and removal procedures for all serviceable system components. Each component replacement procedure references any tasks that need to be performed to gain access to the component being replaced.

Attention: Two people and one lifting device on site that can support up to 400 lb (181 kg) are required to perform the replacement procedure of certain parts. If you do not already have a lifting device available, Lenovo offers the Genie Lift GL-8 material lift that can be purchased at Data Center Solution Configurator: <https://dcsc.lenovo.com/#/configuration/cto/7D5YCTO1WW?hardwareType=lifttool>. Make sure to include the Foot-release brake and the Load Platform when ordering the Genie Lift GL-8 material lift.

Installation Guidelines

Before installing components in your server, read the installation guidelines.

Before installing optional devices, read the following notices carefully:

Attention: Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

- Read the safety information and guidelines to ensure your safety at work:
 - A complete list of safety information for all products is available at:
https://pubs.lenovo.com/safety_documentation/
 - The following guideline is available as well: “[Handling static-sensitive devices](#)” on page 4.
- Make sure the components you are installing are supported by your server.
 - For a list of supported optional components for the server, see <https://serverproven.lenovo.com>.
 - For the option package contents, see <https://serveroption.lenovo.com/>.
- For more information about ordering parts:
 1. Go to <http://datacentersupport.lenovo.com> and navigate to the support page for your server.
 2. Click **Parts**.
 3. Enter the serial number to view a listing of parts for your server.
- When you install a new server, download and apply the latest firmware. This will help ensure that any known issues are addressed, and that your server is ready to work with optimal performance. Go to <https://datacentersupport.lenovo.com/tw/en/products/servers/thinksystem/sr680av3/7dhe/downloads/driver-list/> to download firmware updates for your server.

Important: Some cluster solutions require specific code levels or coordinated code updates. If the component is part of a cluster solution, verify the latest Best Recipe code level menu for cluster supported firmware and driver before you update the code.

- If you replace a part, such as an adapter, that contains firmware, you might also need to update the firmware for that part. For more information about updating firmware, see “Update the firmware” in *User Guide* or *System Configuration Guide*.
- It is good practice to make sure that the server is working correctly before you install an optional component.
- Keep the working area clean, and place removed components on a flat and smooth surface that does not shake or tilt.

- Do not attempt to lift an object that might be too heavy for you. If you have to lift a heavy object, read the following precautions carefully:
 - Make sure that you can stand steadily without slipping.
 - Distribute the weight of the object equally between your feet.
 - Use a slow lifting force. Never move suddenly or twist when you lift a heavy object.
 - To avoid straining the muscles in your back, lift by standing or by pushing up with your leg muscles.
 - Back up all important data before you make changes related to the disk drives.
 - Have a Phillips #1 screwdriver, a Phillips #2 screwdriver, a torque screwdriver, a 5 mm hex socket screw bit, a 7 mm hex socket screw bit, and a Torx T15 extended bit (6-inch long) available.
 - To view the error LEDs on the system board (system board assembly) and internal components, leave the power on.
 - You do not have to turn off the server to remove or install hot-swap power supplies, hot swap fans, or hot-plug USB devices. However, you must turn off the server before you perform any steps that involve removing or installing adapter cables, and you must disconnect the power source from the server before you perform any steps that involve removing or installing a riser card.
 - When replacing power supply units or fans, make sure to refer to redundancy rules for these components.
 - Blue on a component indicates touch points, where you can grip to remove a component from or install it in the server, open or close a latch, and so on.
 - Orange on a component or an orange on or near a component indicates that the component can be hot-swapped if the server and operating system support hot-swap capability, which means that you can remove or install the component while the server is still running. (Orange can also indicate touch points on hot-swap components.) See the instructions for removing or installing a specific hot-swap component for any additional procedures that you might have to perform before you remove or install the component.
 - The Red strip on the drives, adjacent to the release latch, indicates that the drive can be hot-swapped if the server and operating system support hot-swap capability. This means that you can remove or install the drive while the server is still running.
- Note:** See the system specific instructions for removing or installing a hot-swap drive for any additional procedures that you might need to perform before you remove or install the drive.
- After finishing working on the server, make sure you reinstall all safety shields, guards, labels, and ground wires.

Safety inspection checklist

Use the information in this section to identify potentially unsafe conditions with your server. As each machine was designed and built, required safety items were installed to protect users and service technicians from injury.

Note: The product is not suitable for use at visual display workplaces according to §2 of the Workplace Regulations.

Note: The set-up of the server is made in the server room only.

CAUTION:

This equipment must be serviced by trained personnel, as defined by the IEC 62368-1, the standard for Safety of Electronic Equipment within the Field of Audio/Video, Information Technology and Communication Technology. Lenovo assumes you are qualified in the servicing of equipment and trained in recognizing hazards energy levels in products. Equipment must be installed in a restricted access location and access to the equipment is controlled by the authority responsible for the location.

Important: Electrical grounding of the server is required for operator safety and correct system function. Proper grounding of the electrical outlet can be verified by a certified electrician.

Use the following checklist to verify that there are no potentially unsafe conditions:

1. Make sure that the power is off and the power cord is disconnected.
2. Check the power cord.
 - Make sure that the third-wire ground connector is in good condition. Use a meter to measure third-wire ground continuity for 0.1 ohm or less between the external ground pin and the frame ground.
 - Make sure that the power cord is the correct type.

To view the power cords that are available for the server:

- a. Go to:
 - <http://dcsc.lenovo.com/#/>
 - b. Click **Preconfigured Model** or **Configure to order**.
 - c. Enter the machine type and model for your server to display the configurator page.
 - d. Click **Power → Power Cables** to see all line cords.
 - Make sure that the insulation is not frayed or worn.
3. Check for any obvious non-Lenovo alterations. Use good judgment as to the safety of any non-Lenovo alterations.
 4. Check inside the server for any obvious unsafe conditions, such as metal filings, contamination, water or other liquid, or signs of fire or smoke damage.
 5. Check for worn, frayed, or pinched cables.
 6. Make sure that the power-supply cover fasteners (screws or rivets) have not been removed or tampered with.
 7. The design of the electrical distribution system must take into consideration the total grounding leakage current from all power supplies in the server.

CAUTION:



High touch current. Connect to earth before connecting to supply.

8. Use the PDUs (power distribution units) with pluggable equipment type B to distribute electrical power to servers.

System reliability guidelines

Review the system reliability guidelines to ensure proper system cooling and reliability.

Make sure the following requirements are met:

- When the server comes with redundant power, a power supply must be installed in each power-supply bay.
- Adequate space around the server must be spared to allow server cooling system to work properly. Leave approximately 50 mm (2.0 in.) of open space around the front and rear of the server. Do not place any object in front of the fans.

- For proper cooling and airflow, refit the server cover before you turn the power on. Do not operate the server for more than 30 minutes with the server cover removed, for it might damage server components.
- Cabling instructions that come with optional components must be followed.
- A failed fan must be replaced within 48 hours after malfunction.
- A removed hot-swap fan must be replaced within 30 seconds after removal.
- A removed hot-swap drive must be replaced within two minutes after removal.
- A removed hot-swap power supply must be replaced within two minutes after removal.
- Every air baffle that comes with the server must be installed when the server starts (some servers might come with more than one air baffle). Operating the server with a missing air baffle might damage the processor.
- All processor sockets must contain either a socket cover or a processor with heat sink.
- When more than one processor is installed, fan population rules for each server must be strictly followed.

Handling static-sensitive devices

Review these guidelines before you handle static-sensitive devices to reduce the possibility of damage from electrostatic discharge.

Attention: Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

- Limit your movement to prevent building up static electricity around you.
- Take additional care when handling devices during cold weather, for heating would reduce indoor humidity and increase static electricity.
- Always use an electrostatic-discharge wrist strap or other grounding system, particularly when working inside the server with the power on.
- While the device is still in its static-protective package, touch it to an unpainted metal surface on the outside of the server for at least two seconds. This drains static electricity from the package and from your body.
- Remove the device from the package and install it directly into the server without putting it down. If it is necessary to put the device down, put it back into the static-protective package. Never place the device on the server or on any metal surface.
- When handling a device, carefully hold it by the edges or the frame.
- Do not touch solder joints, pins, or exposed circuitry.
- Keep the device from others' reach to prevent possible damages.

Memory module installation rules and order

Memory modules must be installed in a specific order based on the memory configuration that you implement and the number of processors and memory modules installed in the server.

Supported memory types

For information on the types of memory module supported by this server, see “Memory” section in [“Technical specifications” on page 221](#).

Information about optimizing memory performance and configuring memory is available at the Lenovo Press website:

<https://lenovopress.lenovo.com/servers/options/memory>

In addition, you can take advantage of a memory configurator, which is available at the following site:

https://dcsc.lenovo.com/#/memory_configuration

Specific information about the required installation order of memory modules in your server based on the system configuration and memory mode that you are implementing is shown below.

Memory modules and processors layout

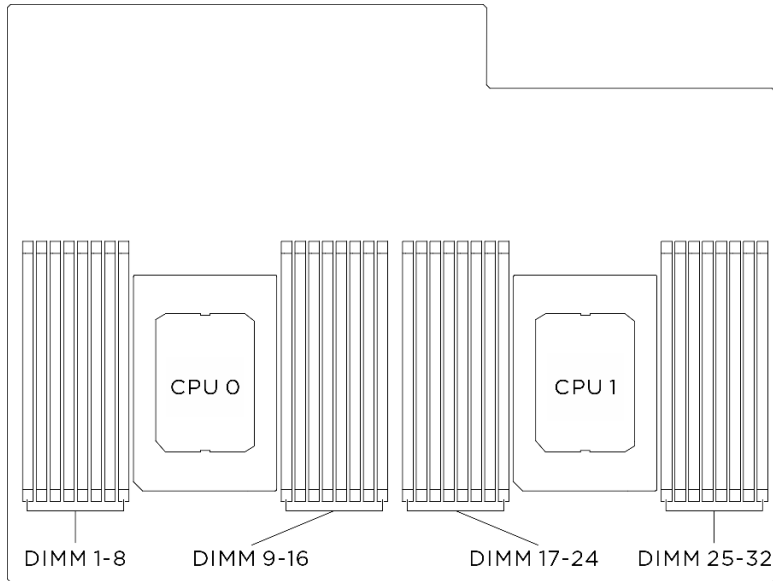


Figure 1. Memory modules and processors layout

The memory-channel configuration table below shows the relationship between the processors, memory controllers, memory channels, and memory module slot numbers.

Table 1. Memory slot and channel identification

Processor	Processor 0															
Controller	iMC3				iMC2				iMC0				iMC1			
Channel	CH1		CH0		CH1		CH0		CH0		CH1		CH0		CH1	
Slot No.	0	1	0	1	0	1	0	1	1	0	1	0	1	0	1	0
DIMM No.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Processor	Processor 1															
Controller	iMC3				iMC2				iMC0				iMC1			
Channel	CH1		CH0		CH1		CH0		CH0		CH1		CH0		CH1	
Slot No.	0	1	0	1	0	1	0	1	1	0	1	0	1	0	1	0
DIMM No.	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32

Memory module installation guideline

The ThinkSystem SR680a V3 supports [“Memory module installation rules and order”](#) on page 5.

Power on and power off the server

Follow the instructions in this section to power on and power off the server.

Power on the server

After the server performs a short self-test (power status LED flashes quickly) when connected to input power, it enters a standby state (power status LED flashes once per second).

Power button location and power LED locations are specified in:

- “Server components” in *User Guide* or *System Configuration Guide*
- “[Troubleshooting by system LEDs and diagnostics display](#)” on page 227

The server can be turned on (power LED on) in any of the following ways:

- You can press the power button.
- The server can restart automatically after a power interruption.
- The server can respond to remote power-on requests sent to the Lenovo XClarity Controller.

Important: Lenovo XClarity Controller (XCC) supported version varies by product. All versions of Lenovo XClarity Controller are referred to as Lenovo XClarity Controller and XCC in this document, unless specified otherwise. To see the XCC version supported by your server, go to <https://pubs.lenovo.com/lxcc-overview/>.

For information about powering off the server, see “[Power off the server](#)” on page 7.

Power off the server

The server remains in a standby state when it is connected to a power source, allowing the Lenovo XClarity Controller to respond to remote power-on requests. To remove all power from the server (power status LED off), you must disconnect all power cables.

To place the server in a standby state (power status LED flashes once per second):

Note: The Lenovo XClarity Controller can place the server in a standby state as an automatic response to a critical system failure.

- Start an orderly shutdown using the operating system (if supported by your operating system).
- Press the power button to start an orderly shutdown (if supported by your operating system).
- Press and hold the power button for more than 4 seconds to force a shutdown.

When in a standby state, the server can respond to remote power-on requests sent to the Lenovo XClarity Controller. For information about powering on the server, see “[Power on the server](#)” on page 6.

Chassis replacement

Follow instructions in this section to remove and install the chassis.

Remove the chassis from rack

Follow instructions in this section to remove the chassis from the rack.

S036



18 - 32 kg (39 - 70 lb)



32 - 55 kg (70 - 121 lb)

CAUTION:
Use safe practices when lifting.

S037



CAUTION:

The weight of this part or unit is more than 55 kg (121.2 lb). It takes specially trained persons, a lifting device, or both to safely lift this part or unit.

R006



CAUTION:

Do not place any object on top of a rack-mounted device unless that rack-mounted device is intended for use as a shelf.

About this task

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See “[Power off the server](#)” on page 7.
- Two people and one lifting device on site that can support up to 400 lb (181 kg) are required to perform this procedure. If you do not already have a lifting device available, Lenovo offers the Genie Lift GL-8 material lift that can be purchased at Data Center Solution Configurator: <https://dcsc.lenovo.com/#/configuration/cto/7D5YCTO1WW?hardwareType=lifttool>. Make sure to include the Foot-release brake and the Load Platform when ordering the Genie Lift GL-8 material lift.

Procedure

Step 1. Make preparation for this task.

- a. Pull the 8U GPU shuttle out of the chassis, and place it onto the lift platform. See “[Remove the 8U GPU shuttle](#)” on page 28.
- b. Remove the 2U compute shuttle. See “[Remove the 2U compute shuttle](#)” on page 26.
- c. (Optional) Remove all the rear fans. See “[Remove a hot-swap fan \(front and rear\)](#)” on page 38.

Step 2. (Optional) Remove six screws to remove the two upper support brackets on the rear side.

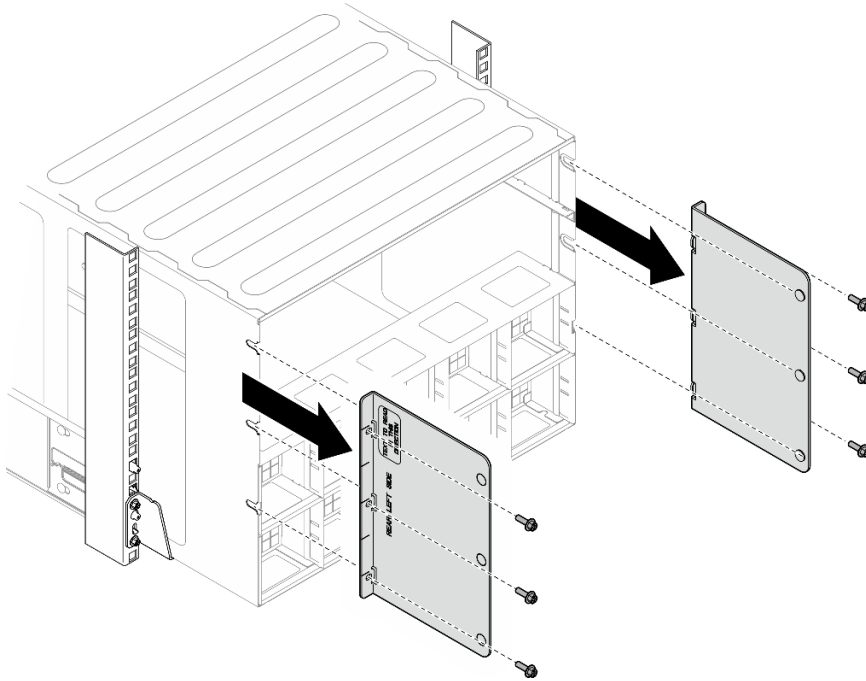


Figure 2. Upper support bracket removal

Step 3. (Optional) Remove four screws to remove the lower support bracket on the rear side.

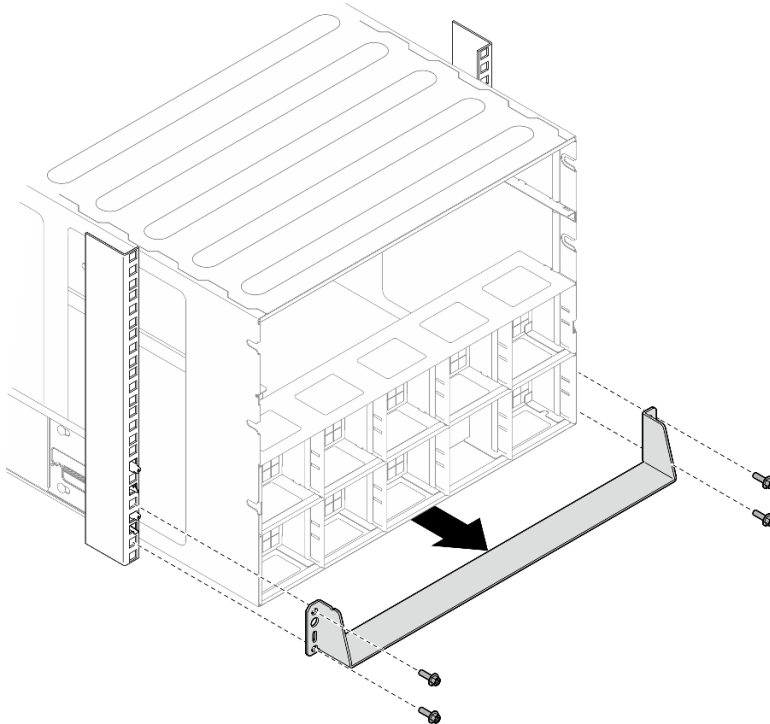


Figure 3. Lower support bracket removal

Step 4. Remove the two EIA covers from the front of the chassis, then, remove the four screws that secure the chassis to the rack.

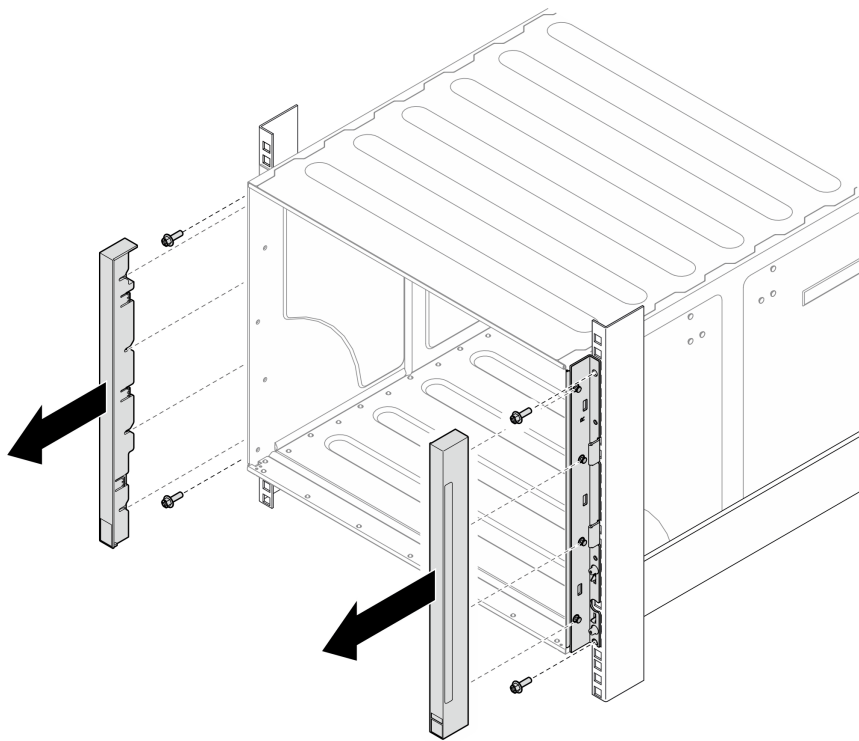


Figure 4. EIA cover removal

Step 5. Slide the chassis out until it allows you to attach front handles at both sides. Align slots on the handles with posts on the chassis and slide handles up until they are locked into place.

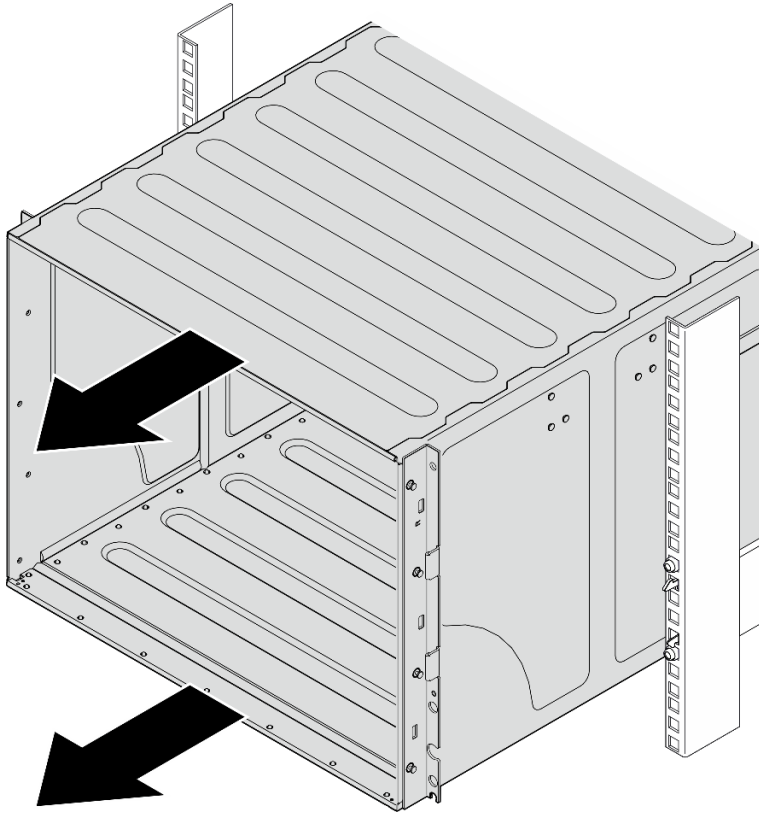


Figure 5. Sliding the chassis

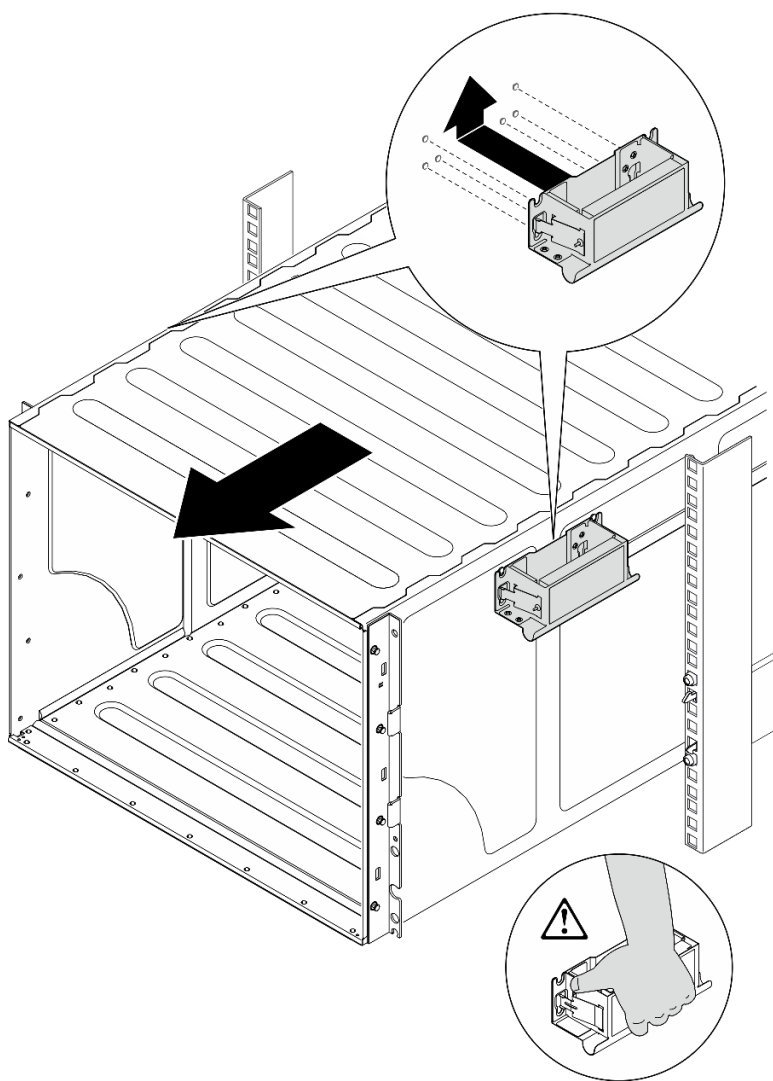


Figure 6. Front handle installation

- Step 6. Hold front handles at both sides and slide the chassis out until you have enough space to install rear handles. Remove the chassis completely from the rack.

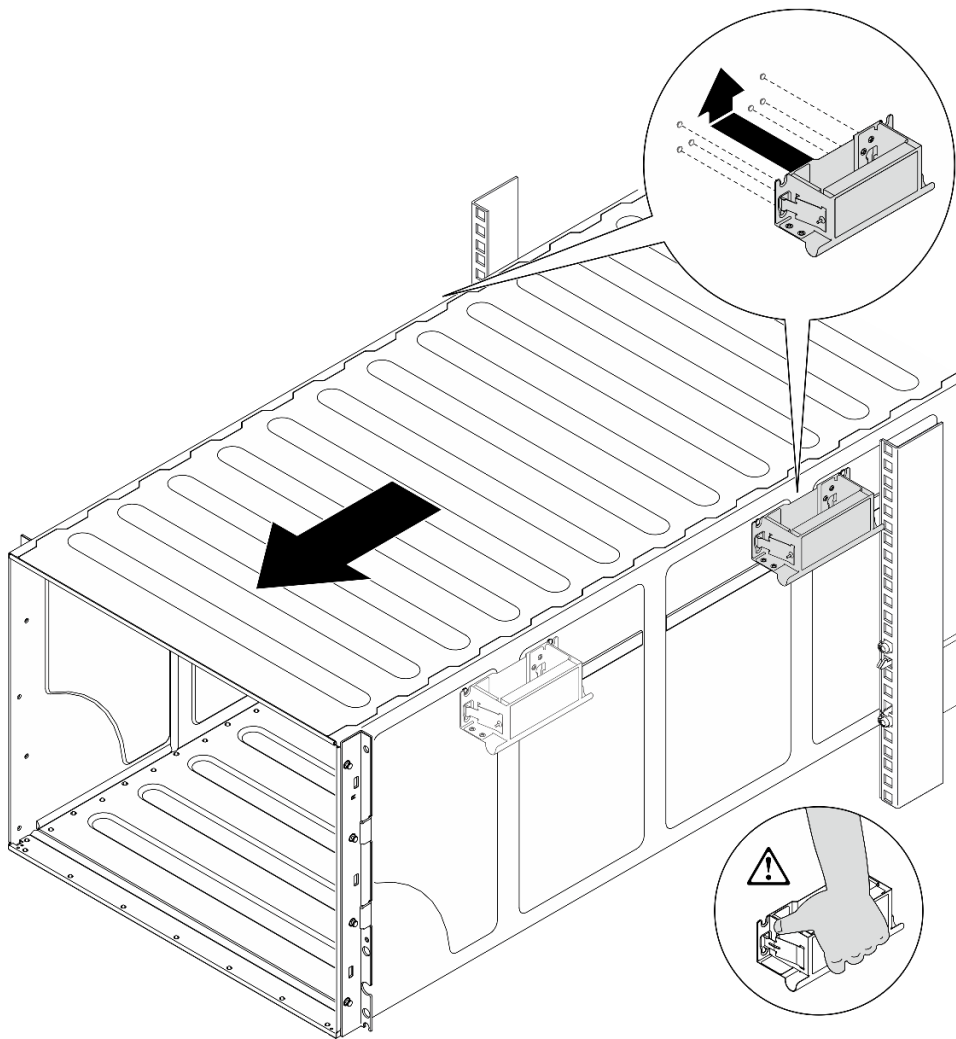


Figure 7. Rear handle installation

Step 7. Remove the handles.

1. Pinch both flaps on the side of the handles.
2. Slide the handles down to remove them.

Note: Make sure to remove all 4 handles.

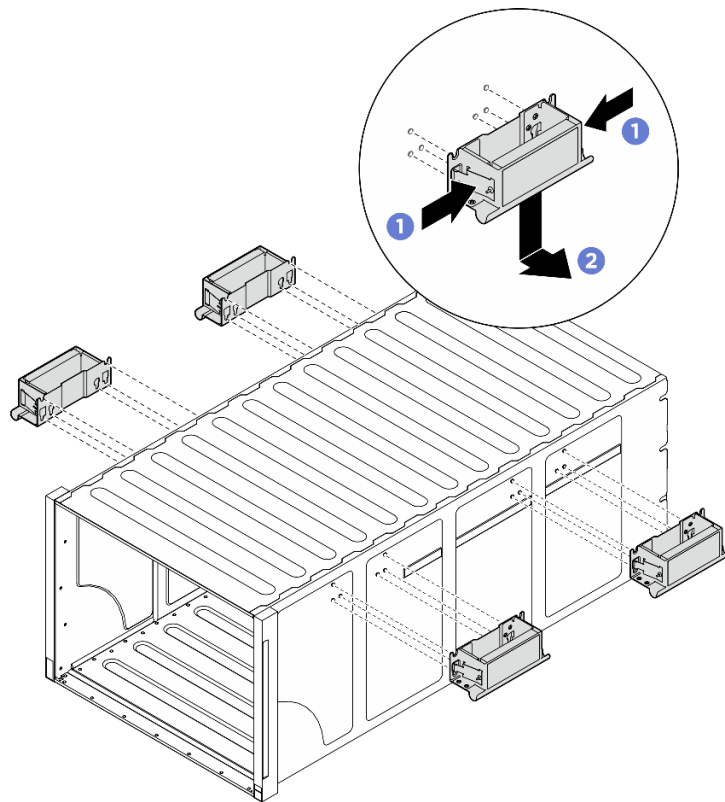


Figure 8. Remove handles

After you finish

Carefully lay the chassis on a flat, static-protective surface.

1. To remove the rails from a rack, follow the instructions that are provided in the *Rail installation Guide*.
2. (Optional) Reinstall the 2U compute shuttle. See [“Install the 2U compute shuttle”](#) on page 27.
3. (Optional) Reinstall the 8U GPU shuttle. See [“Install the 8U GPU shuttle”](#) on page 30.
4. (Optional) Reinstall all the rear fans. See [“Install a hot-swap fan \(front and rear\)”](#) on page 40.

Install the chassis to rack

Follow instructions in this section to install the chassis to the rack.

S036



18 - 32 kg (39 - 70 lb)



32 - 55 kg (70 - 121 lb)

CAUTION:
Use safe practices when lifting.

S037



CAUTION:

The weight of this part or unit is more than 55 kg (121.2 lb). It takes specially trained persons, a lifting device, or both to safely lift this part or unit.

R006



CAUTION:

Do not place any object on top of a rack-mounted device unless that rack-mounted device is intended for use as a shelf.

About this task

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See “[Power off the server](#)” on page 7.
- **Firmware and driver download:** You might need to update the firmware or driver after replacing a component.
 - Go to <https://datacentersupport.lenovo.com/tw/en/products/servers/thinksystem/sr680av3/7dhe/downloads/driver-list/> to see the latest firmware and driver updates for your server.
 - Go to “Update the firmware” in *User Guide* or *System Configuration Guide* for more information on firmware updating tools.
- To install the rails into a rack, follow the instructions that are provided in the *Rail installation Guide*.
- Two people and one lifting device on site that can support up to 400 lb (181 kg) are required to perform this procedure. If you do not already have a lifting device available, Lenovo offers the Genie Lift GL-8 material lift that can be purchased at Data Center Solution Configurator: <https://dcsc.lenovo.com/#/configuration/cto/7D5YCTO1WW?hardwareType=lifttool>. Make sure to include the Foot-release brake and the Load Platform when ordering the Genie Lift GL-8 material lift.
- The maximum lift height for installation is 156 cm (61.5 inches). The maximum units to be installed on the rack is up to 4 units from the bottom to the top of the rack as illustrated.

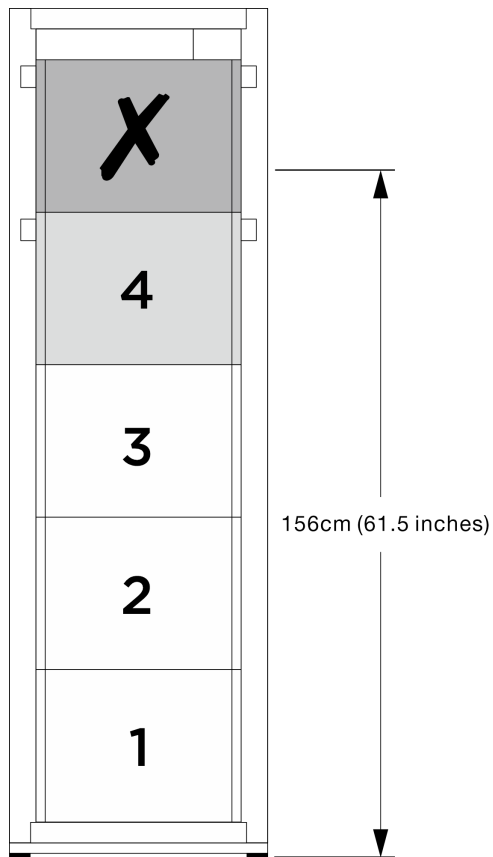


Figure 9. Maximum installation height

After rails are installed successfully, complete the following steps to install the chassis in a rack.

Procedure

Step 1. Make preparation for this task.

- a. Remove the 2U compute shuttle before installing the chassis to the rail (see [“Remove the 2U compute shuttle” on page 26](#)).
- b. Remove the 8U GPU shuttle before installing the chassis to the rail (see [“Remove the 8U GPU shuttle” on page 28](#)).
- c. (Optional) Remove the rear fans before installing the chassis to the rail if necessary (see [“Remove a hot-swap fan \(front and rear\)” on page 38](#)).

Step 2. Attach four handles to the chassis.

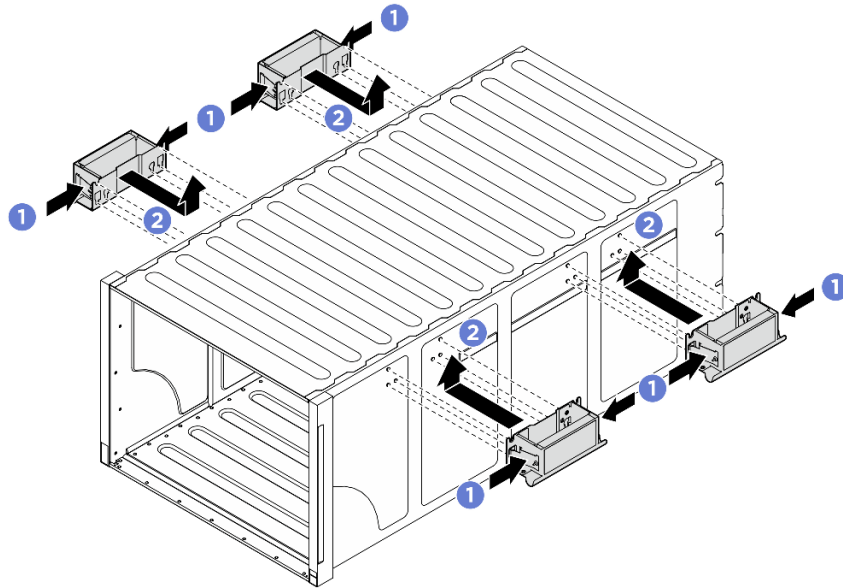


Figure 10. Attaching four handles

Step 3. Carefully put the chassis into the rack with the rear of chassis resting on the rails. Continue to slide the chassis until rear handles are near front rack rails; then, remove rear handles at both sides.

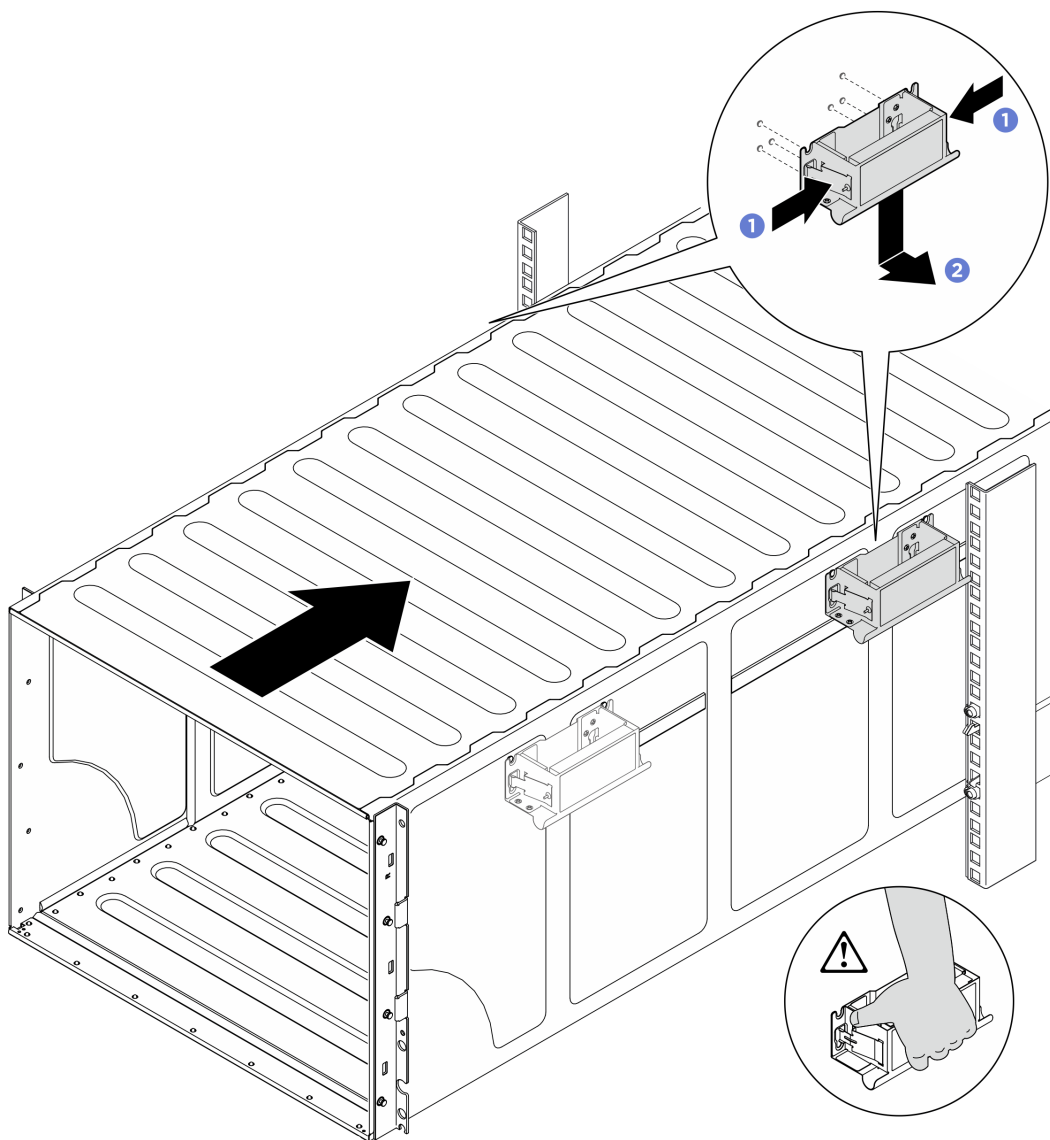


Figure 11. Rear handle removal

Step 4. Slide the chassis farther into the rack until front handles are near front rack rails; then, remove front handles at both sides.

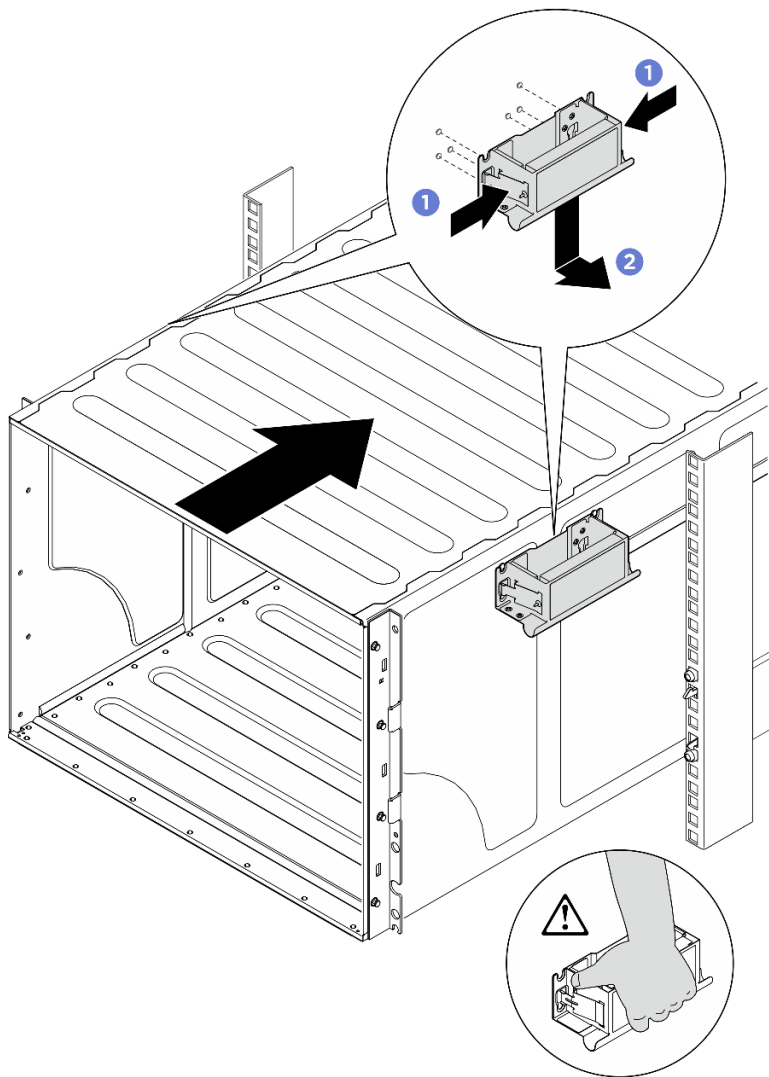


Figure 12. Front handle removal

Step 5. Slide the chassis all the way back to the rack.

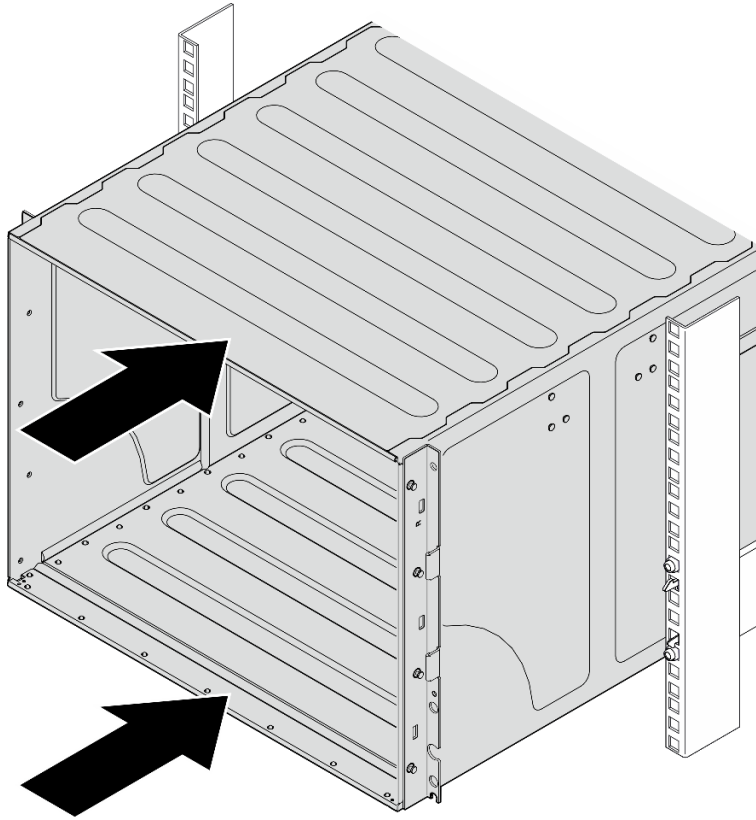


Figure 13. Sliding the chassis

Step 6. Secure the chassis to the rack with four screws; then, reinstall the EIA covers.

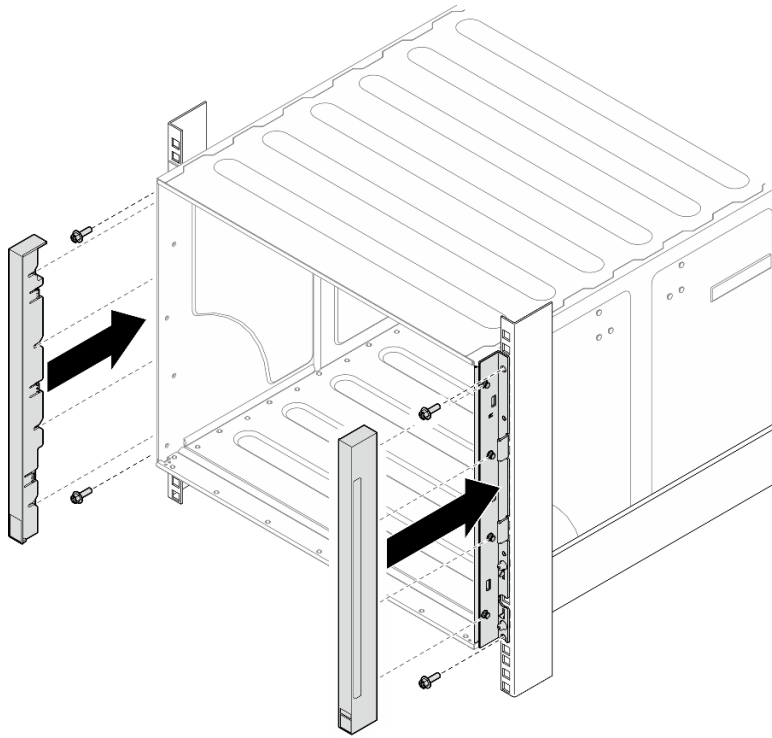


Figure 14. EIA cover installation

Step 7. Secure the lower support bracket on the rear side of the chassis with four screws.

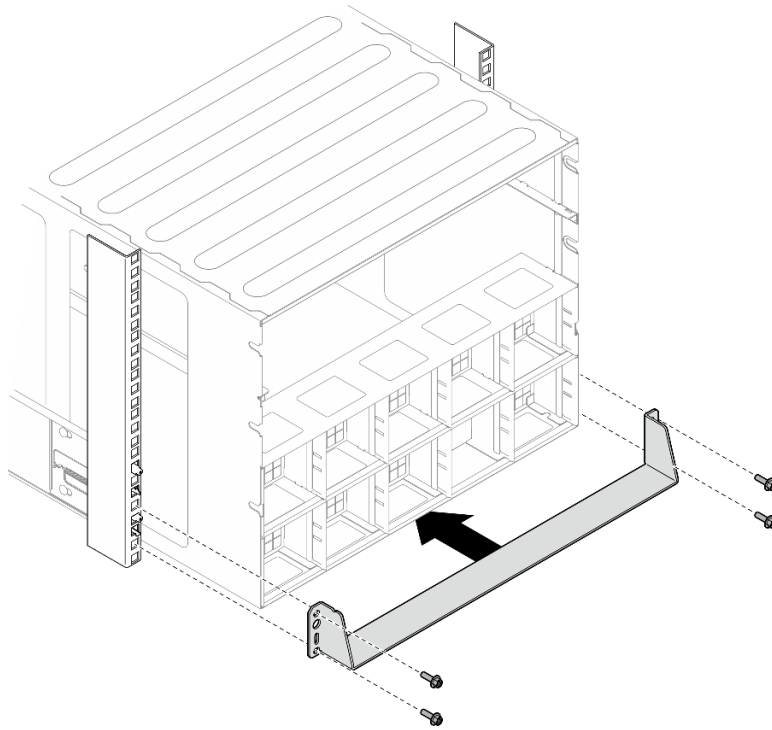


Figure 15. Lower support bracket installation

Step 8. Secure the two upper support brackets on the rear side of the chassis with six screws.

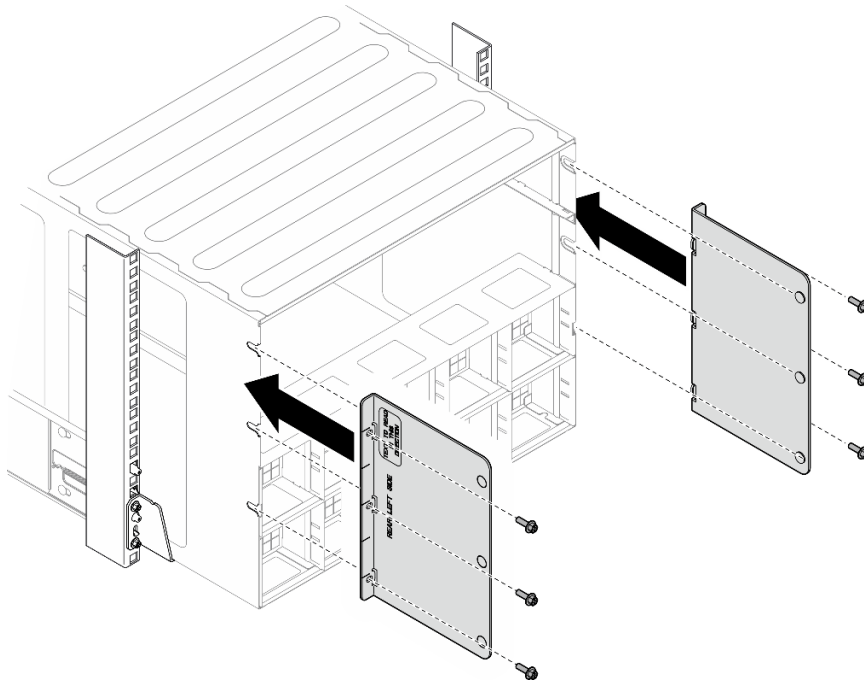


Figure 16. Upper support bracket installation

After you finish

1. Reinstall the 2U compute shuttle. See [“Install the 2U compute shuttle” on page 27](#).
2. Reinstall the 8U GPU shuttle. See [“Install the 8U GPU shuttle” on page 30](#).
3. Reinstall all the rear fans. See [“Install a hot-swap fan \(front and rear\)” on page 40](#).
4. Install any other required components.
5. Reconnect the power cords and any cables that you removed.
6. Power on the server and any peripheral devices. See [“Power on the server” on page 6](#).
7. Update the server configuration. See [“Complete the parts replacement” on page 191](#).

Common components

Follow instructions in this section to remove and install common components in chassis.

Note: The illustrations in this document are for reference only and might differ slightly from your hardware.

2.5-inch hot-swap drive replacement

Follow instructions in this section to remove and install a 2.5-inch hot-swap drive.

Remove a 2.5-inch hot-swap drive

Follow instructions in this section to remove a 2.5-inch hot-swap drive.

About this task

Attention:

- Read “Installation Guidelines” on page 1 and “Safety inspection checklist” on page 2 to ensure that you work safely.
- To make sure that there is adequate system cooling, do not operate the server for more than two minutes without either a drive or a filler installed in each bay.
- If one or more NVMe solid-state drives are to be removed, it is recommended to disable them beforehand via the operating system.
- Before you remove or make changes to drives, drive controllers (including controllers that are integrated on the system board assembly), drive backplanes or drive cables, back up all important data that is stored on drives.
- The server supports up to sixteen 2.5-inch hot-swap NVMe drives with the following corresponding drive bay numbers.

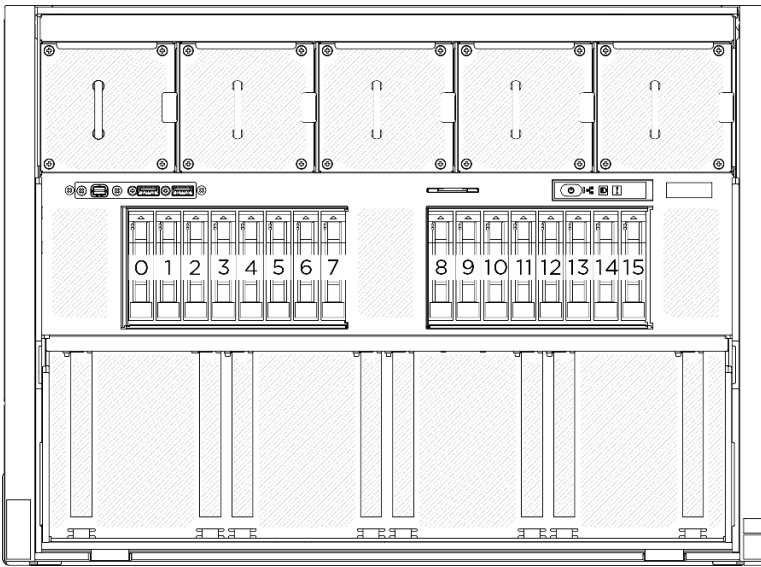


Figure 17. 2.5-inch drive bay numbering

Note: Make sure you have the drive bay fillers available if some drive bays will be left empty after the removal.

Procedure

- Step 1. ① Slide the release latch to unlock the drive handle.
- Step 2. ② Rotate the drive handle to the open position.
- Step 3. ③ Grasp the handle and slide the drive out of the drive bay.

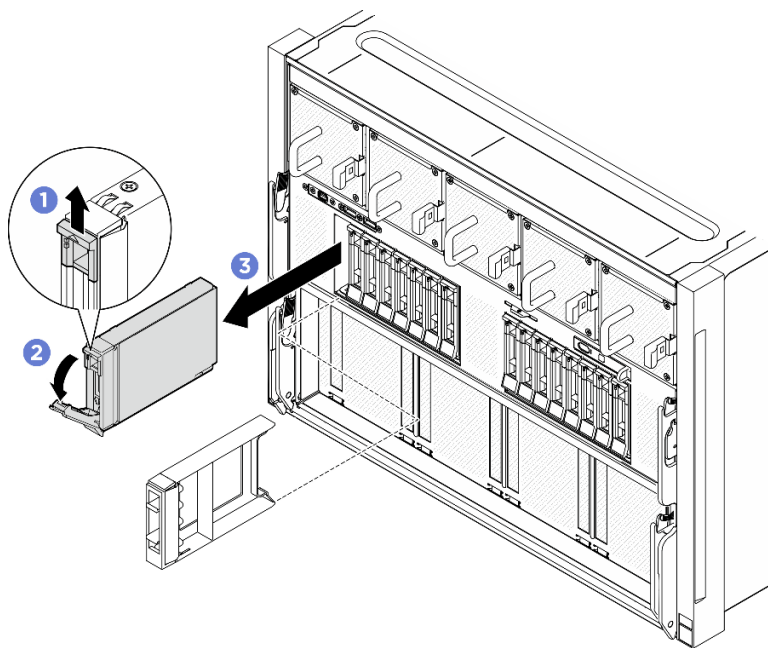


Figure 18. 2.5-inch hot-swap drive removal

After you finish

Note: Install a drive bay filler or replacement drive as soon as possible. See [“Install a 2.5-inch hot-swap drive” on page 24](#).

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Install a 2.5-inch hot-swap drive

Follow instructions in this section to install a 2.5-inch hot-swap drive.

About this task

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Touch the static-protective package that contains the component to any unpainted metal surface on the server; then, remove it from the package and place it on a static-protective surface.
- Make sure you save the data on your drive, especially if it is part of a RAID array, before you remove it from the server.
- To make sure that there is adequate system cooling, do not operate the server for more than two minutes without either a drive or a drive bay filler installed in each bay.
- Before you make changes to drives, drive controllers (including controllers that are integrated on the system board assembly), drive backplanes, or drive cables, back up all important data that is stored on drives.
- The server supports up to sixteen 2.5-inch hot-swap NVMe drives with the following corresponding drive bay numbers.

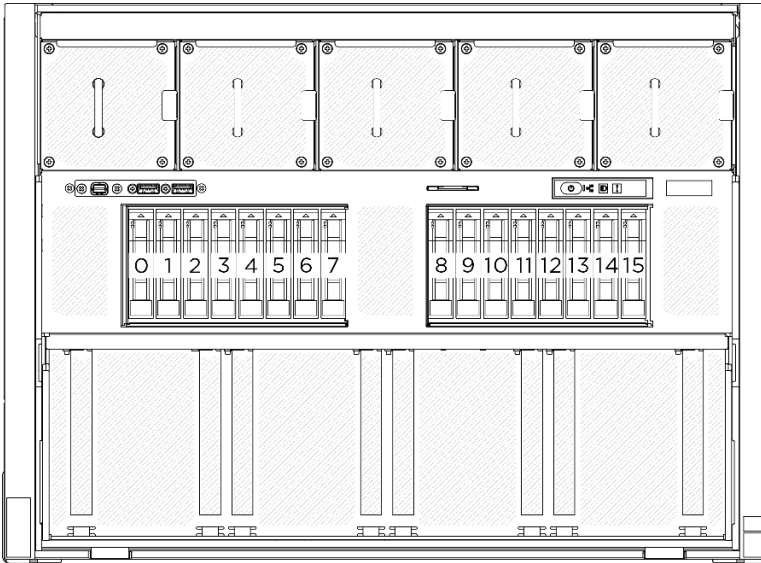


Figure 19. 2.5-inch drive bay numbering

Firmware and driver download: You might need to update the firmware or driver after replacing a component.

- Go to <https://datacentersupport.lenovo.com/tw/en/products/servers/thinksystem/sr680av3/7dhe/downloads/driver-list/> to see the latest firmware and driver updates for your server.
- Go to “Update the firmware” in *User Guide* or *System Configuration Guide* for more information on firmware updating tools.

Procedure

Step 1. If the drive bay contains a filler, pull the release lever on the filler and slide it out of the bay.

Step 2. Install the 2.5-inch hot-swap drive.

- 1 Make sure that the drive handle is in the open position. Then, align the drive with the guide rails in the bay, and gently slide the drive into the bay until it stops.
- 2 Rotate the drive handle to the fully closed position until the handle latch clicks.

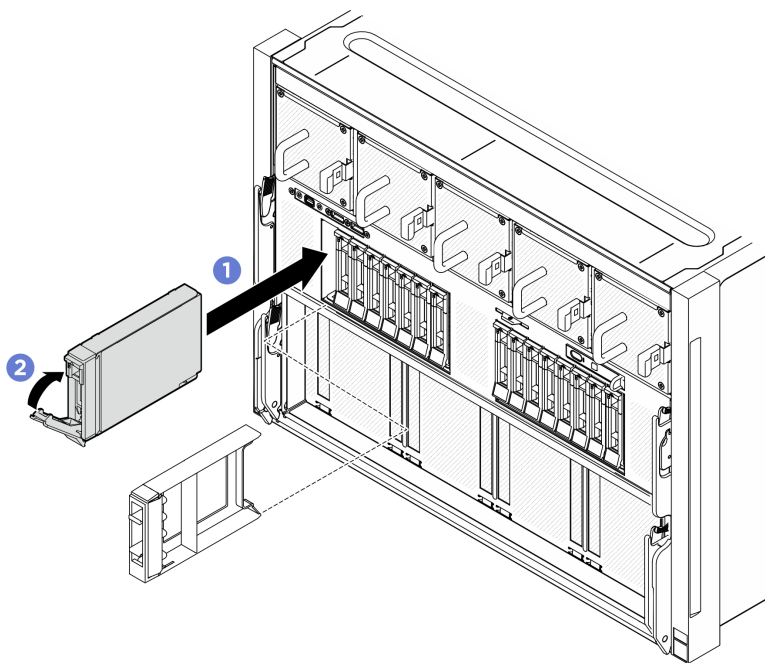


Figure 20. 2.5-inch hot-swap drive installation

After you finish

1. Check the drive status LED to verify that the drive is operating correctly.
 - If the yellow drive status LED of a drive is lit continuously, that drive is faulty and must be replaced.
 - If the green drive activity LED is flashing, the drive is being accessed.
2. If you have installed 2.5-inch drive backplane with U.3 NVMe drives for Trimode. Enable U.3 x1 mode for the selected drive slots on the backplane through the XCC web GUI. See [“U.3 NVMe drive can be detected in NVMe connection, but cannot be detected in Tri-mode” on page 258.](#)

2U compute shuttle replacement (trained technician only)

Follow instructions in this section to remove and install the 2U compute shuttle.

Important: This task must be operated by trained technicians that are certified by Lenovo Service. Do not attempt to remove or install the part without proper training and qualification.

Remove the 2U compute shuttle

Follow instructions in this section to remove the 2U compute shuttle. The procedure must be executed by a trained technician.

About this task

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 7.](#)

Procedure

- Step 1. ① Press the two blue release latches.
- Step 2. ② Rotate the two release levers until they are perpendicular to the 2U compute shuttle.
- Step 3. ③ Pull the 2U compute shuttle out of the chassis.

Note: Push the two release levers back until they lock into place after pulling out the 2U compute shuttle to avoid damage.

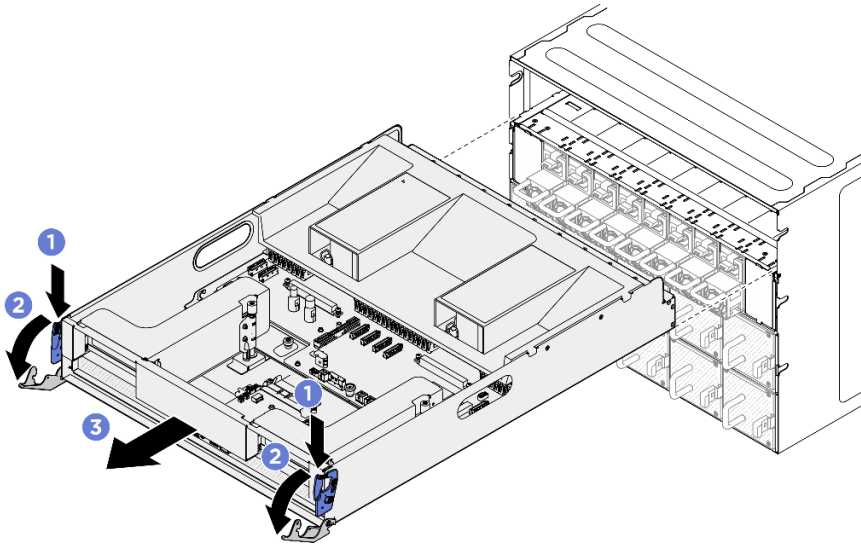


Figure 21. 2U compute shuttle removal

After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Install the 2U compute shuttle

Follow instructions in this section to install the 2U compute shuttle. The procedure must be executed by a trained technician.

About this task

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Make sure that all cables, adapters, and other components are installed and seated correctly and that you have not left loose tools or parts inside the server.
- Make sure that all internal cables are correctly routed. See [Chapter 2 “Internal cable routing” on page 193](#).

Procedure

- Step 1. ① Fully open the two release levers; then, align the 2U compute shuttle with its opening in the rear of the chassis, and push it into the chassis until it stops.
- Step 2. ② Rotate the two release levers until they lock into place.

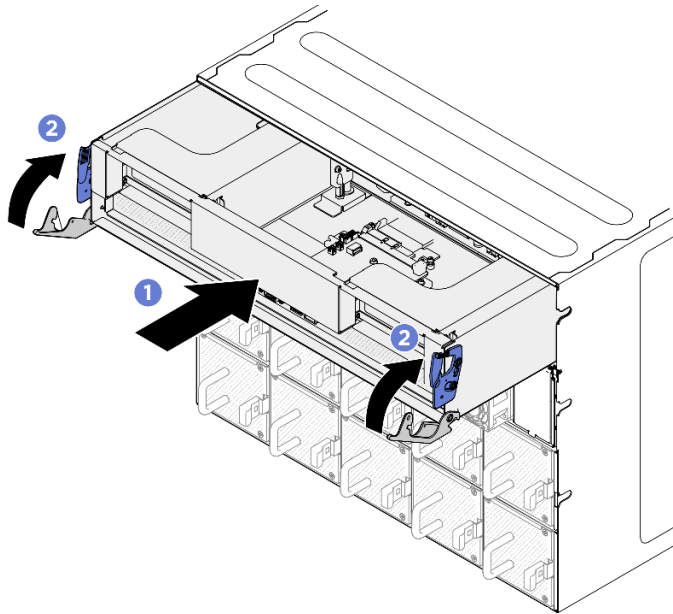


Figure 22. 2U compute shuttle installation

After you finish

Complete the parts replacement. See [“Complete the parts replacement” on page 191](#).

8U GPU shuttle replacement (trained technician only)

Follow instructions in this section to remove and install the 8U GPU shuttle.

Important: This task must be operated by trained technicians that are certified by Lenovo Service. Do not attempt to remove or install the part without proper training and qualification.

Remove the 8U GPU shuttle

Follow instructions in this section to remove the 8U GPU shuttle. The procedure must be executed by a trained technician.

About this task

S037



CAUTION:

The weight of this part or unit is more than 55 kg (121.2 lb). It takes specially trained persons, a lifting device, or both to safely lift this part or unit.

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.

- Power off the server and peripheral devices and disconnect the power cords and all external cables. See “Power off the server” on page 7.
- Two people and one lifting device on site that can support up to 400 lb (181 kg) are required to perform this procedure. If you do not already have a lifting device available, Lenovo offers the Genie Lift GL-8 material lift that can be purchased at Data Center Solution Configurator: <https://dcsc.lenovo.com/#/configuration/cto/7D5YCTO1WW?hardwareType=lifttool>. Make sure to include the Foot-release brake and the Load Platform when ordering the Genie Lift GL-8 material lift.

Procedure


Step 1. Make preparation for this task.

- a. Remove all the power supply units. See “Remove a hot-swap power supply unit” on page 82.
- b. Remove all the front fans. See “Remove a hot-swap fan (front and rear)” on page 38.
- c. Remove all the 2.5-inch hot-swap drives and the drive bay fillers (if any) from the drive bays. See “Remove a 2.5-inch hot-swap drive” on page 22.

Step 2. Remove the 8U GPU shuttle.

- a. ① Press the two blue release latches.
- b. ② Rotate the two release levers until they are perpendicular to the 8U GPU shuttle.
- c. ③ Pull the 8U GPU shuttle out of the chassis.

Attention: Make sure two people lift the 8U GPU shuttle by holding the four handles on both sides of the 8U GPU shuttle. Then, slide the 8U GPU shuttle on a lifting device to move the 8U GPU shuttle.

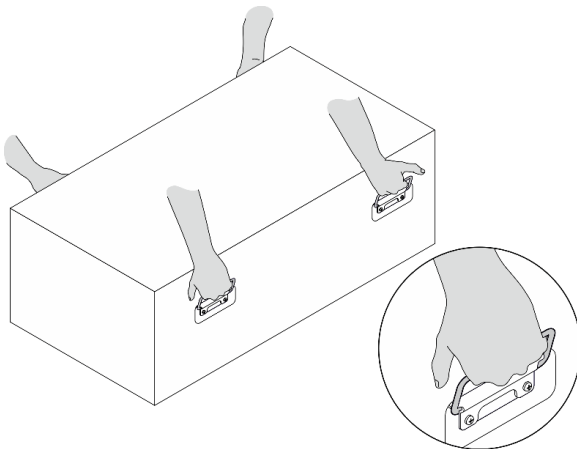

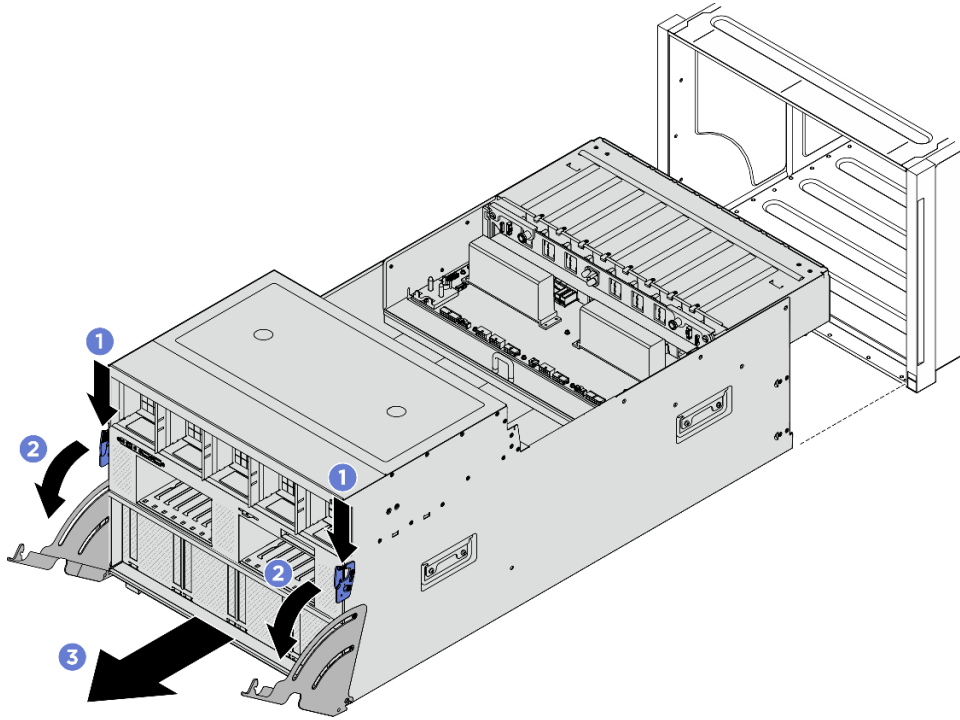


Figure 23. 8U GPU shuttle removal

After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Install the 8U GPU shuttle

Follow instructions in this section to install the 8U GPU shuttle. The procedure must be executed by a trained technician.

About this task

S037



CAUTION:

The weight of this part or unit is more than 55 kg (121.2 lb). It takes specially trained persons, a lifting device, or both to safely lift this part or unit.


Attention:

- Read [“Installation Guidelines”](#) on page 1 and [“Safety inspection checklist”](#) on page 2 to ensure that you work safely.
- Make sure that all cables, adapters, and other components are installed and seated correctly and that you have not left loose tools or parts inside the server.
- Make sure that all internal cables are correctly routed. See [Chapter 2 “Internal cable routing”](#) on page 193.

- Two people and one lifting device on site that can support up to 400 lb (181 kg) are required to perform this procedure. If you do not already have a lifting device available, Lenovo offers the Genie Lift GL-8 material lift that can be purchased at Data Center Solution Configurator: <https://dcsc.lenovo.com/#/configuration/cto/7D5YCTO1WW?hardwareType=lifttool>. Make sure to include the Foot-release brake and the Load Platform when ordering the Genie Lift GL-8 material lift.

Procedure

Attention: Make sure two people lift the 8U GPU shuttle by holding the four handles on both sides of the 8U GPU shuttle. Then, slide the 8U GPU shuttle on a lifting device to move the 8U GPU shuttle.

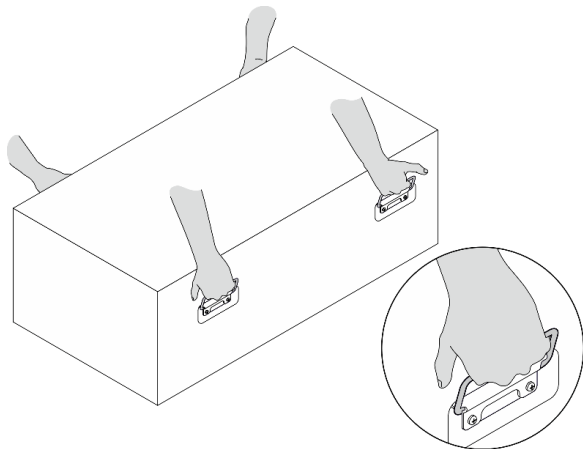

- Step 1. ① Fully open the two release levers; then, align the 8U GPU shuttle with its opening in the front of the chassis, and push it into the chassis until it stops.
- Step 2. ② Rotate the two release levers until they lock into place.

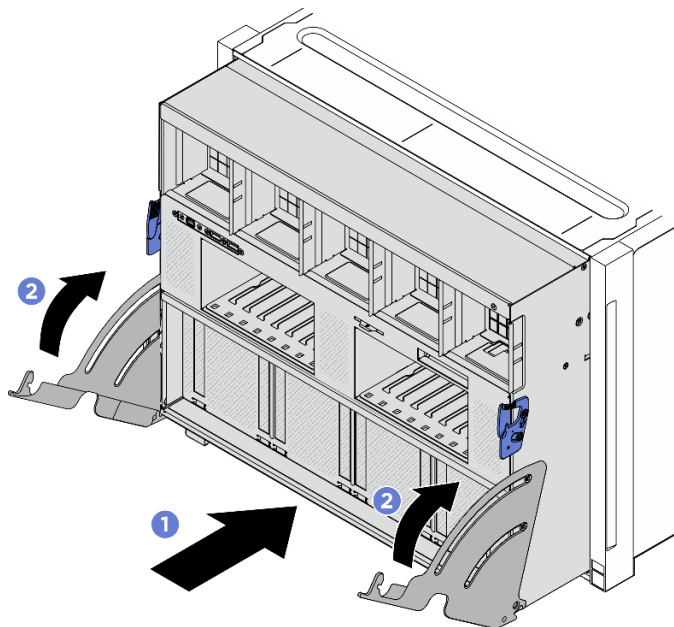


Figure 24. 8U GPU shuttle installation

After you finish

1. Reinstall all the 2.5-inch hot-swap drives or drive bay fillers (if any) into the drive bays. See [“Install a 2.5-inch hot-swap drive” on page 24](#)
2. Reinstall all the front fans. See [“Install a hot-swap fan \(front and rear\)” on page 40](#).
3. Reinstall all the power supply units. See [“Install a hot-swap power supply unit” on page 84](#).
4. Complete the parts replacement. See [“Complete the parts replacement” on page 191](#).

Cable cover replacement (trained technician only)

Follow instructions in this section to remove and install the cable cover.

Important: This task must be operated by trained technicians that are certified by Lenovo Service. Do not attempt to remove or install the part without proper training and qualification.

Remove the cable cover

Follow instructions in this section to remove the cable cover. The procedure must be executed by a trained technician.

About this task

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 7](#).
- Two people and one lifting device on site that can support up to 400 lb (181 kg) are required to perform this procedure. If you do not already have a lifting device available, Lenovo offers the Genie Lift GL-8 material lift that can be purchased at Data Center Solution Configurator: <https://dcsc.lenovo.com/#/configuration/cto/7D5YCTO1WW?hardwareType=lifttool>. Make sure to include the Foot-release brake and the Load Platform when ordering the Genie Lift GL-8 material lift.

Procedure

Step 1. Make preparation for this task.

- a. Remove all the power supply units. See [“Remove a hot-swap power supply unit” on page 82](#).
- b. Remove all the front fans. See [“Remove a hot-swap fan \(front and rear\)” on page 38](#).
- c. Remove all the 2.5-inch hot-swap drives and the drive bay fillers (if any) from the drive bays. See [“Remove a 2.5-inch hot-swap drive” on page 22](#).
- d. Pull the 8U GPU shuttle out of the chassis, and place it onto the lift platform. See [“Remove the 8U GPU shuttle” on page 28](#).

Step 2. Remove the cable cover.

- a. ① Unfasten the fourteen screws marked with **F** on the front PCIe switch cable harness and both sides of the 8U GPU shuttle.
- b. ② Lift the cable cover out of the 8U GPU shuttle.

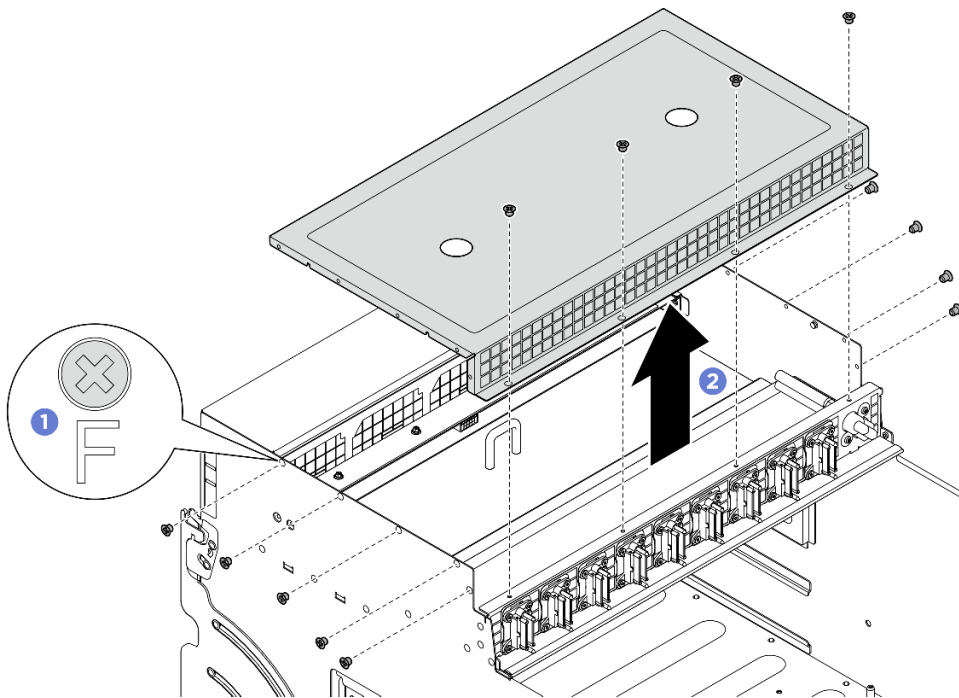


Figure 25. Cable cover removal

After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Install the cable cover

Follow instructions in this section to install the cable cover. The procedure must be executed by a trained technician.

About this task

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Touch the static-protective package that contains the component to any unpainted metal surface on the server; then, remove it from the package and place it on a static-protective surface.
- Two people and one lifting device on site that can support up to 400 lb (181 kg) are required to perform this procedure. If you do not already have a lifting device available, Lenovo offers the Genie Lift GL-8 material lift that can be purchased at Data Center Solution Configurator: <https://dcsc.lenovo.com/#/configuration/cto/7D5YCTO1WW?hardwareType=lifttool>. Make sure to include the Foot-release brake and the Load Platform when ordering the Genie Lift GL-8 material lift.

Procedure

- Step 1. ① Align the cable cover with the four guide pins on the 8U GPU shuttle; then, place the cable cover onto the top of the 8U GPU shuttle until it is securely engaged.
- Step 2. ② Locate the fourteen screw holes marked with **F** on the front PCIe switch cable harness and both sides of the 8U GPU shuttle; then, fasten the fourteen screws to secure the cable cover.

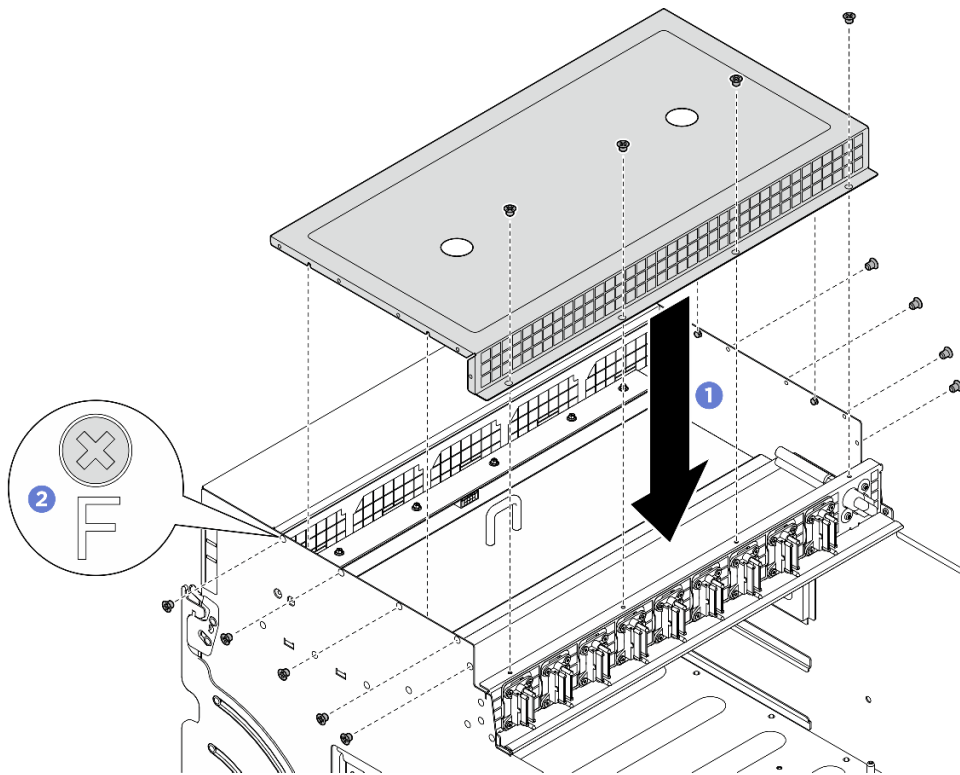


Figure 26. Cable cover installation

After you finish

1. Reinstall the 8U GPU shuttle. See [“Install the 8U GPU shuttle” on page 30](#).
2. Reinstall all the 2.5-inch hot-swap drives or drive bay fillers (if any) into the drive bays. See [“Install a 2.5-inch hot-swap drive” on page 24](#)
3. Reinstall all the front fans. See [“Install a hot-swap fan \(front and rear\)” on page 40](#).
4. Reinstall all the power supply units. See [“Install a hot-swap power supply unit” on page 84](#).
5. Complete the parts replacement. See [“Complete the parts replacement” on page 191](#).

CMOS battery (CR2032) replacement

Follow instructions in this section to remove and install the CMOS battery (CR2032).

Remove the CMOS battery (CR2032)

Follow instructions in this section to remove the CMOS battery (CR2032).

About this task

S004



CAUTION:

When replacing the lithium battery, use only Lenovo specified part number or an equivalent type of battery recommended by the manufacturer. If your system has a module containing a lithium battery, replace it only with the same module type made by the same manufacturer. The battery contains lithium and can explode if not properly used, handled, or disposed of.

Do not:

- **Throw or immerse into water**
- **Heat to more than 100°C (212°F)**
- **Repair or disassemble**

Dispose of the battery as required by local ordinances or regulations.

S005



CAUTION:

The battery is a lithium ion battery. To avoid possible explosion, do not burn the battery. Exchange it only with the approved part. Recycle or discard the battery as instructed by local regulations.

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 7](#).
- The following notes describe information that you must consider when replacing the battery.
 - Lenovo has designed this product with your safety in mind. The lithium battery must be handled correctly to avoid possible danger. If you replace the battery, you must adhere to the following instructions.
 - If you replace the original lithium battery with a heavy-metal battery or a battery with heavy-metal components, be aware of the following environmental consideration. Batteries and accumulators that contain heavy metals must not be disposed of with normal domestic waste. They will be taken back free of charge by the manufacturer, distributor, or representative, to be recycled or disposed of in a proper manner.
 - After you replace the battery, you must reconfigure the server and reset the system date and time.

Procedure

- Step 1. Make preparation for this task.
 - a. Remove the 2U compute shuttle. See [“Remove the 2U compute shuttle” on page 26](#).
- Step 2. Locate the battery socket on the system board assembly.

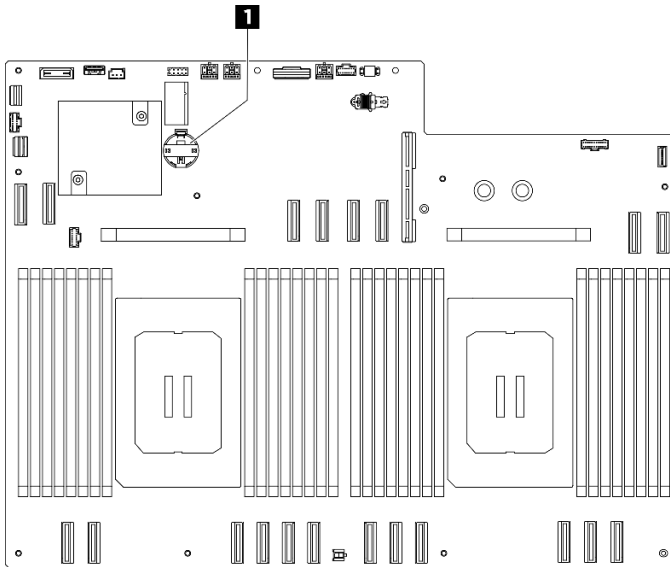


Figure 27. CMOS battery location

1 CMOS battery location

- Step 3. ① Gently press on the nub on the side of the CMOS battery as illustrated.
- Step 4. ② Pivot the CMOS battery away from the seat, and lift the CMOS battery out of the battery socket.



Figure 28. CMOS battery removal

After you finish

1. Install a replacement unit. See [“Install the CMOS battery \(CR2032\)”](#) on page 36.
2. Dispose the component with compliance to local regulations.

Install the CMOS battery (CR2032)

Follow instructions in this section to install the CMOS battery (CR2032).

About this task

S004



CAUTION:

When replacing the lithium battery, use only Lenovo specified part number or an equivalent type of battery recommended by the manufacturer. If your system has a module containing a lithium battery,

replace it only with the same module type made by the same manufacturer. The battery contains lithium and can explode if not properly used, handled, or disposed of.

Do not:

- Throw or immerse into water
- Heat to more than 100°C (212°F)
- Repair or disassemble

Dispose of the battery as required by local ordinances or regulations.

S005



CAUTION:

The battery is a lithium ion battery. To avoid possible explosion, do not burn the battery. Exchange it only with the approved part. Recycle or discard the battery as instructed by local regulations.

Attention: Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.

Important: The following notes describe information that you must consider when you are replacing the CMOS battery in the server:

- You must replace the CMOS battery with a lithium CMOS battery of the same type from the same manufacturer.
- After you replace the CMOS battery, you must reconfigure the server and reset the system date and time.

Procedure

- Step 1. Follow any special handling and installation instructions that come with the CMOS battery.
- Step 2. Make preparation for this task.
 - a. Remove the 2U compute shuttle. See [“Remove the 2U compute shuttle” on page 26](#).
- Step 3. Locate the battery socket on the system board assembly.

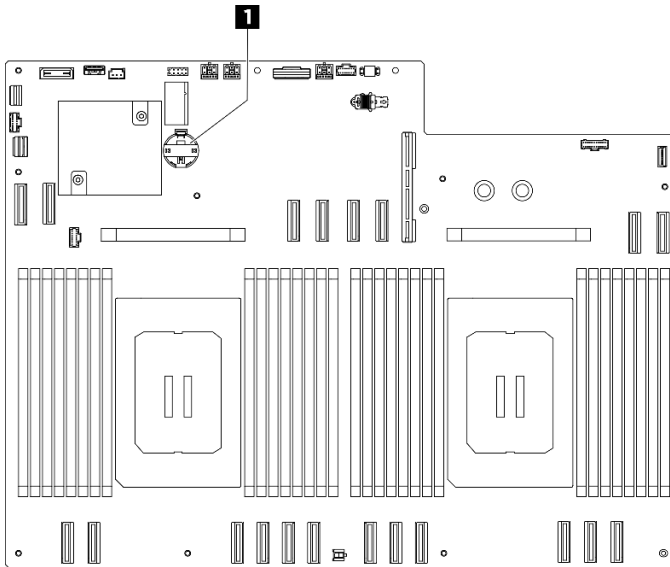


Figure 29. CMOS battery location

1 CMOS battery location

- Step 4. Touch the static-protective package that contains the new part to any unpainted surface on the outside of the server; then, take the new part out of the package and place it on a static-protective surface.
- Step 5. **1** Place the CMOS battery on top of the socket with the positive (+) symbol facing up, and press the battery into the seat until it clicks in place.
- Step 6. **2** Tilt the CMOS battery at an angle and insert it into the battery socket.

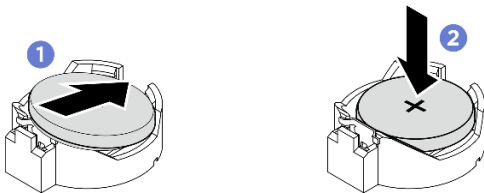


Figure 30. CMOS battery installation

After you finish

- 1. Reinstall the 2U compute shuttle. See [“Install the 2U compute shuttle” on page 27](#).
- 2. Complete the parts replacement. See [“Complete the parts replacement” on page 191](#).
- 3. Reconfigure the server and reset the system date and time.

Fan replacement

Follow instructions in this section to remove or install a fan.

Remove a hot-swap fan (front and rear)

Follow instructions in this section to remove a front or rear hot-swap fan.

About this task

Attention:

- Read “Installation Guidelines” on page 1 and “Safety inspection checklist” on page 2 to ensure that you work safely.
- The following illustrations show the front and rear fan numbering:

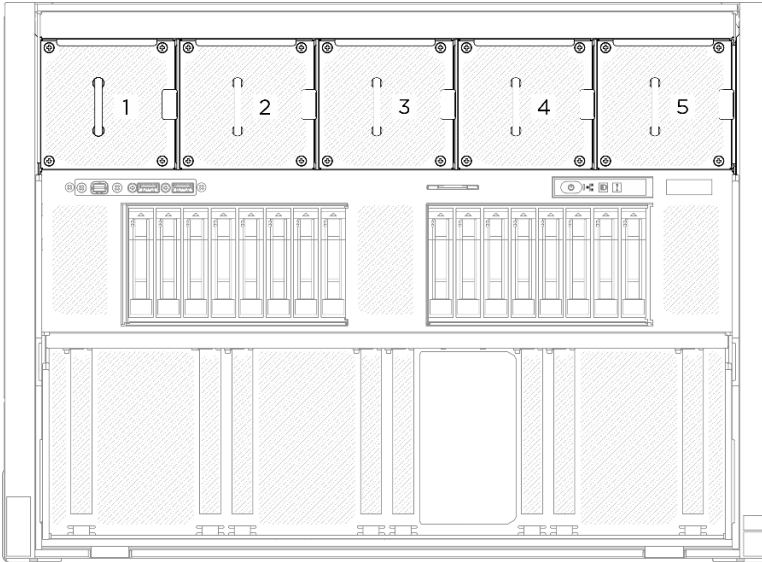


Figure 31. Front fan numbering

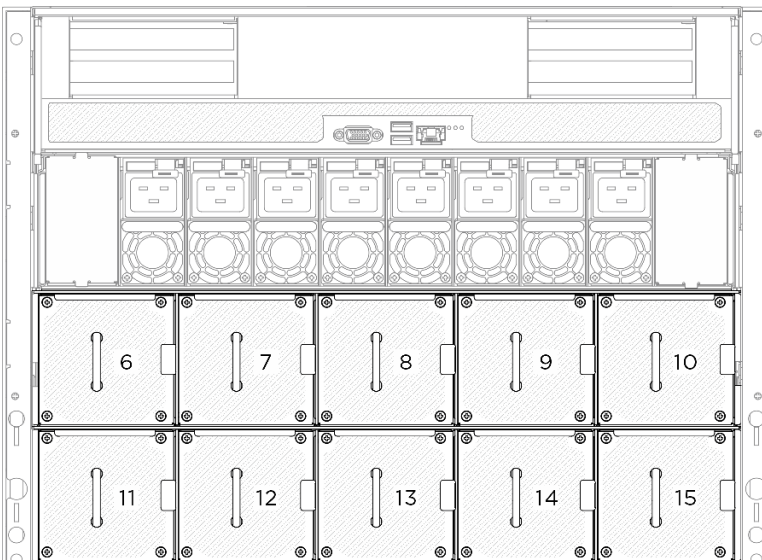


Figure 32. Rear fan numbering

Procedure

- Step 1. ① Press and hold the orange latch to release the fan.
- Step 2. ② Grasp the fan and carefully pull it out of the server.

Note: A front fan is used as an example in the illustration, but the removal method is the same for rear fans.

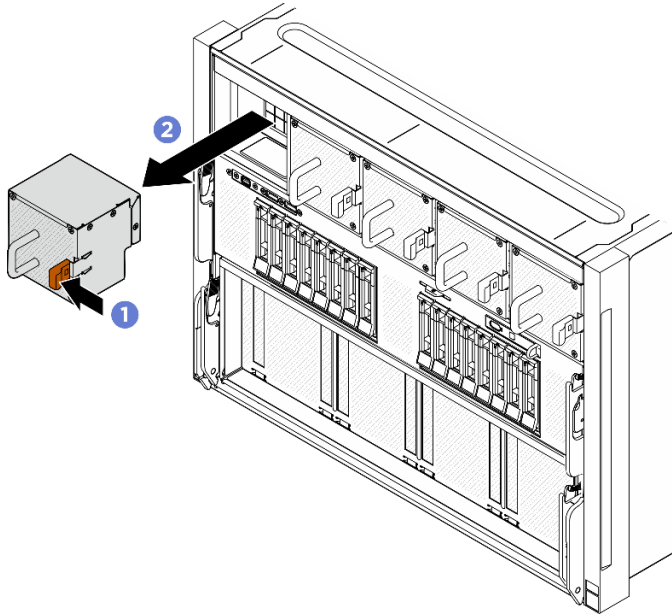


Figure 33. Front hot-swap fan removal

After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Install a hot-swap fan (front and rear)

Follow instructions in this section to install a front or rear hot-swap fan.

About this task

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Make sure to replace a defective fan with another unit of the exact same type.
- Touch the static-protective package that contains the component to any unpainted metal surface on the server; then, remove it from the package and place it on a static-protective surface.
- The following illustrations show the front and rear fan numbering:

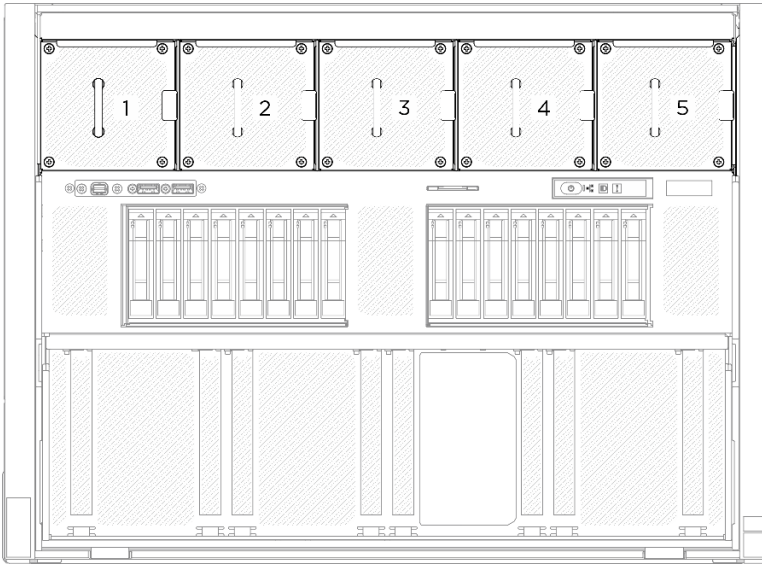


Figure 34. Front fan numbering

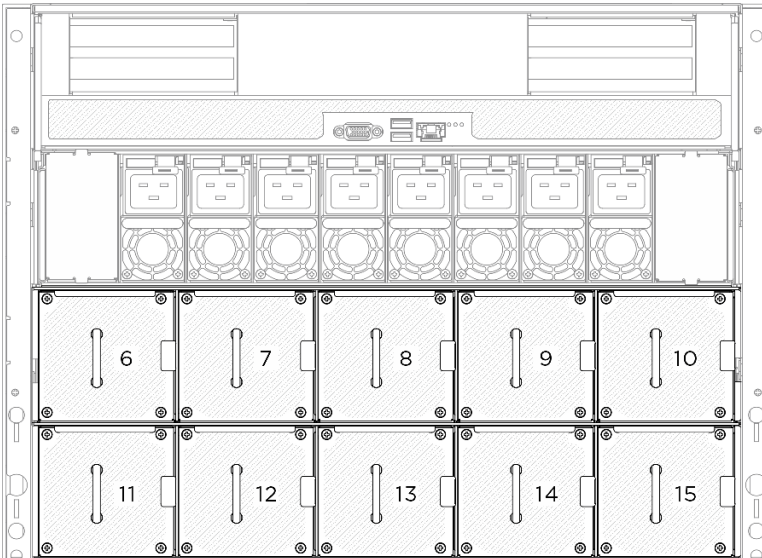


Figure 35. Rear fan numbering

Procedure

- Step 1. Make sure the airflow direction label on the fan is facing up; then, align the fan with the fan socket.
- Step 2. Press and hold the orange latch; then, slide the fan into the socket until it clicks into place.

Note: A front fan is used as an example in the illustration, but the installation method is the same for rear fans.

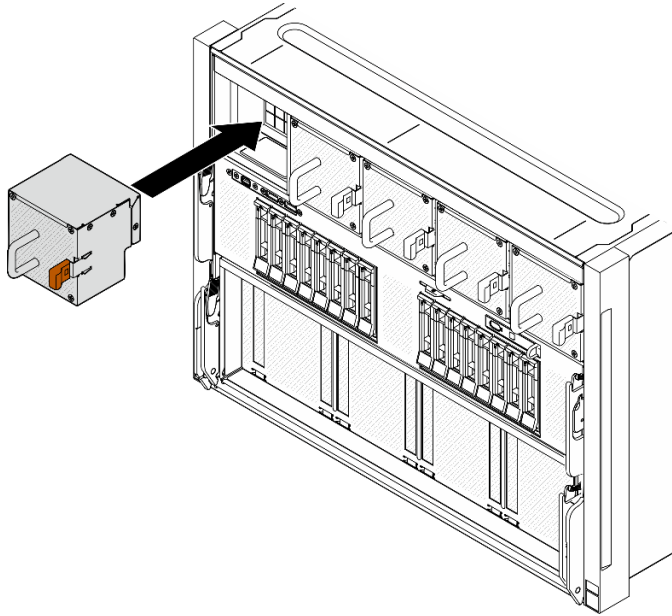


Figure 36. Front hot-swap fan installation

After you finish

Complete the parts replacement. See [“Complete the parts replacement” on page 191](#).

Fan control board assembly replacement (trained technician only)

Follow instructions in this section to remove or install a fan control board assembly.

Important: This task must be operated by trained technicians that are certified by Lenovo Service. Do not attempt to remove or install the part without proper training and qualification.

Remove the front fan control board assembly

Follow instructions in this section to remove the front fan control board assembly. The procedure must be executed by a trained technician.

About this task

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 7](#).
- Two people and one lifting device on site that can support up to 400 lb (181 kg) are required to perform this procedure. If you do not already have a lifting device available, Lenovo offers the Genie Lift GL-8 material lift that can be purchased at Data Center Solution Configurator: <https://dcsc.lenovo.com/#/configuration/cto/7D5YCTO1WW?hardwareType=lifttool>. Make sure to include the Foot-release brake and the Load Platform when ordering the Genie Lift GL-8 material lift.

Procedure

Step 1. Make preparation for this task.

- a. Remove all the power supply units. See [“Remove a hot-swap power supply unit” on page 82.](#)
- b. Remove all the front fans. See [“Remove a hot-swap fan \(front and rear\)” on page 38.](#)
- c. Remove all the 2.5-inch hot-swap drives and the drive bay fillers (if any) from the drive bays. See [“Remove a 2.5-inch hot-swap drive” on page 22.](#)
- d. Pull the 8U GPU shuttle out of the chassis, and place it onto the lift platform. See [“Remove the 8U GPU shuttle” on page 28.](#)
- e. Remove the cable cover. See [“Remove the cable cover” on page 32.](#)
- f. If necessary, remove the I/O cover. See [“Remove the I/O cover” on page 161.](#)

Step 2. Disconnect the cable from the front fan control board.

Step 3. Remove the front fan control board assembly.

- a. ① Unfasten the four screws marked with **E** on both sides of the 8U GPU shuttle.
- b. ② Slide the front fan control board assembly backward, and lift it out of the 8U GPU shuttle.

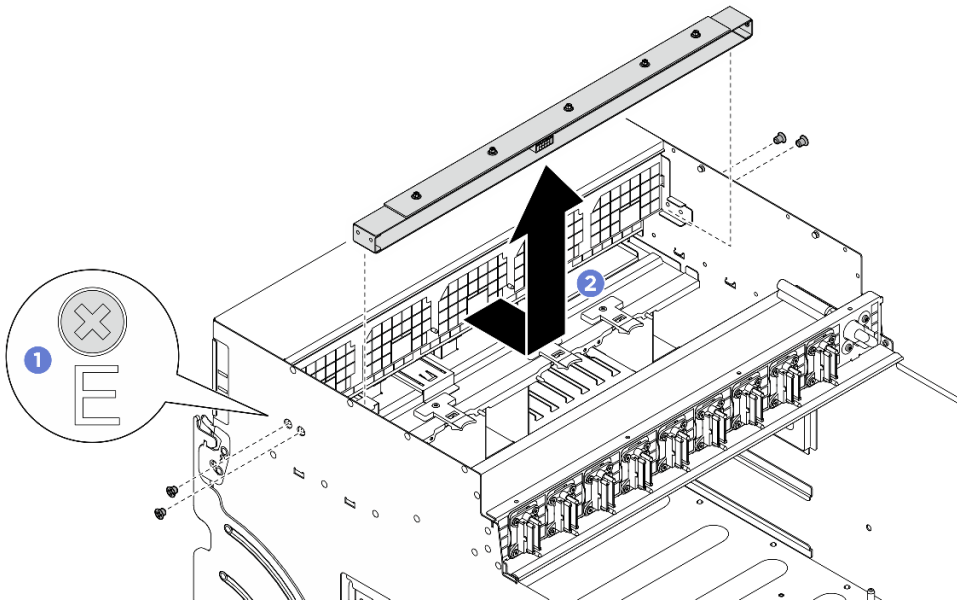


Figure 37. Front fan control board assembly removal

Step 4. If necessary, unfasten the five screws to remove the front fan control board from the bracket.

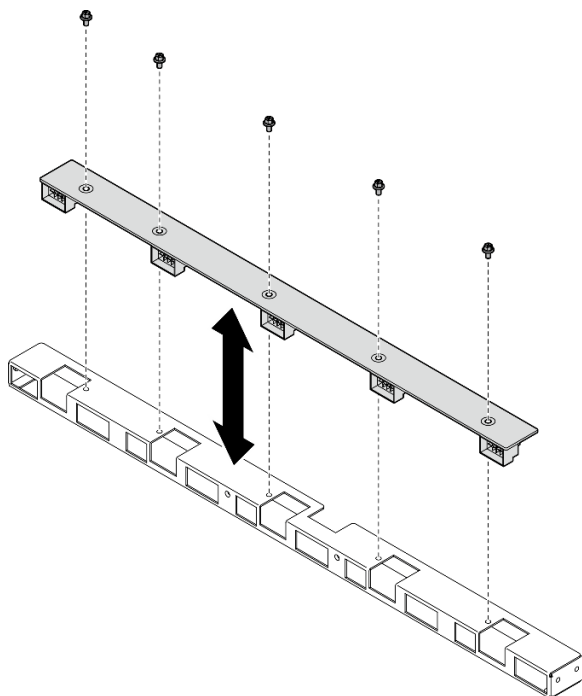


Figure 38. Front fan control board removal

After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Install the front fan control board assembly

Follow instructions in this section to install the front fan control board assembly. The procedure must be executed by a trained technician.

About this task

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Touch the static-protective package that contains the component to any unpainted metal surface on the server; then, remove it from the package and place it on a static-protective surface.
- Two people and one lifting device on site that can support up to 400 lb (181 kg) are required to perform this procedure. If you do not already have a lifting device available, Lenovo offers the Genie Lift GL-8 material lift that can be purchased at Data Center Solution Configurator: <https://dcsc.lenovo.com/#/configuration/cto/7D5YCTO1WW?hardwareType=lifttool>. Make sure to include the Foot-release brake and the Load Platform when ordering the Genie Lift GL-8 material lift.

Procedure

- Step 1. If necessary, align the front fan control board with the bracket, and place it onto the bracket; then, fasten the five screws to secure the front fan control board.

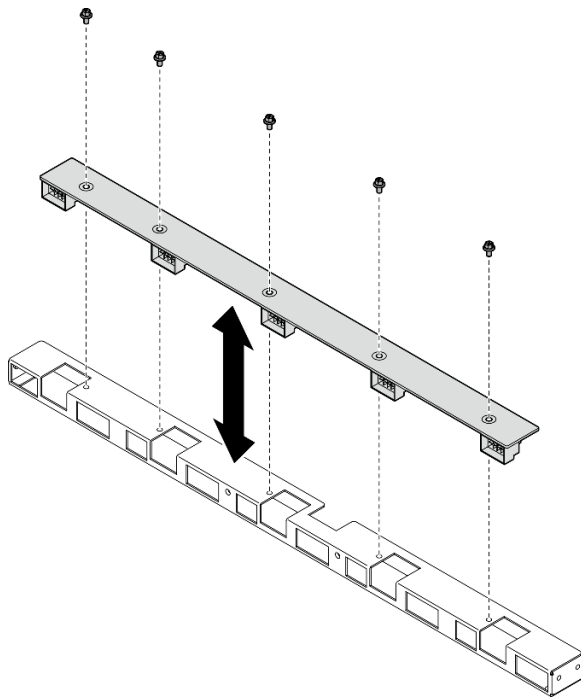


Figure 39. Front fan control board installation

Step 2. Install the front fan control board assembly.

- a. 1 Lower the front fan control board assembly into the 8U GPU shuttle; then, slide the front fan control board assembly forward to engage it with the two guide pins on the 8U GPU shuttle.
- b. 2 Locate the four screw holes marked with **E** on both sides of the 8U GPU shuttle; then, fasten the four screws to secure the front fan control board assembly.

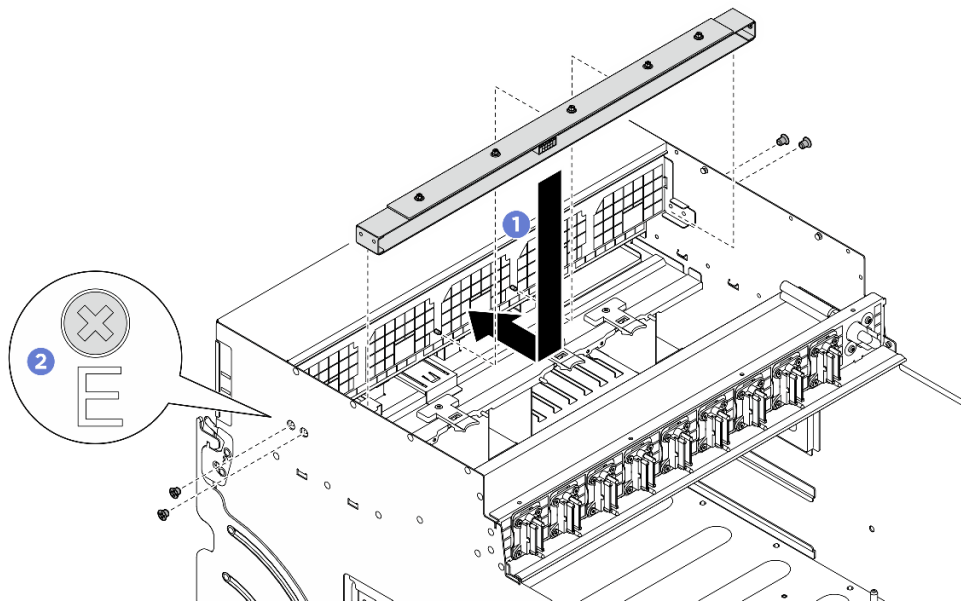


Figure 40. Front fan control board assembly installation

Step 3. If necessary, attach the labels to both ends of the power cable.

- a. ① Attach the white space portion of the label to one end of the cable.
- b. ② Wrap the label around the cable and attach it to the white space portion.
- c. Repeat to attach the other label to the opposite end of the cable.

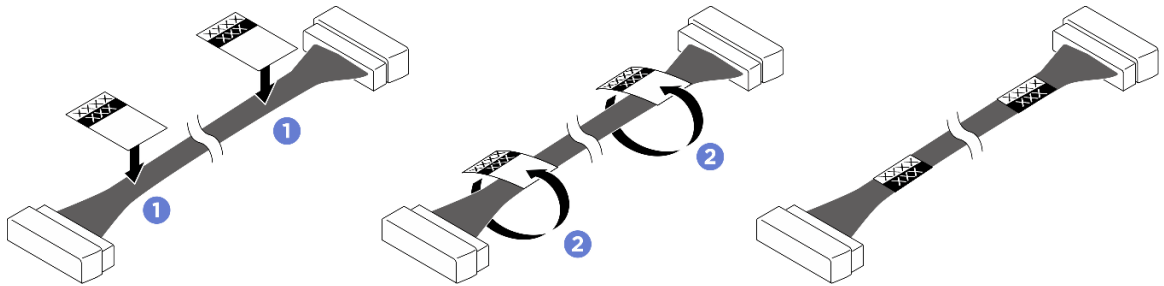


Figure 41. Label application

Note: See the table below to identify the corresponding labels for the cable.

From	To	Label
Front fan control board: Power connector	Power distribution board: Front fan control board power connector (FRONT FAN PWR)	F-Fan PWR FNT PWR

Step 4. Face the cable latch down, and connect the cable to the front fan control board. See [“Fan control board cable routing” on page 202.](#)

After you finish

1. If necessary, reinstall the I/O cover. See [“Install the I/O cover” on page 163.](#)
2. Reinstall the cable cover. See [“Install the cable cover” on page 33.](#)
3. Reinstall the 8U GPU shuttle. See [“Install the 8U GPU shuttle” on page 30.](#)
4. Reinstall all the 2.5-inch hot-swap drives or drive bay fillers (if any) into the drive bays. See [“Install a 2.5-inch hot-swap drive” on page 24](#)
5. Reinstall all the front fans. See [“Install a hot-swap fan \(front and rear\)” on page 40.](#)
6. Reinstall all the power supply units. See [“Install a hot-swap power supply unit” on page 84.](#)
7. Complete the parts replacement. See [“Complete the parts replacement” on page 191.](#)

Remove a rear fan control board assembly

Follow instructions in this section to remove a rear fan control board assembly. The procedure must be executed by a trained technician.

About this task

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 7.](#)

- Two people and one lifting device on site that can support up to 400 lb (181 kg) are required to perform this procedure. If you do not already have a lifting device available, Lenovo offers the Genie Lift GL-8 material lift that can be purchased at Data Center Solution Configurator: <https://dcsc.lenovo.com/#/configuration/cto/7D5YCTO1WW?hardwareType=lifttool>. Make sure to include the Foot-release brake and the Load Platform when ordering the Genie Lift GL-8 material lift.

Procedure

Step 1. Make preparation for this task.

- Remove all the power supply units. See “Remove a hot-swap power supply unit” on page 82.
- Remove all the front fans. See “Remove a hot-swap fan (front and rear)” on page 38.
- Remove all the 2.5-inch hot-swap drives and the drive bay fillers (if any) from the drive bays. See “Remove a 2.5-inch hot-swap drive” on page 22.
- Pull the 8U GPU shuttle out of the chassis, and place it onto the lift platform. See “Remove the 8U GPU shuttle” on page 28.

Step 2. Disconnect the cable from the rear fan control board.

Step 3. Remove the rear fan control board assembly.

- 1 Unfasten the four screws marked with **A** on both sides of the 8U GPU shuttle.
- 2 Remove the rear fan control board assembly from the 8U GPU shuttle.

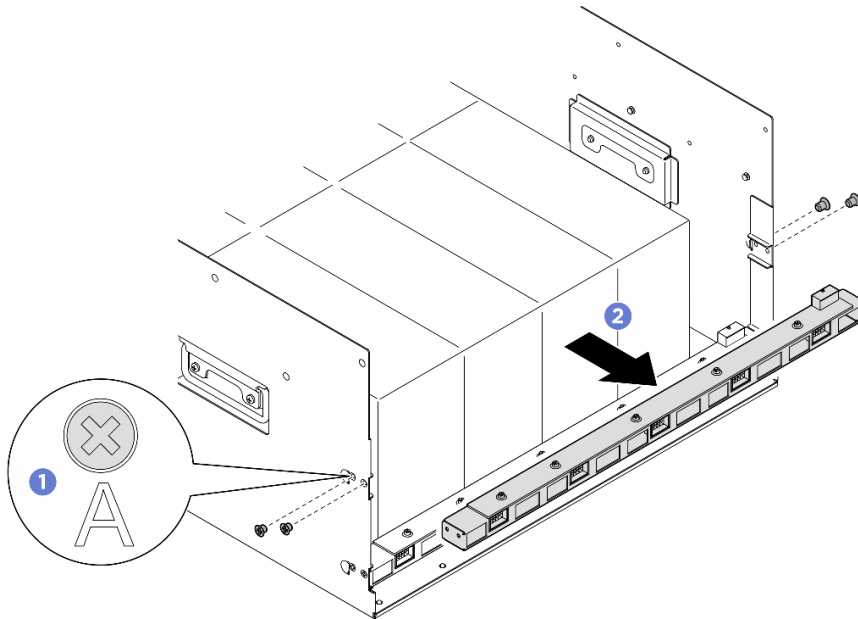


Figure 42. Rear fan control board assembly removal

Step 4. If necessary, unfasten the five screws to remove the rear fan control board from the bracket.

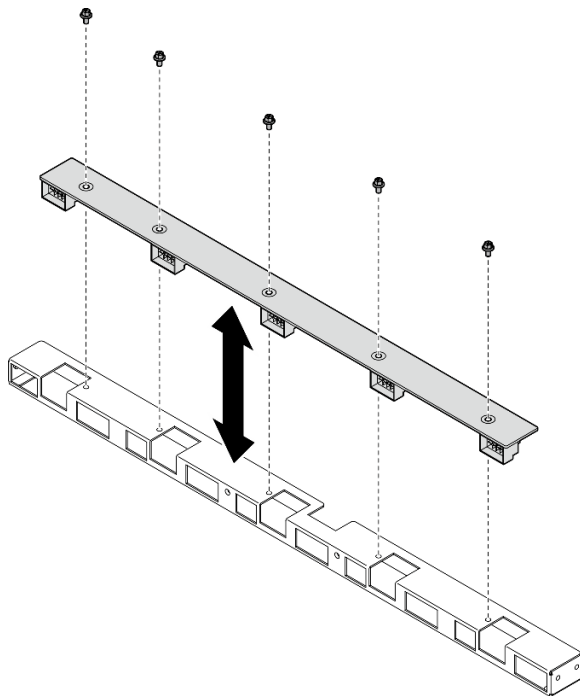


Figure 43. Rear fan control board removal

After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Install a rear fan control board assembly

Follow instructions in this section to install a rear fan control board assembly. The procedure must be executed by a trained technician.

About this task

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Touch the static-protective package that contains the component to any unpainted metal surface on the server; then, remove it from the package and place it on a static-protective surface.
- Two people and one lifting device on site that can support up to 400 lb (181 kg) are required to perform this procedure. If you do not already have a lifting device available, Lenovo offers the Genie Lift GL-8 material lift that can be purchased at Data Center Solution Configurator: <https://dcsc.lenovo.com/#/configuration/cto/7D5YCTO1WW?hardwareType=lifttool>. Make sure to include the Foot-release brake and the Load Platform when ordering the Genie Lift GL-8 material lift.

Procedure

- Step 1. If necessary, align the rear fan control board with the bracket, and place it onto the bracket; then, fasten the five screws to secure the rear fan control board.

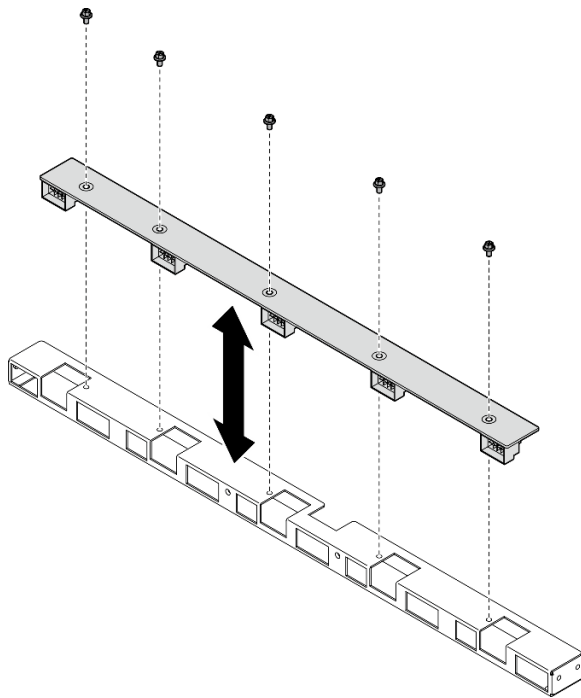


Figure 44. Rear fan control board installation

- Step 2. Install the rear fan control board assembly.
- a. 1 Hold the rear fan control board assembly in the correct orientation as illustrated, and slide it into the 8U GPU shuttle.
 - b. 2 Locate the four screw holes marked with **A** on both sides of the 8U GPU shuttle; then, fasten the four screws to secure the rear fan control board assembly.

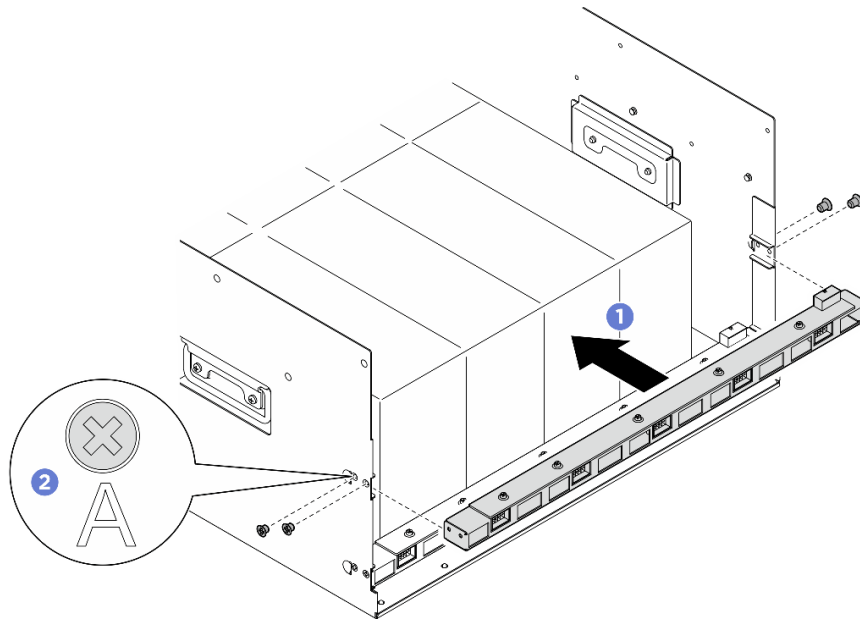


Figure 45. Rear fan control board assembly installation

- Step 3. If necessary, attach the labels to both ends of the power cable.

- a. ① Attach the white space portion of the label to one end of the cable.
- b. ② Wrap the label around the cable and attach it to the white space portion.
- c. Repeat to attach the other label to the opposite end of the cable.

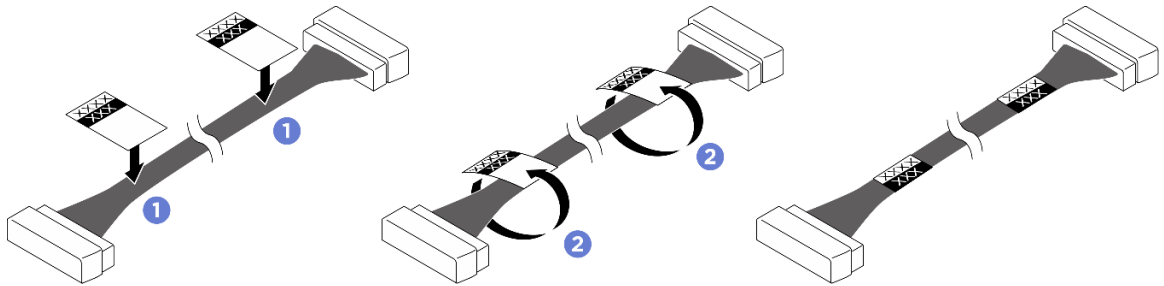


Figure 46. Label application

Note: See the table below to identify the corresponding labels for the cables.

From	To	Label
Rear fan control board (top): Power connector	Power distribution board: Rear fan control board (top) power connector (REAR FAN PWR2)	R-Fan PWR2 TOP PWR
Rear fan control board (bottom): Power connector	Power distribution board: Rear fan control board (bottom) power connector (REAR FAN PWR1)	R-Fan PWR1 LOW PWR

- Step 4. Connect the cable to the rear fan control board. See [“Fan control board cable routing”](#) on page 202.

After you finish

1. Reinstall the 8U GPU shuttle. See [“Install the 8U GPU shuttle”](#) on page 30.
2. Reinstall all the 2.5-inch hot-swap drives or drive bay fillers (if any) into the drive bays. See [“Install a 2.5-inch hot-swap drive”](#) on page 24
3. Reinstall all the front fans. See [“Install a hot-swap fan \(front and rear\)”](#) on page 40.
4. Reinstall all the power supply units. See [“Install a hot-swap power supply unit”](#) on page 84.
5. Complete the parts replacement. See [“Complete the parts replacement”](#) on page 191.

GPU air baffle replacement (trained technician only)

Follow instructions in this section to remove and install the GPU air baffle.

Important: This task must be operated by trained technicians that are certified by Lenovo Service. Do not attempt to remove or install the part without proper training and qualification.

Remove the GPU air baffle

Follow instructions in this section to remove the GPU air baffle. The procedure must be executed by a trained technician.

About this task

Attention:

- Read “Installation Guidelines” on page 1 and “Safety inspection checklist” on page 2 to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See “Power off the server” on page 7.
- Two people and one lifting device on site that can support up to 400 lb (181 kg) are required to perform this procedure. If you do not already have a lifting device available, Lenovo offers the Genie Lift GL-8 material lift that can be purchased at Data Center Solution Configurator: <https://dcsc.lenovo.com/#/configuration/cto/7D5YCTO1WW?hardwareType=lifttool>. Make sure to include the Foot-release brake and the Load Platform when ordering the Genie Lift GL-8 material lift.

Procedure

Step 1. Make preparation for this task.

- a. Remove all the power supply units. See “Remove a hot-swap power supply unit” on page 82.
- b. Remove all the front fans. See “Remove a hot-swap fan (front and rear)” on page 38.
- c. Remove all the 2.5-inch hot-swap drives and the drive bay fillers (if any) from the drive bays. See “Remove a 2.5-inch hot-swap drive” on page 22.
- d. Pull the 8U GPU shuttle out of the chassis, and place it onto the lift platform. See “Remove the 8U GPU shuttle” on page 28.
- e. Remove the power complex. See “Remove the power complex” on page 76.

Step 2. Hold the power complex and carefully turn it upside down.

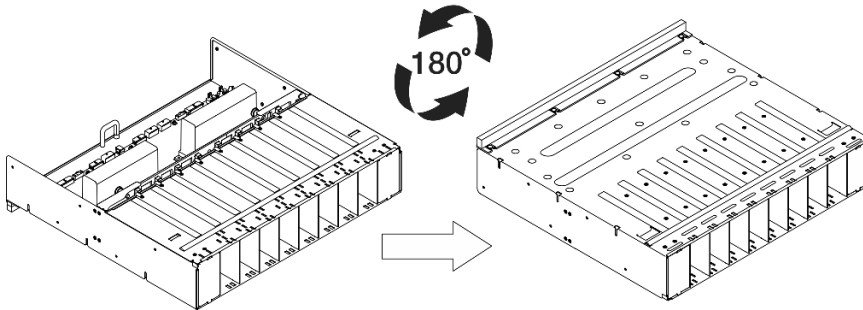


Figure 47. Turning the power complex upside down

Step 3. Remove the GPU air baffle from the bottom of the power complex.

Note: The GPU air baffle might look different from the illustration.

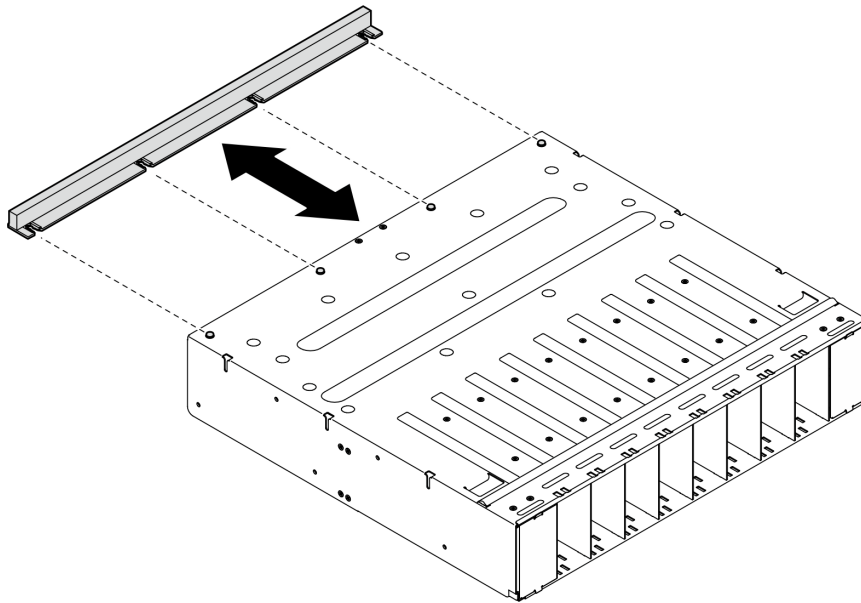


Figure 48. GPU air baffle removal

After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Install the GPU air baffle

Follow instructions in this section to install the GPU air baffle. The procedure must be executed by a trained technician.

About this task

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Touch the static-protective package that contains the component to any unpainted metal surface on the server; then, remove it from the package and place it on a static-protective surface.
- Two people and one lifting device on site that can support up to 400 lb (181 kg) are required to perform this procedure. If you do not already have a lifting device available, Lenovo offers the Genie Lift GL-8 material lift that can be purchased at Data Center Solution Configurator: <https://dcsc.lenovo.com/#/configuration/cto/7D5YCTO1WW?hardwareType=lifttool>. Make sure to include the Foot-release brake and the Load Platform when ordering the Genie Lift GL-8 material lift.

Procedure

Step 1. Align the GPU air baffle with the four guide pins on the bottom of the power complex; then, insert the GPU air baffle into the power complex until it is securely engaged.

Note: The GPU air baffle might look different from the illustration.

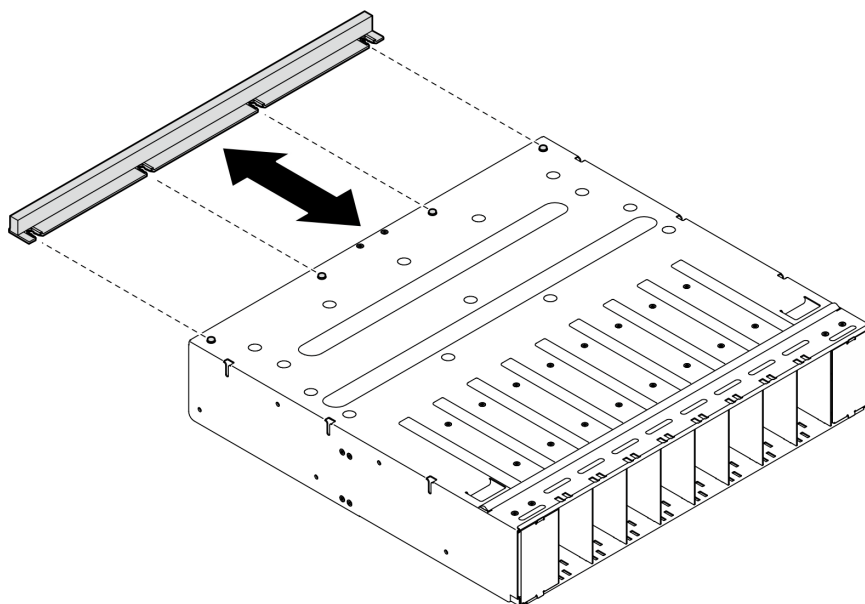


Figure 49. GPU air baffle installation

Step 2. Hold the power complex and carefully turn it right-side up.

After you finish

1. Reinstall the power complex. See [“Install the power complex” on page 77](#).
2. Reinstall the 8U GPU shuttle. See [“Install the 8U GPU shuttle” on page 30](#).
3. Reinstall all the 2.5-inch hot-swap drives or drive bay fillers (if any) into the drive bays. See [“Install a 2.5-inch hot-swap drive” on page 24](#)
4. Reinstall all the front fans. See [“Install a hot-swap fan \(front and rear\)” on page 40](#).
5. Reinstall all the power supply units. See [“Install a hot-swap power supply unit” on page 84](#).
6. Complete the parts replacement. See [“Complete the parts replacement” on page 191](#).

Integrated diagnostics panel replacement

Follow instructions in this section to remove or install the integrated diagnostics panel.

Remove the integrated diagnostics panel

Follow instructions in this section to remove the integrated diagnostics panel.

About this task

Attention: Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.

Procedure

- Step 1. Remove the front fans 4 and 5. See [“Remove a hot-swap fan \(front and rear\)” on page 38](#).
- Step 2. Remove the integrated diagnostics panel.
 - a. ① Press and hold on the two release tabs.
 - b. ② Slightly disengage the integrated diagnostics panel from the 8U GPU shuttle.

- c. ③ Disconnect the cable from the integrated diagnostics panel.

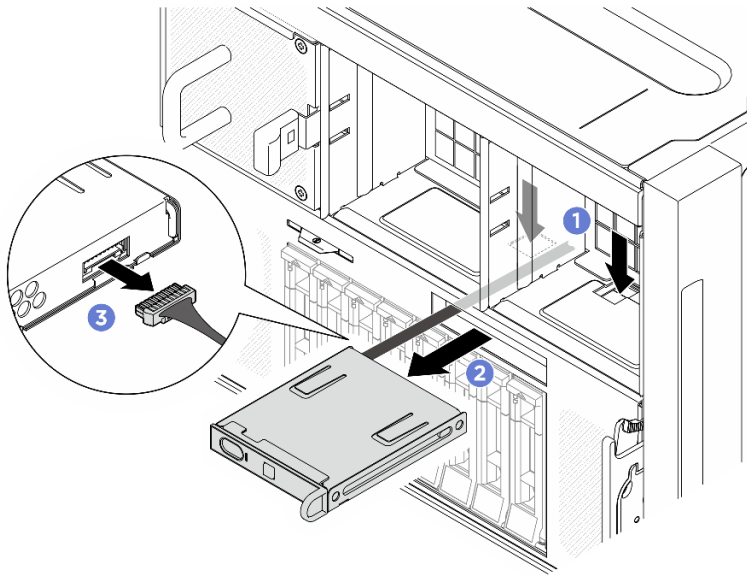


Figure 50. Integrated diagnostics panel removal

Step 3. Remove the integrated diagnostics panel from the 8U GPU shuttle.

After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Install the integrated diagnostics panel

Follow instructions in this section to install the integrated diagnostics panel.

About this task

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Touch the static-protective package that contains the component to any unpainted metal surface on the server; then, remove it from the package and place it on a static-protective surface.

Procedure

- Step 1. ① Connect the cable to the integrated diagnostics panel.
- Step 2. ② Align the integrated diagnostics panel with the slot in the front of the 8U GPU shuttle, and slide it in.

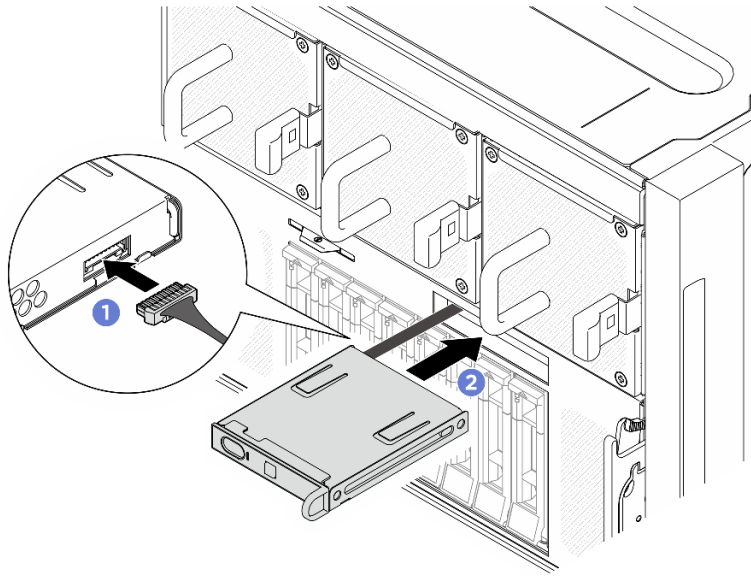


Figure 51. Integrated diagnostics panel installation

After you finish

1. If necessary, reinstall the front fans. See [“Install a hot-swap fan \(front and rear\)”](#) on page 40.
2. Complete the parts replacement. See [“Complete the parts replacement”](#) on page 191.

M.2 drive replacement (trained technician only)

Follow instructions in this section to remove and install an M.2 drive.

Important: This task must be operated by trained technicians that are certified by Lenovo Service. Do not attempt to remove or install the part without proper training and qualification.

Remove an M.2 drive

Follow instructions in this section to remove an M.2 drive. The procedure must be executed by a trained technician.

About this task

Attention:

- Read [“Installation Guidelines”](#) on page 1 and [“Safety inspection checklist”](#) on page 2 to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server”](#) on page 7.
- If one or more NVMe solid-state drives are to be removed, it is recommended to disable them beforehand via the operating system.
- Before you remove or make changes to drives, drive controllers (including controllers that are integrated on the system board assembly), drive backplanes or drive cables, back up all important data that is stored on drives.
- Before you remove any component of a RAID array (drive, RAID card, etc.), back up all RAID configuration information.

Procedure

Step 1. Make preparation for this task.

- a. Remove the 2U compute shuttle. See [“Remove the 2U compute shuttle”](#) on page 26.
- b. Remove the processor air baffle. See [“Remove the processor air baffle”](#) on page 86.

Step 2. Locate the M.2 drive slots on the system board.

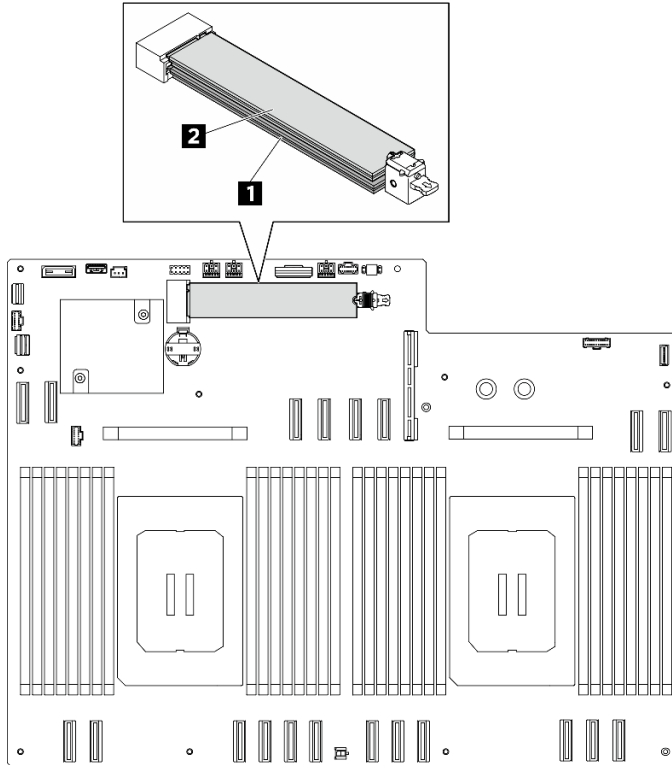


Figure 52. M.2 drive slots

1 Slot 1	2 Slot 2
-----------------	-----------------

Step 3. Remove the upper M.2 drive.

- a. **1** Slide the upper retainer backward as illustrated to disengage the M.2 drive.
- b. **2** The M.2 drive will slightly lift away from the system board.
- c. **3** Hold the edge of the M.2 drive to pull it out of the M.2 drive slot at an angle of approximately 15 degrees.

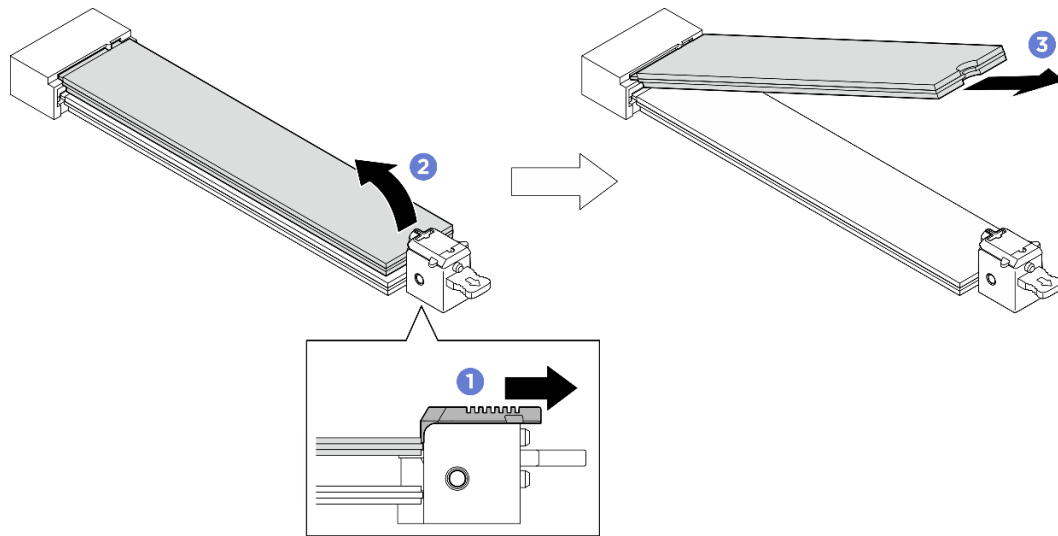


Figure 53. Removing upper M.2 drive

Step 4. Remove the lower M.2 drive.

- a. ① Pull the lower retainer as illustrated to disengage the M.2 drive.
- b. ② The M.2 drive will slightly lift away from the system board.
- c. ③ Hold the edge of the M.2 drive to pull it out of the M.2 drive slot at an angle of approximately 15 degrees.

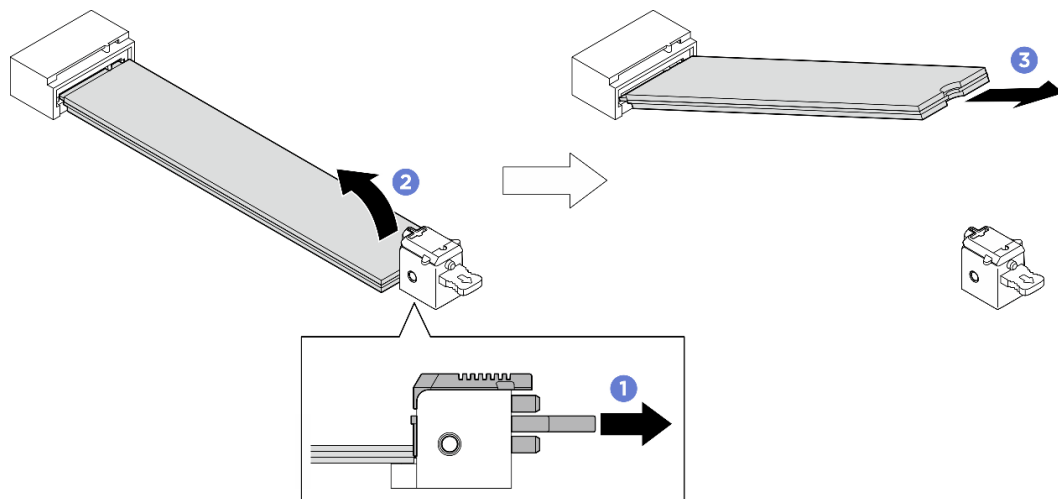


Figure 54. Removing lower M.2 drive

After you finish

- Install a replacement unit. See [“Install an M.2 drive” on page 57](#).
- If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Install an M.2 drive

Follow instructions in this section to install an M.2 drive. The procedure must be executed by a trained technician.

About this task

Attention:

- Read “Installation Guidelines” on page 1 and “Safety inspection checklist” on page 2 to ensure that you work safely.
- Touch the static-protective package that contains the component to any unpainted metal surface on the server; then, remove it from the package and place it on a static-protective surface.

Firmware and driver download: You might need to update the firmware or driver after replacing a component.

- Go to <https://datacentersupport.lenovo.com/tw/en/products/servers/thinksystem/sr680av3/7dhe/downloads/driver-list/> to see the latest firmware and driver updates for your server.
- Go to “Update the firmware” in *User Guide* or *System Configuration Guide* for more information on firmware updating tools.

Procedure

Step 1. Locate the M.2 drive slots on the system board.

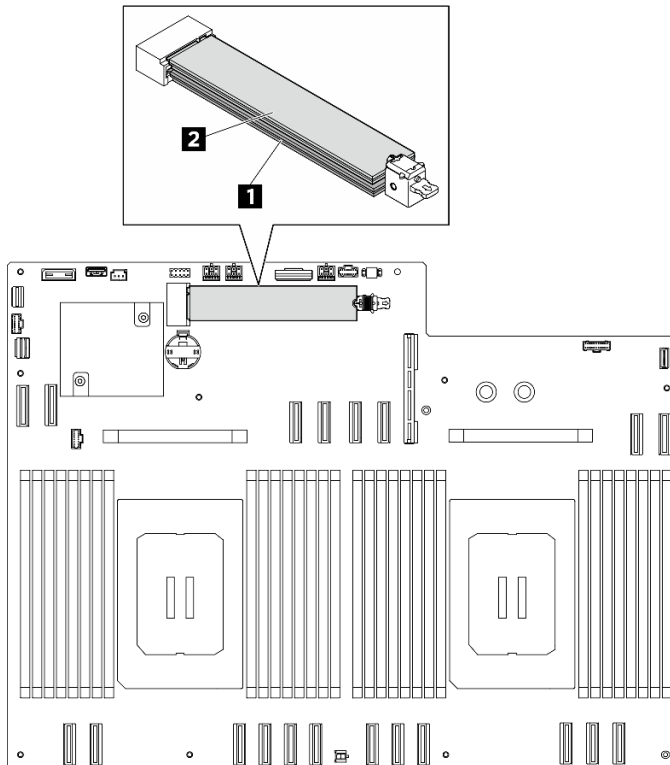


Figure 55. M.2 drive slots

1 Slot 1	2 Slot 2
-----------------	-----------------

Step 2. Install the lower M.2 drive.

- a. **1** Pull and hold the lower retainer as illustrated.
- b. **2** Insert the M.2 drive into the lower M.2 slot at an angle of approximately 15 degrees.
- c. **3** Pivot the other end of the M.2 drive down and slide the retainer toward the M.2 drive to secure it in place.

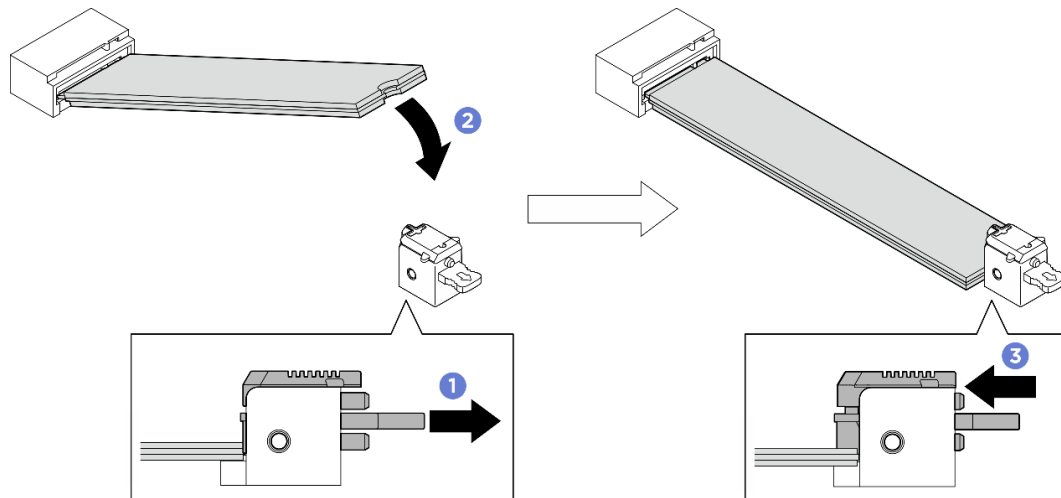


Figure 56. Installing lower M.2 drive

Step 3. Install upper M.2 drive.

- a. 1 Insert the M.2 drive into the upper M.2 slot at an angle of approximately 15 degrees.
- b. 2 Pivot the other end of the M.2 drive downward until it securely locks into place with the retainer.
- c. 3 The upper retainer will automatically lock into position, securing the M.2 drive in place.

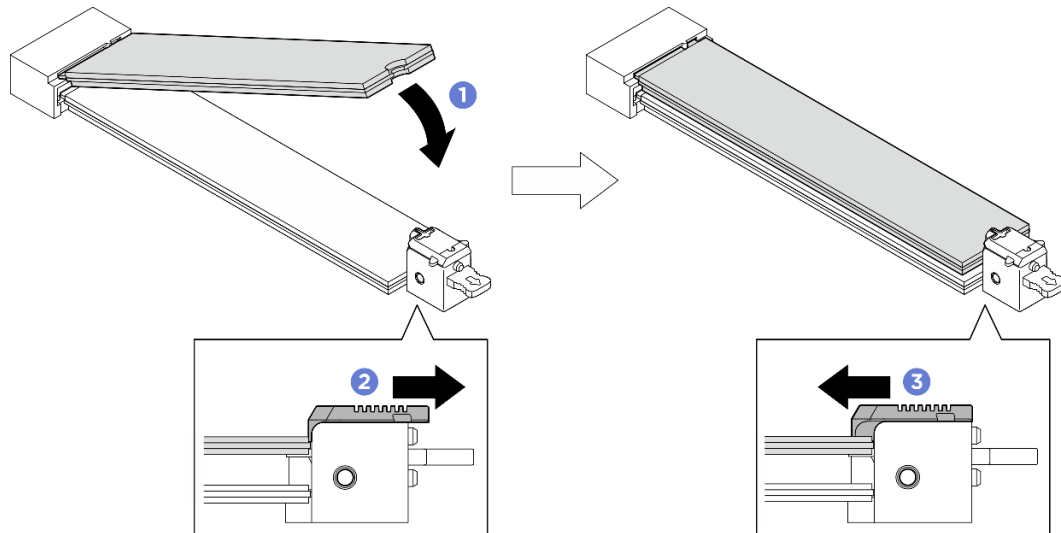


Figure 57. Installing upper M.2 drive

After you finish

1. Reinstall the processor air baffle. See [“Install the processor air baffle” on page 87](#).
2. Reinstall the 2U compute shuttle. See [“Install the 2U compute shuttle” on page 27](#).
3. Complete the parts replacement. See [“Complete the parts replacement” on page 191](#).

Memory module replacement (trained technician only)

Use the following procedures to remove and install a memory module.

Important: This task must be operated by trained technicians that are certified by Lenovo Service. Do not attempt to remove or install the part without proper training and qualification.

Remove a memory module

Use this information to remove a memory module. The procedure must be executed by a trained technician.

About this task

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 7](#).
- Make sure to remove or install memory module at least 20 seconds after disconnecting power cords from the system. It allows the system to be completely discharged of electricity and safe for handling memory module.
- If you are not installing a replacement memory module to the same slot, make sure you have memory module filler available.
- Memory modules are sensitive to static discharge and require special handling. Refer to the standard guidelines for [“Handling static-sensitive devices” on page 4](#).
 - Always wear an electrostatic-discharge strap when removing or installing memory modules. Electrostatic-discharge gloves can also be used.
 - Never hold two or more memory modules together so that they do not touch each other. Do not stack memory modules directly on top of each other during storage.
 - Never touch the gold memory module connector contacts or allow these contacts to touch the outside of the memory module connector housing.
 - Handle memory modules with care: never bend, twist, or drop a memory module.
 - Do not use any metal tools (such as jigs or clamps) to handle the memory modules, because the rigid metals may damage the memory modules.
 - Do not insert memory modules while holding packages or passive components, which can cause package cracks or detachment of passive components by the high insertion force.

Important: Remove or install memory modules for one processor at a time.

Procedure

Attention: Make sure to remove or install memory module 20 seconds after disconnecting power cords from the system. It allows the system to be completely discharged of electricity and safe for handling memory module.

Step 1. Make preparation for this task.

- a. Remove the 2U compute shuttle. See [“Remove the 2U compute shuttle” on page 26](#).
- b. Remove the processor air baffle. See [“Remove the processor air baffle” on page 86](#).
- c. Locate the memory module slots and determine which memory module to be removed.

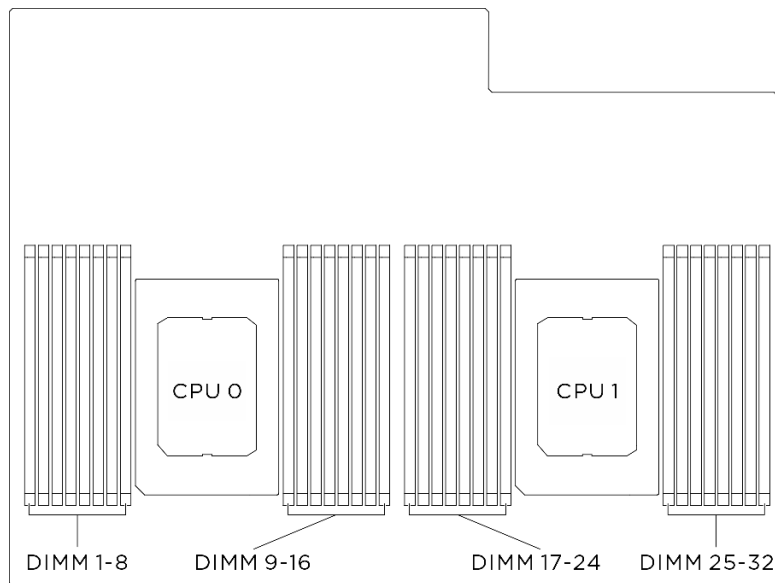


Figure 58. Memory modules and processors layout

Step 2. Remove the memory module from the slot.

Attention: To avoid breaking the retaining clips or damaging the memory module slots, handle the clips gently.

- a. ① Gently open the retaining clip on each end of the memory module slot.
- b. ② Grasp the memory module at both ends and carefully lift it out of the slot.

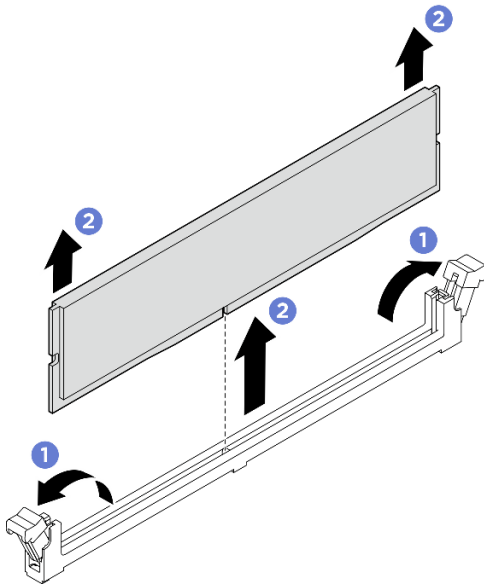


Figure 59. Memory module removal

After you finish

1. A memory module slot must be installed with a memory module or a memory module filler. See [“Install a memory module” on page 62](#).

2. If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Install a memory module

Follow instructions in this section to install a memory module. The procedure must be executed by a trained technician.

About this task

See for detailed information about memory configuration and setup.

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Touch the static-protective package that contains the component to any unpainted metal surface on the server; then, remove it from the package and place it on a static-protective surface.
- Make sure to remove or install memory module at least 20 seconds after disconnecting power cords from the system. It allows the system to be completely discharged of electricity and safe for handling memory module.
- Make sure to adopt one of the supported configurations listed in “[Memory module installation rules and order](#)” on page 5.
- Memory modules are sensitive to static discharge and require special handling. Refer to the standard guidelines at “[Handling static-sensitive devices](#)” on page 4:
 - Always wear an electrostatic-discharge strap when removing or installing memory modules. Electrostatic-discharge gloves can also be used.
 - Never hold two or more memory modules together so that they do not touch each other. Do not stack memory modules directly on top of each other during storage.
 - Never touch the gold memory module connector contacts or allow these contacts to touch the outside of the memory module connector housing.
 - Handle memory modules with care: never bend, twist, or drop a memory module.
 - Do not use any metal tools (such as jigs or clamps) to handle the memory modules, because the rigid metals may damage the memory modules.
 - Do not insert memory modules while holding packages or passive components, which can cause package cracks or detachment of passive components by the high insertion force.

Important: Remove or install memory modules for one processor at a time.

Firmware and driver download: You might need to update the firmware or driver after replacing a component.

- Go to <https://datacentersupport.lenovo.com/tw/en/products/servers/thinksystem/sr680av3/7dhe/downloads/driver-list/> to see the latest firmware and driver updates for your server.
- Go to “Update the firmware” in *User Guide* or *System Configuration Guide* for more information on firmware updating tools.

Procedure

Attention: Make sure to remove or install memory module 20 seconds after disconnecting power cords from the system. It allows the system to be completely discharged of electricity and safe for handling memory module.

Step 1. Locate the required memory module slot on the system board assembly.

Note: Ensure that you observe the installation rules and sequence order in [“Memory module installation rules and order”](#) on page 5.

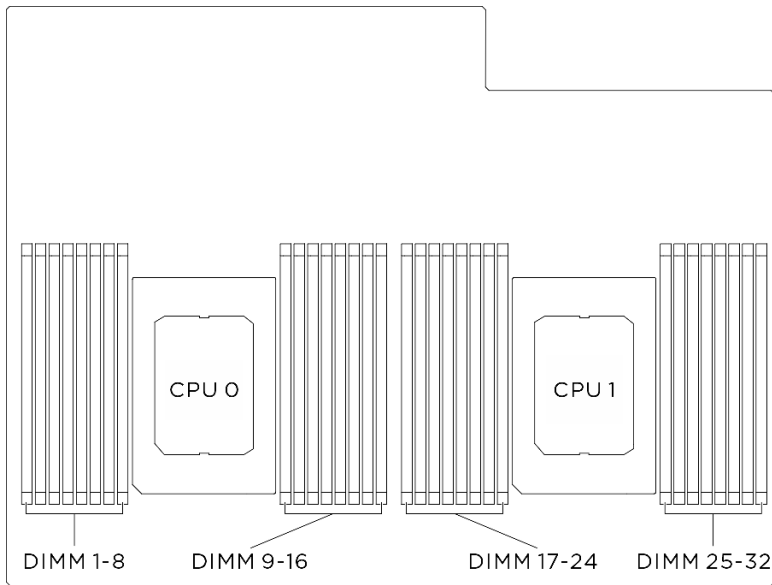


Figure 60. Memory modules and processors layout

Step 2. Install the memory module into the slot.

- a. ① Gently open the retaining clip on each end of the memory module slot.
- b. ② Align the memory module with the slot, and gently place the memory module on the slot with both hands.
- c. ③ Firmly press both ends of the memory module straight down into the slot until the retaining clips snap into the locked position.

Attention:

- To avoid breaking the retaining clips or damaging the memory module slots, open and close the clips gently.
- If there is a gap between the memory module and the retaining clips, the memory module has not been correctly inserted. In this case, open the retaining clips, remove the memory module, and then reinsert it.

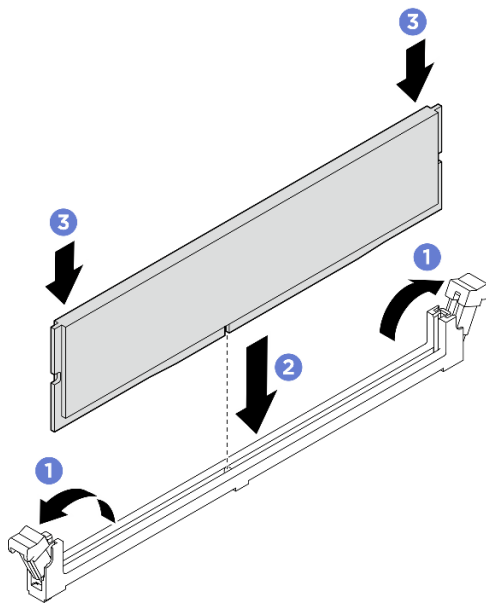


Figure 61. Memory module installation

After you finish

1. Reinstall the processor air baffle. See [“Install the processor air baffle” on page 87.](#)
2. Reinstall the 2U compute shuttle. See [“Install the 2U compute shuttle” on page 27.](#)
3. Complete the parts replacement. See [“Complete the parts replacement” on page 191.](#)

MicroSD card replacement (trained technician only)

Follow instructions in this section to remove and install the MicroSD card.

Important: This task must be operated by trained technicians that are certified by Lenovo Service. Do not attempt to remove or install the part without proper training and qualification.

Remove the MicroSD card

Follow instructions in this section to remove the MicroSD card.

About this task

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See “[Power off the server](#)” on page 7.

Procedure

Step 1. Make preparation for this task.

- a. Remove the 2U compute shuttle. See “[Remove the 2U compute shuttle](#)” on page 26.
- b. Remove the processor air baffle. See “[Remove the processor air baffle](#)” on page 86.

Step 2. Locate the MicroSD card on the system I/O board.

Step 3. Remove the MicroSD card.

- a. ① Slide the socket lid to the open position.
- b. ② Lift open the socket lid.
- c. ③ Remove the MicroSD card from the socket.

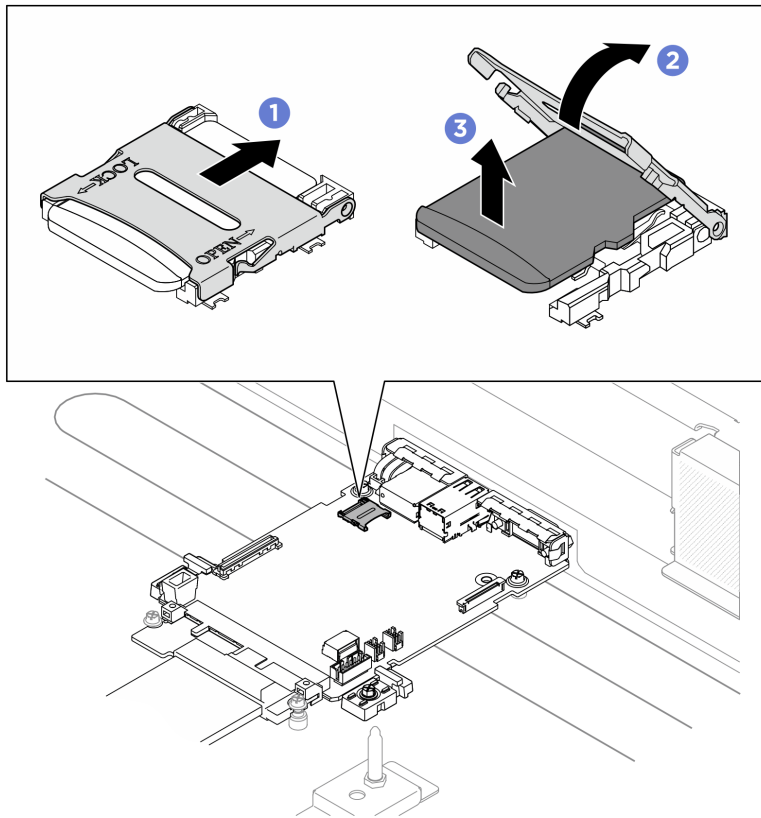


Figure 62. Removing MicroSD card

After you finish

1. Install a replacement unit (see “[Install the MicroSD card](#)” on page 66).
2. If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Install the MicroSD card

Follow instructions in this section to install the MicroSD card.

About this task

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Touch the static-protective package that contains the component to any unpainted metal surface on the server; then, remove it from the package and place it on a static-protective surface.

Procedure

- Step 1. ① Place the MicroSD card into the socket.
- Step 2. ② Close the socket lid.
- Step 3. ③ Slide the socket lid to the lock position.

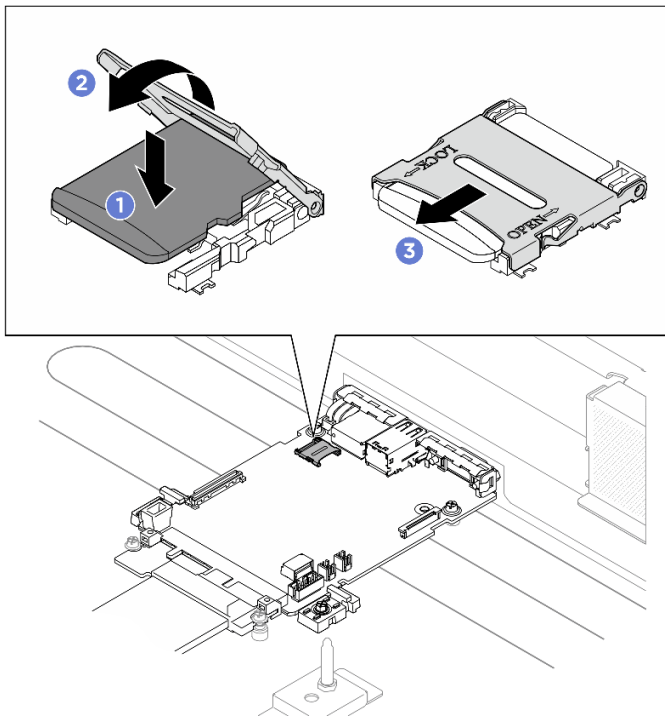


Figure 63. Installing MicroSD card

After you finish

1. Reinstall the processor air baffle. See [“Install the processor air baffle” on page 87](#).
2. Reinstall the 2U compute shuttle. See [“Install the 2U compute shuttle” on page 27](#).
3. Complete the parts replacement. See [“Complete the parts replacement” on page 191](#).

PCIe riser air baffle replacement (trained technician only)

Follow instructions in this section to remove and install a PCIe riser air baffle.

Important: This task must be operated by trained technicians that are certified by Lenovo Service. Do not attempt to remove or install the part without proper training and qualification.

Remove a PCIe riser air baffle

Follow instructions in this section to remove a PCIe riser air baffle. The procedure must be executed by a trained technician.

About this task

S012



CAUTION:
Hot surface nearby.

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 7](#).

Procedure

Step 1. Make preparation for this task.

- a. Remove the 2U compute shuttle. See [“Remove the 2U compute shuttle” on page 26](#).
- b. Remove the PCIe riser assembly. See [“Remove a PCIe riser assembly” on page 70](#).

Step 2. Remove the PCIe riser air baffle.

- a. ① Unfasten the two screws that secures the PCIe riser air baffle to the PCIe riser.
- b. ② Grasp the PCIe riser air baffle and carefully pull it out.

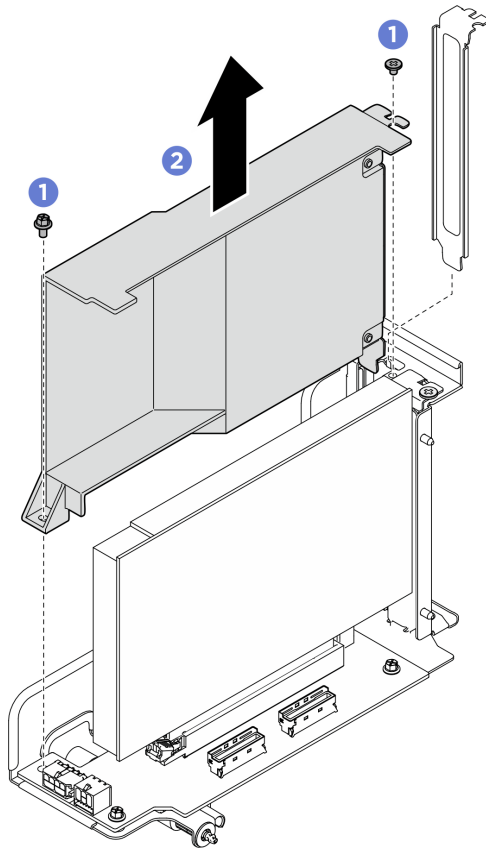


Figure 64. PCIe riser air baffle removal

After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Install a PCIe riser air baffle

Follow instructions in this section to install a PCIe riser air baffle. The procedure must be executed by a trained technician.

S012



CAUTION:
Hot surface nearby.

About this task

Attention:

- Read [“Installation Guidelines”](#) on page 1 and [“Safety inspection checklist”](#) on page 2 to ensure that you work safely.

- Touch the static-protective package that contains the component to any unpainted metal surface on the server; then, remove it from the package and place it on a static-protective surface.
- Install the PCIe riser air baffle when ThinkSystem NVIDIA BlueField-3 VPI QSFP112 2P 200G PCIe Gen5 x16 B3220 is installed in the system.

Procedure

- Step 1. ① Insert the PCIe riser air baffle into the PCIe riser.
- Step 2. ② Fasten the two screws to secure the PCIe riser air baffle.

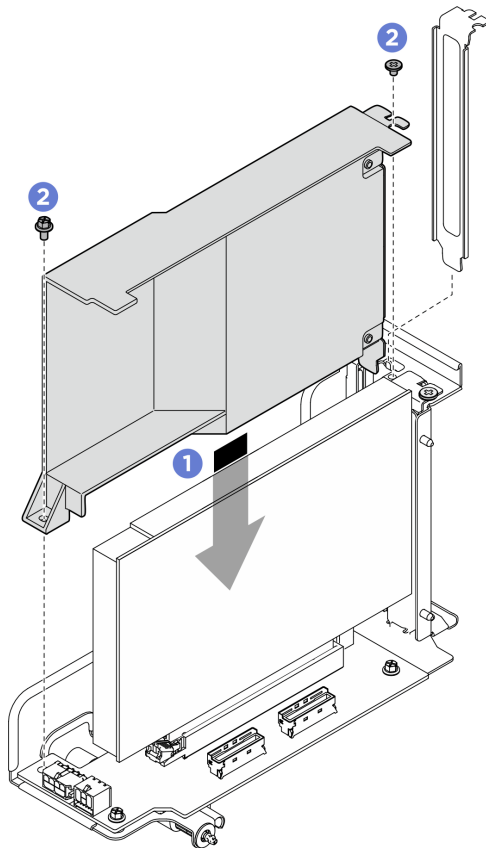


Figure 65. PCIe riser air baffle installation

After you finish

1. Reinstall the PCIe riser assembly. See [“Install a PCIe riser assembly” on page 73](#).
2. Reinstall the 2U compute shuttle. See [“Install the 2U compute shuttle” on page 27](#).
3. Complete the parts replacement. See [“Complete the parts replacement” on page 191](#).

PCIe riser assembly replacement (trained technician only)

Follow instructions in this section to remove and install a PCIe riser assembly.

Important: This task must be operated by trained technicians that are certified by Lenovo Service. Do not attempt to remove or install the part without proper training and qualification.

Remove a PCIe riser assembly

Follow instructions in this section to remove a PCIe riser assembly. The procedure must be executed by a trained technician.

About this task

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 7](#).
- The server support up to two PCIe risers, see the following illustration for corresponding locations.

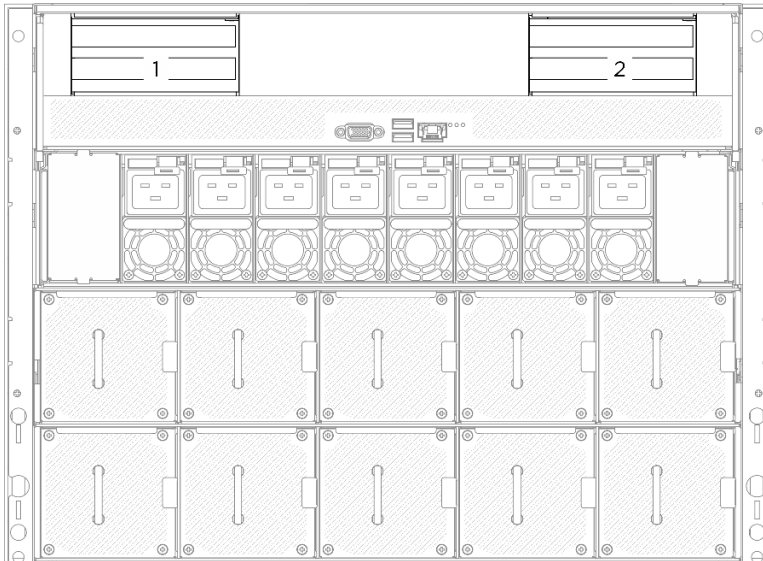


Figure 66. PCIe riser locations

Note: To maintain proper system cooling, do not operate the server without a PCIe riser or a riser filler installed in the 2U compute shuttle.

Procedure

Step 1. Remove the 2U compute shuttle. See [“Remove the 2U compute shuttle” on page 26](#).

Step 2. Remove the PCIe riser assembly.

- a. ① Unfasten the thumbscrew on the PCIe riser.
- b. ② Lift the PCIe riser assembly out of the 2U compute shuttle.
- c. Disconnect the PCIe riser assembly cables. See [“PCIe riser cable routing” on page 199](#) for more information on the internal cable routing.

Note: The PCIe riser assembly might look different from the illustration.

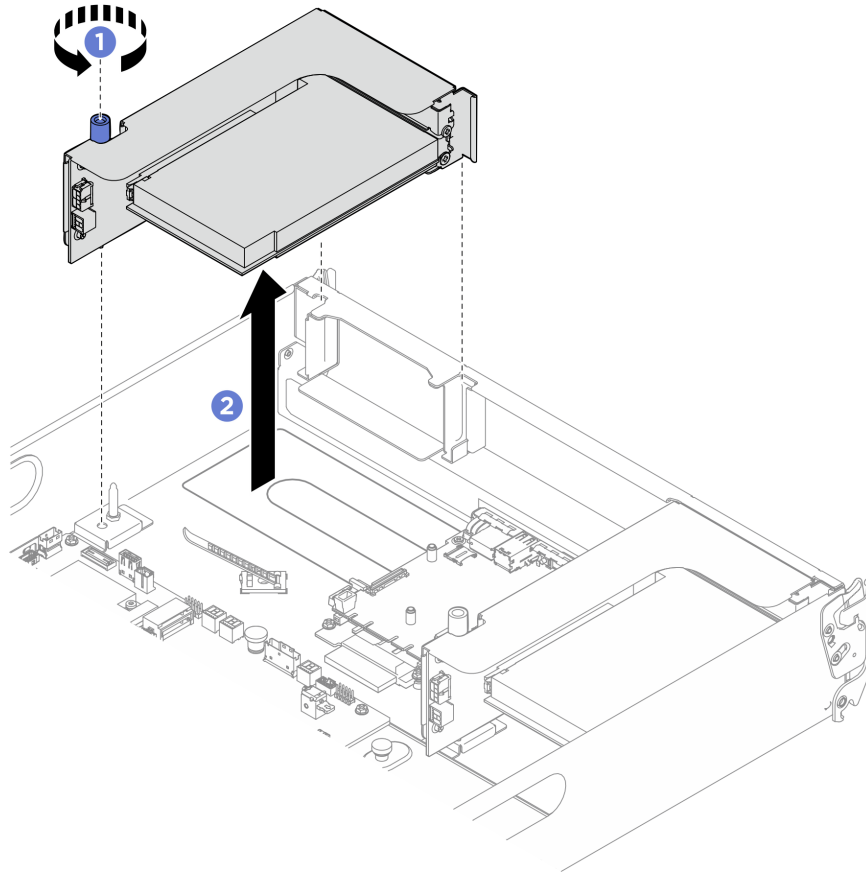


Figure 67. PCIe riser assembly removal

After you finish

1. If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.
2. If you plan to recycle the component:
 - a. (Optional) If the PCIe riser air baffle is installed, remove it.
 - 1) ① Unfasten the two screws that secure the PCIe riser air baffle to the PCIe riser.
 - 2) ② Grasp the PCIe riser air baffle and carefully pull it out.

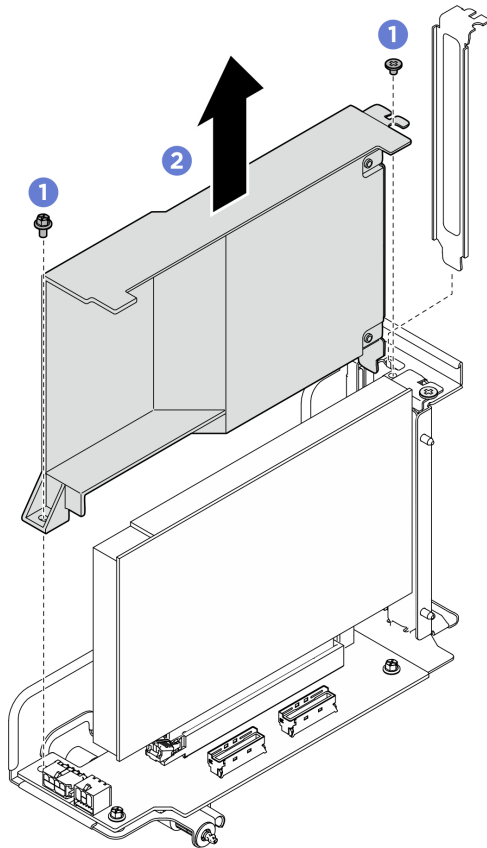


Figure 68. PCIe riser air baffle removal

b. Remove the rear PCIe adapter from the PCIe riser.

- 1) 1 Unfasten the screw that secures the rear PCIe adapter to the PCIe riser.
- 2) 2 Grasp the rear PCIe adapter by its edges and carefully pull it out of the PCIe slot.


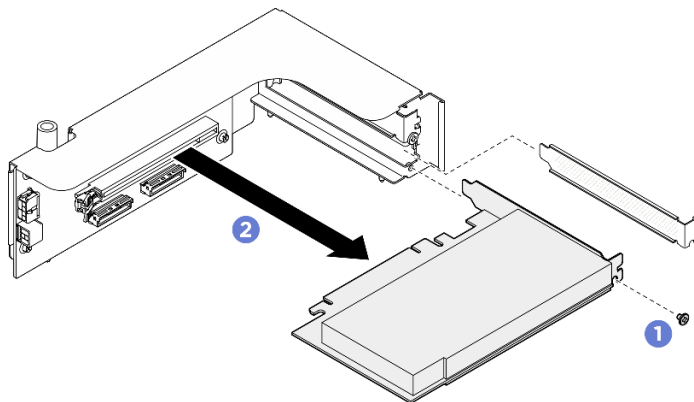


Figure 69. Rear PCIe adapter removal

c. Unfasten the screws to remove the PCIe riser card from the PCIe riser cage.

Note: Depending on the configuration, unfasten three or four screws on the PCIe riser card.

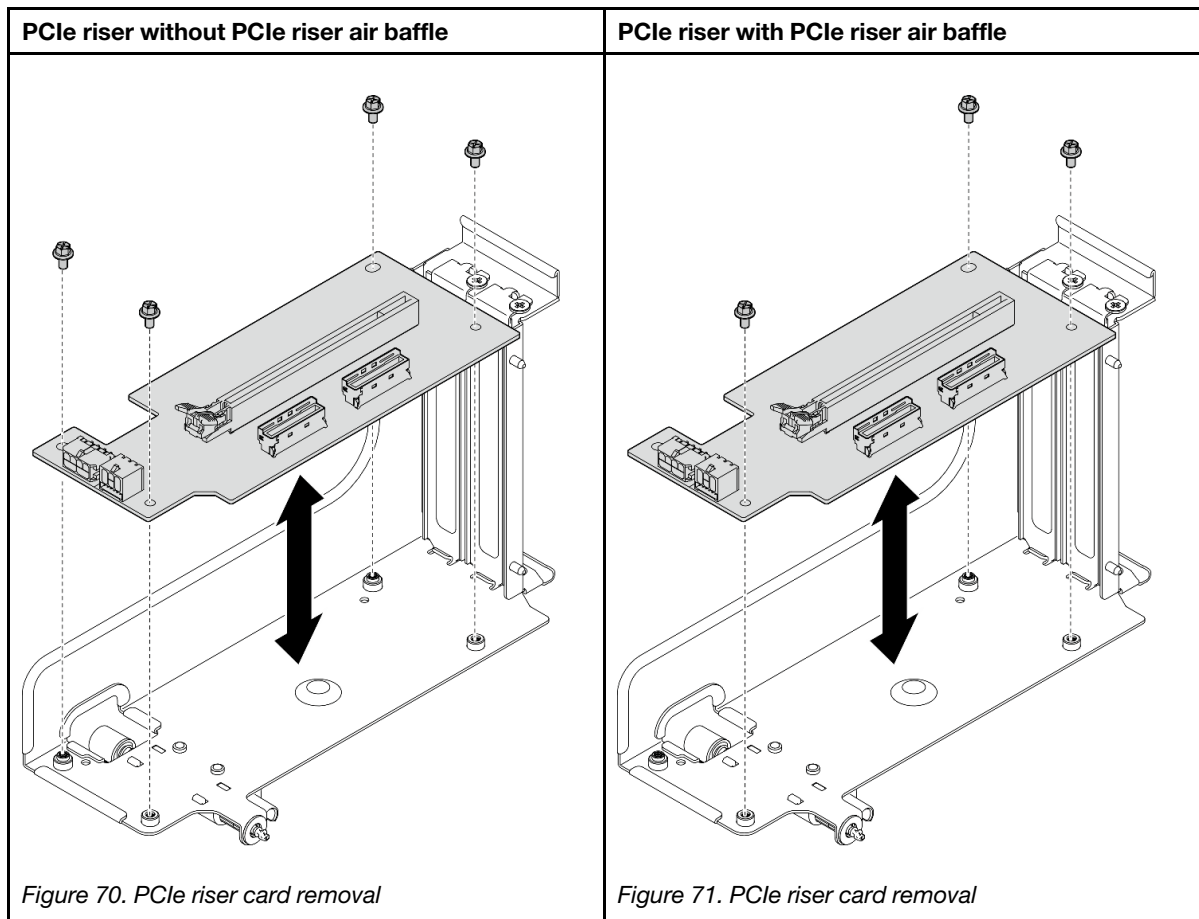

- d. Recycle the component in compliance with local regulations.

Install a PCIe riser assembly

Follow instructions in this section to install a PCIe riser assembly. The procedure must be executed by a trained technician.

About this task

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Touch the static-protective package that contains the component to any unpainted metal surface on the server; then, remove it from the package and place it on a static-protective surface.
- The server support up to two PCIe risers, see the following illustration for corresponding locations.

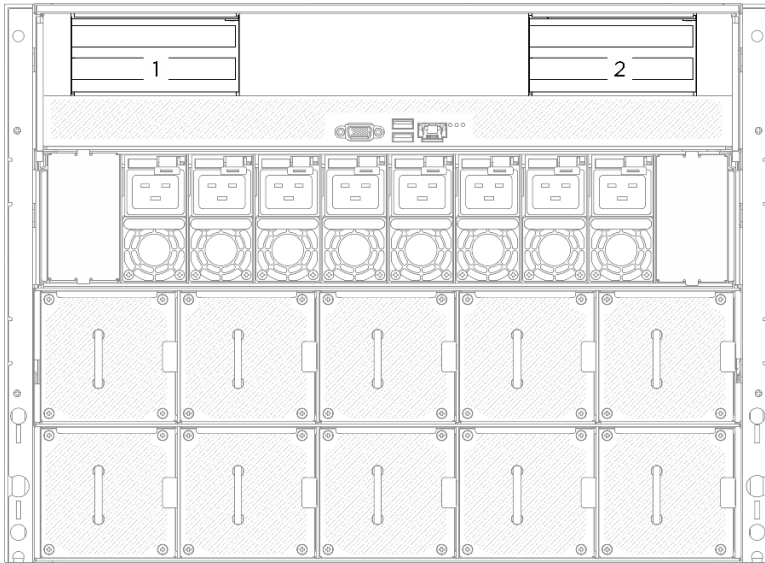


Figure 72. PCIe riser locations

Procedure

Step 1. If necessary, attach the labels to both ends of the cable(s).

- a. 1 Attach the white space portion of the label to one end of the cable.
- b. 2 Wrap the label around the cable and attach it to the white space portion.
- c. Repeat to attach the other label to the opposite end of the cable.

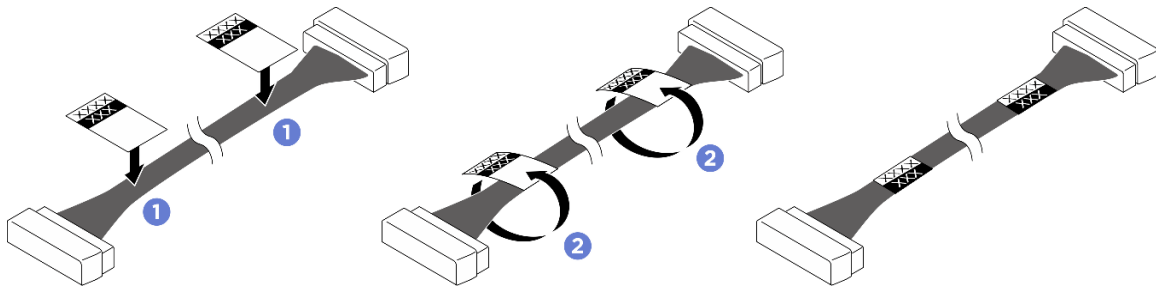


Figure 73. Label application

Note: See the table below to identify the corresponding labels for the cables.

From	To	Label
1 PCIe riser 2 signal connector (MCIO 1)	System board assembly: PCIe Riser 2 signal connectors (MCIO4B)	R2-MCIO 1 MCIO 4B
2 PCIe riser 2 signal connector (MCIO 2)	System board assembly: PCIe Riser 2 signal connectors (MCIO4A)	R2-MCIO 2 MCIO 4A
3 PCIe Riser 2 power connector (RISER PWR)	System board assembly: PCIe Riser 2 power and sideband connector (BP PWR/SIG 1)	R2-Riser PWR PWR/SIG 2

From	To	Label
4 PCIe riser 1 signal connector (MCIO 1)	System board assembly: PCIe Riser 1 signal connectors (MCIO8A)	R1-MCIO 1 MCIO 8A
5 PCIe riser 1 signal connector (MCIO 2)	System board assembly: PCIe Riser 1 signal connectors (MCIO8B)	R1-MCIO 2 MCIO 8B
6 PCIe Riser 1 power connector (RISER PWR)	System board assembly: PCIe Riser 1 power and sideband connector (BP PWR/SIG 3)	R1-Riser PWR PWR/SIG 3

Step 2. Connect the PCIe riser assembly cables. See [“PCIe riser cable routing” on page 199](#) for more information on the internal cable routing.

Step 3. **1** Align the guide hole on the PCIe riser with the guide post on the system board assembly; then, insert the PCIe riser assembly into the PCIe slot on the system board assembly.

Step 4. **2** Fasten the thumbscrew to secure the PCIe riser assembly.

Note: The PCIe riser assembly might look different from the illustration.

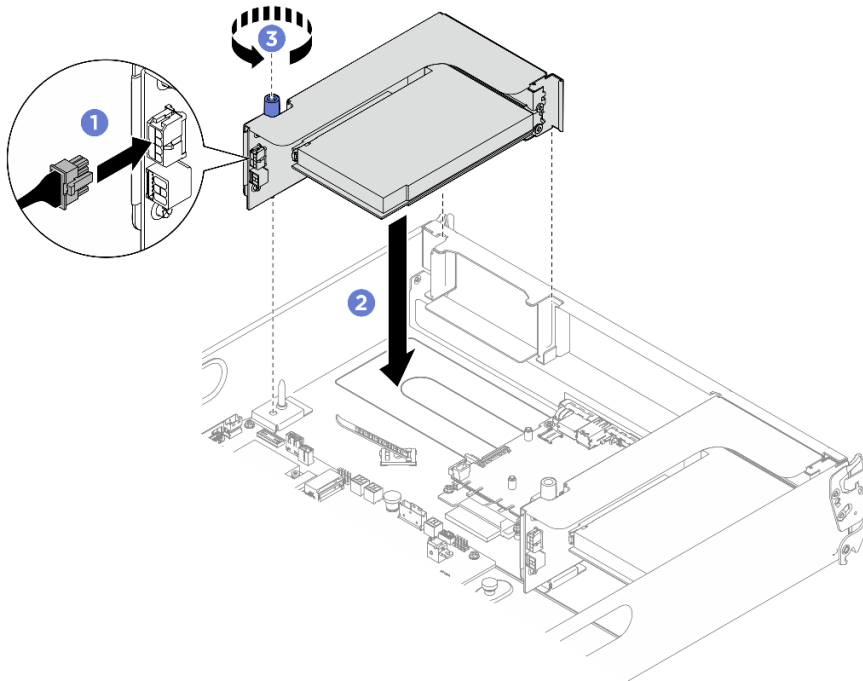


Figure 74. PCIe riser assembly installation

After you finish

1. Reinstall the 2U compute shuttle. See [“Install the 2U compute shuttle” on page 27](#).
2. Complete the parts replacement. See [“Complete the parts replacement” on page 191](#).

Power complex replacement (trained technician only)

Follow instructions in this section to remove and install the power complex.

Important: This task must be operated by trained technicians that are certified by Lenovo Service. Do not attempt to remove or install the part without proper training and qualification.

Remove the power complex

Follow instructions in this section to remove the power complex. The procedure must be executed by a trained technician.

About this task

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See “[Power off the server](#)” on page 7.
- Two people and one lifting device on site that can support up to 400 lb (181 kg) are required to perform this procedure. If you do not already have a lifting device available, Lenovo offers the Genie Lift GL-8 material lift that can be purchased at Data Center Solution Configurator: <https://dcsc.lenovo.com/#/configuration/cto/7D5YCTO1WW?hardwareType=lifttool>. Make sure to include the Foot-release brake and the Load Platform when ordering the Genie Lift GL-8 material lift.

Procedure

Step 1. Make preparation for this task.

- a. Remove all the power supply units. See “[Remove a hot-swap power supply unit](#)” on page 82.
- b. Remove all the front fans. See “[Remove a hot-swap fan \(front and rear\)](#)” on page 38.
- c. Remove all the 2.5-inch hot-swap drives and the drive bay fillers (if any) from the drive bays. See “[Remove a 2.5-inch hot-swap drive](#)” on page 22.
- d. Pull the 8U GPU shuttle out of the chassis, and place it onto the lift platform. See “[Remove the 8U GPU shuttle](#)” on page 28.

Step 2. Disconnect all the cables from the PSU interposer and the power distribution board.

Step 3. Remove the power complex.

- a. ① Unfasten the ten screws marked with **B** on both sides of the 8U GPU shuttle.
- b. ② Lift the power complex out of the 8U GPU shuttle.

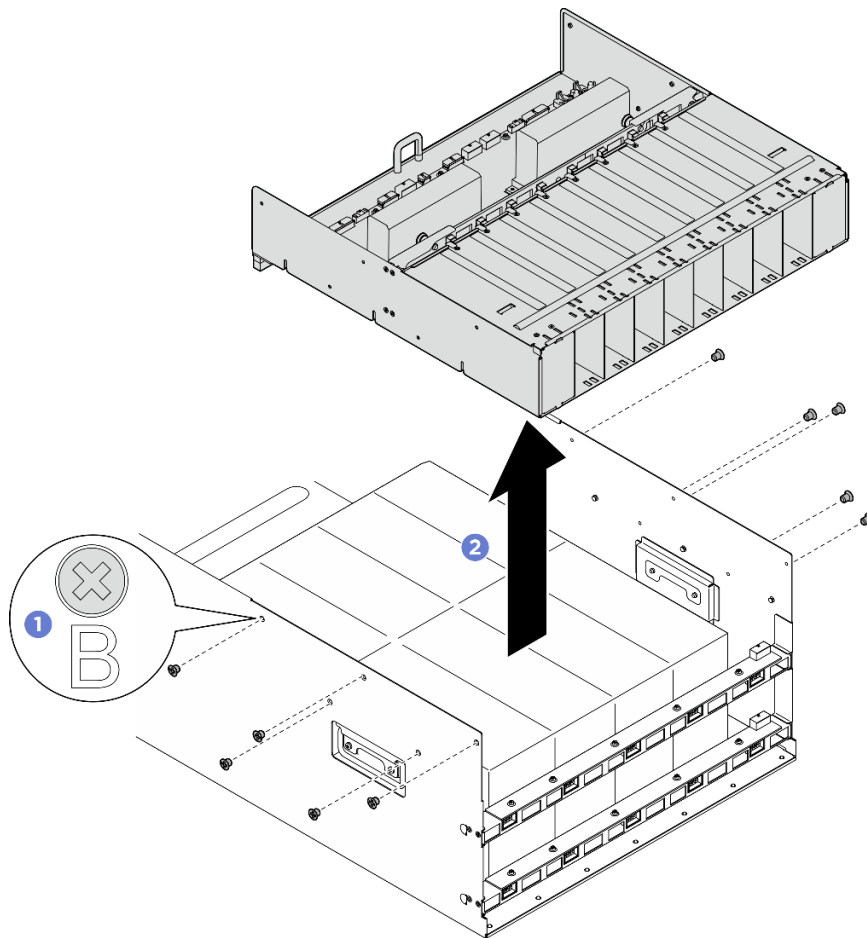


Figure 75. Power complex removal

After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Install the power complex

Follow instructions in this section to install the power complex. The procedure must be executed by a trained technician.

About this task

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Touch the static-protective package that contains the component to any unpainted metal surface on the server; then, remove it from the package and place it on a static-protective surface.
- Two people and one lifting device on site that can support up to 400 lb (181 kg) are required to perform this procedure. If you do not already have a lifting device available, Lenovo offers the Genie Lift GL-8 material lift that can be purchased at Data Center Solution Configurator: <https://dcsc.lenovo.com/#/configuration/cto/7D5YCTO1WW?hardwareType=lifttool>. Make sure to include the Foot-release brake and the Load Platform when ordering the Genie Lift GL-8 material lift.

Procedure

- Step 1. ① Align the power complex with the six guide pins on the 8U GPU shuttle; then, lower the power complex into the 8U GPU shuttle until it is securely engaged.
- Step 2. ② Locate the ten screw holes marked with **B** on both sides of the 8U GPU shuttle; then, fasten the ten screws to secure the power complex.

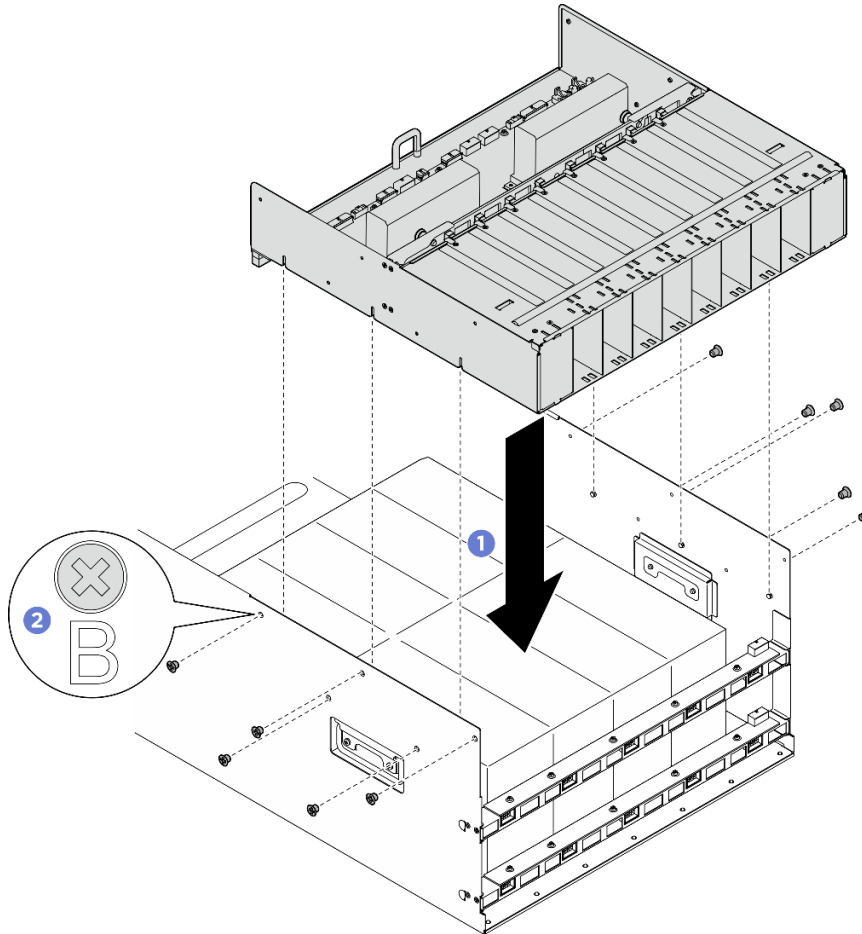


Figure 76. Power complex installation

- Step 3. Connect the cables to the PSU interposer and the power distribution board. See [“2.5-inch drive backplane cable routing” on page 208](#), [“Fan control board cable routing” on page 202](#), [“GPU baseboard cable routing” on page 211](#), [“PCIe switch board cable routing” on page 212](#), [“Power cable routing” on page 205](#), and [“PSU interposer cable routing” on page 207](#) for more information.

After you finish

1. Reinstall the 8U GPU shuttle. See [“Install the 8U GPU shuttle” on page 30](#).
2. Reinstall all the 2.5-inch hot-swap drives or drive bay fillers (if any) into the drive bays. See [“Install a 2.5-inch hot-swap drive” on page 24](#)
3. Reinstall all the front fans. See [“Install a hot-swap fan \(front and rear\)” on page 40](#).
4. Reinstall all the power supply units. See [“Install a hot-swap power supply unit” on page 84](#).
5. Complete the parts replacement. See [“Complete the parts replacement” on page 191](#).

Power distribution board replacement (trained technician only)

Follow instructions in this section to remove and install the power distribution board.

Important: This task must be operated by trained technicians that are certified by Lenovo Service. Do not attempt to remove or install the part without proper training and qualification.

Remove the power distribution board

Follow instructions in this section to remove the power distribution board. The procedure must be executed by a trained technician.

About this task

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See “[Power off the server](#)” on page 7.
- Two people and one lifting device on site that can support up to 400 lb (181 kg) are required to perform this procedure. If you do not already have a lifting device available, Lenovo offers the Genie Lift GL-8 material lift that can be purchased at Data Center Solution Configurator: <https://dcsc.lenovo.com/#/configuration/cto/7D5YCTO1WW?hardwareType=lifttool>. Make sure to include the Foot-release brake and the Load Platform when ordering the Genie Lift GL-8 material lift.

Procedure

Step 1. Make preparation for this task.

- a. Remove all the power supply units. See “[Remove a hot-swap power supply unit](#)” on page 82.
- b. Remove all the front fans. See “[Remove a hot-swap fan \(front and rear\)](#)” on page 38.
- c. Remove all the 2.5-inch hot-swap drives and the drive bay fillers (if any) from the drive bays. See “[Remove a 2.5-inch hot-swap drive](#)” on page 22.
- d. Pull the 8U GPU shuttle out of the chassis, and place it onto the lift platform. See “[Remove the 8U GPU shuttle](#)” on page 28.
- e. Remove the PSU interposer. See “[Remove the PSU interposer](#)” on page 107.

Step 2. Disconnect all the cables from the power distribution board.

Step 3. Remove the two cable retainers from the power distribution board.

- a. Unfasten the two screws to lift the cable retainer out of the power distribution board.
- b. Repeat to remove the other cable retainer.

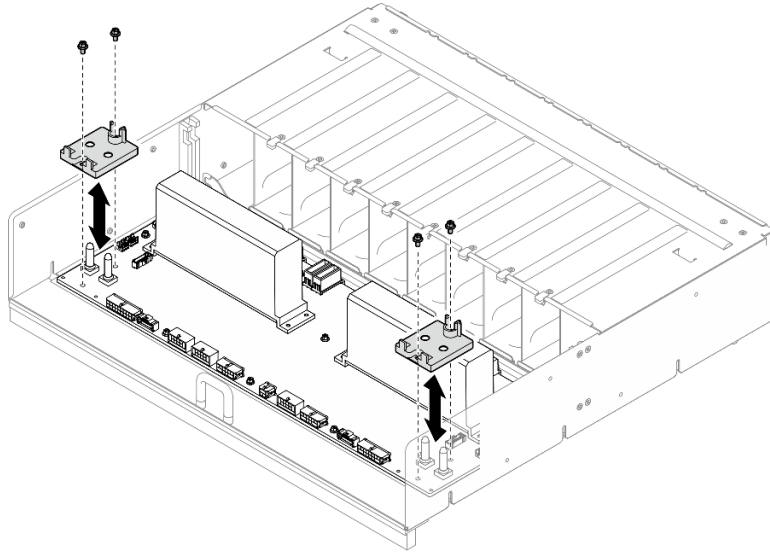


Figure 77. Cable retainer removal

Step 4. Unfasten the ten screws to remove the power distribution board from the PSU cage.

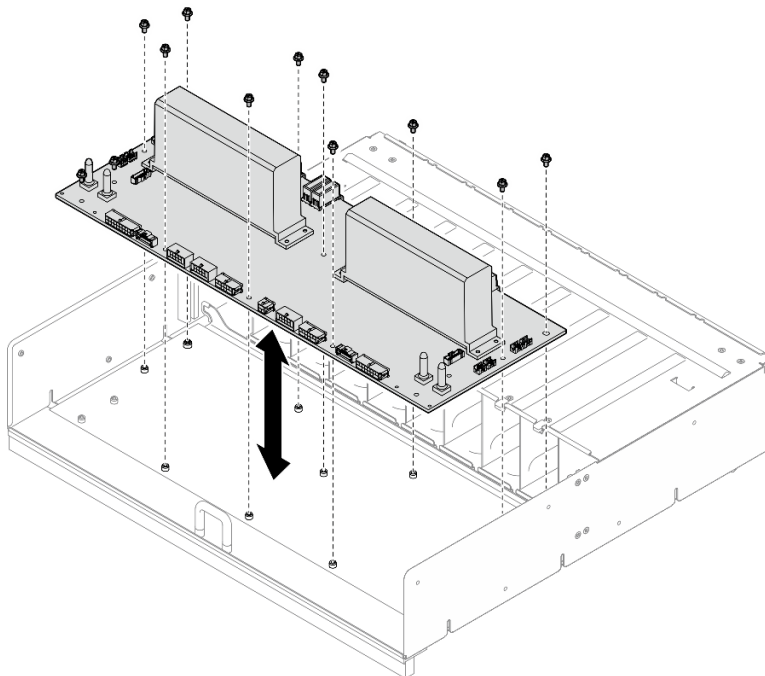


Figure 78. Power distribution board removal

After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Install the power distribution board

Follow instructions in this section to install the power distribution board. The procedure must be executed by a trained technician.

About this task

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Touch the static-protective package that contains the component to any unpainted metal surface on the server; then, remove it from the package and place it on a static-protective surface.
- Two people and one lifting device on site that can support up to 400 lb (181 kg) are required to perform this procedure. If you do not already have a lifting device available, Lenovo offers the Genie Lift GL-8 material lift that can be purchased at Data Center Solution Configurator: <https://dcsc.lenovo.com/#/configuration/cto/7D5YCTO1WW?hardwareType=lifttool>. Make sure to include the Foot-release brake and the Load Platform when ordering the Genie Lift GL-8 material lift.

Firmware and driver download: You might need to update the firmware or driver after replacing a component.

- Go to <https://datacentersupport.lenovo.com/tw/en/products/servers/thinksystem/sr680av3/7dhe/downloads/driver-list/> to see the latest firmware and driver updates for your server.
- Go to “Update the firmware” in *User Guide* or *System Configuration Guide* for more information on firmware updating tools.

Procedure

- Step 1. Align the power distribution board with the ten standoffs on the PSU cage; then, lower the power distribution board into the PSU cage.
- Step 2. Fasten the ten screws to secure the power distribution board.

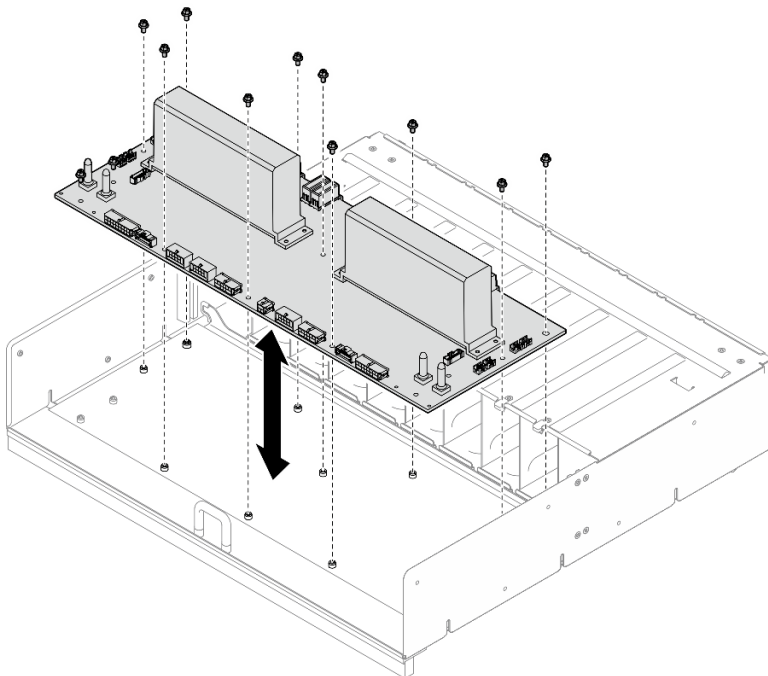


Figure 79. Power distribution board installation

- Step 3. Install the two cable retainers to the power distribution board.

- a. Align the cable retainer with the screw holes on the power distribution board; then, place the cable retainer onto the power distribution board.
- b. Fasten the two screws to secure the cable retainer.
- c. Repeat to install the other cable retainer.

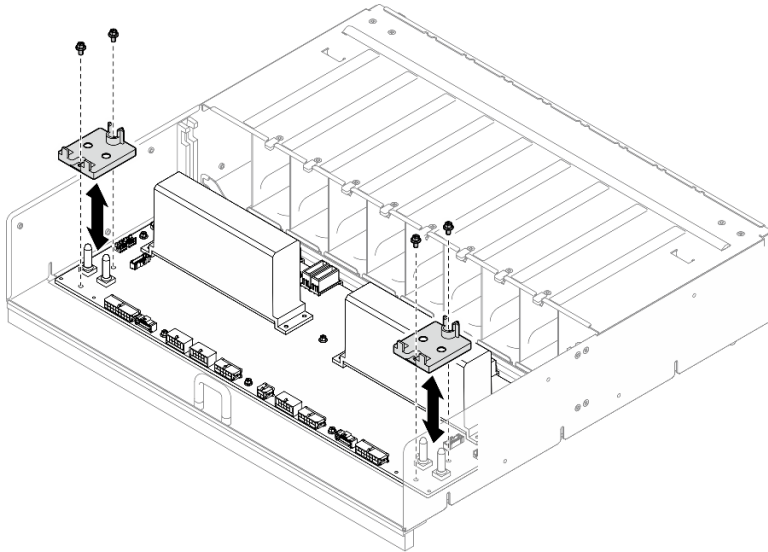


Figure 80. Cable retainer installation

Step 4. Connect the cables to the power distribution board. See [“2.5-inch drive backplane cable routing” on page 208](#), [“Fan control board cable routing” on page 202](#), [“GPU baseboard cable routing” on page 211](#), [“PCIe switch board cable routing” on page 212](#), and [“PSU interposer cable routing” on page 207](#) for more information.

After you finish

1. Reinstall the PSU interposer. See [“Install the PSU interposer” on page 109](#).
2. Reinstall the 8U GPU shuttle. See [“Install the 8U GPU shuttle” on page 30](#).
3. Reinstall all the 2.5-inch hot-swap drives or drive bay fillers (if any) into the drive bays. See [“Install a 2.5-inch hot-swap drive” on page 24](#)
4. Reinstall all the front fans. See [“Install a hot-swap fan \(front and rear\)” on page 40](#).
5. Reinstall all the power supply units. See [“Install a hot-swap power supply unit” on page 84](#).
6. Complete the parts replacement. See [“Complete the parts replacement” on page 191](#).

Power supply unit replacement

Follow instructions in this section to remove or install a power supply unit.

Remove a hot-swap power supply unit

Follow instructions in this section to remove a hot-swap power supply unit.

About this task

CAUTION:



High touch current. Connect to earth before connecting to supply.

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Make sure you have a power supply unit filler available if some power supply bays will be left empty after the removal.
- The following illustration shows the power supply bay numbering:

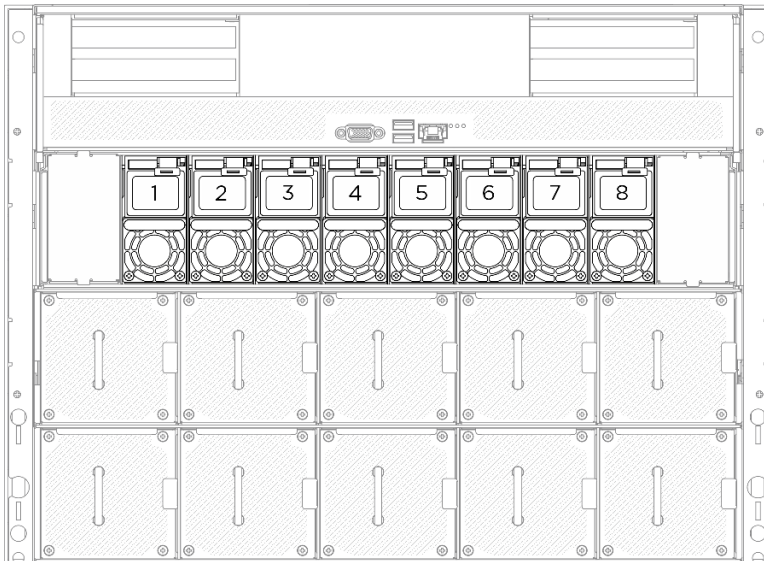


Figure 81. Power supply bay numbering

Procedure

- Step 1. ① Press and hold the orange release tab.
- Step 2. ② Grasp the handle, and pull the power supply unit out of the server.

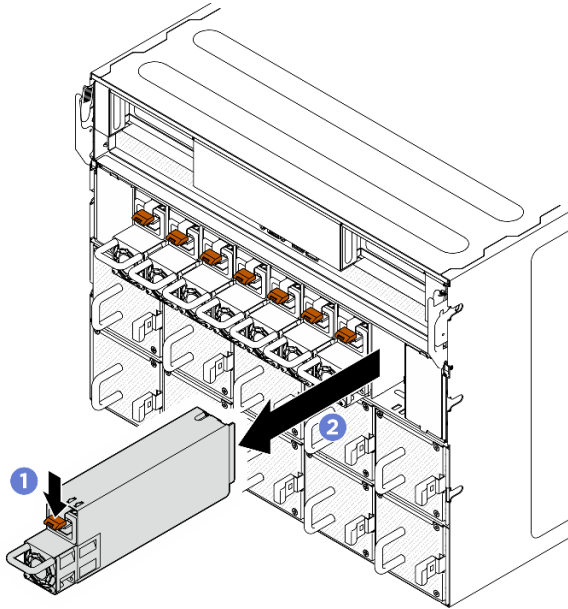


Figure 82. Power supply unit removal

After you finish

1. Install a power supply unit as soon as possible. See [“Install a hot-swap power supply unit” on page 84](#).

Important: During normal operation, each power supply bay must contain a power supply unit for proper cooling.

2. If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Install a hot-swap power supply unit

Follow instructions in this section to install a hot-swap power supply unit.

About this task

CAUTION:



High touch current. Connect to earth before connecting to supply.

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Touch the static-protective package that contains the component to any unpainted metal surface on the server; then, remove it from the package and place it on a static-protective surface.
- The following illustration shows the power supply bay numbering:

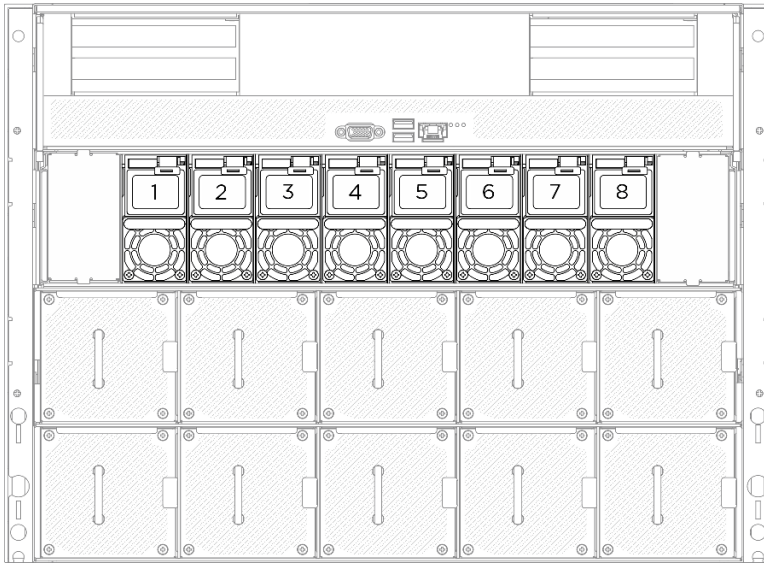


Figure 83. Power supply bay numbering

Firmware and driver download: You might need to update the firmware or driver after replacing a component.

- Go to <https://datacentersupport.lenovo.com/tw/en/products/servers/thinksystem/sr680av3/7dhe/downloads/driver-list/> to see the latest firmware and driver updates for your server.
- Go to “Update the firmware” in *User Guide* or *System Configuration Guide* for more information on firmware updating tools.

Procedure

Step 1. Grasp the handle and slide the power supply unit into the power supply bay until it clicks into place.

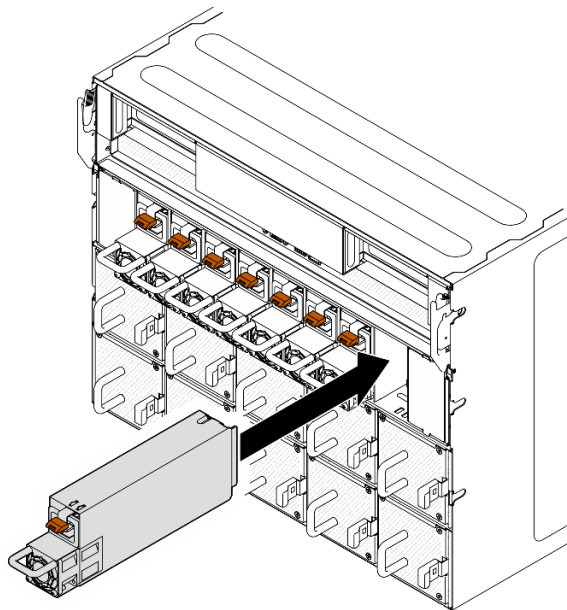


Figure 84. Power supply unit installation

After you finish

1. Pull the handle to see if the power supply unit is properly installed. If it slides out, reinstall it.
2. Connect the power cord to the power supply unit, and make sure it's properly connected to the power.
3. Complete the parts replacement. See [“Complete the parts replacement” on page 191](#).
4. If the server is turned off, turn on the server. Ensure that both the power input LED and the power output LED on the power supply are lit, indicating that the power supply is operating properly.

Processor air baffle replacement (trained technician only)

Follow instructions in this section to remove and install the processor air baffle.

Important: This task must be operated by trained technicians that are certified by Lenovo Service. Do not attempt to remove or install the part without proper training and qualification.

Remove the processor air baffle

Follow instructions in this section to remove the processor air baffle. The procedure must be executed by a trained technician.

About this task

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 7](#).
- If you intend to install memory modules in the 2U compute shuttle, you must first remove the processor air baffle from the server.

Procedure

- Step 1. Remove the 2U compute shuttle. See [“Remove the 2U compute shuttle” on page 26](#).
- Step 2. Grasp the processor air baffle and carefully lift it out of the 2U compute shuttle.

Attention:

- For proper cooling and airflow, reinstall the processor air baffle before you turn on the server. Operating the server with the processor air baffle removed might damage server components.
- Service label is located on the processor air baffle.

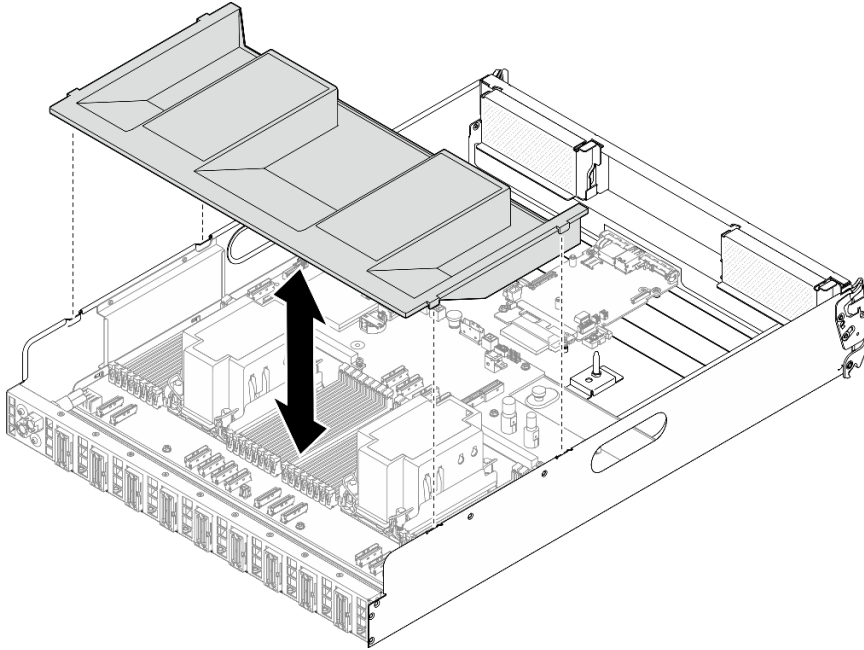


Figure 85. Processor air baffle removal

After you finish

1. If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Install the processor air baffle

Follow instructions in this section to install the processor air baffle. The procedure must be executed by a trained technician.

About this task**Attention:**

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Touch the static-protective package that contains the component to any unpainted metal surface on the server; then, remove it from the package and place it on a static-protective surface.

Notes:

- If you are installing a new processor air baffle, attach the service label to the surface of the new processor air baffle if necessary.
- Close the retaining clip on each end of the memory module connector before installing the processor air baffle for proper cooling.

Procedure

Step 1. Align the processor air baffle tabs with the slots on both sides of the 2U compute shuttle; then, lower the processor air baffle into the 2U compute shuttle until it is securely seated.

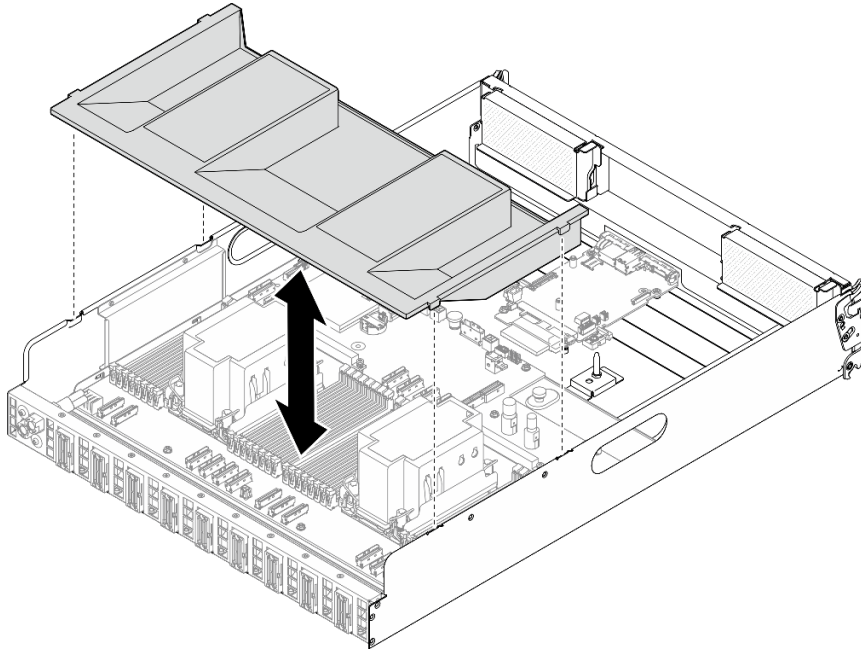


Figure 86. Processor air baffle installation

Step 2. Slightly press the processor air baffle down until it is securely seated.

After you finish

1. Reinstall the 2U compute shuttle. See [“Install the 2U compute shuttle” on page 27](#).
2. Complete the parts replacement. See [“Complete the parts replacement” on page 191](#).

System I/O board replacement (trained technician only)

Follow the instructions in this section to install or remove the system I/O board.

Important: This task must be operated by trained technicians that are certified by Lenovo Service. Do not attempt to remove or install the part without proper training and qualification.

Remove the system I/O board

Follow instructions in this section to remove the system I/O board. The procedure must be executed by a trained technician.

About this task

Important: This task must be operated by trained technicians that are certified by Lenovo Service. Do not attempt to remove or install the part without proper training and qualification.

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.

- Power off the server and peripheral devices and disconnect the power cords and all external cables. See “Power off the server” on page 7.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.
- After replacing the system I/O board, update the firmware to the specific version supported by the server. Make sure that you have the required firmware or a copy of the pre-existing firmware before you proceed.

Procedure

Step 1. Make preparations for this task.

- Perform OneCLI commands to back up the UEFI settings. See https://pubs.lenovo.com/lxce-onecli/onecli_r_save_command.
- Perform both OneCLI commands and XCC actions to back up the XCC settings. See https://pubs.lenovo.com/lxce-onecli/onecli_r_save_command and https://pubs.lenovo.com/xcc2/NN1ia_c_backupthexcc.html.
- Remove the 2U compute shuttle. See “Remove the 2U compute shuttle” on page 26.
- Remove the processor air baffle. See “Remove the processor air baffle” on page 86.

Step 2. Remove the system I/O board.

- Loosen the four screws securing both the system I/O board and the cable.
- Slide the system I/O board towards the system board until the notches are aligned to the retainer as illustrated. Lift the system I/O board out of the chassis.
- Disconnect the cable from the system I/O board.

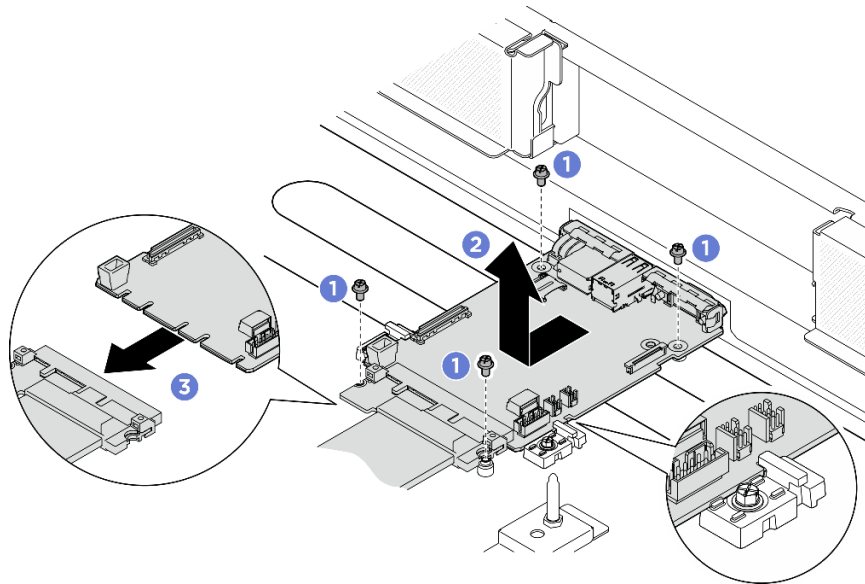


Figure 87. Removing the system I/O board

After you finish

- Install a replacement unit. See “Install the system I/O board” on page 90
- Reinstall the processor air baffle. See “Install the processor air baffle” on page 87.
- Reinstall the 2U compute shuttle. See “Install the 2U compute shuttle” on page 27.

4. Complete the parts replacement. See [“Complete the parts replacement” on page 191](#).

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Install the system I/O board

Follow instructions in this section to install the system I/O board. The procedure must be executed by a trained technician.

About this task

Important:

- This task must be operated by trained technicians that are certified by Lenovo Service. Do not attempt to remove or install the part without proper training and qualification.
- (Lenovo trained technicians only) After replacing the Firmware and RoT Security Module, update the UEFI, XCC and LXPM firmware to the specific version supported by the server. For detailed information on how to update the firmware, see <https://glosse4lenovo.lenovo.com/wiki/glosse4lenovo/view/How%20To/System%20related/How%20to%20do%20RoT%20Module%20FW%20update%20on%20ThinkSystem%20V3%20machines/> (Lenovo trained technicians only).

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Touch the static-protective package that contains the component to any unpainted metal surface on the server; then, remove it from the package and place it on a static-protective surface.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Firmware and driver download: You might need to update the firmware or driver after replacing a component.

- Go to <https://datacentersupport.lenovo.com/tw/en/products/servers/thinksystem/sr680av3/7dhe/downloads/driver-list/> to see the latest firmware and driver updates for your server.
- Go to “Update the firmware” in *User Guide* or *System Configuration Guide* for more information on firmware updating tools.

Procedure

Step 1. Make preparations for this task.

- a. Remove the 2U compute shuttle. See [“Remove the 2U compute shuttle” on page 26](#).
- b. Remove the processor air baffle. See [“Remove the processor air baffle” on page 86](#).

Step 2. Install the system I/O board.

- a. ① Connect the cable to the system I/O board.
- b. ② Align the notches on the system I/O board with the retainers as illustrated. Align the connectors on the system I/O board with the slots on the compute shuttle; then, gently slide and insert the system I/O board into place.
- c. ③ Tighten the four screws to secure the system I/O board and the cable.

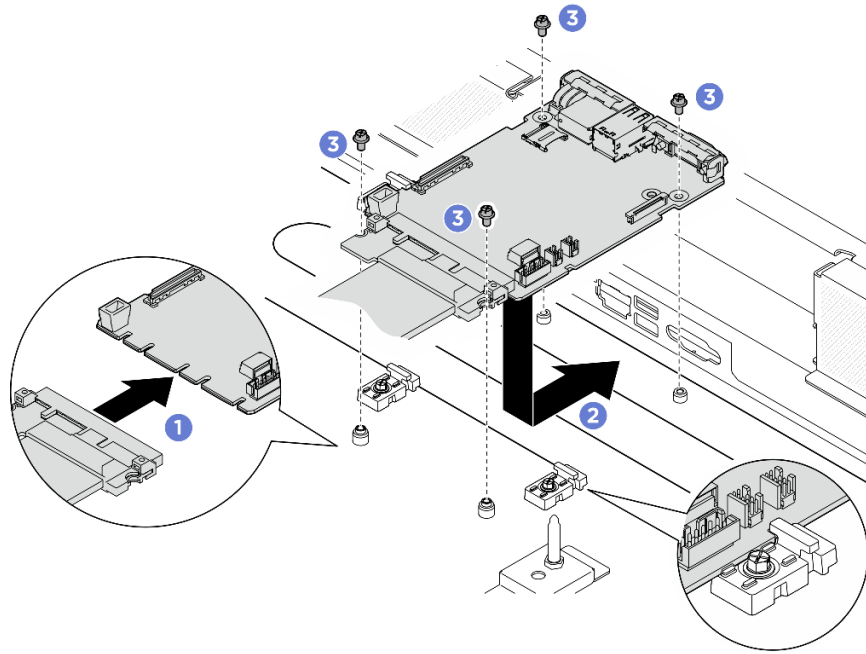


Figure 88. Installing system I/O board

After you finish

1. Update the UEFI, XCC and LXPM firmware to the specific version supported by the server. See <https://glosse4lenovo.lenovo.com/wiki/glosse4lenovo/view/How%20To/System%20related/How%20to%20do%20RoT%20Module%20FW%20update%20on%20ThinkSystem%20V3%20machines/> (Lenovo trained technicians only).
2. Perform OneCLI commands to restore the UEFI settings. See https://pubs.lenovo.com/lxce-onecli/onecli_r_restore_command.
3. Perform both OneCLI commands and XCC actions to restore the XCC settings. See https://pubs.lenovo.com/lxce-onecli/onecli_r_restore_command and https://pubs.lenovo.com/xcc2/NN1ia_c_restorethexcc.html.
4. Reinstall the processor air baffle. See “Install the processor air baffle” on page 87.
5. Reinstall the 2U compute shuttle. See “Install the 2U compute shuttle” on page 27.

Complete the parts replacement. See “Complete the parts replacement” on page 191.

Processor and heat sink replacement (trained technician only)

Follow instructions in this section to remove and install a processor and a heat sink.

Important:

- This task must be operated by trained technicians that are certified by Lenovo Service. Do not attempt to remove or install the part without proper training and qualification.
- Before replacing a processor, check the current PSB fuse policy. See *Service process before replacement* at [Service process for updating PSB fuse state](#).
- After replacing a processor, ensure that the processor fuse status is expected without unexpected XCC event logs. See *Service process after replacing a processor* at [Service process for updating PSB fuse state](#).

Attention:

- Before reusing a processor or heat sink, make sure you use Lenovo proven alcohol cleaning pad and thermal grease.
- Each processor socket must always contain a cover or a processor. When replacing a processor, protect the empty processor socket with a cover.
- Do not touch the processor socket or processor contacts. Processor-socket contacts are very fragile and easily damaged. Contaminants on the processor contacts, such as oil from your skin, can cause connection failures.
- Do not allow the thermal grease on the processor or heat sink to come in contact with anything. Contact with any surface can compromise the thermal grease, rendering it ineffective. Thermal grease can damage components, such as the electrical connectors in the processor socket.

The following illustration shows the components of the processor and heat sink.

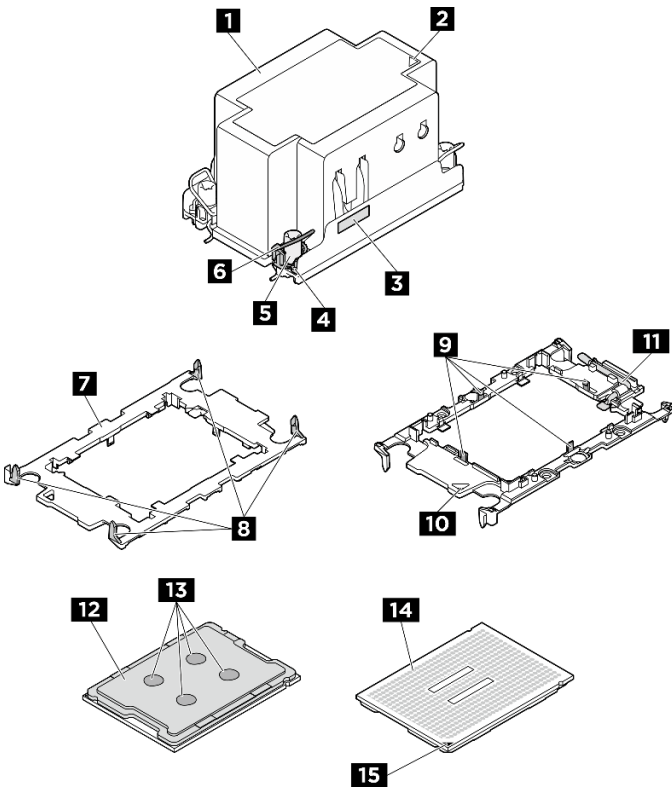


Figure 89. PHM components

1 Heat sink	9 Clips to secure processor in carrier
2 Heat sink triangular mark	10 Processor ejector handle
3 Processor identification label	11 Carrier triangular mark
4 Nut and wire bail retainer	12 Processor heat spreader
5 Torx T30 nut	13 Thermal grease
6 Anti-tilt wire bail	14 Processor contacts
7 Processor carrier	15 Processor triangular mark
8 Clips to secure carrier to heat sink	

Remove a processor and heat sink

This task has instructions for removing an assembled processor and heat sink, known as a processor-heat-sink module (PHM). This task requires a Torx T30 driver. This procedure must be executed by a trained technician.

About this task

S002



CAUTION:

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

S012



CAUTION:

Hot surface nearby.

S011



CAUTION:

Sharp edges, corners, or joints nearby.

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 7](#).
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.
- Each processor socket must always contain a cover or a PHM. When removing or installing a PHM, protect empty processor sockets with a cover.
- Do not touch the processor socket or processor contacts. Processor-socket contacts are very fragile and easily damaged. Contaminants on the processor contacts, such as oil from your skin, can cause connection failures.

- Do not allow the thermal grease on the processor or heat sink to come in contact with anything. Contact with any surface can compromise the thermal grease, rendering it ineffective. Thermal grease can damage components, such as the electrical connectors in the processor socket.
- Remove and install only one PHM at a time. If the system supports multiple processors, install the PHMs starting with the first processor socket.

Note: The heat sink, processor, and processor carrier for your system might be different from those shown in the illustrations.

The following illustration shows the components of the PHM.

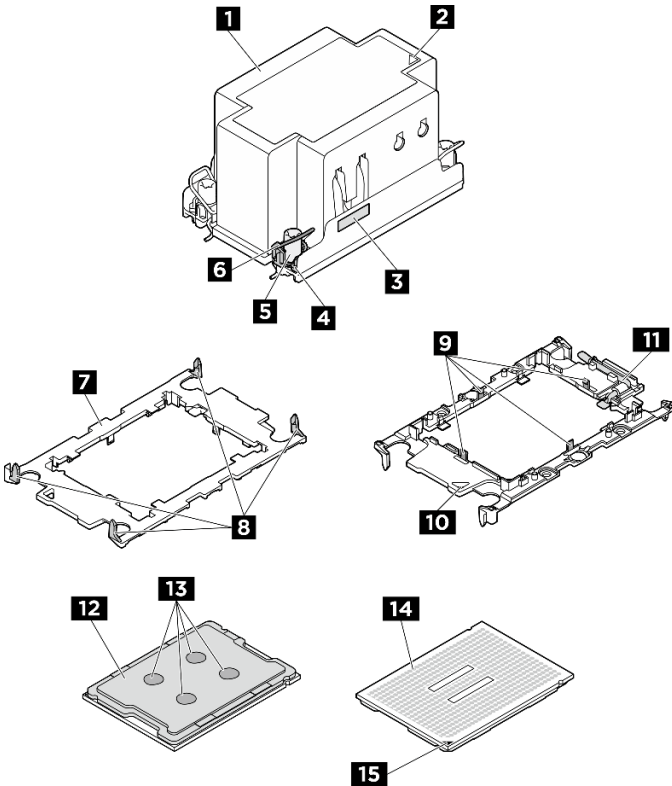


Figure 90. PHM components

1 Heat sink	9 Clips to secure processor in carrier
2 Heat sink triangular mark	10 Processor ejector handle
3 Processor identification label	11 Carrier triangular mark
4 Nut and wire bail retainer	12 Processor heat spreader
5 Torx T30 nut	13 Thermal grease
6 Anti-tilt wire bail	14 Processor contacts
7 Processor carrier	15 Processor triangular mark
8 Clips to secure carrier to heat sink	

Procedure

Step 1. Make preparation for this task.

- a. Remove the 2U compute shuttle. See [“Remove the 2U compute shuttle”](#) on page 26.
- b. Remove the processor air baffle. See [“Remove the processor air baffle”](#) on page 86.

Step 2. Remove the PHM from the system board assembly.

Notes:

- Do not touch the contacts on the bottom of the processor.
 - Keep the processor socket clean from any object to prevent possible damages.
- a. ① Fully loosen the Torx T30 nuts on the PHM **in the removal sequence shown** on the heat-sink label.
 - b. ② Rotate the anti-tilt wire bails inward.
 - c. ③ Carefully lift the PHM from the processor socket. If the PHM cannot be fully lifted out of the socket, further loosen the Torx T30 nuts and try lifting the PHM again.

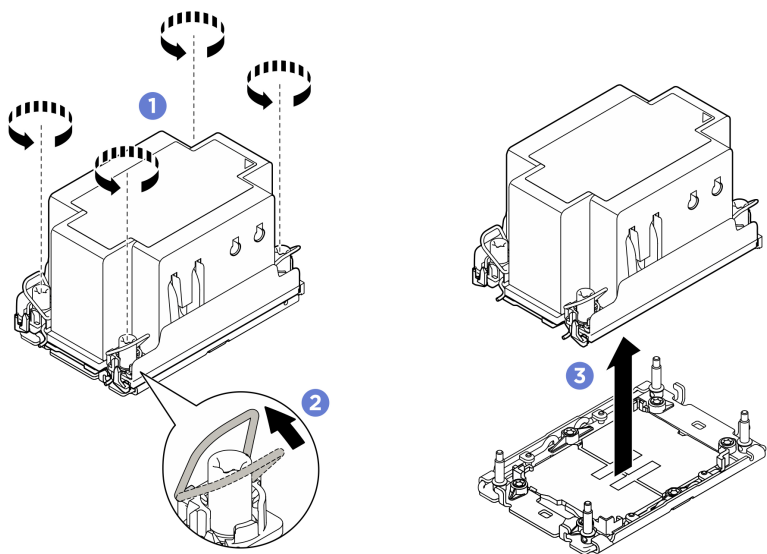


Figure 91. PHM removal

After you finish

1. Each processor socket must always contain a cover or a PHM. Protect empty processor sockets with a cover or install a new PHM.
2. If you are removing the PHM as part of a system board assembly replacement, set the PHM aside.
3. If you are replacing the PHM with a new one. See [“Install a processor and heat sink”](#) on page 97.
4. If you are reusing the processor or heat sink, separate the processor from its retainer. See [“Separate the processor from carrier and heat sink”](#) on page 95.
5. If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Separate the processor from carrier and heat sink

This task has instructions for separating a processor and its carrier from an assembled processor and heat sink, known as a processor-heat-sink module (PHM). This procedure must be executed by a trained technician.

About this task

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See “[Power off the server](#)” on page 7.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.
- Do not touch the processor contacts. Contaminants on the processor contacts, such as oil from your skin, can cause connection failures.
- Do not allow the thermal grease on the processor or heat sink to come in contact with anything. Contact with any surface can compromise the thermal grease, rendering it ineffective. Thermal grease can damage components, such as the electrical connectors in the processor socket.

Note: The heat sink, processor, and processor carrier for your system might be different from those shown in the illustrations.

Procedure

Step 1. Separate the processor from the heat sink and carrier.

- 1 Lift the handle to release the processor from the carrier.
- 2 Hold the processor by its edges; then, lift the processor from the heat sink and carrier.
- 3 Without putting the processor down, wipe the thermal grease from the top of the processor with an alcohol cleaning pad; then, place the processor on a static protective surface with the processor-contact side up.

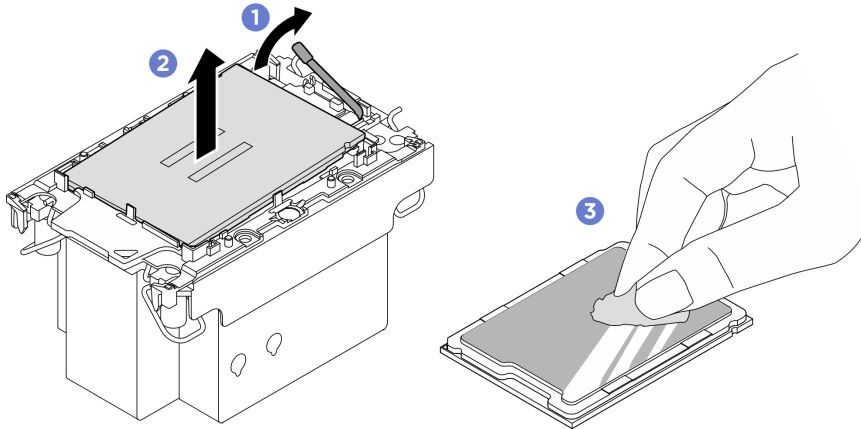


Figure 92. Separating a processor from the heat sink and carrier

Note: Do not touch the contacts on the processor.

Step 2. Separate the processor carrier from the heat sink.

- 1 Release the retaining clips from the heat sink.
- 2 Lift the carrier from the heat sink.
- 3 Wipe the thermal grease from the bottom of the heat sink with an alcohol cleaning pad.

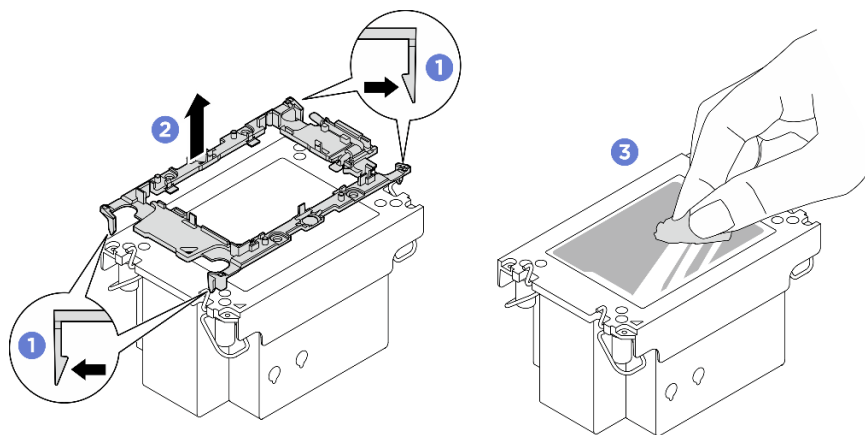


Figure 93. Separating a processor carrier the from heat sink

Note: The processor carrier will be discarded and replaced with a new one.

After you finish

1. Install the PHM. See [“Install a processor and heat sink” on page 97](#).
2. If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Demo video

Install a processor and heat sink

This task has instructions for installing an assembled processor and heat sink, known as a processor-heat-sink module (PHM). This task requires a Torx T30 driver. This procedure must be executed by a trained technician.

About this task

S012



CAUTION:
Hot surface nearby.

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 7](#).
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.
- Each processor socket must always contain a cover or a PHM. When removing or installing a PHM, protect empty processor sockets with a cover.

- Do not touch the processor socket or processor contacts. Processor-socket contacts are very fragile and easily damaged. Contaminants on the processor contacts, such as oil from your skin, can cause connection failures.
- Do not allow the thermal grease on the processor or heat sink to come in contact with anything. Contact with any surface can compromise the thermal grease, rendering it ineffective. Thermal grease can damage components, such as the electrical connectors in the processor socket.
- Remove and install only one PHM at a time. If the system supports multiple processors, install the PHMs starting with the first processor socket.

Notes:

- The heat sink, processor, and processor carrier for your system might be different from those shown in the illustrations.
- PHMs are keyed for the socket where they can be installed and for their orientation in the socket.
- See <https://serverproven.lenovo.com> for a list of processors supported for your server. All processors must have the same speed, number of cores, and frequency.
- Before you install a new PHM or replacement processor, update your system firmware to the latest level. See “Update the firmware” in *User Guide* and *System Configuration Guide*.

The following illustration shows the components of the PHM.

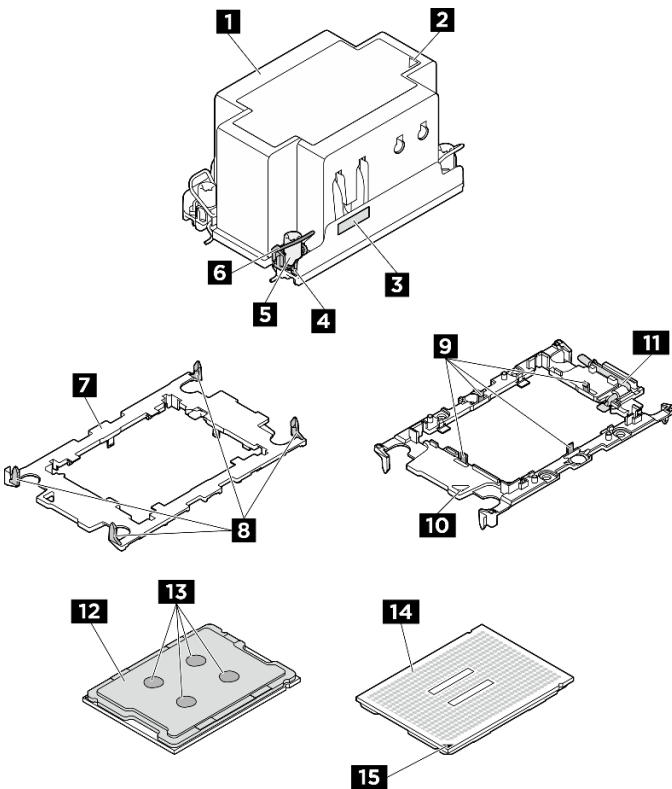


Figure 94. PHM components

1 Heat sink	9 Clips to secure processor in carrier
2 Heat sink triangular mark	10 Processor ejector handle
3 Processor identification label	11 Carrier triangular mark

4 Nut and wire bail retainer	12 Processor heat spreader
5 Torx T30 nut	13 Thermal grease
6 Anti-tilt wire bail	14 Processor contacts
7 Processor carrier	15 Processor triangular mark
8 Clips to secure carrier to heat sink	

Firmware and driver download: You might need to update the firmware or driver after replacing a component.

- Go to <https://datacentersupport.lenovo.com/tw/en/products/servers/thinksystem/sr680av3/7dhe/downloads/driver-list/> to see the latest firmware and driver updates for your server.
- Go to “Update the firmware” in *User Guide* or *System Configuration Guide* for more information on firmware updating tools.

Procedure

Step 1. Record the processor identification label.

- If you are replacing a processor and reusing the heat sink, remove the processor identification label from the heat sink and replace it with the new label that comes with the replacement processor.
- If you are replacing a heat sink and reusing the processor, remove the processor identification label from the old heat sink and place it on the new heat sink in the same location.

Note: If you are unable to remove the label and place it on the new heat sink, or if the label is damaged during transfer, write the processor serial number from the processor identification label on the new heat sink in the same location as the label would be placed using a permanent marker.

Step 2. Install the processor in the new carrier.

Notes:

- If you are replacing the processor and reusing the heat sink, use the new carrier that comes with the new processor.
- If you are replacing the heat sink and reusing the processor, and if the new heat sink comes with two processor carriers, make sure to use the same type of carrier as the one you discarded.
 1. **1** Make sure the handle on the carrier is in the closed position.
 2. **2** Align the processor on the new carrier so that the triangular marks align; then, insert the marked end of the processor into the carrier.
 3. **3** Hold the inserted end of the processor in place; then, pivot the unmarked end of the carrier down and away from the processor.
 4. **4** Press the processor and secure the unmarked end under the clip on the carrier.
 5. **5** Carefully pivot the sides of the carrier down and away from the processor.
 6. **6** Press the processor and secure the sides under the clips on the carrier.

Note: To prevent the processor from falling out of the carrier, keep the processor-contact side up and hold the processor-carrier assembly by the sides of the carrier.

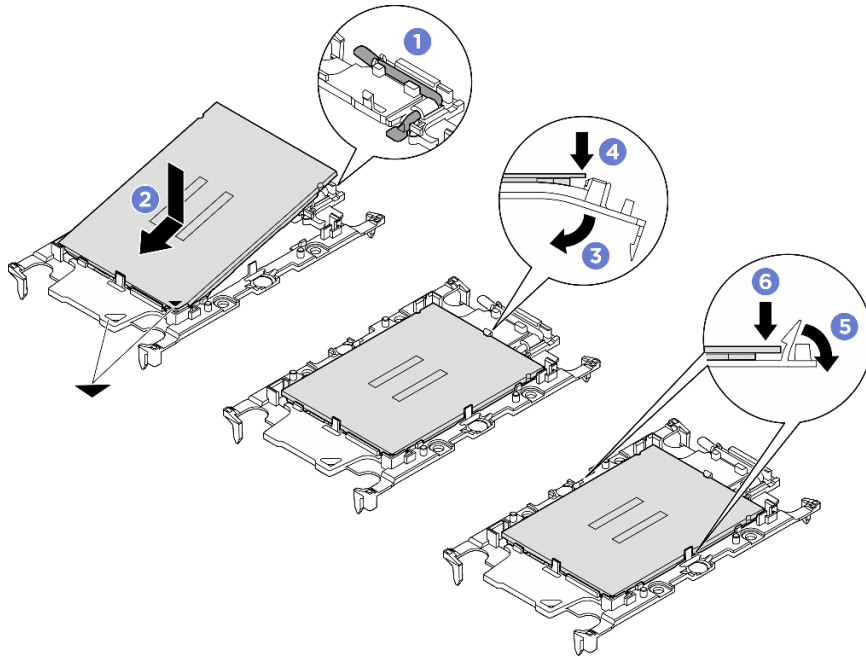


Figure 95. Processor carrier installation

Step 3. Apply thermal grease.

- If you are replacing the heat sink and reusing the processor, a new heat sink comes with thermal grease and you do not need to apply new thermal grease.

Note: To ensure the best performance, check the manufacturing date on the new heat sink and make sure it does not exceed two years. Otherwise, wipe off the existing thermal grease and apply new thermal grease.

- If you are replacing the processor and reusing the heat sink, do the following steps to apply thermal grease:
 1. If there is any old thermal grease on the heat sink, wipe off the thermal grease with an alcohol cleaning pad.
 2. Carefully place the processor and carrier in the shipping tray with the processor-contact side down. Make sure the triangular mark on the carrier is oriented in the shipping tray as shown below.
 3. Apply the thermal grease on the top of the processor with syringe by forming four uniformly spaced dots, while each dot consists of about 0.1 ml of thermal grease.

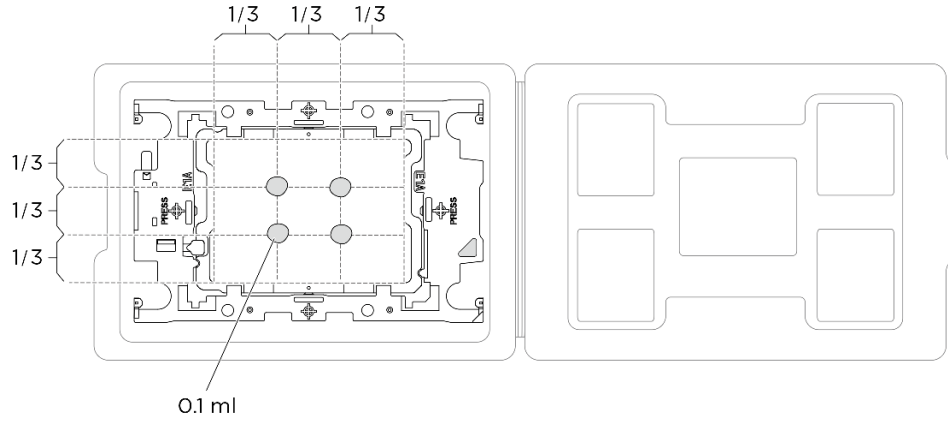


Figure 96. Thermal grease application with processor in shipping tray

Step 4. Assemble the processor and heat sink.

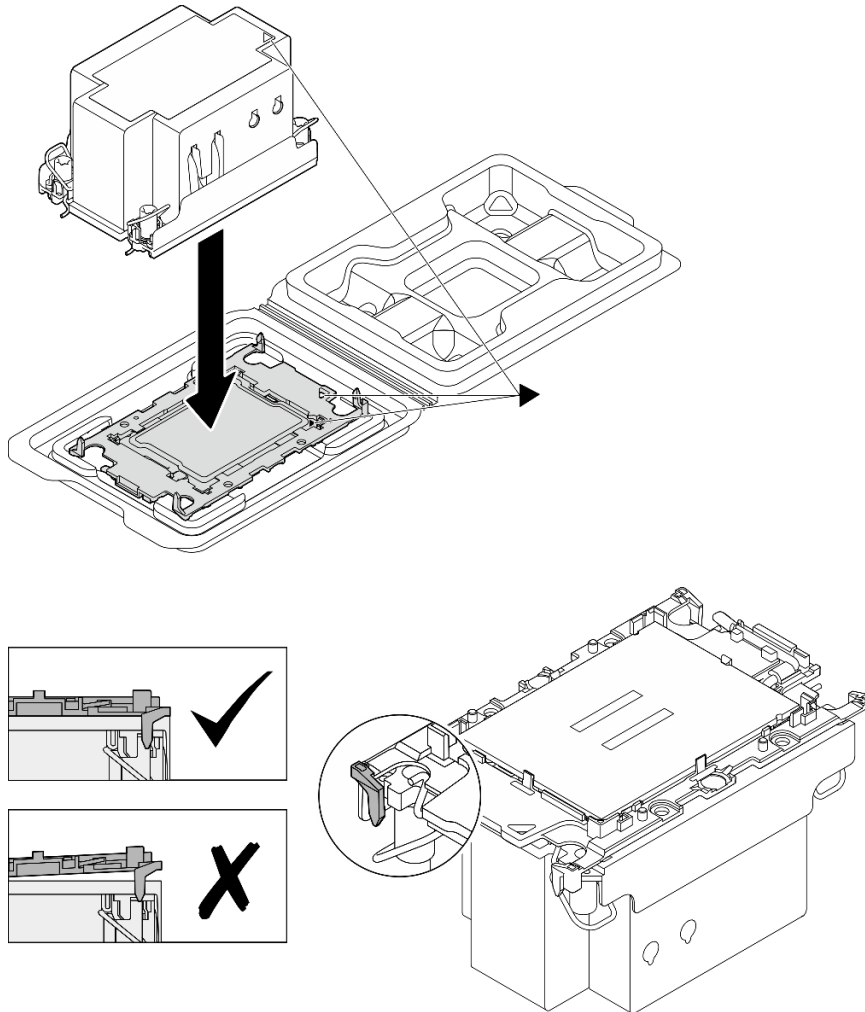


Figure 97. Assembling the PHM with processor in shipping tray

- a. Align the triangular mark on the heat sink label with the triangular mark on the processor carrier and processor.
- b. Install the heat sink onto the processor-carrier.
- c. Press the carrier into place until the clips at all four corners engage. Visually inspect to make sure that there is no gap between the processor carrier and the heat sink.

Step 5. Install the processor-heat-sink module into the processor socket.

Notes:

- Do not touch the contacts on the bottom of the processor.
 - Keep the processor socket clean from any object to prevent possible damages.
- a. ① Rotate the anti-tilt wire bails inward.
 - b. ② Align the triangular mark and four Torx T30 nuts on the PHM with the triangular mark and threaded posts of the processor socket; then, insert the PHM into the processor socket.
 - c. ③ Rotate the anti-tilt wire bails outward until they engage with the hooks in the socket.
 - d. ④ Fully tighten the Torx T30 nuts *in the installation sequence shown* on the heat-sink label. Tighten the screws until they stop; then, visually inspect to make sure that there is no gap between the screw shoulder beneath the heat sink and the processor socket. (For reference, the torque required for the fasteners to fully tighten is 0.9 newton-meters, 8 inch-pounds).

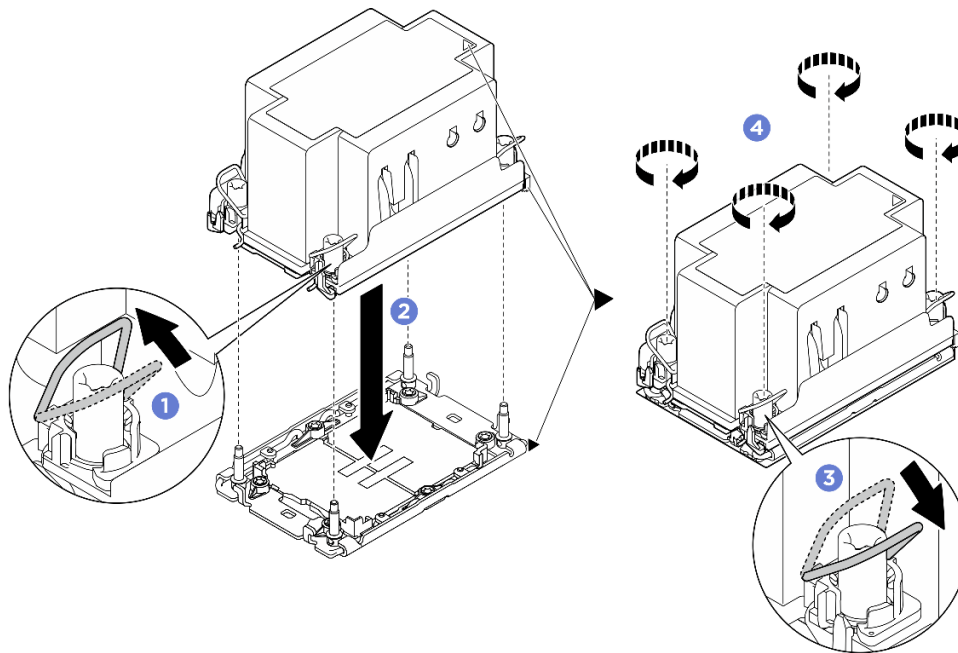


Figure 98. PHM installation

After you finish

1. Reinstall the processor air baffle. See [“Install the processor air baffle” on page 87.](#)
2. Reinstall the 2U compute shuttle. See [“Install the 2U compute shuttle” on page 27.](#)
3. Complete the parts replacement. See [“Complete the parts replacement” on page 191.](#)

Demo video

PSU cage replacement (trained technician only)

Follow instructions in this section to remove and install the PSU cage.

Important: This task must be operated by trained technicians that are certified by Lenovo Service. Do not attempt to remove or install the part without proper training and qualification.

Remove the PSU cage

Follow instructions in this section to remove the PSU cage. The procedure must be executed by a trained technician.

About this task

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See “[Power off the server](#)” on page 7.
- Two people and one lifting device on site that can support up to 400 lb (181 kg) are required to perform this procedure. If you do not already have a lifting device available, Lenovo offers the Genie Lift GL-8 material lift that can be purchased at Data Center Solution Configurator: <https://dcsc.lenovo.com/#/configuration/cto/7D5YCTO1WW?hardwareType=lifttool>. Make sure to include the Foot-release brake and the Load Platform when ordering the Genie Lift GL-8 material lift.

Procedure

Step 1. Make preparation for this task.

- a. Remove all the power supply units. See “[Remove a hot-swap power supply unit](#)” on page 82.
- b. Remove all the front fans. See “[Remove a hot-swap fan \(front and rear\)](#)” on page 38.
- c. Remove all the 2.5-inch hot-swap drives and the drive bay fillers (if any) from the drive bays. See “[Remove a 2.5-inch hot-swap drive](#)” on page 22.
- d. Pull the 8U GPU shuttle out of the chassis, and place it onto the lift platform. See “[Remove the 8U GPU shuttle](#)” on page 28.
- e. Remove the power complex. See “[Remove the power complex](#)” on page 76.

Step 2. Remove the PSU interposer.

- a. ① Pull out the two plungers.
- b. ② Rotate the two release latches to disengage the PSU interposer from the power distribution board.
- c. ③ Grasp the PSU interposer by its edges and carefully pull it out of the power complex.

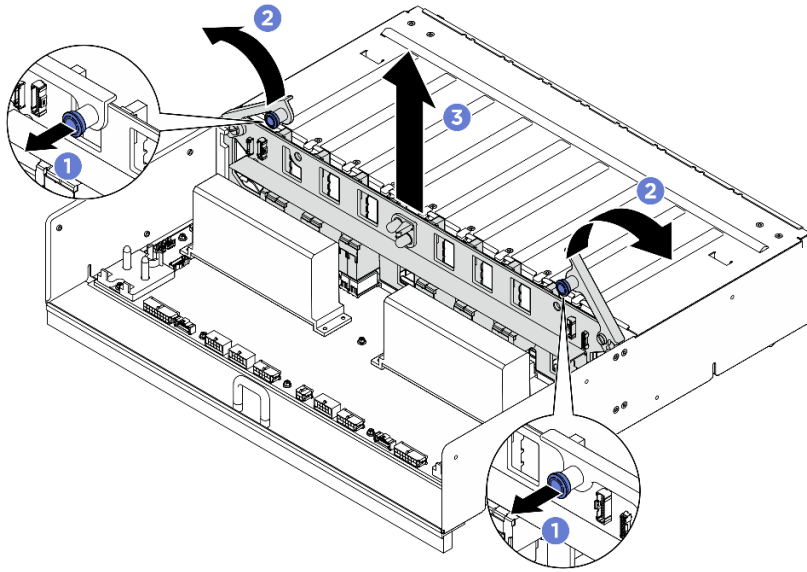


Figure 99. PSU interposer removal

- Step 3. Remove the two cable retainers from the power distribution board.
- Unfasten the two screws to lift the cable retainer out of the power distribution board.
 - Repeat to remove the other cable retainer.

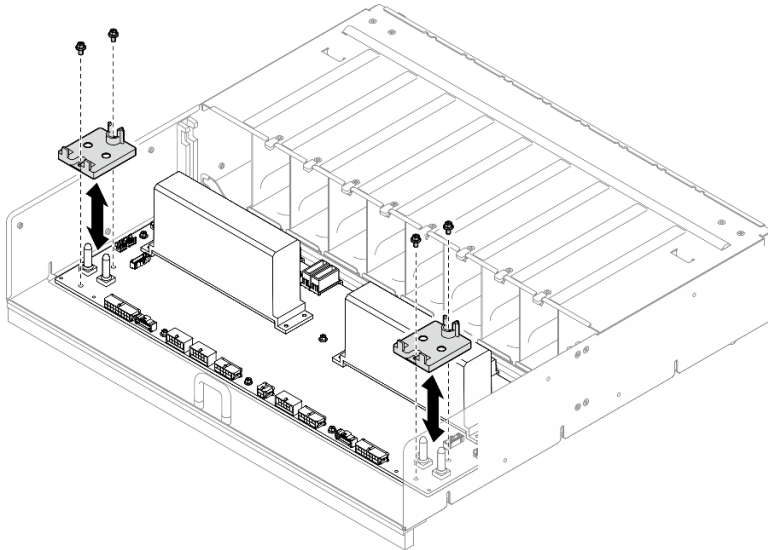


Figure 100. Cable retainer removal

- Step 4. Unfasten the ten screws to remove the power distribution board from the PSU cage.

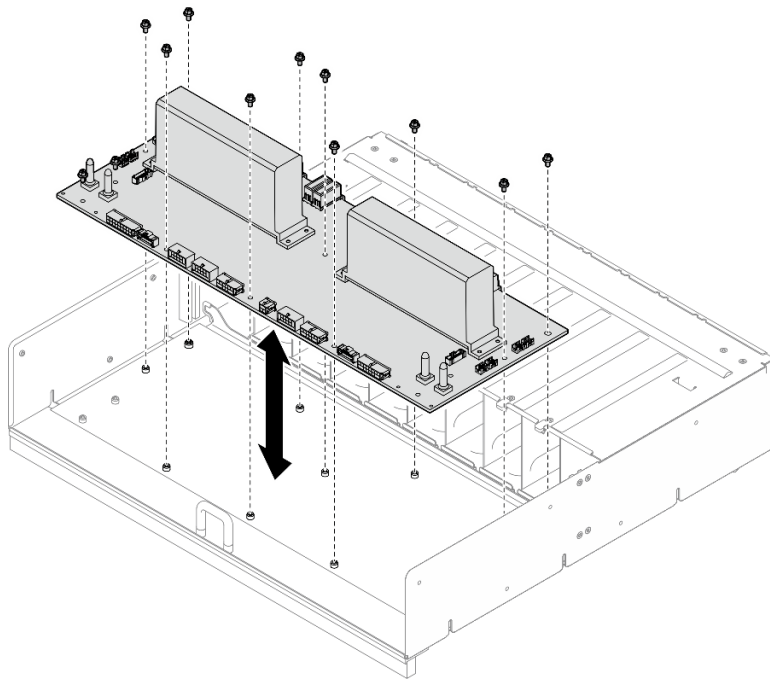


Figure 101. Power distribution board removal

After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Install the PSU cage

Follow instructions in this section to install the PSU cage. The procedure must be executed by a trained technician.

About this task

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Touch the static-protective package that contains the component to any unpainted metal surface on the server; then, remove it from the package and place it on a static-protective surface.
- Two people and one lifting device on site that can support up to 400 lb (181 kg) are required to perform this procedure. If you do not already have a lifting device available, Lenovo offers the Genie Lift GL-8 material lift that can be purchased at Data Center Solution Configurator: <https://dcsc.lenovo.com/#/configuration/cto/7D5YCTO1WW?hardwareType=lifttool>. Make sure to include the Foot-release brake and the Load Platform when ordering the Genie Lift GL-8 material lift.

Procedure

- Step 1. Install the power distribution board.
 - a. Align the power distribution board with the ten standoffs on the PSU cage; then, lower the power distribution board into the PSU cage.
 - b. Fasten the ten screws to secure the power distribution board.

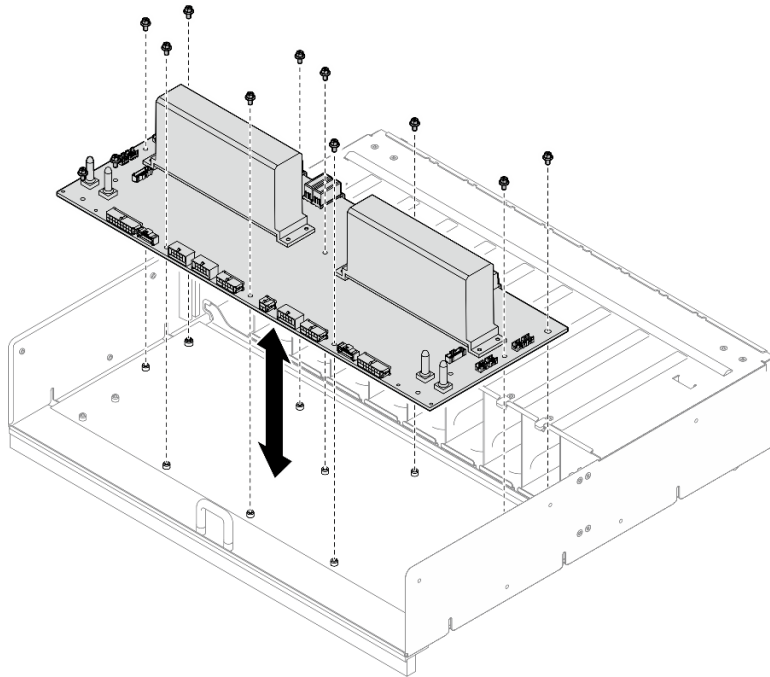


Figure 102. Power distribution board installation

- Step 2. Install the two cable retainers to the power distribution board.
- a. Align the cable retainer with the screw holes on the power distribution board; then, place the cable retainer onto the power distribution board.
 - b. Fasten the two screws to secure the cable retainer.
 - c. Repeat to install the other cable retainer.

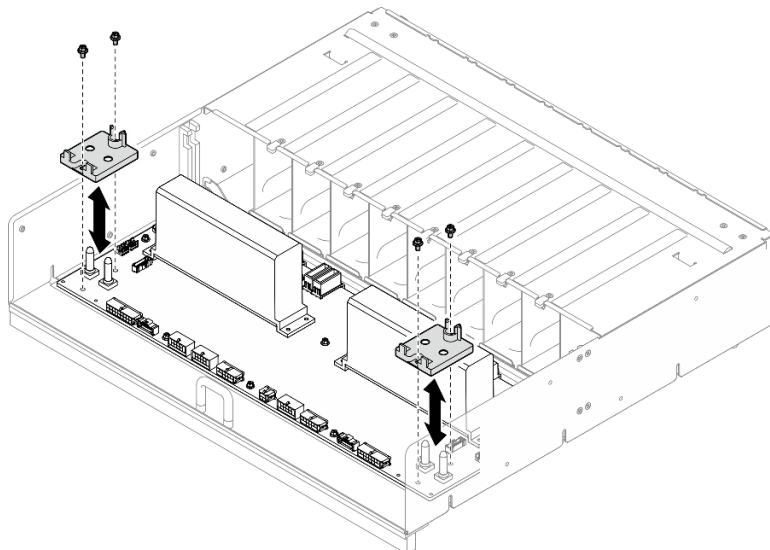


Figure 103. Cable retainer installation

- Step 3. Install the PSU interposer.
- a. ① Align the PSU interposer with its connectors on the power distribution board; then, press the PSU interposer into the connectors until it is fully seated.

- b. 2 Pull out the two plungers.
- c. 3 Rotate the two release latches down until they stop.

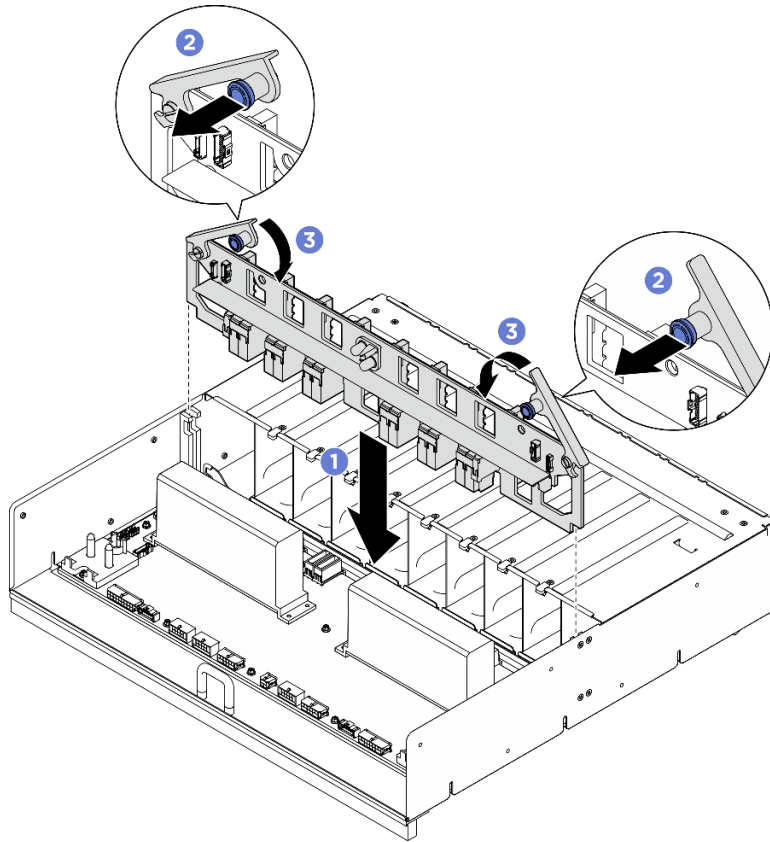


Figure 104. PSU interposer installation

After you finish

1. Reinstall the power complex. See [“Install the power complex” on page 77](#).
2. Reinstall the 8U GPU shuttle. See [“Install the 8U GPU shuttle” on page 30](#).
3. Reinstall all the 2.5-inch hot-swap drives or drive bay fillers (if any) into the drive bays. See [“Install a 2.5-inch hot-swap drive” on page 24](#)
4. Reinstall all the front fans. See [“Install a hot-swap fan \(front and rear\)” on page 40](#).
5. Reinstall all the power supply units. See [“Install a hot-swap power supply unit” on page 84](#).
6. Complete the parts replacement. See [“Complete the parts replacement” on page 191](#).

PSU interposer replacement (trained technician only)

Follow instructions in this section to remove and install the PSU interposer.

Important: This task must be operated by trained technicians that are certified by Lenovo Service. Do not attempt to remove or install the part without proper training and qualification.

Remove the PSU interposer

Follow instructions in this section to remove the PSU interposer. The procedure must be executed by a trained technician.

About this task

Attention:

- Read “Installation Guidelines” on page 1 and “Safety inspection checklist” on page 2 to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See “Power off the server” on page 7.
- Two people and one lifting device on site that can support up to 400 lb (181 kg) are required to perform this procedure. If you do not already have a lifting device available, Lenovo offers the Genie Lift GL-8 material lift that can be purchased at Data Center Solution Configurator: <https://dcsc.lenovo.com/#/configuration/cto/7D5YCTO1WW?hardwareType=lifttool>. Make sure to include the Foot-release brake and the Load Platform when ordering the Genie Lift GL-8 material lift.

Procedure

Step 1. Make preparation for this task.

- a. Remove all the power supply units. See “Remove a hot-swap power supply unit” on page 82.
- b. Remove all the front fans. See “Remove a hot-swap fan (front and rear)” on page 38.
- c. Remove all the 2.5-inch hot-swap drives and the drive bay fillers (if any) from the drive bays. See “Remove a 2.5-inch hot-swap drive” on page 22.
- d. Pull the 8U GPU shuttle out of the chassis, and place it onto the lift platform. See “Remove the 8U GPU shuttle” on page 28.

Step 2. Disconnect the cables from the PSU interposer.

Step 3. Remove the PSU interposer.

- a. ❶ Pull out the two plungers.
- b. ❷ Rotate the two release latches to disengage the PSU interposer from the power distribution board.
- c. ❸ Grasp the PSU interposer by its edges and carefully pull it out of the power complex.

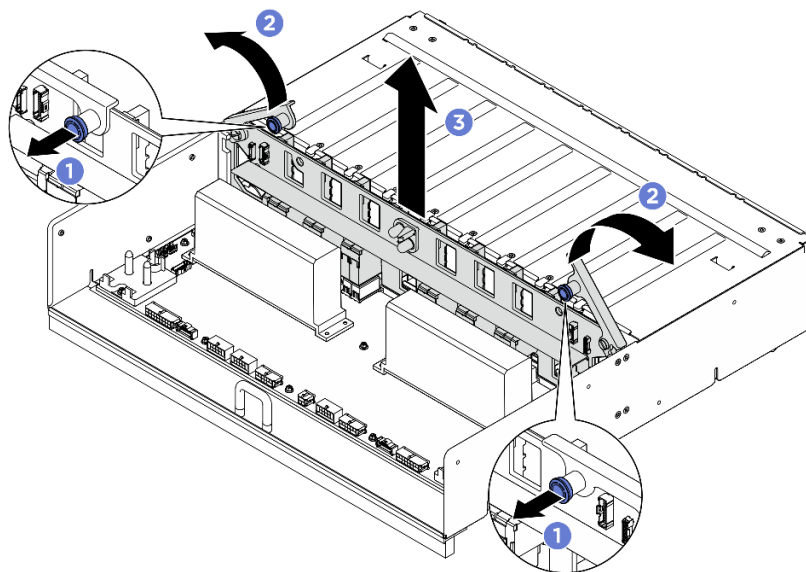


Figure 105. PSU interposer removal

After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Install the PSU interposer

Follow instructions in this section to install the PSU interposer. The procedure must be executed by a trained technician.

About this task

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Touch the static-protective package that contains the component to any unpainted metal surface on the server; then, remove it from the package and place it on a static-protective surface.
- Two people and one lifting device on site that can support up to 400 lb (181 kg) are required to perform this procedure. If you do not already have a lifting device available, Lenovo offers the Genie Lift GL-8 material lift that can be purchased at Data Center Solution Configurator: <https://dcsc.lenovo.com/#/configuration/cto/7D5YCTO1WW?hardwareType=lifttool>. Make sure to include the Foot-release brake and the Load Platform when ordering the Genie Lift GL-8 material lift.

Firmware and driver download: You might need to update the firmware or driver after replacing a component.

- Go to <https://datacentersupport.lenovo.com/tw/en/products/servers/thinksystem/sr680av3/7dhe/downloads/driver-list/> to see the latest firmware and driver updates for your server.
- Go to “Update the firmware” in *User Guide* or *System Configuration Guide* for more information on firmware updating tools.

Procedure

- Step 1. ① Align the PSU interposer with its connectors on the power distribution board; then, press the PSU interposer into the connectors until it is fully seated.
- Step 2. ② Pull out the two plungers.
- Step 3. ③ Rotate the two release latches down until they stop.

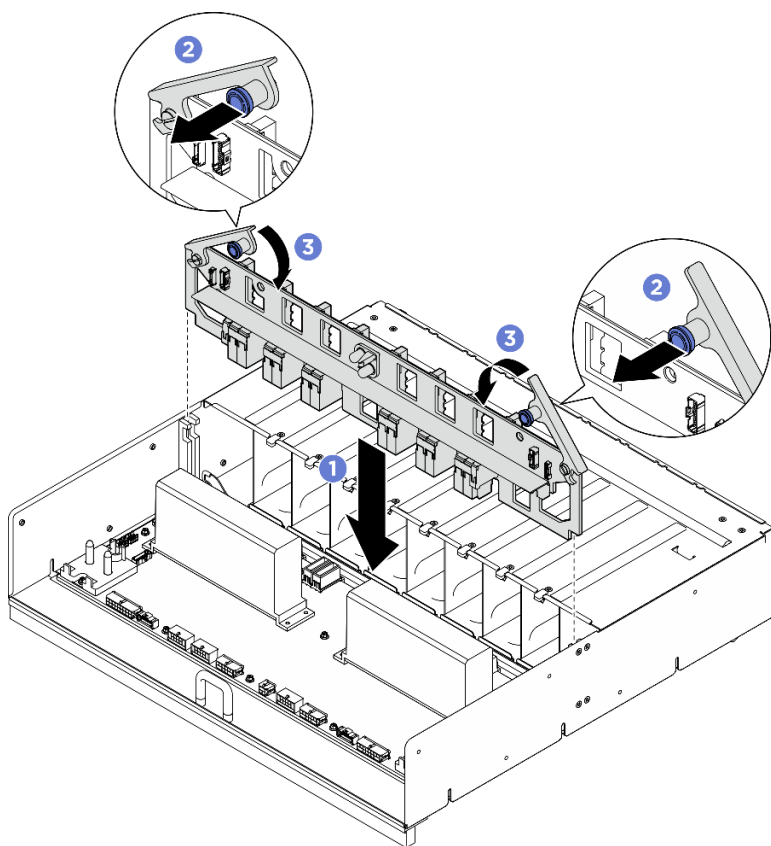


Figure 106. PSU interposer installation

Step 4. Connect the cables to the PSU interposer. See [“Power cable routing” on page 205](#) and [“PSU interposer cable routing” on page 207](#) for more information.

After you finish

1. Reinstall the 8U GPU shuttle. See [“Install the 8U GPU shuttle” on page 30](#).
2. Reinstall all the 2.5-inch hot-swap drives or drive bay fillers (if any) into the drive bays. See [“Install a 2.5-inch hot-swap drive” on page 24](#)
3. Reinstall all the front fans. See [“Install a hot-swap fan \(front and rear\)” on page 40](#).
4. Reinstall all the power supply units. See [“Install a hot-swap power supply unit” on page 84](#).
5. Complete the parts replacement. See [“Complete the parts replacement” on page 191](#).

System board replacement (trained technician only)

Follow instructions in this section to remove and install the system board.

Important:

- This task must be operated by trained technicians that are certified by Lenovo Service. Do not attempt to remove or install the part without proper training and qualification.

Remove the system board

Follow instructions in this section to remove the system board. The procedure must be executed by a trained technician.

About this task

Important:

- This task must be operated by trained technicians that are certified by Lenovo Service. Do not attempt to remove or install the part without proper training and qualification.
- When removing the memory modules, label the slot number on each memory module, remove all the memory modules from the system board, and set them aside on a static-protective surface for reinstallation.
- **When disconnecting cables, make a list of each cable and record the connectors the cable is connected to, and use the record as a cabling checklist after installing the new system board.**

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 7](#).

Procedure

Step 1. Make preparation for this task.

- a. Record all system configuration information, such as Lenovo XClarity Controller IP addresses, vital product data, and the machine type, model number, serial number, Universally Unique Identifier, and asset tag of the server.
- b. Save the system configuration to an external device with Lenovo XClarity Essentials.
- c. Save the system event log to external media.

Step 2. Remove the following components.

- a. Remove the 2U compute shuttle. See [“Remove the 2U compute shuttle” on page 26](#).
- b. Remove the processor air baffle. See [“Remove the processor air baffle” on page 86](#).
- c. Remove all the processors and the heat sinks. See [“Remove a processor and heat sink” on page 93](#).
- d. Make sure to label the slot number on each memory module, remove all the memory modules from the system board, and set them aside on a static-protective surface for reinstallation. See [“Remove a memory module” on page 60](#).

Important: It is advised to print out the layout of memory module slots for reference.

- e. If applicable, remove the PCIe riser assembly(ies). See [“Remove a PCIe riser assembly” on page 70](#).
- f. If applicable, remove the system I/O board. See [“Remove the system I/O board” on page 88](#).

Step 3. Disconnect all the cables from the system board. As you disconnect the cables, make a list of each cable and record the connectors the cables are connected to, and use the record as a cabling checklist after installing the new system board.

Step 4. Remove the two cable guides.

- a. Unfasten the two screws that secure the cable guide to the 2U compute shuttle; then, lift the cable guide out of the 2U compute shuttle.

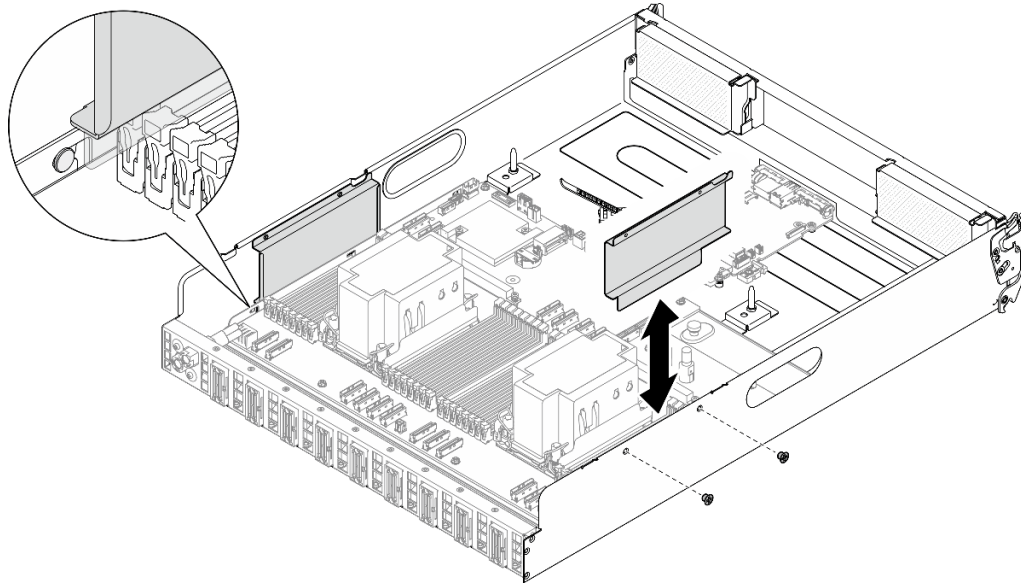


Figure 107. Cable guide removal

- b. Repeat to remove the other cable guide.

Step 5. Disengage the system board.

- a. ① Loosen the **1** thumbscrew to release the system board.
- b. ② Slide the system board towards the front of the 2U compute shuttle as illustrated to disengage it from the shuttle.

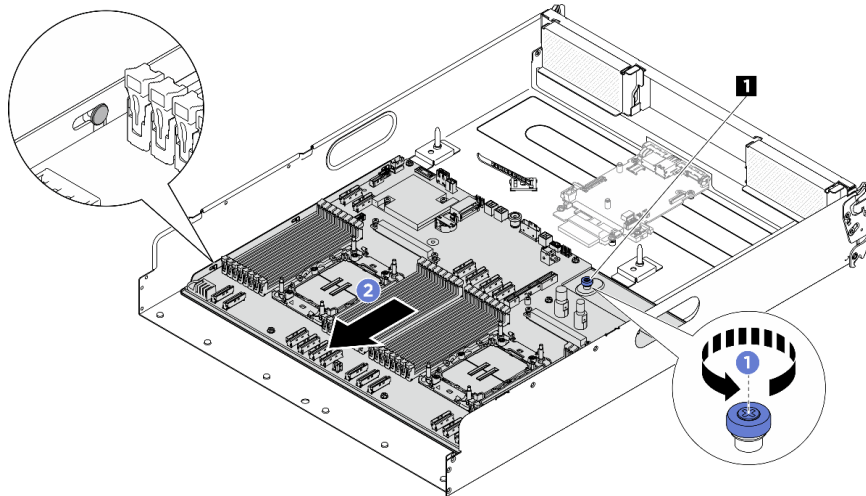


Figure 108. System board disengagement

1 Thumbscrew

Step 6. Remove the system board from the 2U compute shuttle.

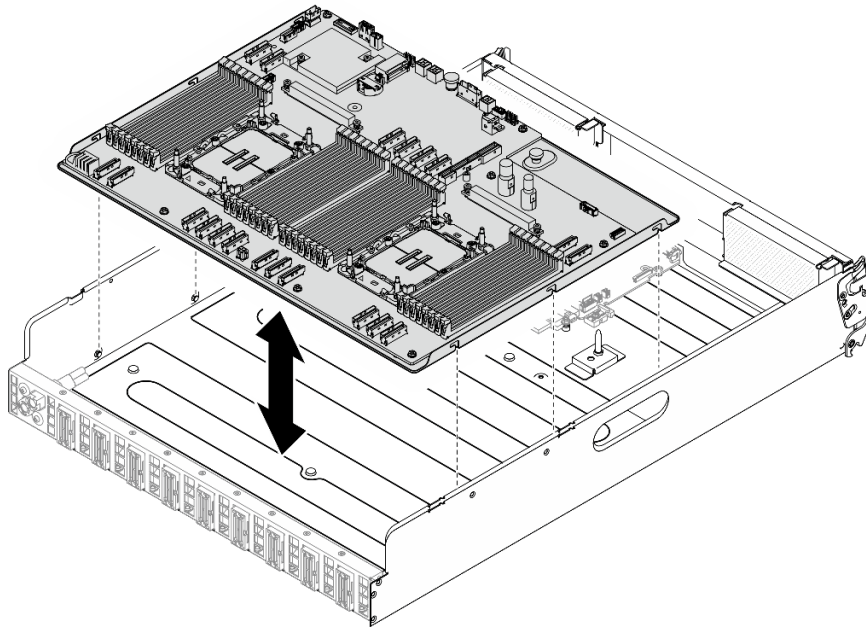


Figure 109. System board removal

After you finish

1. Install a replacement unit. See [“Install the system board” on page 113](#)
2. If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Important: Before you return the processor board, make sure that you install the processor socket covers from the new processor board. To replace a processor socket cover:

- a. Take a socket cover from the processor socket assembly on the new processor board and orient it correctly above the processor socket assembly on the removed processor board.
 - b. Gently press down the socket cover legs to the processor socket assembly, pressing on the edges to avoid damage to the socket pins. You might hear a click on the socket cover when it is securely attached.
 - c. **Make sure** that the socket cover is securely attached to the processor socket assembly.
3. If you plan to recycle the component, see “Disassemble the system board assembly for recycle” in *User Guide*.

Install the system board

Follow instructions in this section to install the system board. The procedure must be executed by a trained technician.

About this task

Important: Removing and installing this component requires trained technicians. **Do not** attempt to remove or install it without proper training.

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.

- Touch the static-protective package that contains the component to any unpainted metal surface on the server; then, remove it from the package and place it on a static-protective surface.

Firmware and driver download: You might need to update the firmware or driver after replacing a component.

- Go to <https://datacentersupport.lenovo.com/tw/en/products/servers/thinksystem/sr680av3/7dhe/downloads/driver-list/> to see the latest firmware and driver updates for your server.
- Go to “Update the firmware” in *User Guide* or *System Configuration Guide* for more information on firmware updating tools.

Procedure

Step 1. Align the system board with the guide pins and lower the system board into the 2U compute shuttle.

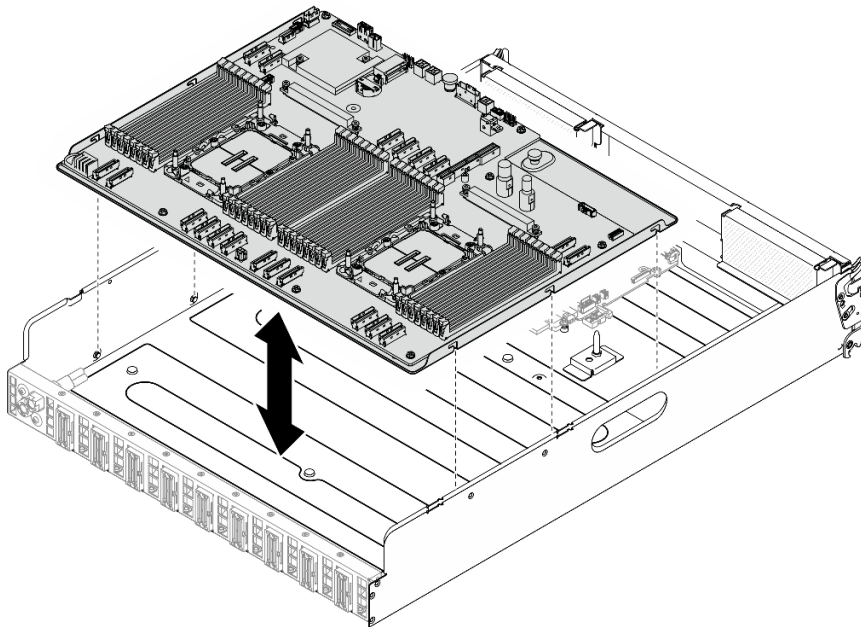


Figure 110. System board installation

Step 2. Secure the system board in the 2U compute shuttle.

- 1 Slide the system board towards the rear of the 2U compute shuttle until it is engaged with the pins as illustrated.
- 2 Tighten the (■) thumbscrew to secure the system board in place.

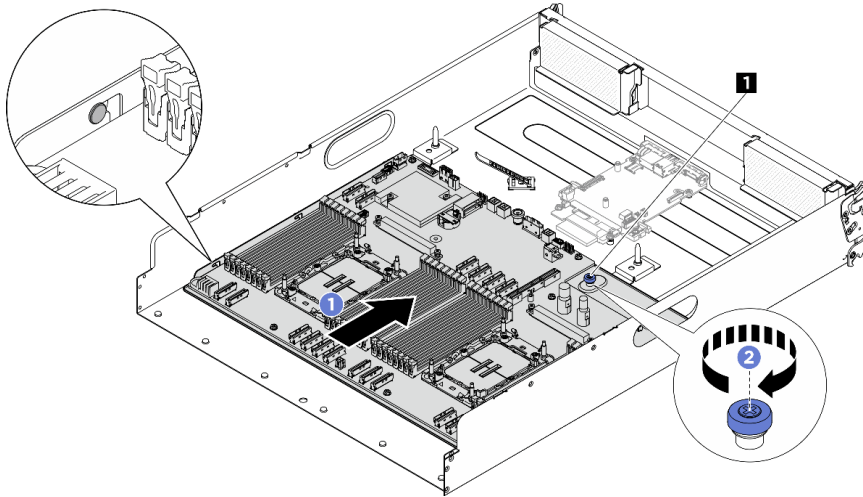


Figure 111. Securing the system board

1 Thumbscrew

Step 3. Install the cable guides.

- a. Align the cable guide with the slot on the 2U compute shuttle; then, lower the cable guide into the 2U compute shuttle until it is securely seated.
- b. Fasten the two screws to secure the cable guide to the 2U compute shuttle.

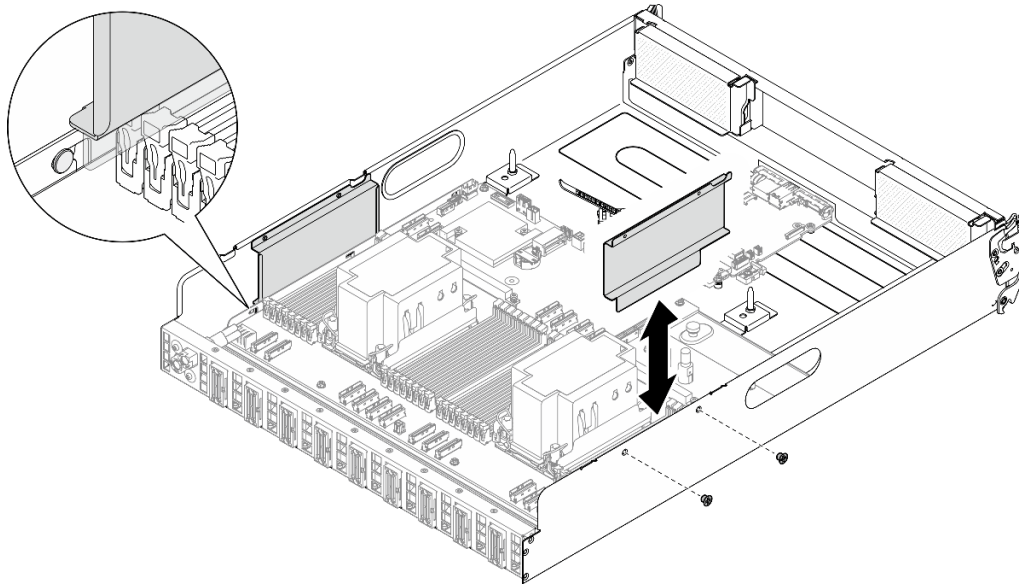


Figure 112. Cable guide installation

- c. Repeat to install the other cable guide.

After you finish

1. Reinstall the following components.

- a. Reinstall each memory module to the same slot on the new system board assembly as on the defective system board assembly until all the memory modules are installed. See [“Install a memory module” on page 62](#).
 - b. Reinstall all the processors and the heat sinks. See [“Install a processor and heat sink” on page 97](#).
 - c. If applicable, reinstall the system I/O board. See [“Install the system I/O board” on page 90](#).
 - d. If applicable, reinstall the PCIe riser assembly(ies). See [“Install a PCIe riser assembly” on page 73](#).
2. Reconnect all the required cables to the same connectors on the system board assembly as the defective system board assembly.
 3. Ensure that all components have been reassembled correctly and that no tools or loose screws are left inside the server.
 4. Reinstall the processor air baffle. See [“Install the processor air baffle” on page 87](#).
 5. Reinstall the 2U compute shuttle. See [“Install the 2U compute shuttle” on page 27](#).
 6. Reconnect the power cords and any cables that you removed.
 7. Power on the server and any peripheral devices. See [“Power on the server” on page 6](#).
 8. Update the vital product data (VPD). See [“Update the Vital Product Data \(VPD\)” on page 116](#). Machine type number and serial number can be found on the ID label, see “Identify the server and access to the Lenovo XClarity Controller” in *User Guide* or *System Configuration Guide*.
 9. Optionally, enable UEFI Secure Boot. See [“Enable UEFI Secure Boot” on page 119](#).

Update the Vital Product Data (VPD)

Use this topic to update the Vital Product Data (VPD).


- **(Required)** Machine type
- **(Required)** Serial number
- **(Required)** System model
- (Optional) Asset tag
- (Optional) UUID

Recommended tools:

- Lenovo XClarity Provisioning Manager
- Lenovo XClarity Essentials OneCLI commands

Using Lenovo XClarity Provisioning Manager

Steps:

1. Start the server and press the key according to the on-screen instructions. The Lenovo XClarity Provisioning Manager interface is displayed by default.
2. Click  on the top right corner of the Lenovo XClarity Provisioning Manager main interface.
3. Click **Update VPD**; then, follow on-screen instructions to update the VPD.

Using Lenovo XClarity Essentials OneCLI commands

- Updating **machine type**
`onecli config set SYSTEM_PROD_DATA.SysInfoProdName <m/t_model> [access_method]`
- Updating **serial number**
`onecli config set SYSTEM_PROD_DATA.SysInfoSerialNum <s/n> [access_method]`
- Updating **system model**
`onecli config set SYSTEM_PROD_DATA.SysInfoProdIdentifier <system model> [access_method]`


```
onecli config set SYSTEM_PROD_DATA.SysInfoProdIdentifierEx <system_model> --override [access_method]
```

- Updating **asset tag**

```
onecli config set SYSTEM_PROD_DATA.SysEncloseAssetTag <asset_tag> [access_method]
```

- Updating **UUID**

```
onecli config createuuid SYSTEM_PROD_DATA.SysInfoUUID [access_method]
```

Variable	Description
<m/t_model>	The server machine type and model number. Type xxxxyyy, where xxxx is the machine type and yyy is the server model number.
<s/n>	The serial number on the server. Type zzzzzzz, where zzzzzzz is the serial number.
<system_model>	The system model on the server. Type system yyyyyyyyy, where yyyyyyyy is the product identifier.
<asset_tag>	The server asset tag number. Type aaaaaaaaaaaaaaaaaaaaaaaaaaaaaa, where aaaaaaaaaaaaaaaaaaaaaaaaaaaaaa is the asset tag number.
[access_method]	<p>The access method that you select to access the target server.</p> <ul style="list-style-type: none"> • Online KCS (unauthenticated and user restricted): You can directly delete [access_method] from the command. • Online authenticated LAN: In this case, specify below LAN account information at the end of the OneCLI command: --bmc-username <user_id> --bmc-password <password> • Remote WAN/LAN: In this case, specify below XCC account information and IP address at the end of the OneCLI command: --bmc <bmc_user_id>:<bmc_password>@<bmc_external_IP> <p>Notes:</p> <ul style="list-style-type: none"> – <bmc_user_id> The BMC account name (1 of 12 accounts). The default value is USERID. – <bmc_password> The BMC account password (1 of 12 accounts).

Hide/observe TPM

TPM is enabled by default to encrypt data transfer for system operation. Optionally, you can disable TPM using Lenovo XClarity Essentials OneCLI.

To disable TPM, do the following:

1. Download and install Lenovo XClarity Essentials OneCLI.

To download Lenovo XClarity Essentials OneCLI, go to the following site:

<https://datacentersupport.lenovo.com/solutions/HT116433>

2. Run the following command:

```
OneCli.exe config set TrustedComputingGroup.HideTPMfromOS "Yes" --imm <userid>:<password>@<ip_address> --override
```

where:

- `<userid>:<password>` are the credentials used to access the BMC (Lenovo XClarity Controller interface) of your server. The default user ID is USERID, and the default password is PASSWORD (zero, not an uppercase o)
- `<ip_address>` is the IP address of the BMC.

Example:

```
D:\onecli>OneCli.exe config set TrustedComputingGroup.HideTPMfromOS "Yes" --imm USERID:PASSWORD=1@10.245.39.79 --override

Lenovo XClarity Essentials OneCLI 1xce_onecli01p-2.3.0
Licensed Materials - Property of Lenovo
(C) Copyright Lenovo Corp. 2013-2018 All Rights Reserved
If the parameters you input includes password, please Note that:
* The password must consist of a sequence of characters from `0-9a-zA-Z_+.$%!'&*()= ` set
* Use `"' to quote when password parameters include special characters
* Do not use reserved characters in path name when parameter contains path
Invoking SET command ...
Connected to BMC at IP address 10.245.39.79 by IPMI
TrustedComputingGroup.HideTPMfromOS=Yes
Success.
```

3. Reboot the system.

If you want to enable TPM again, run the following command and reboot the system:

```
OneCli.exe config set TrustedComputingGroup.HideTPMfromOS "No" --imm <userid>:<password>@<ip_address> --override
```

Example:

```
D:\onecli3>OneCli.exe config set TrustedComputingGroup.HideTPMfromOS "No" --imm USERID:PASSWORD=1@10.245.39.79 --override

Lenovo XClarity Essentials OneCLI 1xce_onecli01h-3.0.1
(C) Lenovo 2013-2020 All Rights Reserved

OneCLI License Agreement and OneCLI Legal Information can be found at the following location:
"D:\onecli3\Lic"

[Is]Certificate check finished [100%][=====]
Invoking SET command ...
Connected to BMC at IP address 10.245.39.79 by IPMI
TrustedComputingGroup.HideTPMfromOS=No
Configure successfully, please reboot system.
Succeed.
```

Update the TPM firmware

Optionally, you can update the TPM firmware using Lenovo XClarity Essentials OneCLI.

Note: TPM firmware update is irreversible. After update, the TPM firmware cannot be downgraded to earlier versions.

TPM firmware version

Follow the procedure below to see the TPM firmware version:

From Lenovo XClarity Provisioning Manager

1. Start the server and press the key specified in the on-screen instructions to display the Lenovo XClarity Provisioning Manager interface. (For more information, see the "Startup" section in the LXPM documentation compatible with your server at <https://pubs.lenovo.com/lxpm-overview/>.)
2. If the power-on Administrator password is required, enter the password.
3. From the UEFI Setup page, click **System Settings** → **Security** → **Trusted Platform Module** → **TPM 2.0** → **TPM Firmware Version**.

Update the TPM firmware

To update the TPM firmware, do the following:

1. Download and install Lenovo XClarity Essentials OneCLI.

To download Lenovo XClarity Essentials OneCLI, go to the following site:

<https://datacentersupport.lenovo.com/solutions/HT116433>

2. Run the following command:

```
OneCli.exe config set TrustedComputingGroup.DeviceOperation "Update to TPM 2.0 firmware version <x.x.x.x>" --bmc <userid>:<password>@<ip_address>
```

where:

- <x.x.x.x> is the target TPM version.

e.g. TPM 2.0 (7.2.1.0) -> TPM 2.0 (7.2.2.0):

```
OneCli.exe config set TrustedComputingGroup.DeviceOperation "Update to TPM 2.0 firmware version 7.2.2.0" --bmc <userid>:<password>@<ip_address>
```

- <userid>:<password> are the credentials used to access the BMC (Lenovo XClarity Controller interface) of your server. The default user ID is USERID, and the default password is PASSWORD (zero, not an uppercase o).
- <ip_address> is the IP address of the BMC.

Enable UEFI Secure Boot

Optionally, you can enable UEFI Secure Boot.

There are two methods available to enable UEFI Secure Boot:

- From Lenovo XClarity Provisioning Manager

To enable UEFI Secure Boot from Lenovo XClarity Provisioning Manager:

1. Start the server and press the key specified in the on-screen instructions to display the Lenovo XClarity Provisioning Manager interface. (For more information, see the “Startup” section in the LXPM documentation compatible with your server at <https://pubs.lenovo.com/lxpm-overview/>.)
2. If the power-on Administrator password is required, enter the password.
3. From the UEFI Setup page, click **System Settings** → **Security** → **Secure Boot**.
4. Enable Secure Boot and save the settings.

Note: If disabling UEFI secure boot is needed, select Disable in step 4.

- From Lenovo XClarity Essentials OneCLI

To enable UEFI Secure Boot from Lenovo XClarity Essentials OneCLI:

1. Download and install Lenovo XClarity Essentials OneCLI.

To download Lenovo XClarity Essentials OneCLI, go to the following site:

<https://datacentersupport.lenovo.com/solutions/HT116433>

2. Run the following command to enable Secure Boot:

```
OneCli.exe config set SecureBootConfiguration.SecureBootSetting Enabled --bmc <userid>:<password>@<ip_address>
```

where:

- `<userid>:<password>` are the credentials used to access the BMC (Lenovo XClarity Controller interface) of your server. The default user ID is USERID, and the default password is PASSWORD (zero, not an uppercase o)
- `<ip_address>` is the IP address of the BMC.

For more information about the Lenovo XClarity Essentials OneCLI `set` command, see:

https://pubs.lenovo.com/lxce-onecli/onecli_r_set_command

Note: If disabling UEFI secure boot is needed, run the following command:

```
OneCli.exe config set SecureBootConfiguration.SecureBootSetting Disabled --bmc <userid>:<password>@<ip_address>
```

The H100/H200 GPU Model components

Follow instructions in this section to remove and install the H100/H200 GPU Model components in chassis.

Notes:

- The illustrations in this document are for reference only and might differ slightly from your hardware.

2.5-inch drive backplane replacement (trained technician only)

Follow instructions in this section to remove and install a 2.5-inch drive backplane.

Important: This task must be operated by trained technicians that are certified by Lenovo Service. Do not attempt to remove or install the part without proper training and qualification.

Remove a 2.5-inch drive backplane

Follow instructions in this section to remove a 2.5-inch drive backplane. The procedure must be executed by a trained technician.

About this task

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See “[Power off the server](#)” on page 7.
- Two people and one lifting device on site that can support up to 400 lb (181 kg) are required to perform this procedure. If you do not already have a lifting device available, Lenovo offers the Genie Lift GL-8 material lift that can be purchased at Data Center Solution Configurator: <https://dcsc.lenovo.com/#/configuration/cto/7D5YCTO1WW?hardwareType=lifttool>. Make sure to include the Foot-release brake and the Load Platform when ordering the Genie Lift GL-8 material lift.
- The server supports up to two 2.5-inch drive backplanes with the following corresponding drive backplane numbering.

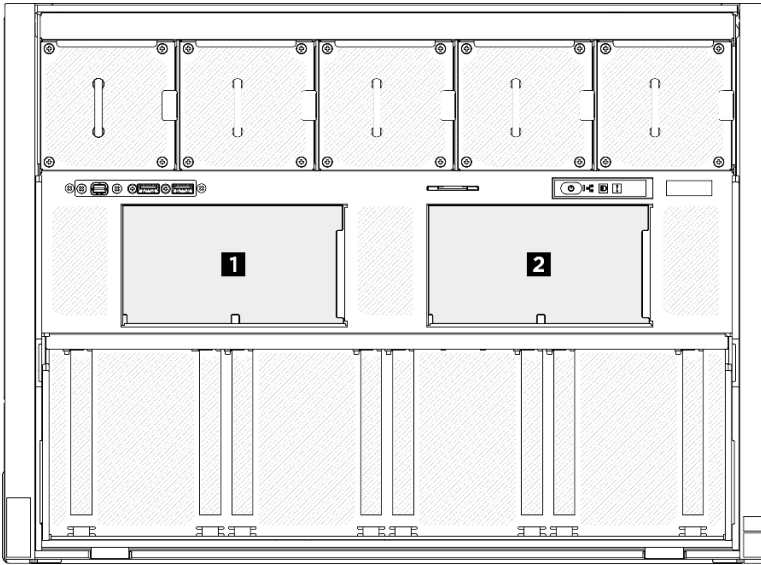


Figure 113. 2.5-inch drive backplane numbering

Procedure

Step 1. Make preparation for this task.

- a. Remove all the power supply units. See [“Remove a hot-swap power supply unit” on page 82.](#)
- b. Remove all the front fans. See [“Remove a hot-swap fan \(front and rear\)” on page 38.](#)
- c. Remove all the 2.5-inch hot-swap drives and the drive bay fillers (if any) from the drive bays. See [“Remove a 2.5-inch hot-swap drive” on page 22.](#)
- d. Pull the 8U GPU shuttle out of the chassis, and place it onto the lift platform. See [“Remove the 8U GPU shuttle” on page 28.](#)
- e. Remove the cable cover. See [“Remove the cable cover” on page 32.](#)
- f. Remove the I/O cover. See [“Remove the I/O cover” on page 161.](#)

Step 2. Disconnect all the cables from the 2.5-inch drive backplane.

Step 3. Remove the 2.5-inch drive backplane.

- a. ① Lift and hold the two retention latches on the top of the backplane.
- b. ② Rotate the backplane from the top to disengage it from the retention latches; then, carefully lift the backplane out of the 8U GPU shuttle.

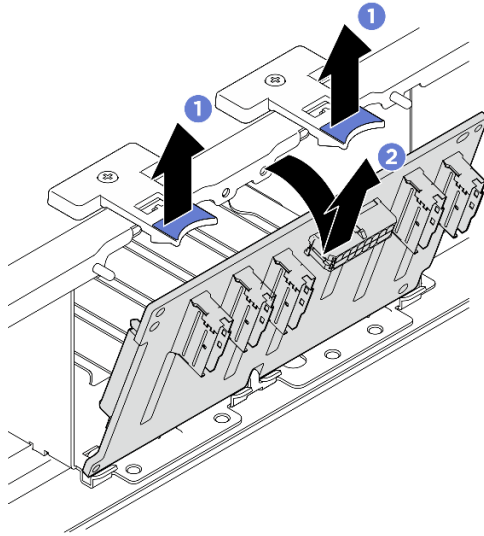


Figure 114. 2.5-inch drive backplane removal

After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Install a 2.5-inch drive backplane

Follow instructions in this section to install a 2.5-inch drive backplane. The procedure must be executed by a trained technician.

About this task

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Touch the static-protective package that contains the component to any unpainted metal surface on the server; then, remove it from the package and place it on a static-protective surface.
- Two people and one lifting device on site that can support up to 400 lb (181 kg) are required to perform this procedure. If you do not already have a lifting device available, Lenovo offers the Genie Lift GL-8 material lift that can be purchased at Data Center Solution Configurator: <https://dcsc.lenovo.com/#/configuration/cto/7D5YCTO1WW?hardwareType=lifttool>. Make sure to include the Foot-release brake and the Load Platform when ordering the Genie Lift GL-8 material lift.
- The server supports up to two 2.5-inch drive backplanes with the following corresponding drive backplane numbering.

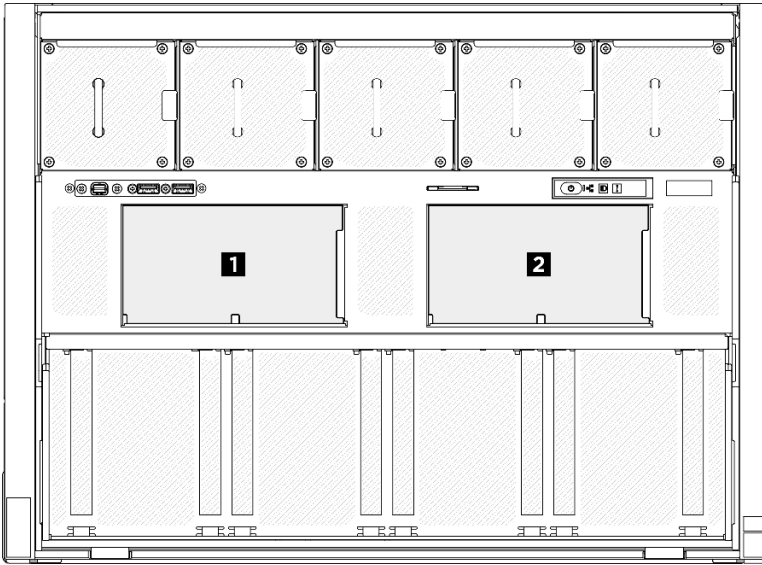


Figure 115. 2.5-inch drive backplane numbering

Firmware and driver download: You might need to update the firmware or driver after replacing a component.

- Go to <https://datacentersupport.lenovo.com/tw/en/products/servers/thinksystem/sr680av3/7dhe/downloads/driver-list/> to see the latest firmware and driver updates for your server.
- Go to “Update the firmware” in *User Guide* or *System Configuration Guide* for more information on firmware updating tools.

Procedure

- Step 1. ① Align the tabs on the bottom of the 2.5-inch drive backplane with the slots on the 8U GPU shuttle, and insert them into the slots.
- Step 2. ② Push the top of the backplane forward until it clicks into place.

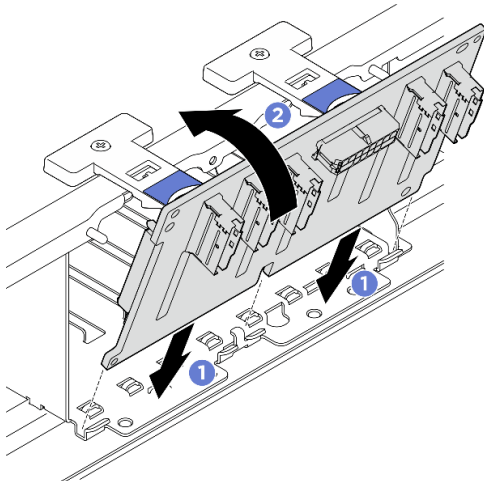


Figure 116. 2.5-inch drive backplane installation

- Step 3. If necessary, attach the labels to both ends of the signal cable(s).
- ① Attach the white space portion of the label to one end of the cable.

- b. ② Wrap the label around the cable and attach it to the white space portion.
- c. Repeat to attach the other label to the opposite end of the cable.

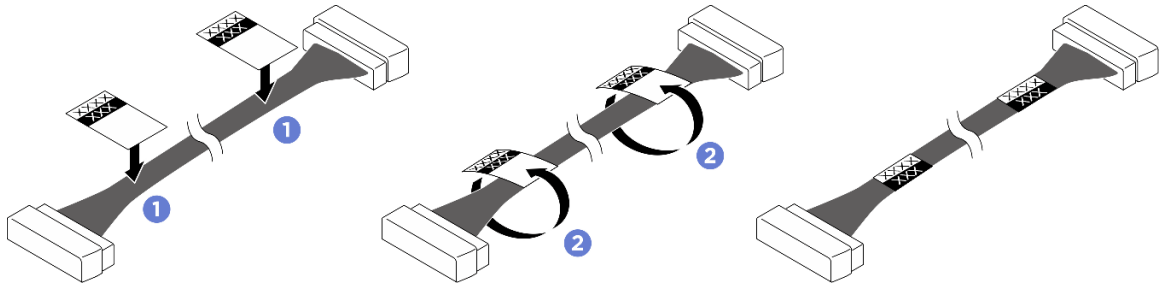


Figure 117. Label application

Note: See the table below to identify the corresponding labels for the cables.

From	To	Label
Backplane 1: NVMe connector 0-1	PCIe switch board: NVMe connector 1 (NVME1)	NVME 0-1 NVME 1
Backplane 1: NVMe connector 2-3	PCIe switch board: NVMe connector 2 (NVME2)	NVME 2-3 NVME 2
Backplane 1: NVMe connector 4-5	PCIe switch board: NVMe connector 3 (NVME3)	NVME 4-5 NVME 3
Backplane 1: NVMe connector 6-7	PCIe switch board: NVMe connector 4 (NVME4)	NVME 6-7 NVME 4
Backplane 2: NVMe connector 0-1	PCIe switch board: NVMe connector 5 (NVME5)	NVME 0-1 NVME 5
Backplane 2: NVMe connector 2-3	PCIe switch board: NVMe connector 6 (NVME6)	NVME 2-3 NVME 6
Backplane 2: NVMe connector 4-5	PCIe switch board: NVMe connector 7 (NVME7)	NVME 4-5 NVME 7
Backplane 2: NVMe connector 6-7	PCIe switch board: NVMe connector 8 (NVME8)	NVME 6-7 NVME 8

Step 4. Connect all the cables to the 2.5-inch drive backplane. See [“2.5-inch drive backplane cable routing” on page 208](#) for more information.

After you finish

1. Reinstall the I/O cover. See [“Install the I/O cover” on page 163](#).
2. Reinstall the cable cover. See [“Install the cable cover” on page 33](#).
3. Reinstall the 8U GPU shuttle. See [“Install the 8U GPU shuttle” on page 30](#).

4. Reinstall all the 2.5-inch hot-swap drives or drive bay fillers (if any) into the drive bays. See [“Install a 2.5-inch hot-swap drive” on page 24](#)
5. Reinstall all the front fans. See [“Install a hot-swap fan \(front and rear\)” on page 40](#).
6. Reinstall all the power supply units. See [“Install a hot-swap power supply unit” on page 84](#).
7. Complete the parts replacement. See [“Complete the parts replacement” on page 191](#).

GPU air duct replacement (trained technician only)

Follow instructions in this section to remove and install a GPU air duct.

Important: This task must be operated by trained technicians that are certified by Lenovo Service. Do not attempt to remove or install the part without proper training and qualification.

Remove an H100/H200 GPU air duct

Follow instructions in this section to remove an H100/H200 GPU air duct. The procedure must be executed by a trained technician.

About this task

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 7](#).
- Two people and one lifting device on site that can support up to 400 lb (181 kg) are required to perform this procedure. If you do not already have a lifting device available, Lenovo offers the Genie Lift GL-8 material lift that can be purchased at Data Center Solution Configurator: <https://dcsc.lenovo.com/#/configuration/cto/7D5YCTO1WW?hardwareType=lifttool>. Make sure to include the Foot-release brake and the Load Platform when ordering the Genie Lift GL-8 material lift.

Procedure

Step 1. Make preparation for this task.

- a. Remove all the power supply units. See [“Remove a hot-swap power supply unit” on page 82](#).
- b. Remove all the front fans. See [“Remove a hot-swap fan \(front and rear\)” on page 38](#).
- c. Remove all the 2.5-inch hot-swap drives and the drive bay fillers (if any) from the drive bays. See [“Remove a 2.5-inch hot-swap drive” on page 22](#).
- d. Pull the 8U GPU shuttle out of the chassis, and place it onto the lift platform. See [“Remove the 8U GPU shuttle” on page 28](#).
- e. Remove the power complex. See [“Remove the power complex” on page 76](#).

Step 2. Hold the two handles on the top of the GPU air duct; then, lift the GPU air duct out of the 8U GPU shuttle.

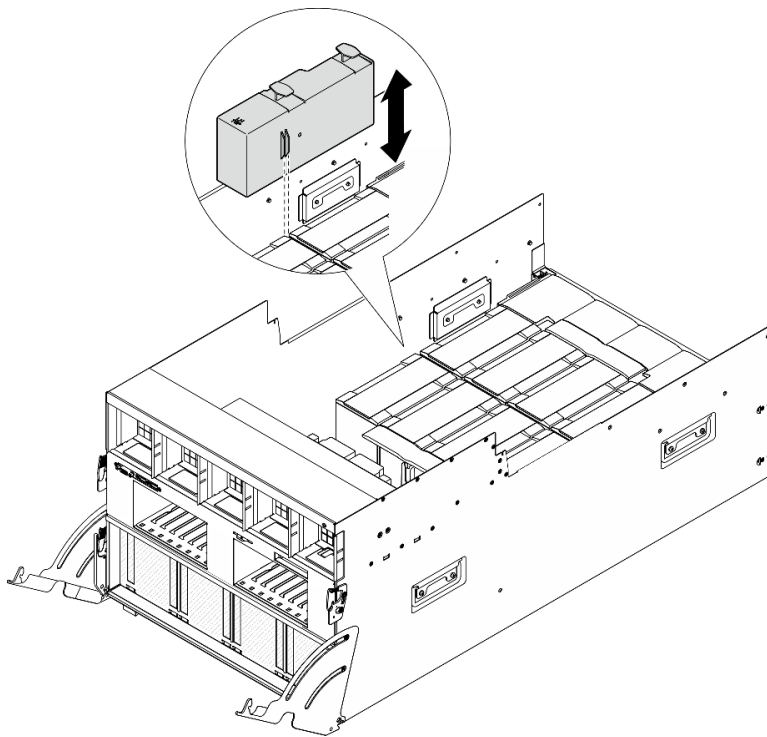


Figure 118. GPU air duct removal

After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Install an H100/H200 GPU air duct

Follow instructions in this section to install an H100/H200 GPU air duct. The procedure must be executed by a trained technician.

About this task

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Touch the static-protective package that contains the component to any unpainted metal surface on the server; then, remove it from the package and place it on a static-protective surface.
- Two people and one lifting device on site that can support up to 400 lb (181 kg) are required to perform this procedure. If you do not already have a lifting device available, Lenovo offers the Genie Lift GL-8 material lift that can be purchased at Data Center Solution Configurator: <https://dcsc.lenovo.com/#/configuration/cto/7D5YCTO1WW?hardwareType=lifttool>. Make sure to include the Foot-release brake and the Load Platform when ordering the Genie Lift GL-8 material lift.
- Do not mix up left and right GPU air ducts.
 - Install the GPU air duct with stamp “LH” on the left side (when looking at the 8U GPU shuttle from the front).
 - Install the GPU air duct with stamp “RH” on the right side (when looking at the 8U GPU shuttle from the front).

Procedure

- Step 1. Make sure the stamp “TOP” on the GPU air duct is facing up.
- Step 2. Hold the two handles on the top of the GPU air duct; then, insert the GPU air duct into the area between the two outermost GPU and heat sink modules until it is seated in place.

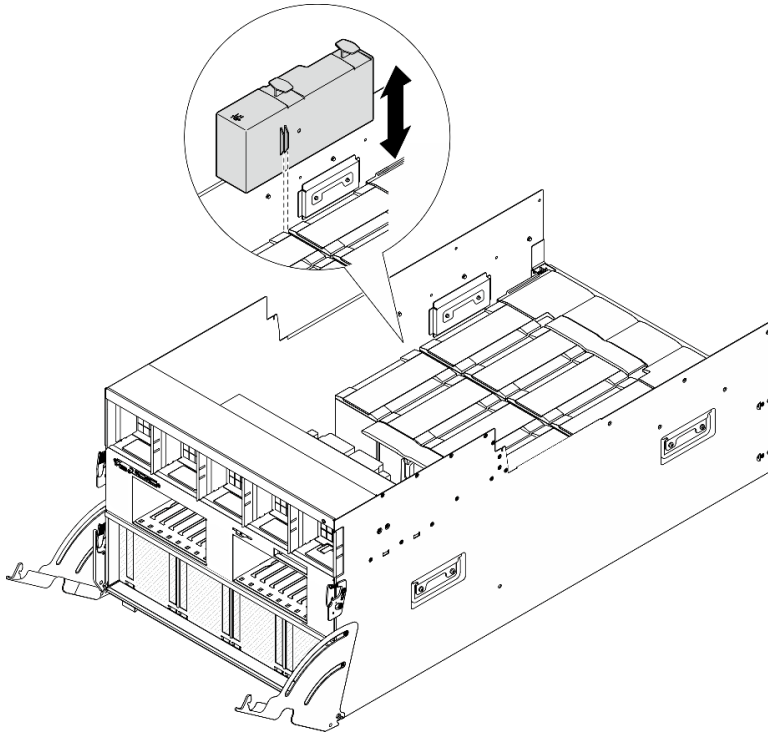


Figure 119. GPU air duct installation

After you finish

1. Reinstall the power complex. See [“Install the power complex” on page 77](#).
2. Reinstall the 8U GPU shuttle. See [“Install the 8U GPU shuttle” on page 30](#).
3. Reinstall all the 2.5-inch hot-swap drives or drive bay fillers (if any) into the drive bays. See [“Install a 2.5-inch hot-swap drive” on page 24](#)
4. Reinstall all the front fans. See [“Install a hot-swap fan \(front and rear\)” on page 40](#).
5. Reinstall all the power supply units. See [“Install a hot-swap power supply unit” on page 84](#).
6. Complete the parts replacement. See [“Complete the parts replacement” on page 191](#).

GPU baseboard replacement (trained technician only)

Follow instructions in this section to remove or install the GPU baseboard.

Important: This task must be operated by trained technicians that are certified by Lenovo Service. Do not attempt to remove or install the part without proper training and qualification.

Remove the H100/H200 GPU baseboard

Follow instructions in this section to remove the H100/H200 GPU baseboard. The procedure must be executed by a trained technician.

About this task

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See “[Power off the server](#)” on page 7.
- Two people and one lifting device on site that can support up to 400 lb (181 kg) are required to perform this procedure. If you do not already have a lifting device available, Lenovo offers the Genie Lift GL-8 material lift that can be purchased at Data Center Solution Configurator: <https://dcsc.lenovo.com/#/configuration/cto/7D5YCTO1WW?hardwareType=lifttool>. Make sure to include the Foot-release brake and the Load Platform when ordering the Genie Lift GL-8 material lift.

Notes: Make sure you have the required tools listed below available to properly replace the component:

- Torque screwdriver which can be set to 0.6 newton-meters, 5.3 inch-pounds
- Torx T15 extended bit (6-inch long)

Procedure

Step 1. Make preparation for this task.

- a. Remove all the power supply units. See “[Remove a hot-swap power supply unit](#)” on page 82.
- b. Remove all the front fans. See “[Remove a hot-swap fan \(front and rear\)](#)” on page 38.
- c. Remove all the 2.5-inch hot-swap drives and the drive bay fillers (if any) from the drive bays. See “[Remove a 2.5-inch hot-swap drive](#)” on page 22.
- d. Pull the 8U GPU shuttle out of the chassis, and place it onto the lift platform. See “[Remove the 8U GPU shuttle](#)” on page 28.
- e. Remove the cable cover. See “[Remove the cable cover](#)” on page 32.
- f. Remove the power complex. See “[Remove the power complex](#)” on page 76.
- g. Remove all the rear fan control board assemblies. See “[Remove a rear fan control board assembly](#)” on page 46.
- h. Remove all the GPU air ducts. See “[Remove an H100/H200 GPU air duct](#)” on page 125.
- i. Disconnect the cables from the GPU baseboard.
- j. Remove all the GPU and heat sink modules. See “[Remove an H100/H200 GPU and heat sink module](#)” on page 151.

Step 2. Disengage the PCIe switch shuttle from the 8U GPU shuttle.

- a. ① Press the two blue release latches.
- b. ② Rotate the two release levers until they are perpendicular to the PCIe switch shuttle.
- c. ③ Pull the PCIe switch shuttle forward until it stops.

Note: Push the two release levers back until they lock into place after pulling out the PCIe switch shuttle to avoid damage.

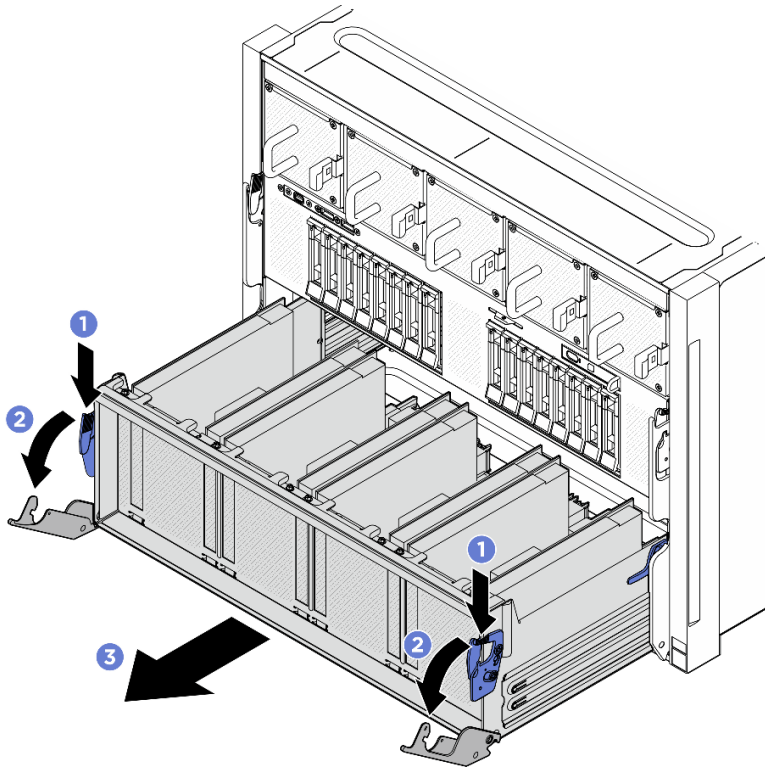


Figure 120. PCIe switch shuttle removal to stop position

- Step 3. Flip over the front PCIe switch cable harness.
- a. Unfasten the ten screws marked with **C** on both sides of the 8U GPU shuttle.
 - b. Flip over the front PCIe switch cable harness, and gently place it on the I/O cover.

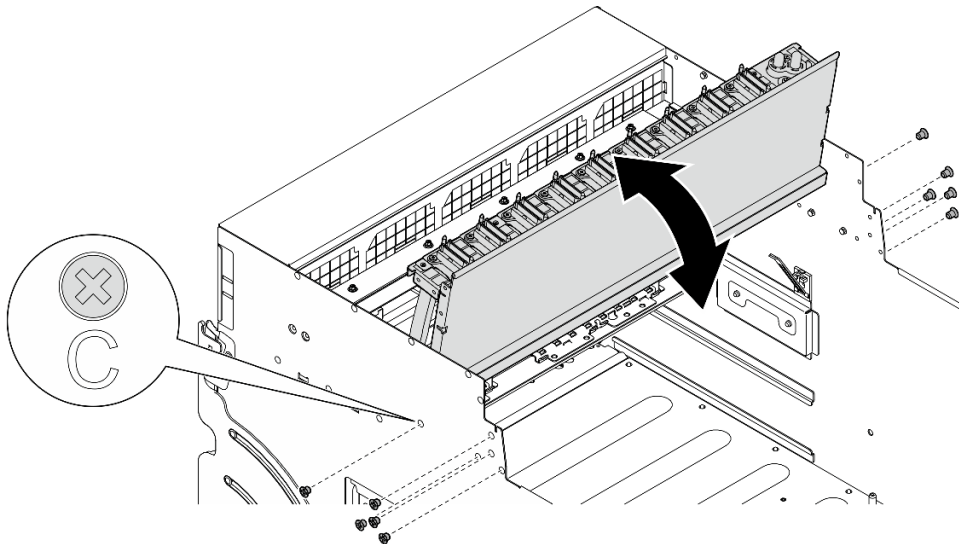


Figure 121. Flipping over the front PCIe switch cable harness

- Step 4. Unfasten the seventeen Torx T15 captive screws on the GPU baseboard.

Note: Loosen or tighten the screws with a torque screwdriver set to the proper torque. For reference, the torque required for the screws to be fully loosen or tighten is 0.6 newton-meters, 5.3 inch-pounds.

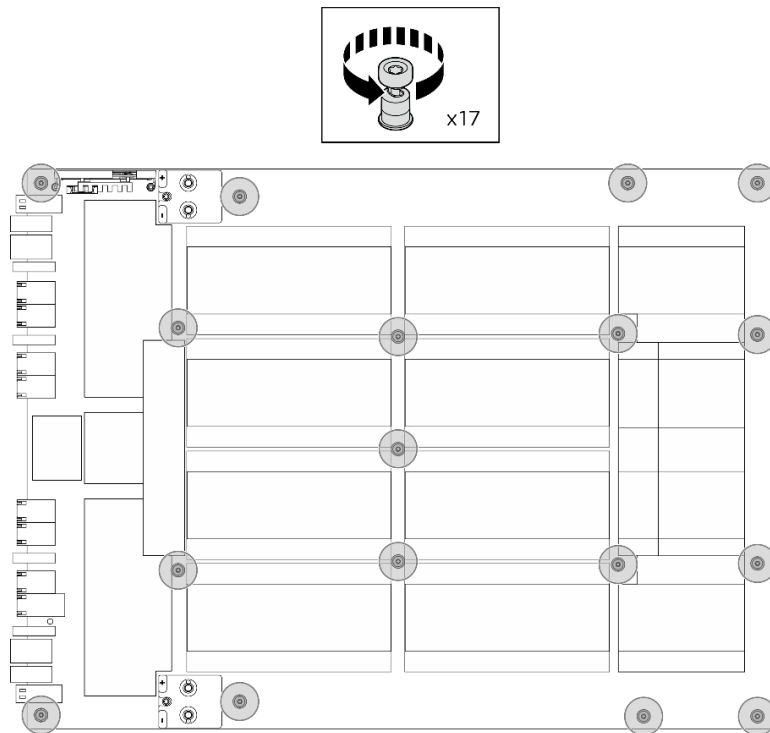


Figure 122. Screw removal

Step 5. Remove the GPU baseboard.

- a. 1 Extend the two handles (1) on both sides of the GPU baseboard.
- b. 2 Hold the two handles (1), and lift the GPU baseboard out of the 8U GPU shuttle.

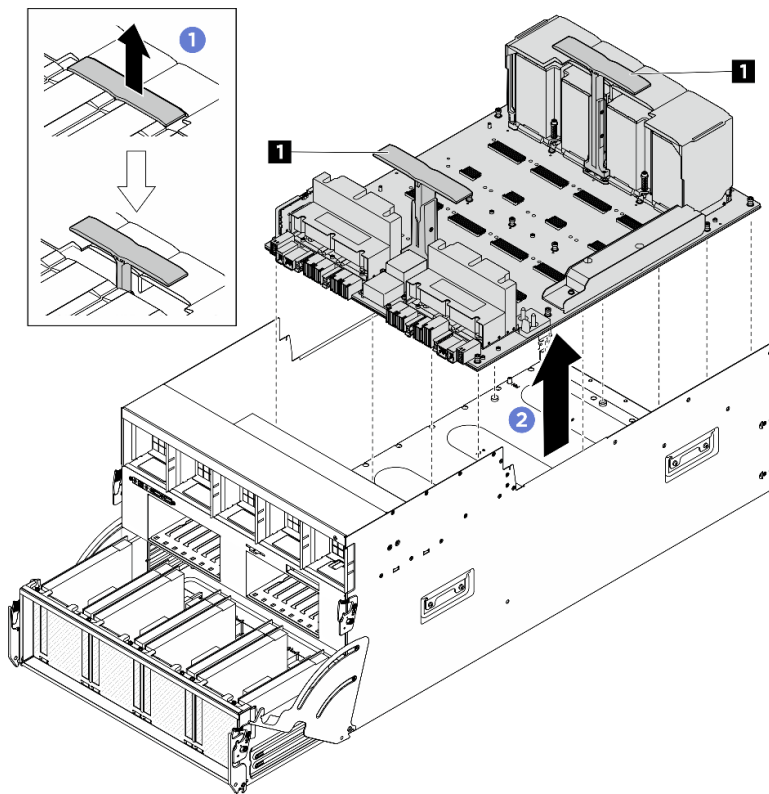


Figure 123. GPU baseboard removal

After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Install the H100/H200 GPU baseboard

Follow instructions in this section to install the H100/H200 GPU baseboard. The procedure must be executed by a trained technician.

About this task

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Touch the static-protective package that contains the component to any unpainted metal surface on the server; then, remove it from the package and place it on a static-protective surface.
- Two people and one lifting device on site that can support up to 400 lb (181 kg) are required to perform this procedure. If you do not already have a lifting device available, Lenovo offers the Genie Lift GL-8 material lift that can be purchased at Data Center Solution Configurator: <https://dcsc.lenovo.com/#/configuration/cto/7D5YCTO1WW?hardwareType=lifttool>. Make sure to include the Foot-release brake and the Load Platform when ordering the Genie Lift GL-8 material lift.
- Make sure to inspect the connectors and sockets on the GPU and the GPU baseboard. Do not use the GPU or the GPU baseboard if its connectors are damaged or missing, or if there are debris in the sockets. Replace the GPU or the GPU baseboard with a new one before continuing the installation procedure.

Notes: Make sure you have the required tools listed below available to properly replace the component:

- Torque screwdriver which can be set to 0.6 newton-meters, 5.3 inch-pounds
- Torx T15 extended bit (6-inch long)

Firmware and driver download: You might need to update the firmware or driver after replacing a component.

- Go to <https://datacentersupport.lenovo.com/tw/en/products/servers/thinksystem/sr680av3/7dhe/downloads/driver-list/> to see the latest firmware and driver updates for your server.
- Go to “Update the firmware” in *User Guide* or *System Configuration Guide* for more information on firmware updating tools.

Procedure

Step 1. (Optional) Remove the new GPU baseboard from the package box.

- 1 Extend the two handles on both sides of the GPU baseboard.
- 2 Hold the two handles, and remove the GPU baseboard out from the package box.

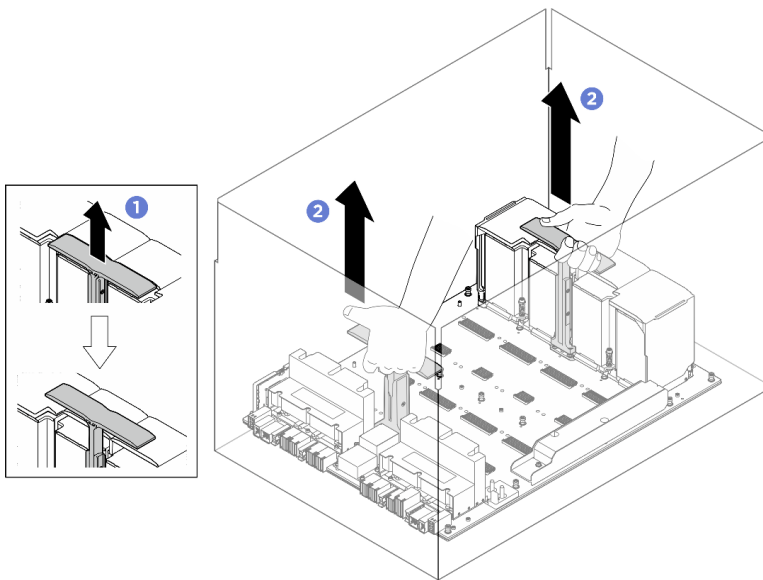


Figure 124. Removing the GPU baseboard from the package box

Step 2. Install the GPU baseboard.

- 1 Hold the handles (1) on both sides of the GPU baseboard in the correct orientation as illustrated; then, align the GPU baseboard with the seventeen standoffs on the GPU complex adapter plate, and gently place it onto the adapter plate.
- 2 Push the two handles (1) down.

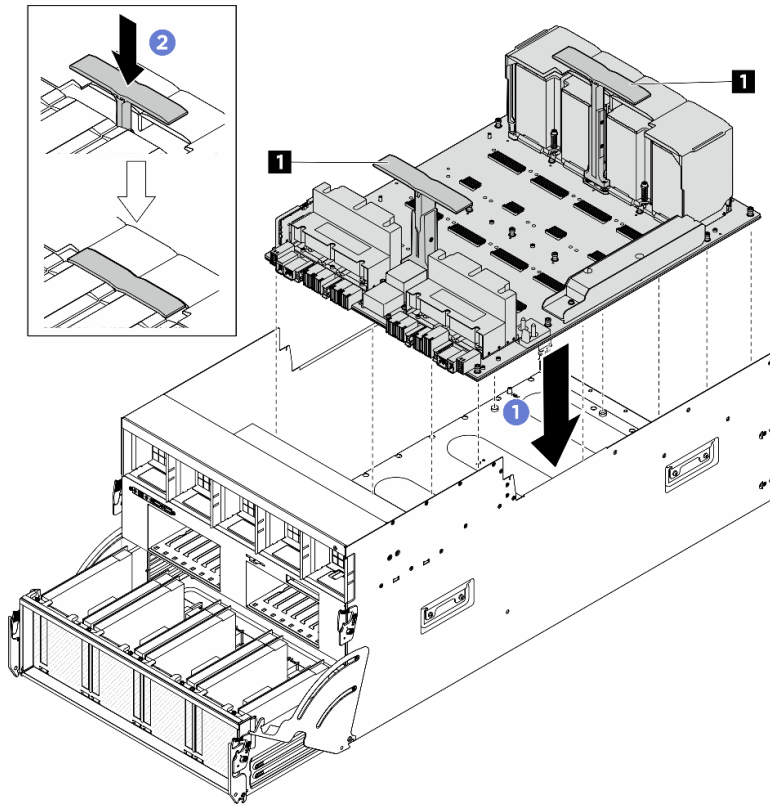


Figure 125. GPU baseboard installation

Step 3. Follow the sequence shown in the illustration below to fasten the seventeen Torx T15 captive screws to secure the GPU baseboard.

Important: Do not overtighten the screws to avoid damage.

Note: Loosen or tighten the screws with a torque screwdriver set to the proper torque. For reference, the torque required for the screws to be fully loosen or tighten is 0.6 newton-meters, 5.3 inch-pounds.

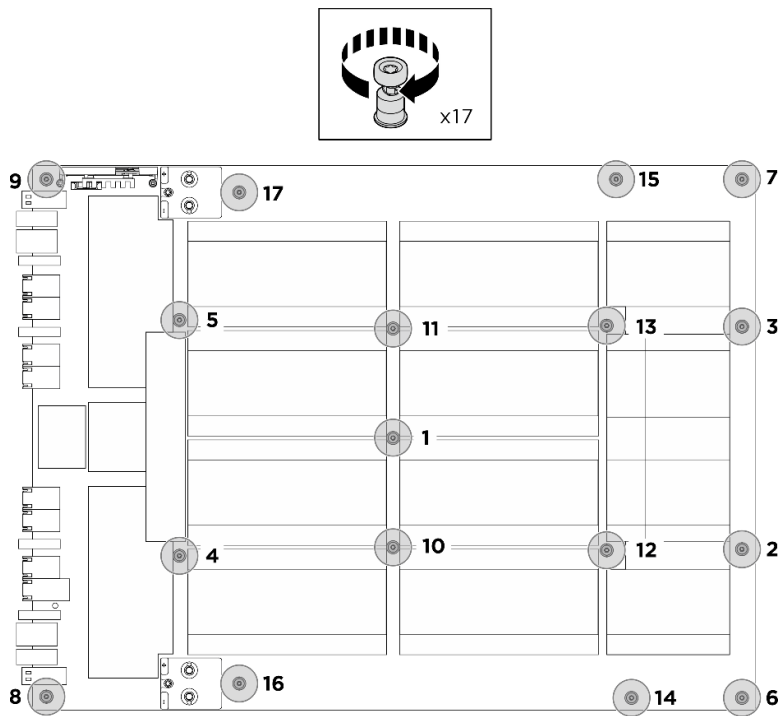


Figure 126. Screw installation

Step 4. Flip over the front PCIe switch cable harness.

- a. Flip over the front PCIe switch cable harness, and make sure that it correctly engages the four guide pins on the 8U GPU shuttle.
- b. Locate the ten screw holes marked with **C** on both sides of the 8U GPU shuttle; then, fasten the ten screws to secure the front PCIe switch cable harness.

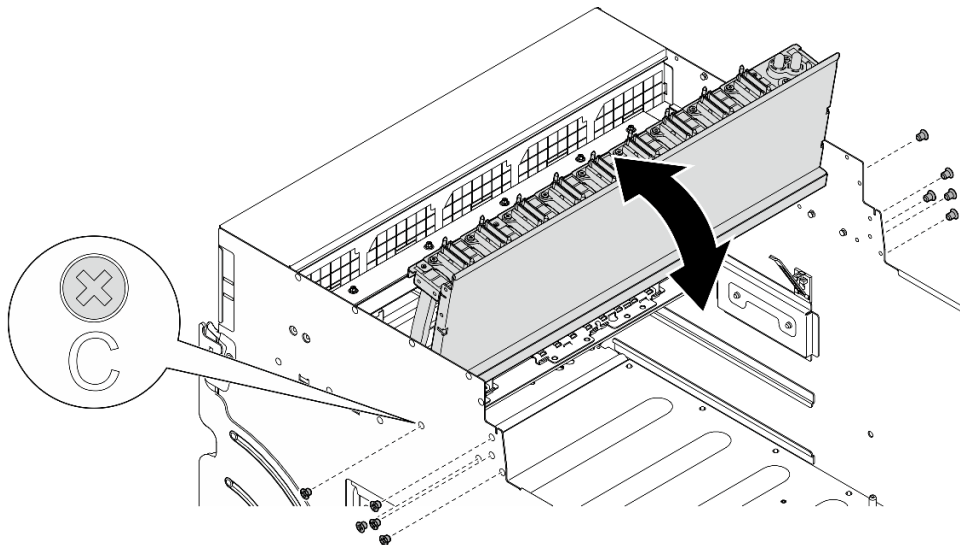


Figure 127. Flipping over the front PCIe switch cable harness

Step 5. Install the PCIe switch shuttle.

- a. ① Press the two lock latches on both sides of the PCIe switch shuttle.

- b. 2 Push the PCIe switch shuttle into the 8U GPU shuttle until it stops.
- c. 3 Rotate the two release levers until they lock into place.

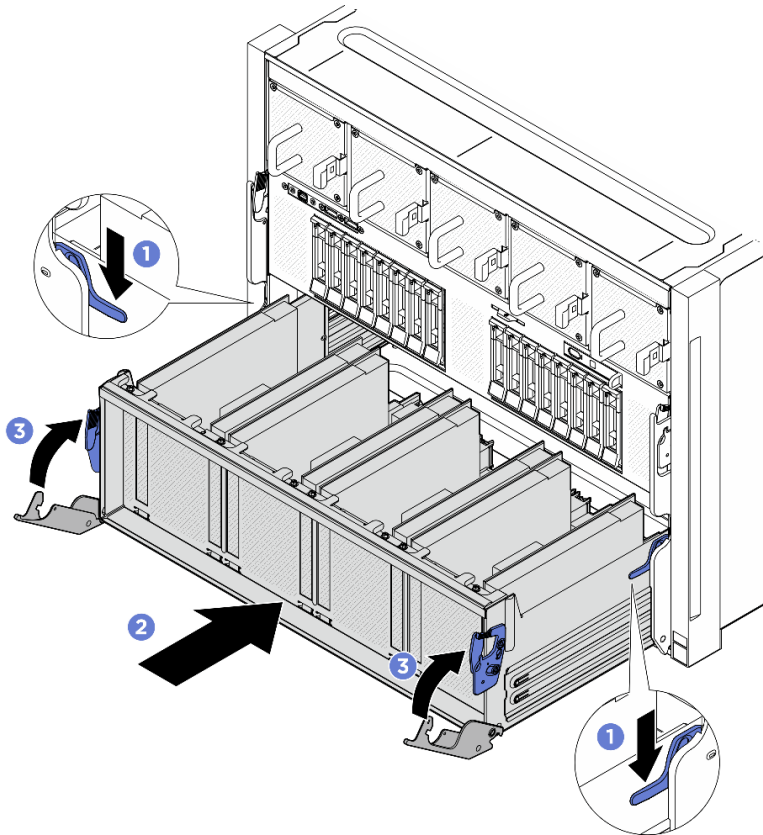


Figure 128. PCIe switch shuttle installation to 8U GPU shuttle

After you finish

1. Reinstall all the GPU and heat sink modules. See [“Install an H100/H200 GPU and heat sink module” on page 154](#).
2. Reconnect the cables to the GPU baseboard. See [“GPU baseboard cable routing” on page 211](#) for more information.
3. Reinstall all the GPU air ducts. See [“Install an H100/H200 GPU air duct” on page 126](#).
4. Reinstall all the rear fan control board assemblies. See [“Install a rear fan control board assembly” on page 48](#).
5. Reinstall the power complex. See [“Install the power complex” on page 77](#).
6. Reinstall the cable cover. See [“Install the cable cover” on page 33](#).
7. Reinstall the 8U GPU shuttle. See [“Install the 8U GPU shuttle” on page 30](#).
8. Reinstall all the 2.5-inch hot-swap drives or drive bay fillers (if any) into the drive bays. See [“Install a 2.5-inch hot-swap drive” on page 24](#).
9. Reinstall all the front fans. See [“Install a hot-swap fan \(front and rear\)” on page 40](#).
10. Reinstall all the power supply units. See [“Install a hot-swap power supply unit” on page 84](#).
11. Complete the parts replacement. See [“Complete the parts replacement” on page 191](#).

GPU complex replacement (trained technician only)

Follow instructions in this section to remove or install the GPU complex.

Important: This task must be operated by trained technicians that are certified by Lenovo Service. Do not attempt to remove or install the part without proper training and qualification.

Remove the H100/H200 GPU complex

Follow instructions in this section to remove the H100/H200 GPU complex. The procedure must be executed by a trained technician.

About this task

S036



18 - 32 kg (39 - 70 lb)



32 - 55 kg (70 - 121 lb)

CAUTION:

Use safe practices when lifting.

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See “[Power off the server](#)” on page 7.
- Two people and one lifting device on site that can support up to 400 lb (181 kg) are required to perform this procedure. If you do not already have a lifting device available, Lenovo offers the Genie Lift GL-8 material lift that can be purchased at Data Center Solution Configurator: <https://dcsc.lenovo.com/#/configuration/cto/7D5YCTO1WW?hardwareType=lifttool>. Make sure to include the Foot-release brake and the Load Platform when ordering the Genie Lift GL-8 material lift.

Notes: Make sure you have the required tools listed below available to properly replace the component:

- Torque screwdriver which can be set to 0.6 newton-meters, 5.3 inch-pounds
- Torx T15 extended bit (6-inch long)

Procedure

Step 1. Make preparation for this task.

- a. Remove all the power supply units. See “[Remove a hot-swap power supply unit](#)” on page 82.
- b. Remove all the front fans. See “[Remove a hot-swap fan \(front and rear\)](#)” on page 38.
- c. Remove all the 2.5-inch hot-swap drives and the drive bay fillers (if any) from the drive bays. See “[Remove a 2.5-inch hot-swap drive](#)” on page 22.
- d. Pull the 8U GPU shuttle out of the chassis, and place it onto the lift platform. See “[Remove the 8U GPU shuttle](#)” on page 28.
- e. Remove the cable cover. See “[Remove the cable cover](#)” on page 32.
- f. Remove the power complex. See “[Remove the power complex](#)” on page 76.

- g. Remove all the rear fan control board assemblies. See [“Remove a rear fan control board assembly” on page 46.](#)
- h. Remove all the GPU air ducts. See [“Remove an H100/H200 GPU air duct” on page 125.](#)
- i. Disconnect the cables from the GPU baseboard.

Step 2. Disengage the PCIe switch shuttle from the 8U GPU shuttle.

- a. ① Press the two blue release latches.
- b. ② Rotate the two release levers until they are perpendicular to the PCIe switch shuttle.
- c. ③ Pull the PCIe switch shuttle forward until it stops.

Note: Push the two release levers back until they lock into place after pulling out the PCIe switch shuttle to avoid damage.

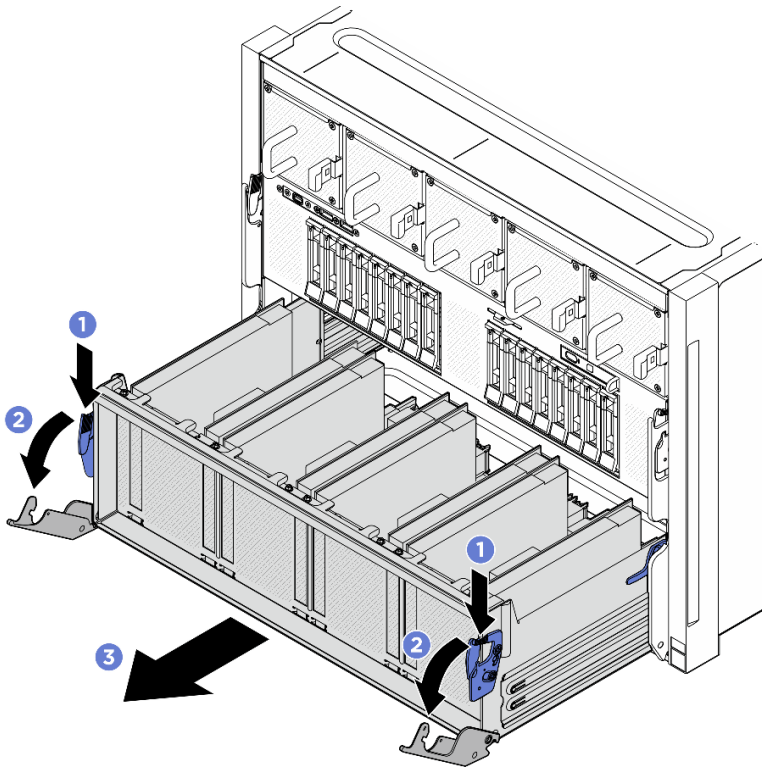


Figure 129. PCIe switch shuttle removal to stop position

Step 3. Flip over the front PCIe switch cable harness.

- a. Unfasten the ten screws marked with **C** on both sides of the 8U GPU shuttle.
- b. Flip over the front PCIe switch cable harness, and gently place it on the I/O cover.

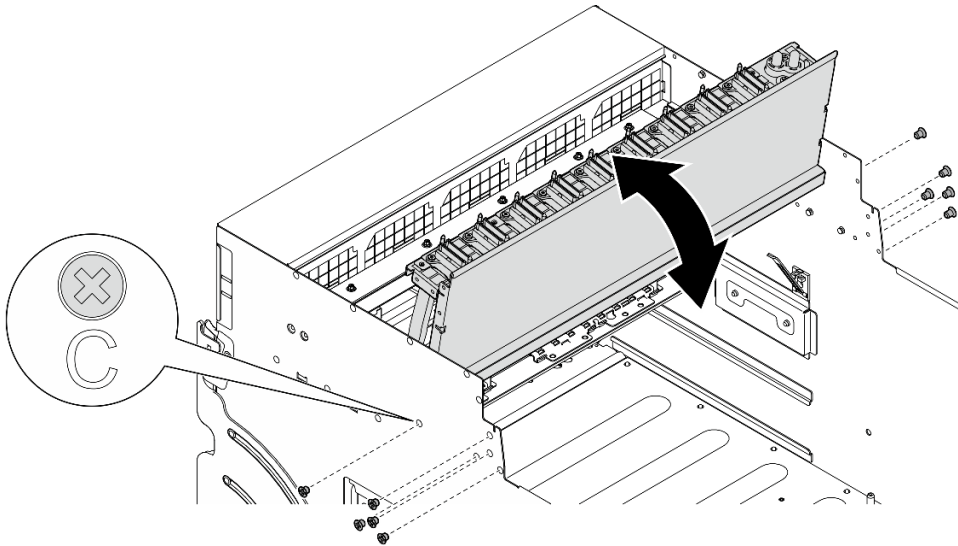


Figure 130. Flipping over the front PCIe switch cable harness

Step 4. Unfasten the seventeen Torx T15 captive screws on the GPU baseboard.

Note: Loosen or tighten the screws with a torque screwdriver set to the proper torque. For reference, the torque required for the screws to be fully loosen or tighten is 0.6 newton-meters, 5.3 inch-pounds.

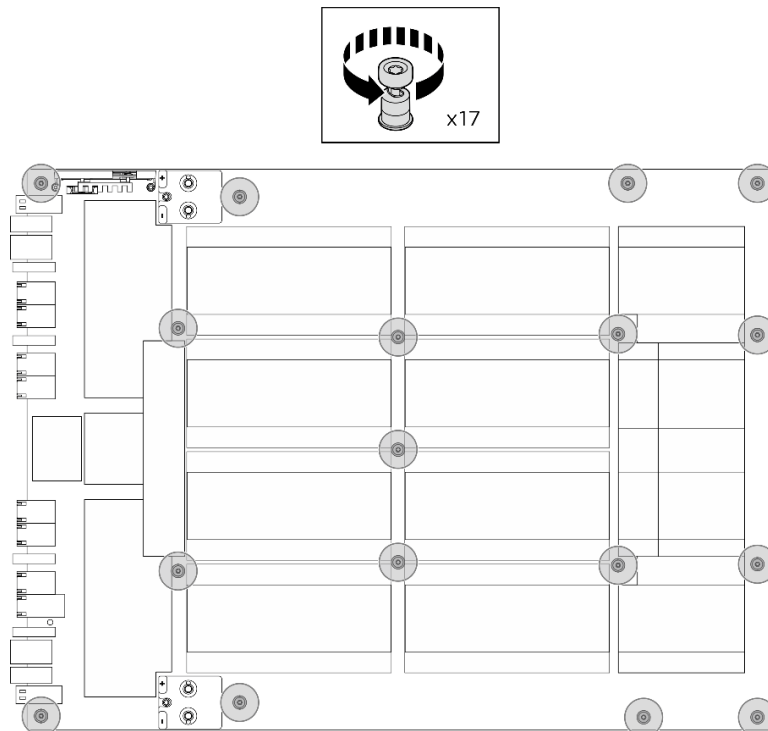


Figure 131. Screw removal

Step 5. Remove the GPU complex.

- a. 1 Extend the two handles (■) on both sides of the GPU baseboard.

- b. ② Hold the two handles (1), and lift the GPU complex out of the 8U GPU shuttle.

Attention: Make sure two people stand on either side of the GPU complex, and lift it by holding the two handles (1).

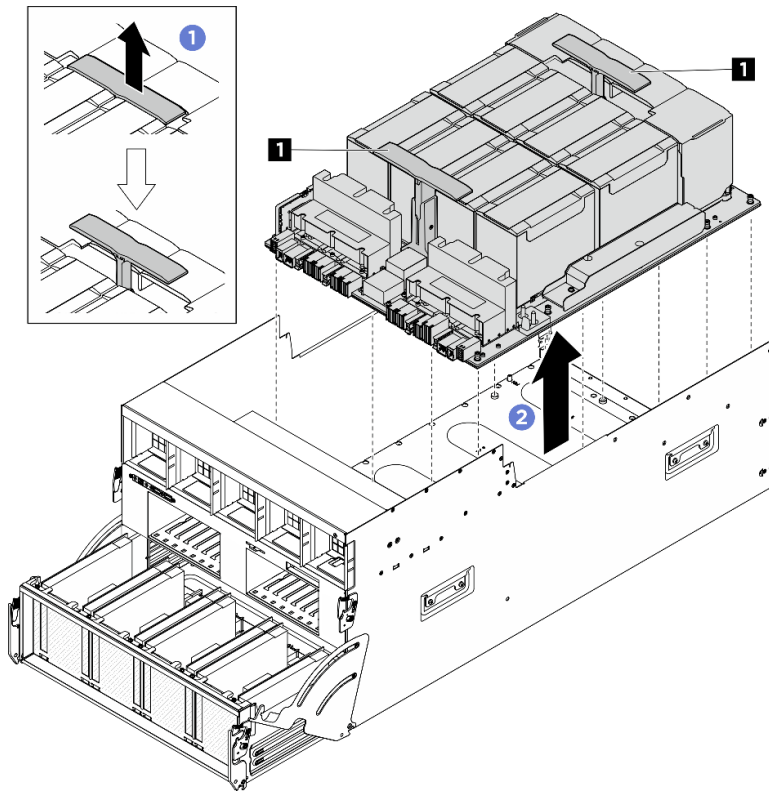


Figure 132. GPU complex removal

After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Install the H100/H200 GPU complex

Follow instructions in this section to install the H100/H200 GPU complex. The procedure must be executed by a trained technician.

About this task

S036



18 - 32 kg (39 - 70 lb)



32 - 55 kg (70 - 121 lb)

CAUTION:

Use safe practices when lifting.

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Touch the static-protective package that contains the component to any unpainted metal surface on the server; then, remove it from the package and place it on a static-protective surface.
- Two people and one lifting device on site that can support up to 400 lb (181 kg) are required to perform this procedure. If you do not already have a lifting device available, Lenovo offers the Genie Lift GL-8 material lift that can be purchased at Data Center Solution Configurator: <https://dcsc.lenovo.com/#/configuration/cto/7D5YCTO1WW?hardwareType=lifttool>. Make sure to include the Foot-release brake and the Load Platform when ordering the Genie Lift GL-8 material lift.

Notes: Make sure you have the required tools listed below available to properly replace the component:

- Torque screwdriver which can be set to 0.6 newton-meters, 5.3 inch-pounds
- Torx T15 extended bit (6-inch long)

Firmware and driver download: You might need to update the firmware or driver after replacing a component.

- Go to <https://datacentersupport.lenovo.com/tw/en/products/servers/thinksystem/sr680av3/7dhe/downloads/driver-list/> to see the latest firmware and driver updates for your server.
- Go to “Update the firmware” in *User Guide* or *System Configuration Guide* for more information on firmware updating tools.

Procedure

Step 1. (Optional) Remove the new GPU complex from the package box.

- a. ① Extend the two handles on both sides of the GPU baseboard.
- b. ② Hold the two handles, and remove the GPU complex out from the package box.

Attention: Make sure two people stand on either side of the GPU complex, and lift it by holding the two handles.

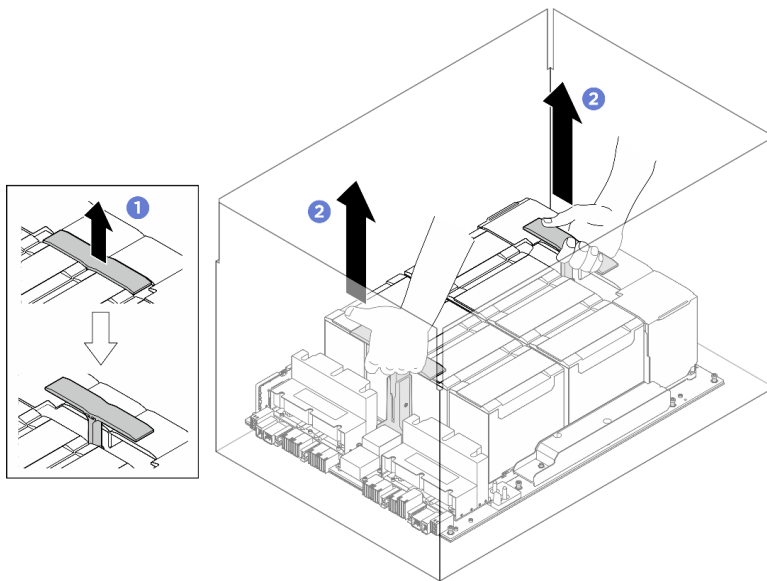


Figure 133. Removing the GPU complex from the package box

Step 2. Install the GPU complex.

- a. ① Hold the handles (1) on both sides of the GPU baseboard in the correct orientation as illustrated; then, align the GPU complex with the seventeen standoffs on the GPU complex adapter plate, and gently place it onto the adapter plate.
- b. ② Push the two handles (1) down.

Attention: Make sure two people stand on either side of the GPU complex, and lift it by holding the two handles (1).

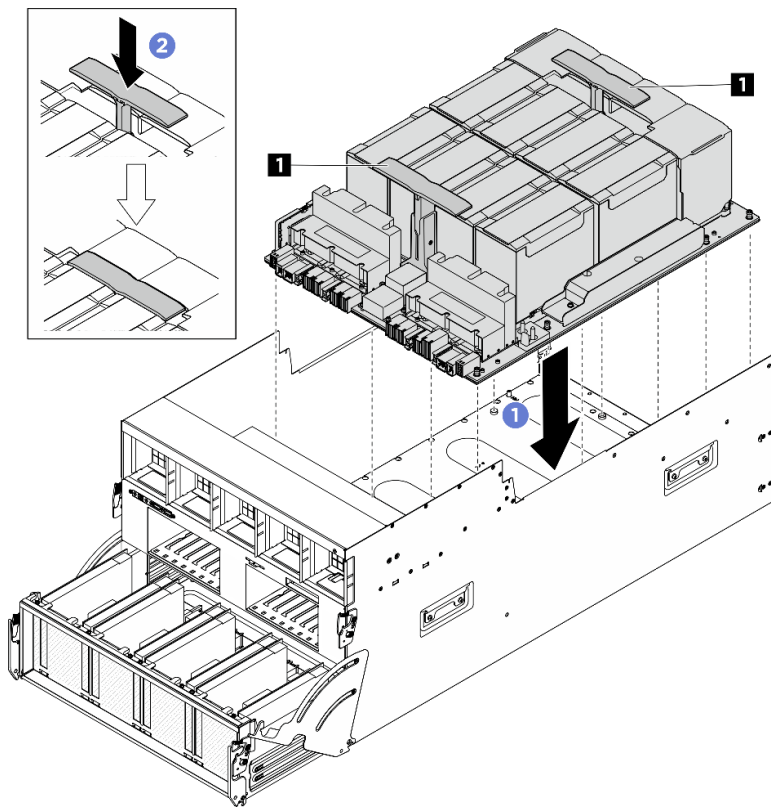


Figure 134. GPU complex installation

Step 3. Follow the sequence shown in the illustration below to fasten the seventeen Torx T15 captive screws to secure the GPU complex.

Important: Do not overtighten the screws to avoid damage.

Note: Loosen or tighten the screws with a torque screwdriver set to the proper torque. For reference, the torque required for the screws to be fully loosen or tighten is 0.6 newton-meters, 5.3 inch-pounds.


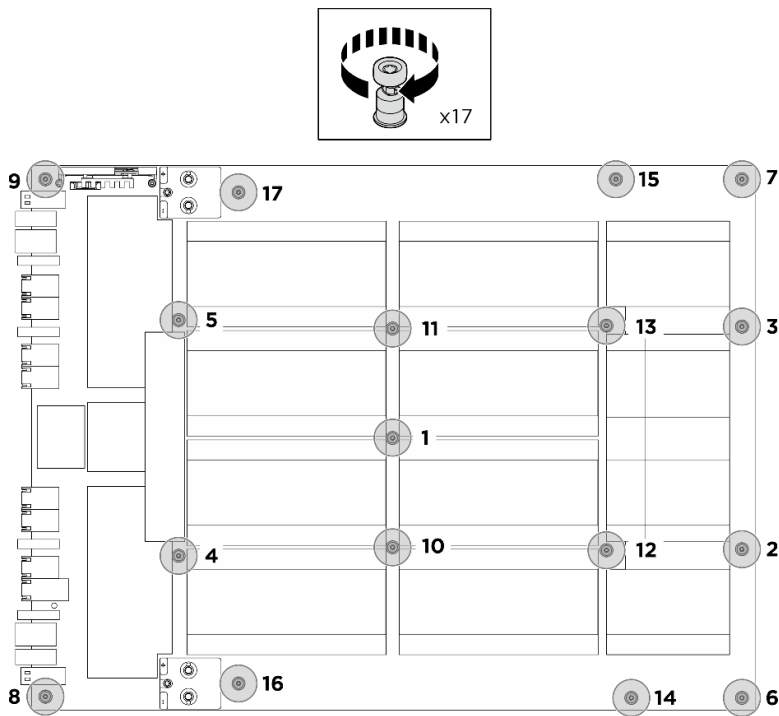



Figure 135. Screw installation

Step 4. (Optional) Complete the following steps for the new GPU complex.

- Attach the FRU part number label to each GPU and heat sink module.
 1. ❶ Remove the protective film from the plastic cover.
 2. ❷ Attach the FRU part number label to the plastic cover.

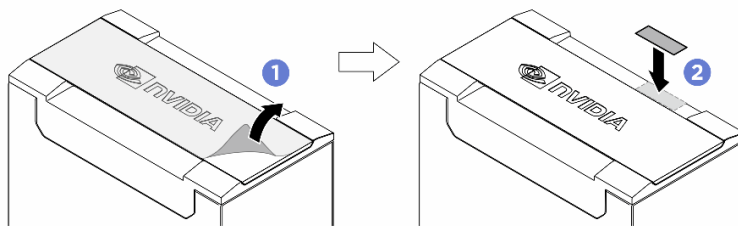

- Remove the yellow tags from the two handles on both sides of the GPU complex.

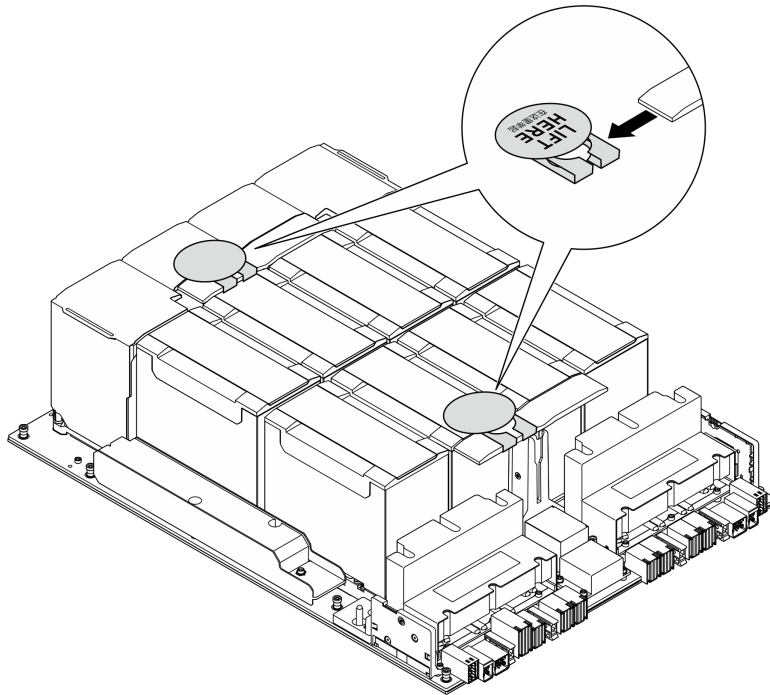

Step 5. Flip over the front PCIe switch cable harness.

- a. Flip over the front PCIe switch cable harness, and make sure that it correctly engages the four guide pins on the 8U GPU shuttle.
- b. Locate the ten screw holes marked with **C** on both sides of the 8U GPU shuttle; then, fasten the ten screws to secure the front PCIe switch cable harness.

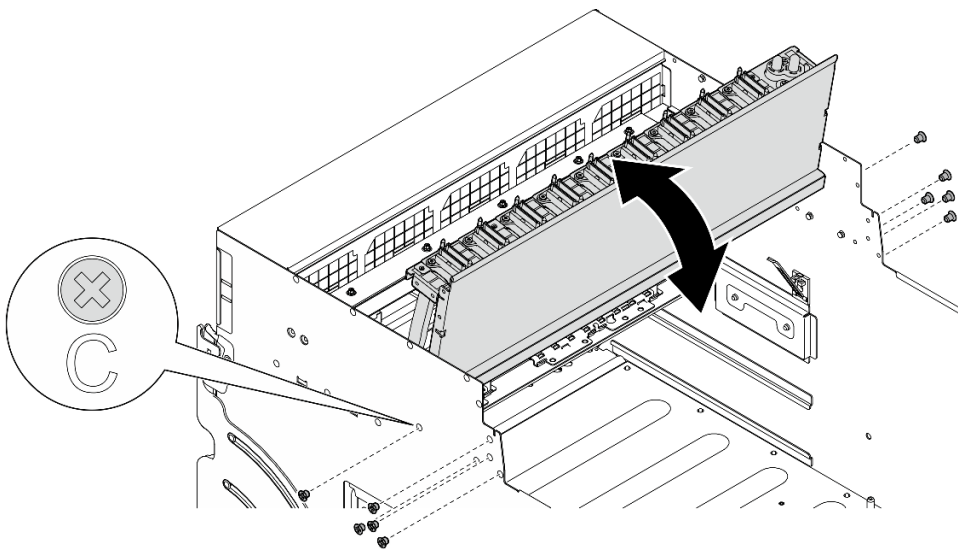


Figure 136. Flipping over the front PCIe switch cable harness

Step 6. Install the PCIe switch shuttle.

- a. ① Press the two lock latches on both sides of the PCIe switch shuttle.
- b. ② Push the PCIe switch shuttle into the 8U GPU shuttle until it stops.
- c. ③ Rotate the two release levers until they lock into place.

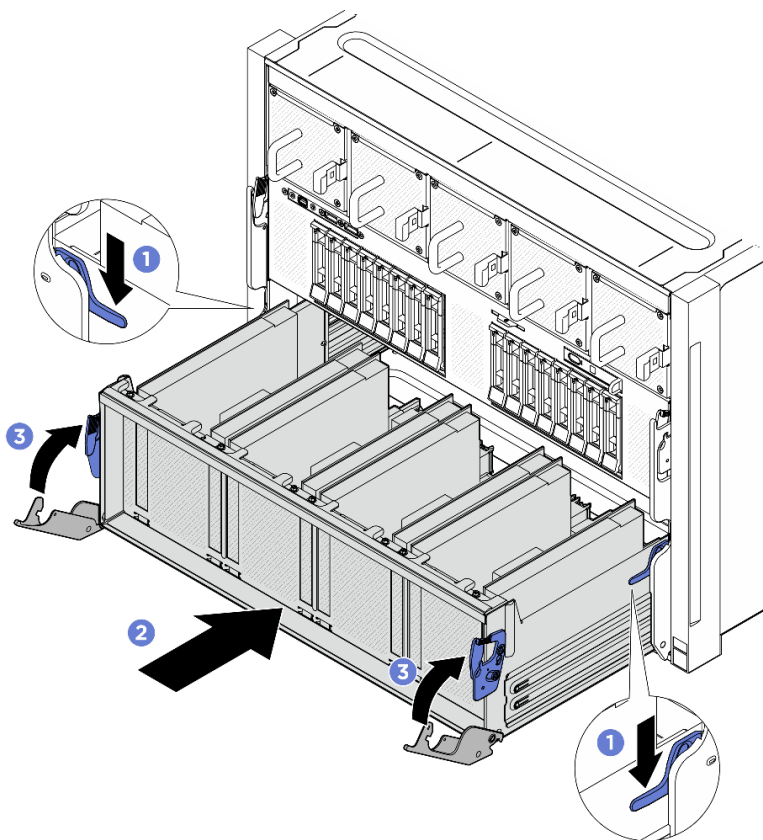


Figure 137. PCIe switch shuttle installation to 8U GPU shuttle

After you finish

1. Reconnect the cables to the GPU baseboard. See [“GPU baseboard cable routing” on page 211](#) for more information.
2. Reinstall all the GPU air ducts. See [“Install an H100/H200 GPU air duct” on page 126](#).
3. Reinstall all the rear fan control board assemblies. See [“Install a rear fan control board assembly” on page 48](#).
4. Reinstall the power complex. See [“Install the power complex” on page 77](#).
5. Reinstall the cable cover. See [“Install the cable cover” on page 33](#).
6. Reinstall the 8U GPU shuttle. See [“Install the 8U GPU shuttle” on page 30](#).
7. Reinstall all the 2.5-inch hot-swap drives or drive bay fillers (if any) into the drive bays. See [“Install a 2.5-inch hot-swap drive” on page 24](#)
8. Reinstall all the front fans. See [“Install a hot-swap fan \(front and rear\)” on page 40](#).
9. Reinstall all the power supply units. See [“Install a hot-swap power supply unit” on page 84](#).
10. Complete the parts replacement. See [“Complete the parts replacement” on page 191](#).

GPU complex adapter plate replacement (trained technician only)

Follow instructions in this section to remove or install the GPU complex adapter plate.

Important: This task must be operated by trained technicians that are certified by Lenovo Service. Do not attempt to remove or install the part without proper training and qualification.

Remove the GPU complex adapter plate

Follow instructions in this section to remove the GPU complex adapter plate. The procedure must be executed by a trained technician.

About this task

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See “[Power off the server](#)” on page 7.
- Two people and one lifting device on site that can support up to 400 lb (181 kg) are required to perform this procedure. If you do not already have a lifting device available, Lenovo offers the Genie Lift GL-8 material lift that can be purchased at Data Center Solution Configurator: <https://dcsc.lenovo.com/#/configuration/cto/7D5YCTO1WW?hardwareType=lifttool>. Make sure to include the Foot-release brake and the Load Platform when ordering the Genie Lift GL-8 material lift.

Notes: Make sure you have the required tools listed below available to properly replace the component:

- Torque screwdriver which can be set to 0.6 newton-meters, 5.3 inch-pounds (for H100/H200 GPU complex).
- Torx T15 extended bit (6-inch long)

Procedure

Step 1. Make preparation for this task.

- a. Remove all the power supply units. See “[Remove a hot-swap power supply unit](#)” on page 82.
- b. Remove all the front fans. See “[Remove a hot-swap fan \(front and rear\)](#)” on page 38.
- c. Remove all the 2.5-inch hot-swap drives and the drive bay fillers (if any) from the drive bays. See “[Remove a 2.5-inch hot-swap drive](#)” on page 22.
- d. Pull the 8U GPU shuttle out of the chassis, and place it onto the lift platform. See “[Remove the 8U GPU shuttle](#)” on page 28.
- e. Remove the cable cover. See “[Remove the cable cover](#)” on page 32.
- f. Remove the power complex. See “[Remove the power complex](#)” on page 76.
- g. Remove all the rear fan control board assemblies. See “[Remove a rear fan control board assembly](#)” on page 46.
- h. Remove all the GPU air ducts. See “[Remove an H100/H200 GPU air duct](#)” on page 125.

Step 2. Disengage the PCIe switch shuttle from the 8U GPU shuttle.

- a. ① Press the two blue release latches.
- b. ② Rotate the two release levers until they are perpendicular to the PCIe switch shuttle.
- c. ③ Pull the PCIe switch shuttle forward until it stops.

Note: Push the two release levers back until they lock into place after pulling out the PCIe switch shuttle to avoid damage.

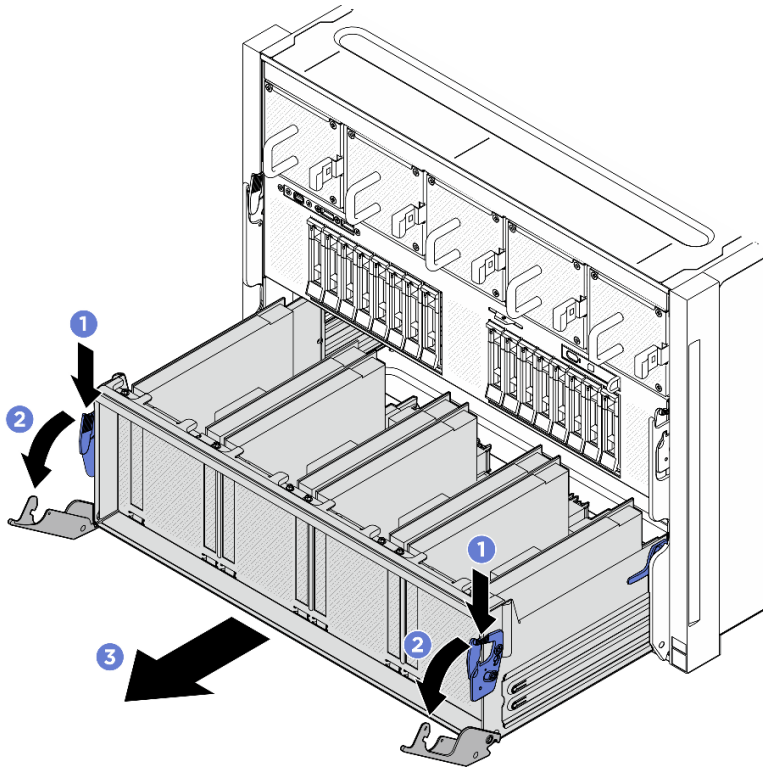


Figure 138. PCIe switch shuttle removal to stop position

- Step 3. Flip over the front PCIe switch cable harness.
- a. Unfasten the ten screws marked with **C** on both sides of the 8U GPU shuttle.
 - b. Flip over the front PCIe switch cable harness, and gently place it on the I/O cover.

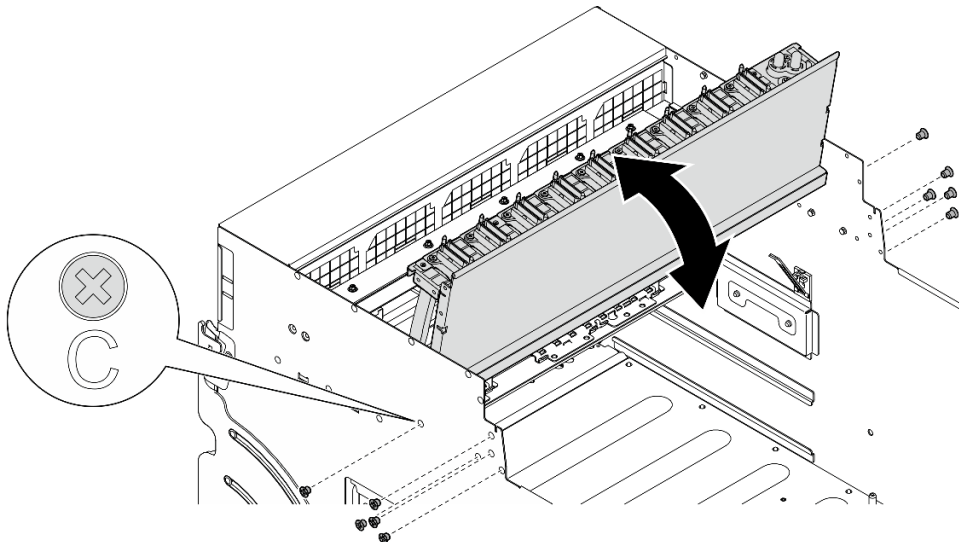


Figure 139. Flipping over the front PCIe switch cable harness

- Step 4. Remove the GPU complex. See [“Remove the H100/H200 GPU complex”](#) on page 136.
- Step 5. Unfasten the fourteen screws marked with an arrow on the GPU complex adapter plate; then, lift the GPU complex adapter plate out of the 8U GPU shuttle.

Note: The GPU complex adapter plate might look different from the illustration.

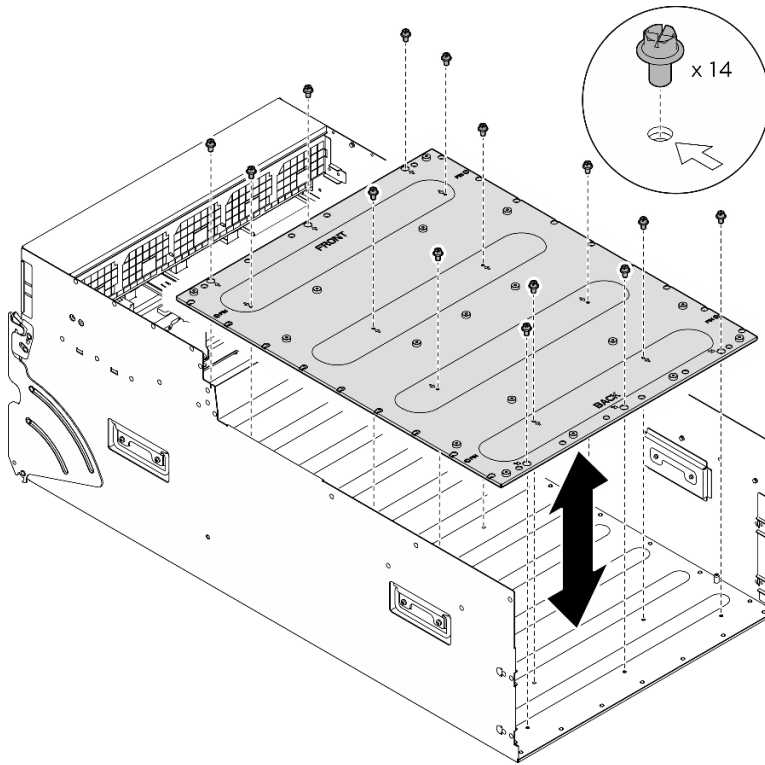


Figure 140. GPU complex adapter plate removal

After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Install the GPU complex adapter plate

Follow instructions in this section to install the GPU complex adapter plate. The procedure must be executed by a trained technician.

About this task

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Touch the static-protective package that contains the component to any unpainted metal surface on the server; then, remove it from the package and place it on a static-protective surface.
- Two people and one lifting device on site that can support up to 400 lb (181 kg) are required to perform this procedure. If you do not already have a lifting device available, Lenovo offers the Genie Lift GL-8 material lift that can be purchased at Data Center Solution Configurator: <https://dcsc.lenovo.com/#/configuration/cto/7D5YCTO1WW?hardwareType=lifttool>. Make sure to include the Foot-release brake and the Load Platform when ordering the Genie Lift GL-8 material lift.

Notes: Make sure you have the required tools listed below available to properly replace the component:

- Torque screwdriver which can be set to 0.6 newton-meters, 5.3 inch-pounds (for H100/H200 GPU complex).
- Torx T15 extended bit (6-inch long)

Procedure

- Step 1. Align the GPU complex adapter plate with the four guide pins in the bottom of the 8U GPU shuttle; then, lower the GPU complex adapter plate into the 8U GPU shuttle.
- Step 2. Locate the fourteen screw holes marked with an arrow; then, fasten the fourteen screws to secure the GPU complex adapter plate.

Note: The GPU complex adapter plate might look different from the illustration.

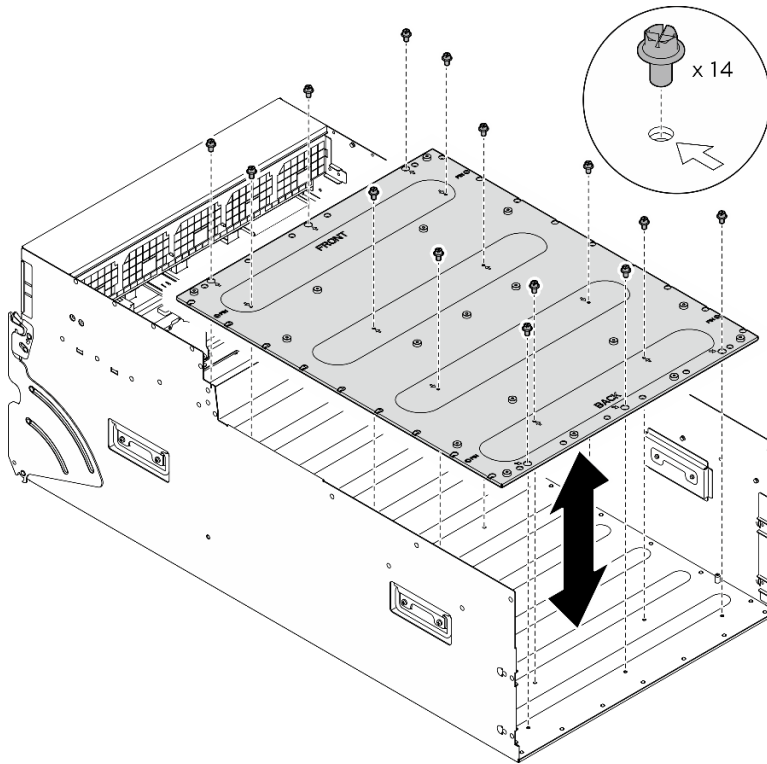


Figure 141. GPU complex adapter plate installation

- Step 3. Install the GPU complex. See [“Install the H100/H200 GPU complex” on page 139](#).
- Step 4. Flip over the front PCIe switch cable harness.
 - a. Flip over the front PCIe switch cable harness, and make sure that it correctly engages the four guide pins on the 8U GPU shuttle.
 - b. Locate the ten screw holes marked with **C** on both sides of the 8U GPU shuttle; then, fasten the ten screws to secure the front PCIe switch cable harness.

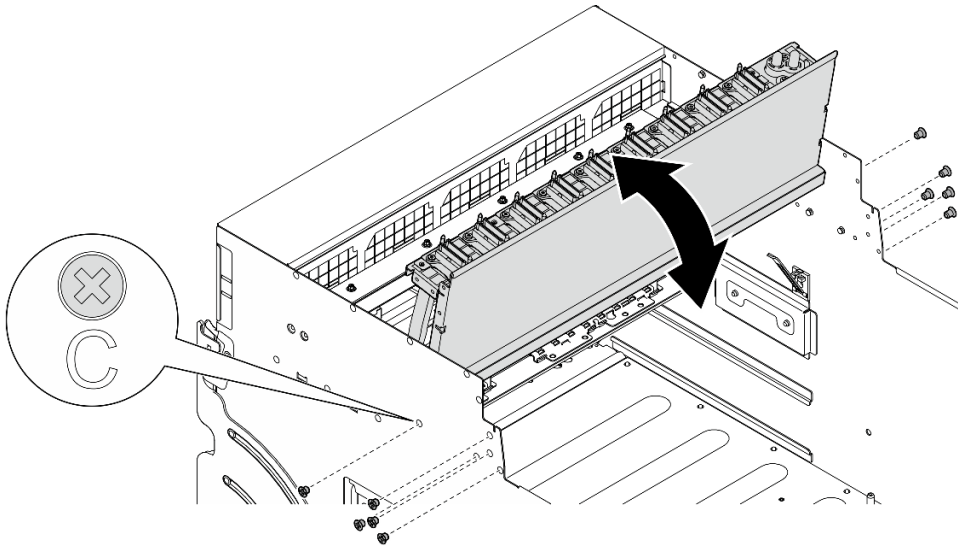


Figure 142. Flipping over the front PCIe switch cable harness

Step 5. Install the PCIe switch shuttle.

- a. 1 Press the two lock latches on both sides of the PCIe switch shuttle.
- b. 2 Push the PCIe switch shuttle into the 8U GPU shuttle until it stops.
- c. 3 Rotate the two release levers until they lock into place.

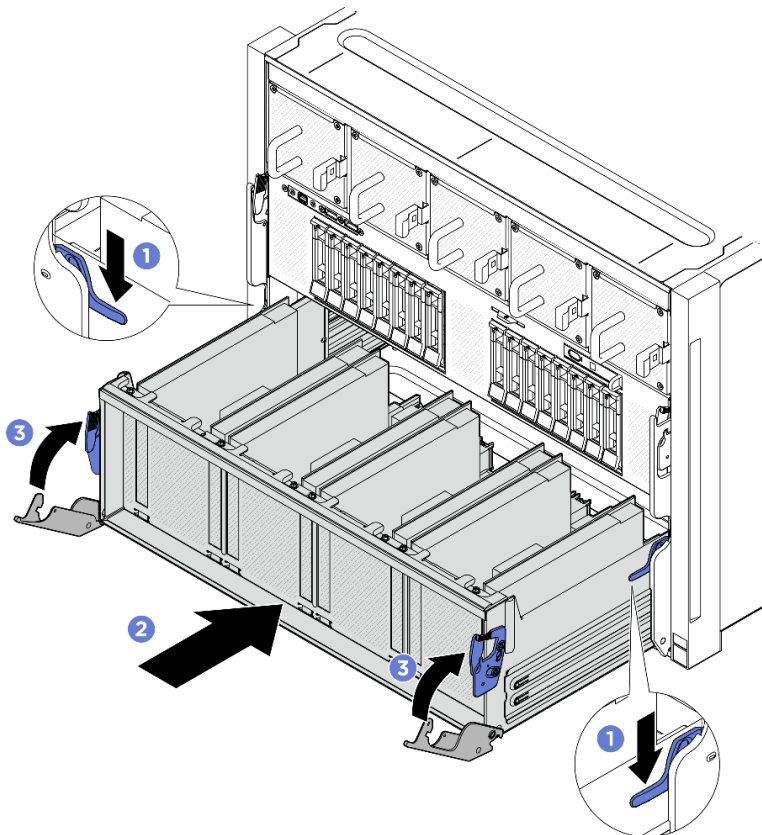


Figure 143. PCIe switch shuttle installation to 8U GPU shuttle

After you finish

1. Reinstall all the GPU air ducts. See “[Install an H100/H200 GPU air duct](#)” on page 126.
2. Reinstall all the rear fan control board assemblies. See “[Install a rear fan control board assembly](#)” on page 48.
3. Reinstall the power complex. See “[Install the power complex](#)” on page 77.
4. Reinstall the cable cover. See “[Install the cable cover](#)” on page 33.
5. Reinstall the 8U GPU shuttle. See “[Install the 8U GPU shuttle](#)” on page 30.
6. Reinstall all the 2.5-inch hot-swap drives or drive bay fillers (if any) into the drive bays. See “[Install a 2.5-inch hot-swap drive](#)” on page 24
7. Reinstall all the front fans. See “[Install a hot-swap fan \(front and rear\)](#)” on page 40.
8. Reinstall all the power supply units. See “[Install a hot-swap power supply unit](#)” on page 84.
9. Complete the parts replacement. See “[Complete the parts replacement](#)” on page 191.

GPU and heat sink module replacement (trained technician only)

Follow instructions in this section to remove or install a GPU and heat sink module.

Important: This task must be operated by trained technicians that are certified by Lenovo Service. Do not attempt to remove or install the part without proper training and qualification.


Remove an H100/H200 GPU and heat sink module

Follow instructions in this section to remove an H100/H200 GPU and heat sink module. The procedure must be executed by a trained technician.

About this task

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See “[Power off the server](#)” on page 7.
- Two people and one lifting device on site that can support up to 400 lb (181 kg) are required to perform this procedure. If you do not already have a lifting device available, Lenovo offers the Genie Lift GL-8 material lift that can be purchased at Data Center Solution Configurator: <https://dcsc.lenovo.com/#/configuration/cto/7D5YCTO1WW?hardwareType=lifttool>. Make sure to include the Foot-release brake and the Load Platform when ordering the Genie Lift GL-8 material lift.
- Make sure to inspect the connectors and sockets on the GPU and the GPU baseboard. Do not use the GPU or the GPU baseboard if its connectors are damaged or missing, or if there are debris in the sockets. Replace the GPU or the GPU baseboard with a new one before continuing the installation procedure.
- GPU and heat sink is one part. Do not remove the heat sink from the GPU.
- The following illustration shows the GPU and heat sink module numbering and corresponding slot numbering in XCC.

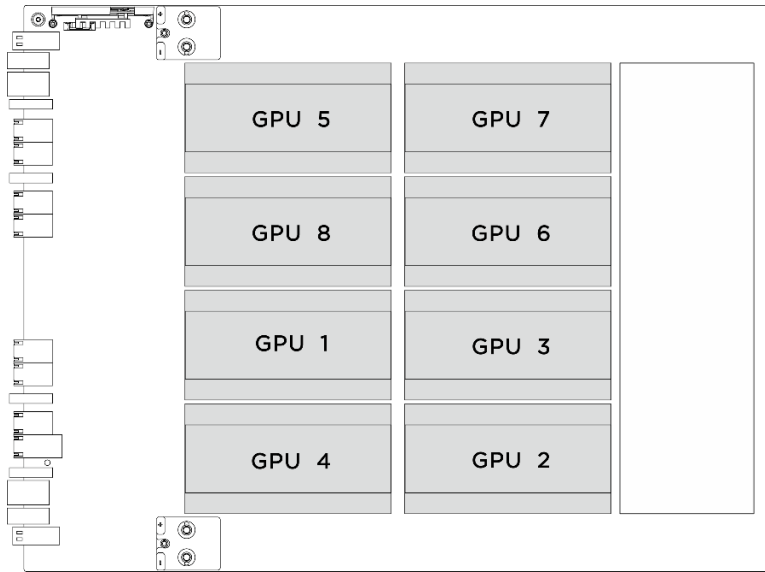

GPU and heat sink module numbering	Slot numbering in XCC
GPU 1	Slot 21
GPU 2	Slot 24
GPU 3	Slot 22
GPU 4	Slot 23
GPU 5	Slot 17
GPU 6	Slot 20
GPU 7	Slot 18
GPU 8	Slot 19

Notes: Make sure you have the required tools listed below available to properly replace the component:

- Torque screwdriver which can be set to 0.6 newton-meters, 5.3 inch-pounds
- Torx T15 extended bit (6-inch long)

Procedure

Step 1. Make preparation for this task.

- Remove all the power supply units. See [“Remove a hot-swap power supply unit” on page 82.](#)
- Remove all the front fans. See [“Remove a hot-swap fan \(front and rear\)” on page 38.](#)
- Remove all the 2.5-inch hot-swap drives and the drive bay fillers (if any) from the drive bays. See [“Remove a 2.5-inch hot-swap drive” on page 22.](#)

- d. Pull the 8U GPU shuttle out of the chassis, and place it onto the lift platform. See [“Remove the 8U GPU shuttle” on page 28](#).
- e. Remove the power complex. See [“Remove the power complex” on page 76](#).
- f. (GPU and heat sink module 2, 4, 5, and 7 only) Remove the GPU air duct. See [“Remove an H100/H200 GPU air duct” on page 125](#).

Step 2. Remove the plastic cover from the GPU and heat sink module.

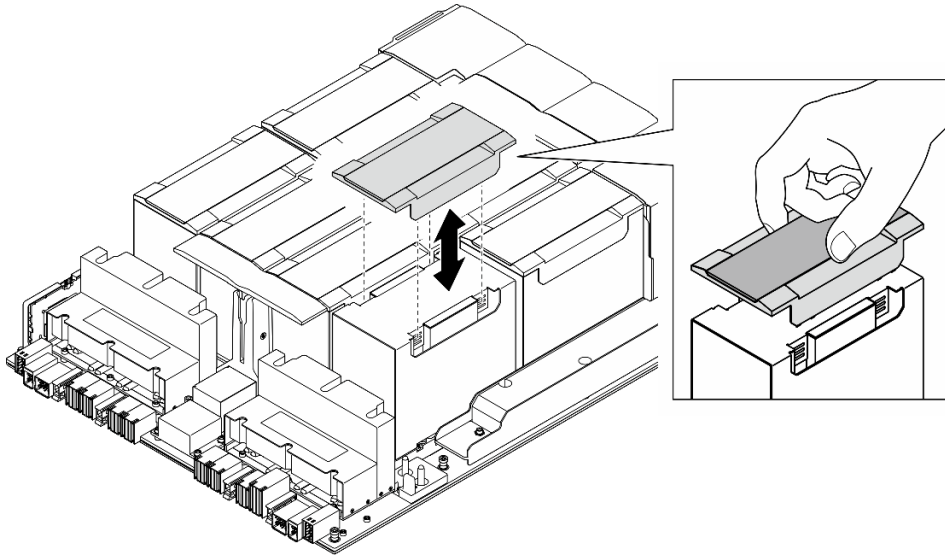


Figure 144. Plastic cover removal

Step 3. Remove the GPU and heat sink module.

- a. ①②③④ Unfasten the four Torx T15 screws in the sequence shown in the illustration below.

Notes:

- Loosen or tighten the screws with a torque screwdriver set to the proper torque. For reference, the torque required for the screws to be fully loosen or tighten is 0.6 newton-meters, 5.3 inch-pounds.
 - A flashlight helps to locate the screws.
- b. ⑤ Use both hands to lift the GPU and heat sink module out of the GPU baseboard.

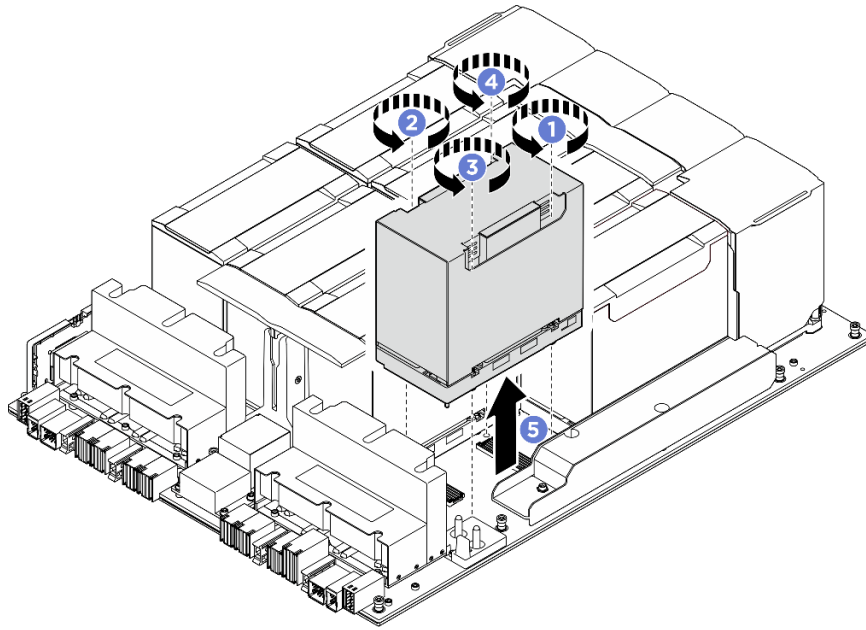


Figure 145. GPU and heat sink module removal

After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.


Install an H100/H200 GPU and heat sink module

Follow instructions in this section to install an H100/H200 GPU and heat sink module. The procedure must be executed by a trained technician.

About this task

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Touch the static-protective package that contains the component to any unpainted metal surface on the server; then, remove it from the package and place it on a static-protective surface.
- Two people and one lifting device on site that can support up to 400 lb (181 kg) are required to perform this procedure. If you do not already have a lifting device available, Lenovo offers the Genie Lift GL-8 material lift that can be purchased at Data Center Solution Configurator: <https://dcsc.lenovo.com/#/configuration/cto/7D5YCTO1WW?hardwareType=lifttool>. Make sure to include the Foot-release brake and the Load Platform when ordering the Genie Lift GL-8 material lift.
- Make sure to inspect the connectors and sockets on the GPU and the GPU baseboard. Do not use the GPU or the GPU baseboard if its connectors are damaged or missing, or if there are debris in the sockets. Replace the GPU or the GPU baseboard with a new one before continuing the installation procedure.
- GPU and heat sink is one part. Do not remove the heat sink from the GPU.
- The following illustration shows the GPU and heat sink module numbering and corresponding slot numbering in XCC.

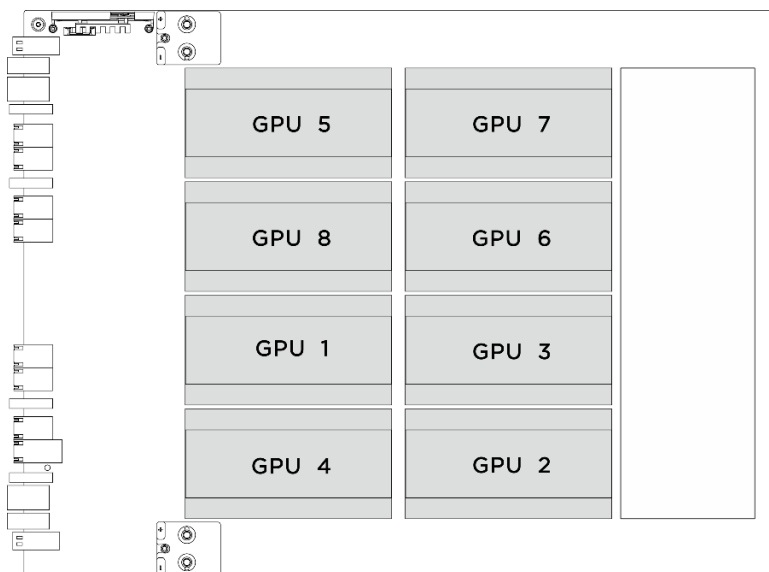

GPU and heat sink module numbering	Slot numbering in XCC
GPU 1	Slot 21
GPU 2	Slot 24
GPU 3	Slot 22
GPU 4	Slot 23
GPU 5	Slot 17
GPU 6	Slot 20
GPU 7	Slot 18
GPU 8	Slot 19

Notes: Make sure you have the required tools listed below available to properly replace the component:

- Torque screwdriver which can be set to 0.6 newton-meters, 5.3 inch-pounds
- Torx T15 extended bit (6-inch long)


Firmware and driver download: You might need to update the firmware or driver after replacing a component.

- Go to <https://datacentersupport.lenovo.com/tw/en/products/servers/thinksystem/sr680av3/7dhe/downloads/driver-list/> to see the latest firmware and driver updates for your server.
- Go to “Update the firmware” in *User Guide* or *System Configuration Guide* for more information on firmware updating tools.


Procedure

Step 1. (Optional) Complete the following steps for the new GPU and heat sink module.


- Remove the connector covers at the bottom.

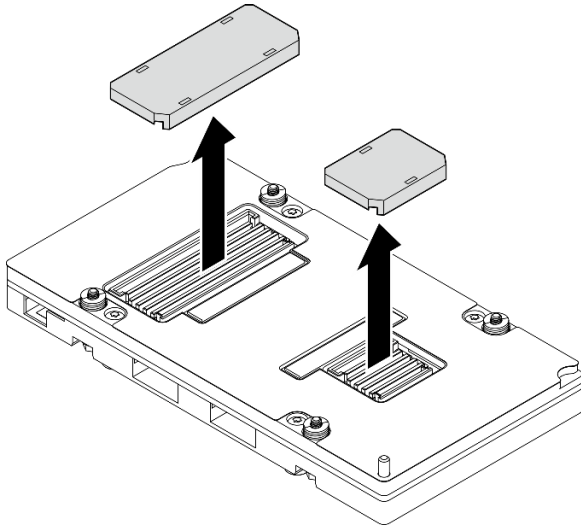

- Attach the FRU part number label.
 1. ① Remove the protective film from the plastic cover.
 2. ② Attach the FRU part number label to the plastic cover.

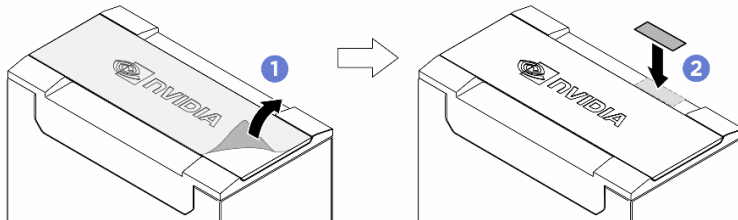

- Remove the plastic cover from the heat sink.

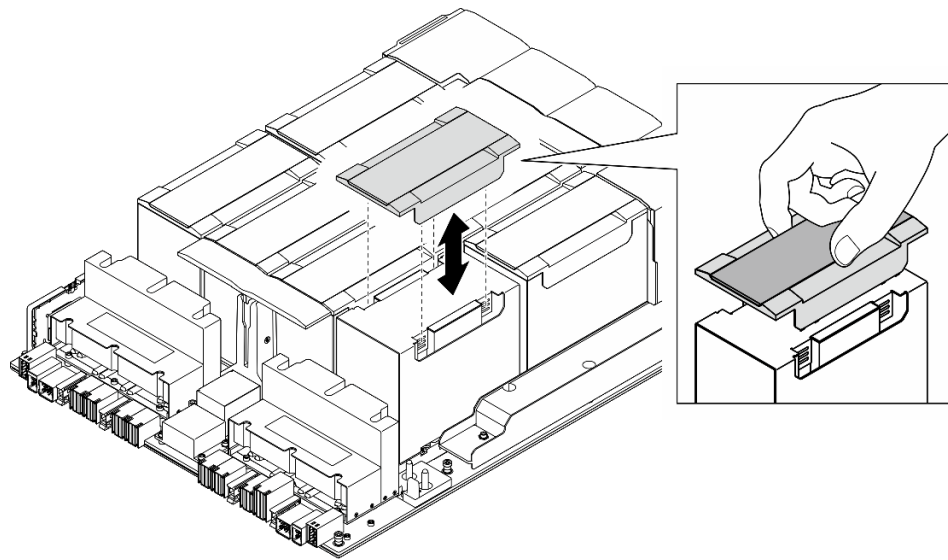

Step 2. Grasp the GPU and heat sink module with both hands; then, align the GPU and heat sink module with the two guide holes on the GPU baseboard and gently place it onto the GPU baseboard.

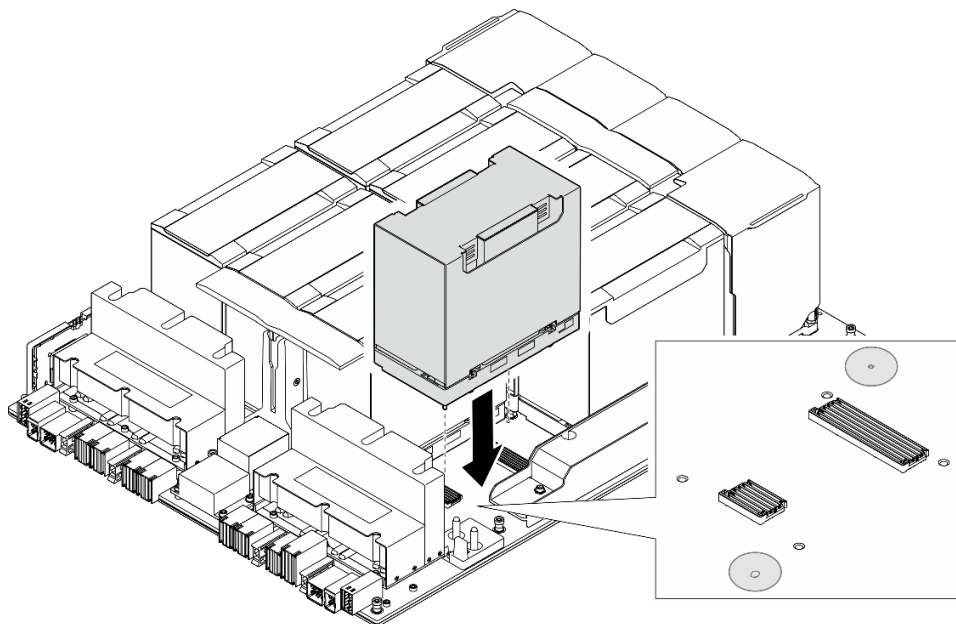


Figure 146. GPU and heat sink module installation

Step 3. ①②③④ Follow the sequence shown in the illustration below to fasten the four Torx T15 screws to secure the GPU and heat sink module.

Notes:

- Loosen or tighten the screws with a torque screwdriver set to the proper torque. For reference, the torque required for the screws to be fully loosen or tighten is 0.6 newton-meters, 5.3 inch-pounds.
- A flashlight helps to locate the screw holes.

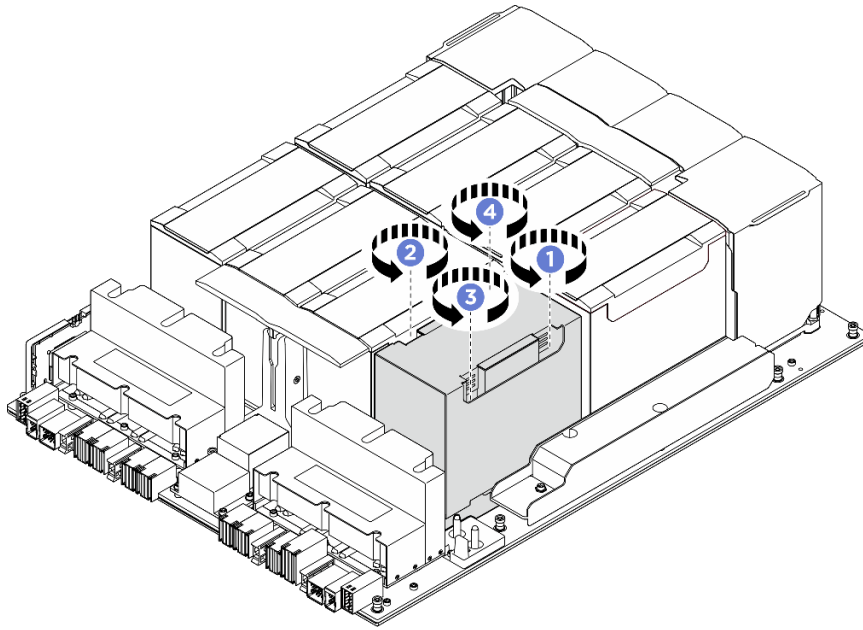


Figure 147. Screw tightening sequence

Step 4. Place the plastic cover onto the GPU and heat sink module until it is securely seated.

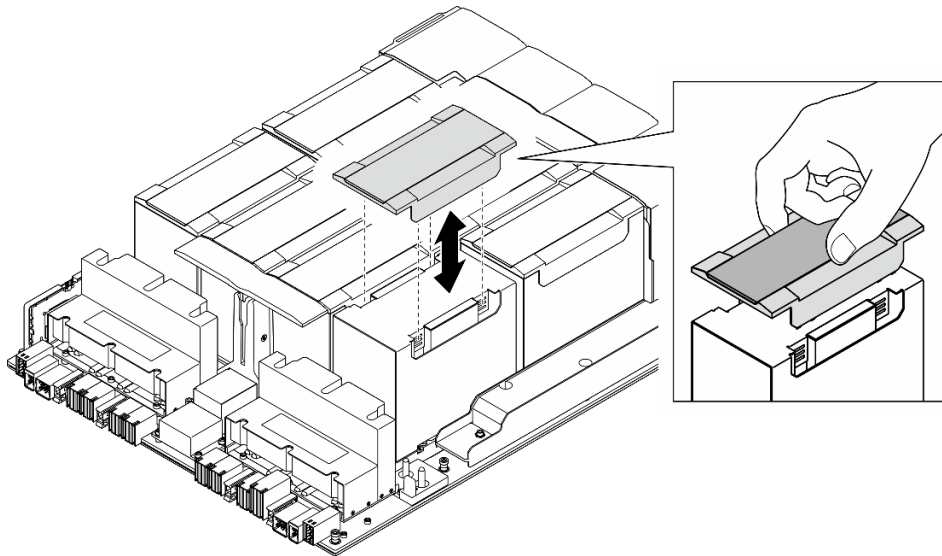


Figure 148. Plastic cover installation

After you finish

1. (GPU and heat sink module 2, 4, 5, and 7 only) Reinstall the GPU air duct. See [“Install an H100/H200 GPU air duct” on page 126](#).
2. Reinstall the power complex. See [“Install the power complex” on page 77](#).
3. Reinstall the 8U GPU shuttle. See [“Install the 8U GPU shuttle” on page 30](#).
4. Reinstall all the 2.5-inch hot-swap drives or drive bay fillers (if any) into the drive bays. See [“Install a 2.5-inch hot-swap drive” on page 24](#)
5. Reinstall all the front fans. See [“Install a hot-swap fan \(front and rear\)” on page 40](#).

6. Reinstall all the power supply units. See “[Install a hot-swap power supply unit](#)” on page 84.
7. Complete the parts replacement. See “[Complete the parts replacement](#)” on page 191.

HMC card replacement (trained technician only)

Follow instructions in this section to remove or install the HMC card.

Important: This task must be operated by trained technicians that are certified by Lenovo Service. Do not attempt to remove or install the part without proper training and qualification.

Remove the HMC card

Follow instructions in this section to remove the HMC card. The procedure must be executed by a trained technician.

About this task

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See “[Power off the server](#)” on page 7.
- Two people and one lifting device on site that can support up to 400 lb (181 kg) are required to perform this procedure. If you do not already have a lifting device available, Lenovo offers the Genie Lift GL-8 material lift that can be purchased at Data Center Solution Configurator: <https://dcsc.lenovo.com/#/configuration/cto/7D5YCTO1WW?hardwareType=lifttool>. Make sure to include the Foot-release brake and the Load Platform when ordering the Genie Lift GL-8 material lift.

Procedure

Step 1. Make preparation for this task.

- a. Remove all the power supply units. See “[Remove a hot-swap power supply unit](#)” on page 82.
- b. Remove all the front fans. See “[Remove a hot-swap fan \(front and rear\)](#)” on page 38.
- c. Remove all the 2.5-inch hot-swap drives and the drive bay fillers (if any) from the drive bays. See “[Remove a 2.5-inch hot-swap drive](#)” on page 22.
- d. Pull the 8U GPU shuttle out of the chassis, and place it onto the lift platform. See “[Remove the 8U GPU shuttle](#)” on page 28.
- e. Remove the power complex. See “[Remove the power complex](#)” on page 76.

Step 2. Unfasten the two screws to remove the HMC card from the GPU baseboard.

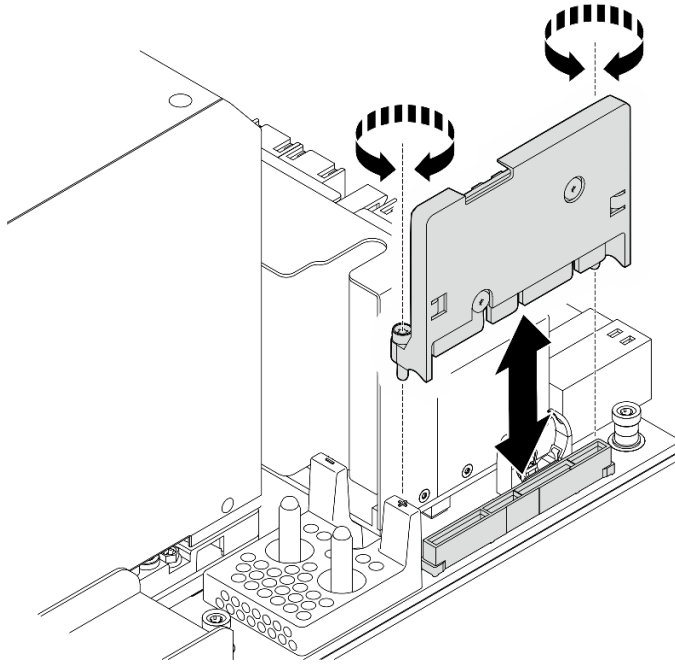


Figure 149. HMC card removal

After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Install the HMC card

Follow instructions in this section to install the HMC card. The procedure must be executed by a trained technician.

About this task

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Touch the static-protective package that contains the component to any unpainted metal surface on the server; then, remove it from the package and place it on a static-protective surface.
- Two people and one lifting device on site that can support up to 400 lb (181 kg) are required to perform this procedure. If you do not already have a lifting device available, Lenovo offers the Genie Lift GL-8 material lift that can be purchased at Data Center Solution Configurator: <https://dcsc.lenovo.com/#/configuration/cto/7D5YCTO1WW?hardwareType=lifttool>. Make sure to include the Foot-release brake and the Load Platform when ordering the Genie Lift GL-8 material lift.

Firmware and driver download: You might need to update the firmware or driver after replacing a component.

- Go to <https://datacentersupport.lenovo.com/tw/en/products/servers/thinksystem/sr680av3/7dhe/downloads/driver-list/> to see the latest firmware and driver updates for your server.
- Go to “Update the firmware” in *User Guide* or *System Configuration Guide* for more information on firmware updating tools.

Procedure

- Step 1. Align the HMC card with its connector on the GPU baseboard; then, press the HMC card into the connector until it is fully seated.
- Step 2. Fasten the two screws to secure the HMC card.

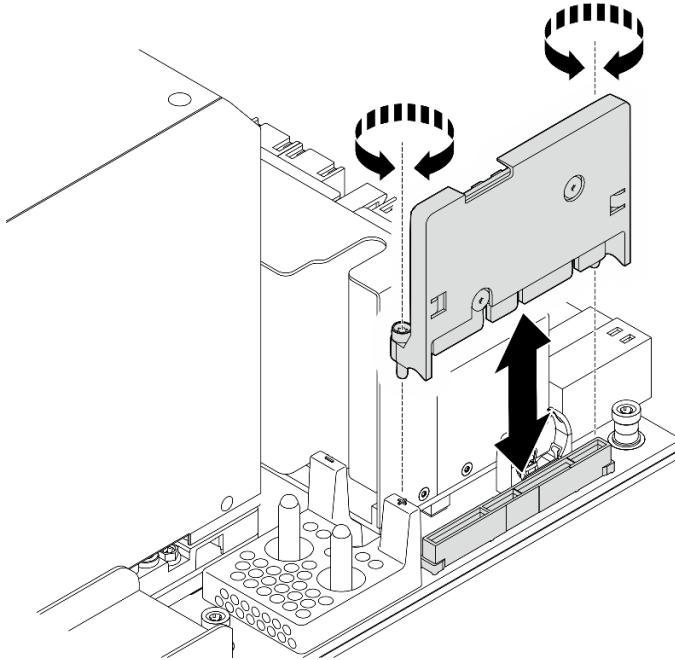


Figure 150. HMC card installation

After you finish

1. Reinstall the power complex. See [“Install the power complex” on page 77](#).
2. Reinstall the 8U GPU shuttle. See [“Install the 8U GPU shuttle” on page 30](#).
3. Reinstall all the 2.5-inch hot-swap drives or drive bay fillers (if any) into the drive bays. See [“Install a 2.5-inch hot-swap drive” on page 24](#)
4. Reinstall all the front fans. See [“Install a hot-swap fan \(front and rear\)” on page 40](#).
5. Reinstall all the power supply units. See [“Install a hot-swap power supply unit” on page 84](#).
6. Complete the parts replacement. See [“Complete the parts replacement” on page 191](#).

I/O cover replacement (trained technician only)

Follow instructions in this section to remove and install the I/O cover.

Important: This task must be operated by trained technicians that are certified by Lenovo Service. Do not attempt to remove or install the part without proper training and qualification.

Remove the I/O cover

Follow instructions in this section to remove the I/O cover. The procedure must be executed by a trained technician.

About this task

Attention:

- Read “Installation Guidelines” on page 1 and “Safety inspection checklist” on page 2 to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See “Power off the server” on page 7.
- Two people and one lifting device on site that can support up to 400 lb (181 kg) are required to perform this procedure. If you do not already have a lifting device available, Lenovo offers the Genie Lift GL-8 material lift that can be purchased at Data Center Solution Configurator: <https://dcsc.lenovo.com/#/configuration/cto/7D5YCTO1WW?hardwareType=lifttool>. Make sure to include the Foot-release brake and the Load Platform when ordering the Genie Lift GL-8 material lift.

Procedure

Step 1. Make preparation for this task.

- a. Remove all the power supply units. See “Remove a hot-swap power supply unit” on page 82.
- b. Remove all the front fans. See “Remove a hot-swap fan (front and rear)” on page 38.
- c. Remove all the 2.5-inch hot-swap drives and the drive bay fillers (if any) from the drive bays. See “Remove a 2.5-inch hot-swap drive” on page 22.
- d. Pull the 8U GPU shuttle out of the chassis, and place it onto the lift platform. See “Remove the 8U GPU shuttle” on page 28.
- e. Remove the cable cover. See “Remove the cable cover” on page 32.
- f. Disconnect the cable from the front fan control board.

Step 2. Remove the I/O cover.

- a. ① Unfasten the six screws marked with **D** on both sides of the 8U GPU shuttle.
- b. ② Lift the I/O cover out of the 8U GPU shuttle to remove it.

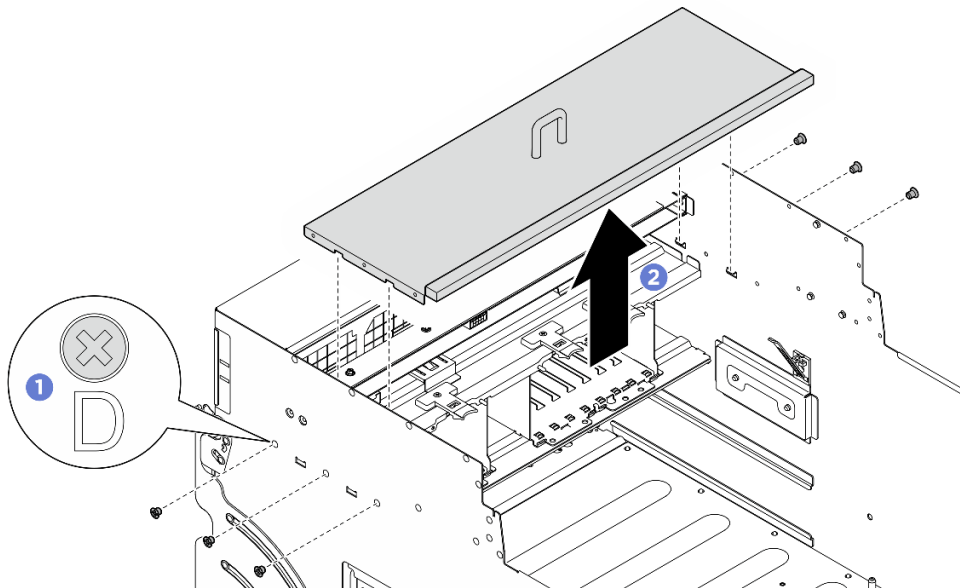


Figure 151. I/O cover removal

After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Install the I/O cover

Follow instructions in this section to install the I/O cover. The procedure must be executed by a trained technician.

About this task

Attention:

- Read “Installation Guidelines” on page 1 and “Safety inspection checklist” on page 2 to ensure that you work safely.
- Touch the static-protective package that contains the component to any unpainted metal surface on the server; then, remove it from the package and place it on a static-protective surface.
- Two people and one lifting device on site that can support up to 400 lb (181 kg) are required to perform this procedure. If you do not already have a lifting device available, Lenovo offers the Genie Lift GL-8 material lift that can be purchased at Data Center Solution Configurator: <https://dcsc.lenovo.com/#/configuration/cto/7D5YCTO1WW?hardwareType=lifttool>. Make sure to include the Foot-release brake and the Load Platform when ordering the Genie Lift GL-8 material lift.

Procedure

- Step 1. ① Align the I/O cover with the four tabs on the 8U GPU shuttle; then, lower the I/O cover into the 8U GPU shuttle until it is firmly seated.
- Step 2. ② Locate the six screw holes marked with **D** on both sides of the 8U GPU shuttle; then, fasten the six screws to secure the I/O cover.

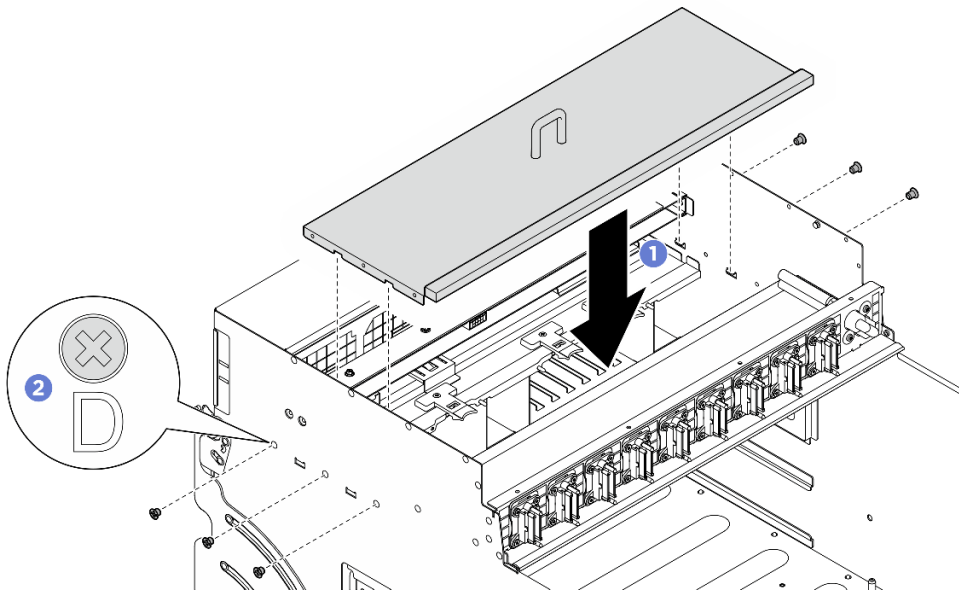


Figure 152. I/O cover installation

After you finish

1. Face the cable latch down, and reconnect the cable to the front fan control board. See “Fan control board cable routing” on page 202.

2. Reinstall the cable cover. See [“Install the cable cover” on page 33](#).
3. Reinstall the 8U GPU shuttle. See [“Install the 8U GPU shuttle” on page 30](#).
4. Reinstall all the 2.5-inch hot-swap drives or drive bay fillers (if any) into the drive bays. See [“Install a 2.5-inch hot-swap drive” on page 24](#)
5. Reinstall all the front fans. See [“Install a hot-swap fan \(front and rear\)” on page 40](#).
6. Reinstall all the power supply units. See [“Install a hot-swap power supply unit” on page 84](#).
7. Complete the parts replacement. See [“Complete the parts replacement” on page 191](#).

PCIe switch board and heat sink replacement (trained technician only)

Follow instructions in this section to remove and install the PCIe switch board and a PCIe switch board heat sink.

Important: This task must be operated by trained technicians that are certified by Lenovo Service. Do not attempt to remove or install the part without proper training and qualification.

Remove a PCIe switch board heat sink

Follow instructions in this section to remove a PCIe switch board heat sink. The procedure must be executed by a trained technician.

About this task

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 7](#).

Procedure

Step 1. Make preparation for this task.

- a. Remove the PCIe switch shuttle. See [“Remove the PCIe switch shuttle” on page 187](#).
- b. Remove all the front PCIe adapters. See [“Remove a front PCIe adapter” on page 169](#).

Step 2. Remove the PCIe switch board heat sink.

- a. ① Fully loosen all the screws on the heat sink in the diagonal pattern.
- b. ② Carefully lift the heat sink from the PCIe switch board.

Note: Loosen or tighten the screws with a torque screwdriver set to the proper torque. For reference, the torque required for the screws to be fully loosen or tighten is 0.9 newton-meters, 8 inch-pounds.

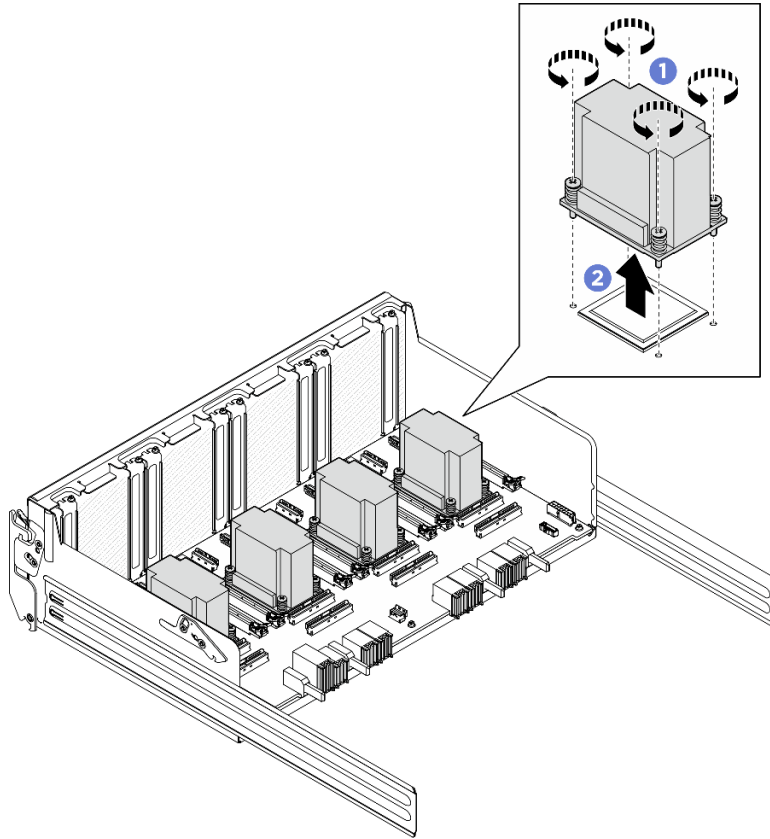


Figure 153. PCIe switch board heat sink removal

Step 3. With an alcohol cleaning pad, wipe off any thermal grease from the following components:

- Heat spreader on the PCIe switch board
- Bottom of the PCIe switch board heat sink

After you finish

1. If you are replacing a PCIe switch board heat sink, install a new one. See [“Install a PCIe switch board heat sink” on page 167](#).
2. If you are replacing the PCIe switch board, remove it. See [“Remove the PCIe switch board” on page 165](#).
3. If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Remove the PCIe switch board

Follow instructions in this section to remove the PCIe switch board. The procedure must be executed by a trained technician.

About this task

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.

- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 7](#).

Procedure

Step 1. Make preparation for this task.

- a. Remove the PCIe switch shuttle. See [“Remove the PCIe switch shuttle” on page 187](#).
- b. Remove all the front PCIe adapters. See [“Remove a front PCIe adapter” on page 169](#).
- c. Remove all the PCIe switch board heat sinks. See [“Remove a PCIe switch board heat sink” on page 164](#).

Step 2. Unfasten the six screws on the PCIe switch board; then, lift the PCIe switch board out of the PCIe switch shuttle.

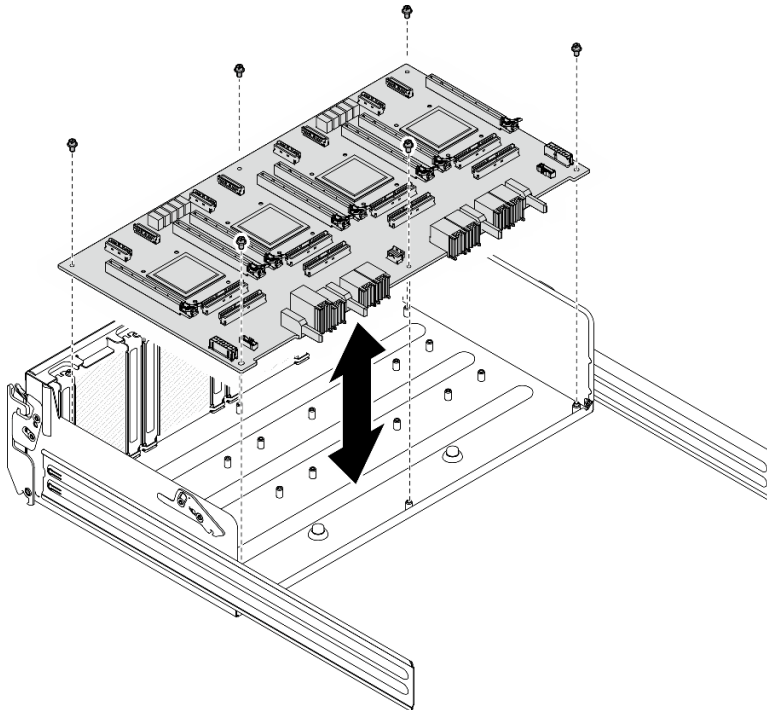


Figure 154. PCIe switch board removal

After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Install the PCIe switch board

Follow instructions in this section to install the PCIe switch board. The procedure must be executed by a trained technician.

About this task

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.

- Touch the static-protective package that contains the component to any unpainted metal surface on the server; then, remove it from the package and place it on a static-protective surface.

Procedure

- Step 1. Hold the PCIe switch board in the correct orientation as illustrated; then, align the PCIe switch board with the six standoffs on the PCIe switch shuttle, and gently place it onto the PCIe switch shuttle.
- Step 2. Fasten the six screws to secure the PCIe switch board.

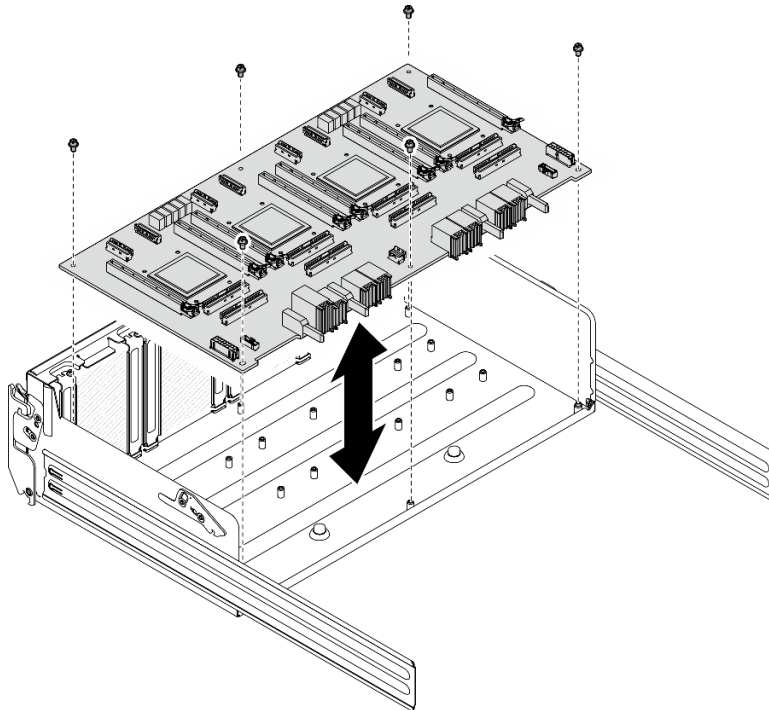


Figure 155. PCIe switch board installation

After you finish

1. Reinstall all the PCIe switch board heat sinks. See [“Install a PCIe switch board heat sink” on page 167](#).
2. Reinstall all the front PCIe adapters. See [“Install a front PCIe adapter” on page 171](#).
3. Reinstall the PCIe switch shuttle. See [“Install the PCIe switch shuttle” on page 189](#).
4. Complete the parts replacement. See [“Complete the parts replacement” on page 191](#).

Install a PCIe switch board heat sink

Follow instructions in this section to install a PCIe switch board heat sink. The procedure must be executed by a trained technician.

About this task

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Touch the static-protective package that contains the component to any unpainted metal surface on the server; then, remove it from the package and place it on a static-protective surface.

Procedure

Step 1. Apply a blob of new thermal grease (0.3 ml) onto the center of the heat spreader.

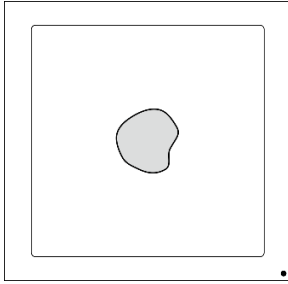


Figure 156. Thermal grease application

Step 2. Install the PCIe switch board heat sink.

- a. ① Align the PCIe switch board heat sink with the four screw holes on the PCIe switch board; then, gently place the PCIe switch board heat sink onto the PCIe switch board.
- b. ② Follow the screw sequence specified on the heat-sink label, and turn the four screws clockwise a few turns until the screw threads engage in the PCIe switch board.
- c. ② Follow the screw sequence specified on the heat-sink label, and fully tighten the four screws to secure the PCIe switch board heat sink.

Note: Loosen or tighten the screws with a torque screwdriver set to the proper torque. For reference, the torque required for the screws to be fully loosen or tighten is 0.9 newton-meters, 8 inch-pounds.

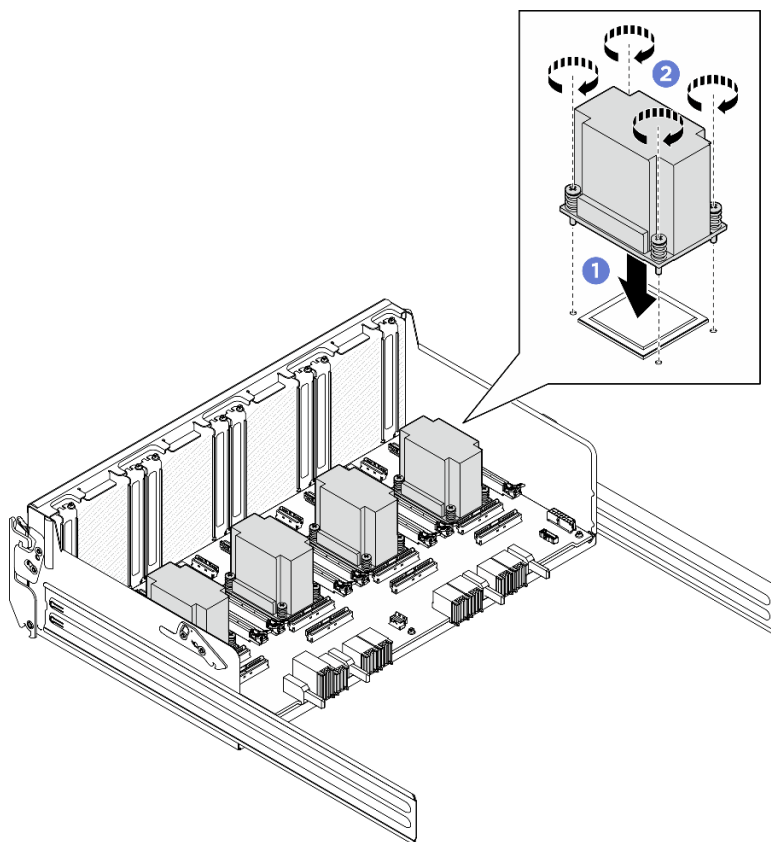


Figure 157. PCIe switch board heat sink installation

After you finish

1. Reinstall all the front PCIe adapters. See [“Install a front PCIe adapter” on page 171.](#)
2. Reinstall the PCIe switch shuttle. See [“Install the PCIe switch shuttle” on page 189.](#)
3. Complete the parts replacement. See [“Complete the parts replacement” on page 191.](#)

PCIe adapter replacement (trained technician only)

Follow instructions in this section to remove and install a PCIe adapter.

Important: This task must be operated by trained technicians that are certified by Lenovo Service. Do not attempt to remove or install the part without proper training and qualification.

Remove a front PCIe adapter

Follow instructions in this section to remove a front PCIe adapter. The procedure must be executed by a trained technician.

About this task

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 7.](#)

Procedure

Step 1. Disengage the PCIe switch shuttle from the 8U GPU shuttle.

- a. ① Press the two blue release latches.
- b. ② Rotate the two release levers until they are perpendicular to the PCIe switch shuttle.
- c. ③ Pull the PCIe switch shuttle forward until it stops.

Note: Push the two release levers back until they lock into place after pulling out the PCIe switch shuttle to avoid damage.

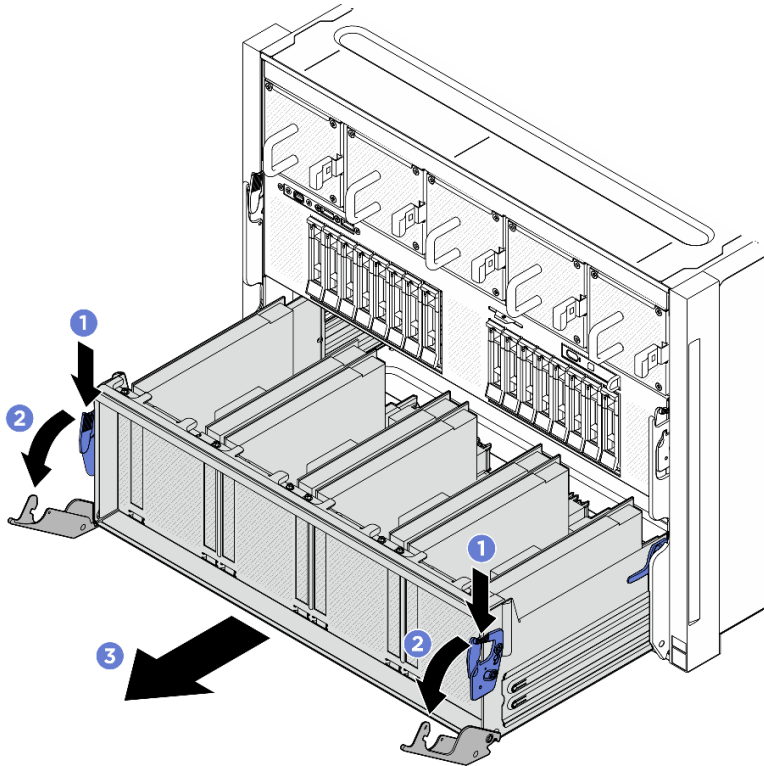


Figure 158. PCIe switch shuttle removal to stop position

Step 2. Unfasten the screw that secures the front PCIe adapter to the PCIe switch shuttle; then, lift the front PCIe adapter out of the PCIe slot.

Note: The PCIe adapter might look different from the illustration.

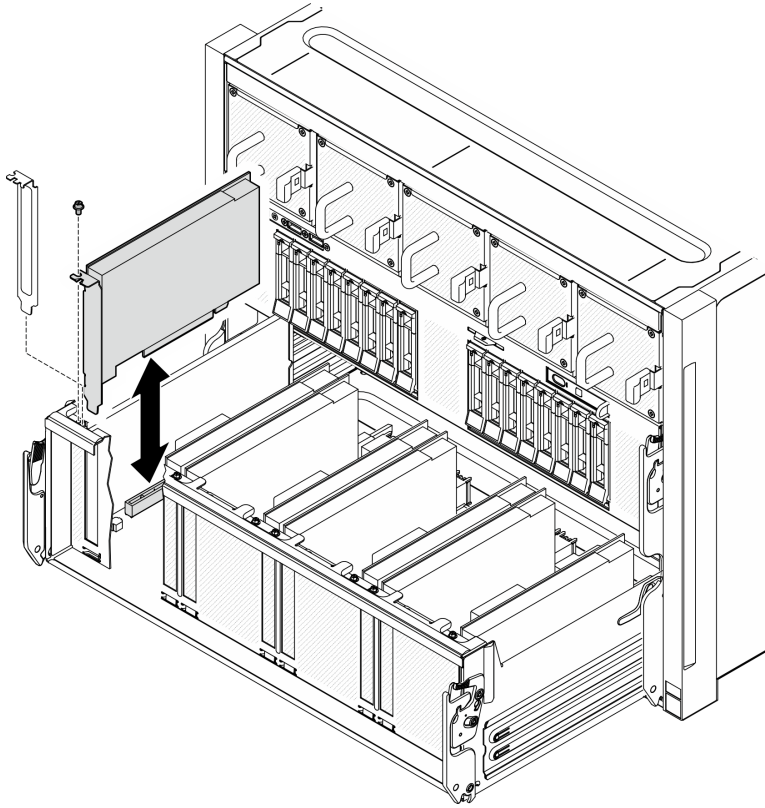


Figure 159. Front PCIe adapter removal

After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Install a front PCIe adapter

Follow instructions in this section to install a front PCIe adapter. The procedure must be executed by a trained technician.

About this task

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Touch the static-protective package that contains the component to any unpainted metal surface on the server; then, remove it from the package and place it on a static-protective surface.

Procedure

- Step 1. Align the front PCIe adapter with the PCIe slot on the PCIe switch board; then, press the front PCIe adapter into the slot until it is fully seated.
- Step 2. Fasten the screw to secure the front PCIe adapter.

Note: The PCIe adapter might look different from the illustration.

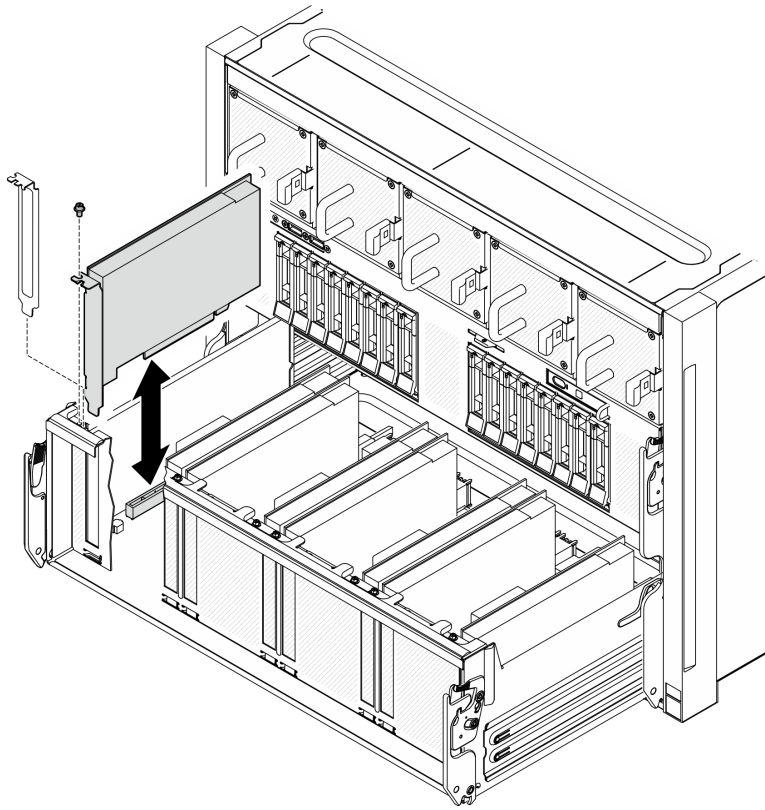


Figure 160. Front PCIe adapter installation

- Step 3. Install the PCIe switch shuttle.
- a. ① Press the two lock latches on both sides of the PCIe switch shuttle.
 - b. ② Push the PCIe switch shuttle into the 8U GPU shuttle until it stops.
 - c. ③ Rotate the two release levers until they lock into place.

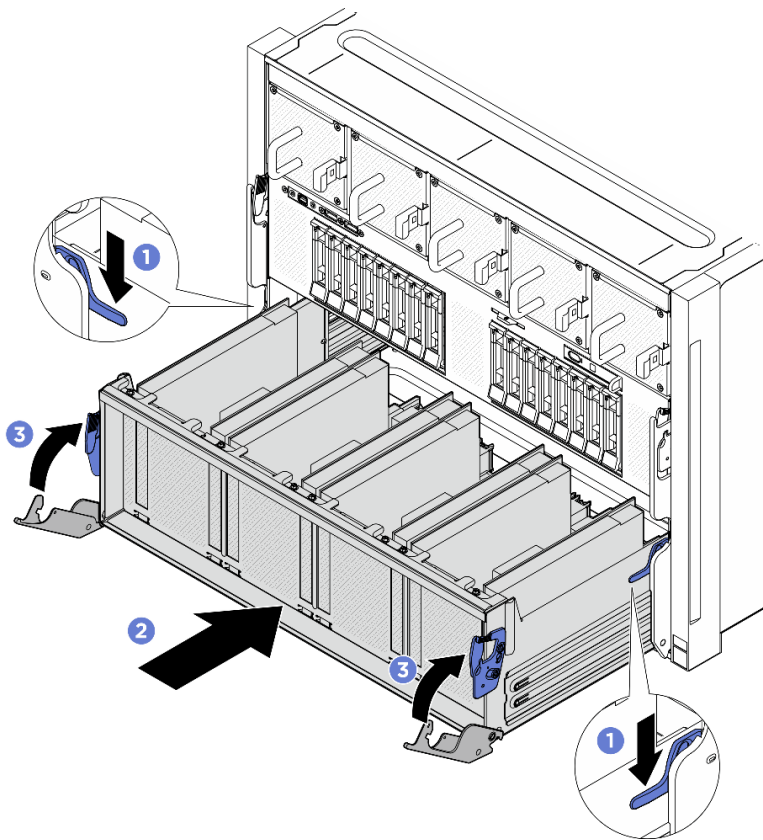


Figure 161. PCIe switch shuttle installation to 8U GPU shuttle

After you finish

Complete the parts replacement. See [“Complete the parts replacement” on page 191](#).

Remove a rear PCIe adapter

Follow instructions in this section to remove a rear PCIe adapter. The procedure must be executed by a trained technician.

About this task

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 7](#).

Procedure

Step 1. Make preparation for this task.

- Remove the 2U compute shuttle. See [“Remove the 2U compute shuttle” on page 26](#).
- Remove the PCIe riser assembly. See [“Remove a PCIe riser assembly” on page 70](#).
- If applicable, remove the PCIe riser air baffle. See [“Remove a PCIe riser air baffle” on page 67](#).

Step 2. Disconnect the cable from the rear PCIe adapter.

Step 3. Remove the rear PCIe adapter.

- a. ① Unfasten the screw that secures the rear PCIe adapter to the PCIe riser.
- b. ② Grasp the rear PCIe adapter by its edges and carefully pull it out of the PCIe slot.

Note: The PCIe adapter might look different from the illustration.

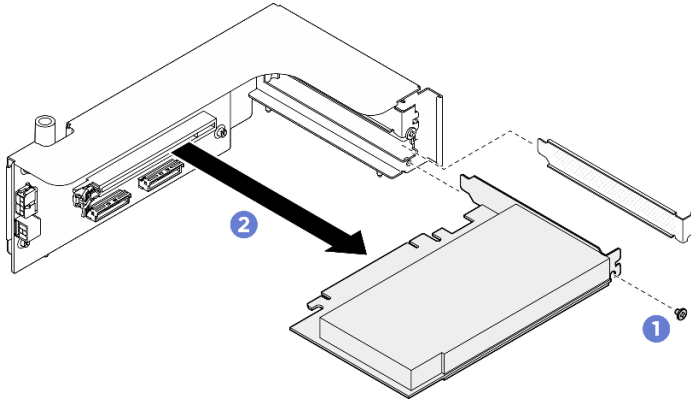


Figure 162. Rear PCIe adapter removal

After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Install a rear PCIe adapter

Follow instructions in this section to install a rear PCIe adapter. The procedure must be executed by a trained technician.

About this task

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Touch the static-protective package that contains the component to any unpainted metal surface on the server; then, remove it from the package and place it on a static-protective surface.

Procedure

- Step 1. ① Insert the rear PCIe adapter into the PCIe riser.
- Step 2. ② Fasten the screw to secure the rear PCIe adapter.

Note: The PCIe adapter might look different from the illustration.

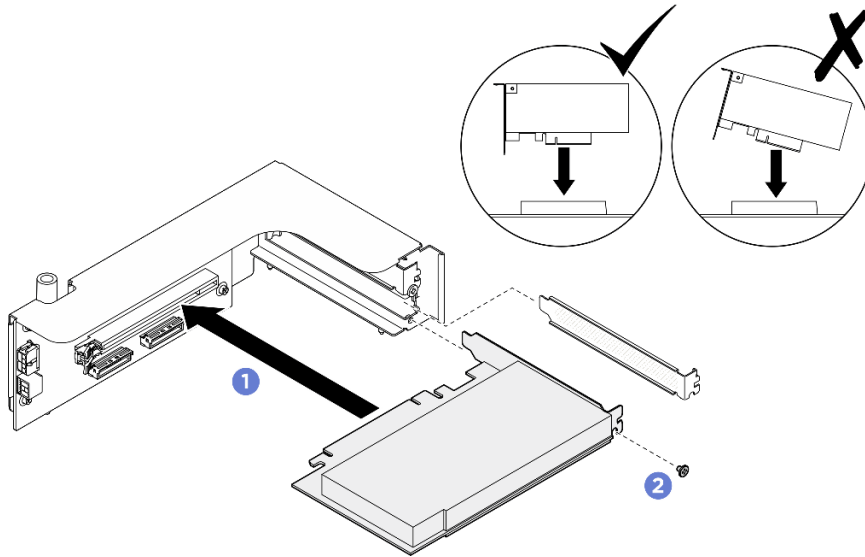


Figure 163. Rear PCIe adapter installation

Step 3. Connect the cable to the rear PCIe adapter.

After you finish

1. Reinstall the PCIe riser assembly. See “Install a PCIe riser assembly” on page 73.
2. Reinstall the 2U compute shuttle. See “Install the 2U compute shuttle” on page 27.
3. Complete the parts replacement. See “Complete the parts replacement” on page 191.

PCIe switch cable harness replacement (trained technician only)

Follow instructions in this section to remove and install a PCIe switch cable harness.

Important: This task must be operated by trained technicians that are certified by Lenovo Service. Do not attempt to remove or install the part without proper training and qualification.

Remove the front PCIe switch cable harness

Follow instructions in this section to remove the front PCIe switch cable harness. The procedure must be executed by a trained technician.

About this task

Attention:

- Read “Installation Guidelines” on page 1 and “Safety inspection checklist” on page 2 to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See “Power off the server” on page 7.
- Two people and one lifting device on site that can support up to 400 lb (181 kg) are required to perform this procedure. If you do not already have a lifting device available, Lenovo offers the Genie Lift GL-8 material lift that can be purchased at Data Center Solution Configurator: <https://dcsc.lenovo.com/#/configuration/cto/7D5YCTO1WW?hardwareType=lifttool>. Make sure to include the Foot-release brake and the Load Platform when ordering the Genie Lift GL-8 material lift.

Note: Make sure you have a 5 mm hex socket screwdriver available to properly replace the component:

Procedure

Step 1. Make preparation for this task.

- a. Remove all the power supply units. See [“Remove a hot-swap power supply unit” on page 82.](#)
- b. Remove all the front fans. See [“Remove a hot-swap fan \(front and rear\)” on page 38.](#)
- c. Remove all the 2.5-inch hot-swap drives and the drive bay fillers (if any) from the drive bays. See [“Remove a 2.5-inch hot-swap drive” on page 22.](#)
- d. Pull the 8U GPU shuttle out of the chassis, and place it onto the lift platform. See [“Remove the 8U GPU shuttle” on page 28.](#)
- e. Remove the cable cover. See [“Remove the cable cover” on page 32.](#)
- f. Remove the I/O cover. See [“Remove the I/O cover” on page 161.](#)
- g. Remove the integrated diagnostics panel. See [“Remove the integrated diagnostics panel” on page 53.](#)

Step 2. Disconnect the cables that connected from the front PCIe switch cable harness to the PCIe switch board and the PSU interposer.

Step 3. Remove the front I/O module.

- a. ① Unfasten the two outer screws on the front I/O module.
- b. ② Unfasten the inner screw on the front I/O module.
- c. ③ Slide the front I/O module rearward.

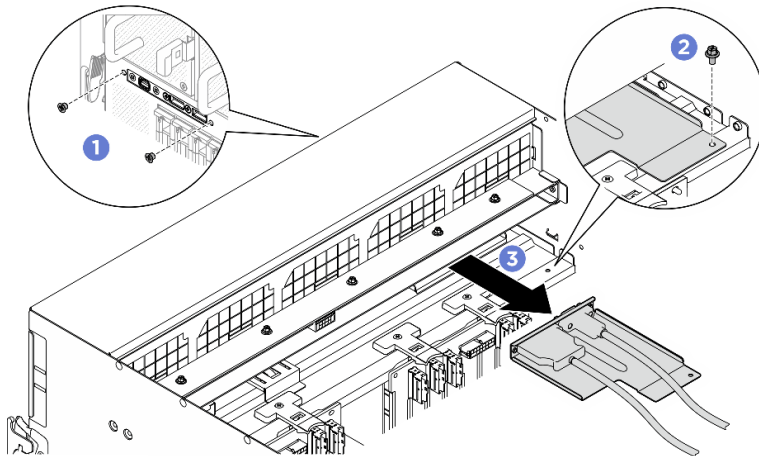


Figure 164. Front I/O module removal

Step 4. Remove the following front I/O module cables.

- Unfasten the two hex nuts (①) to remove the Mini DisplayPort cable from the front I/O bracket.
- Unfasten the two screws (②) to remove the USB cable from the front I/O bracket.

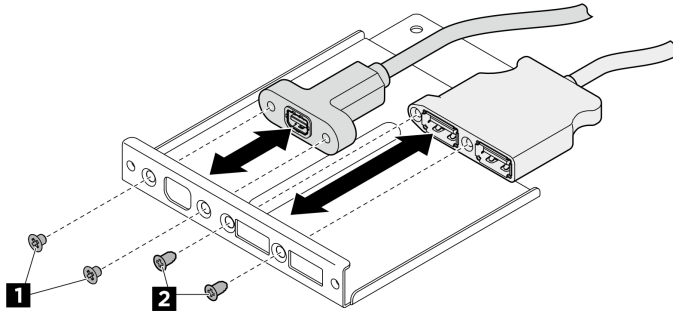


Figure 165. Front I/O module cables removal

- Step 5. Remove the front PCIe switch cable harness.
- a. ① Unfasten the ten screws marked with **C** on both sides of the 8U GPU shuttle.
 - b. ② Lift the front PCIe switch cable harness out of the 8U GPU shuttle.

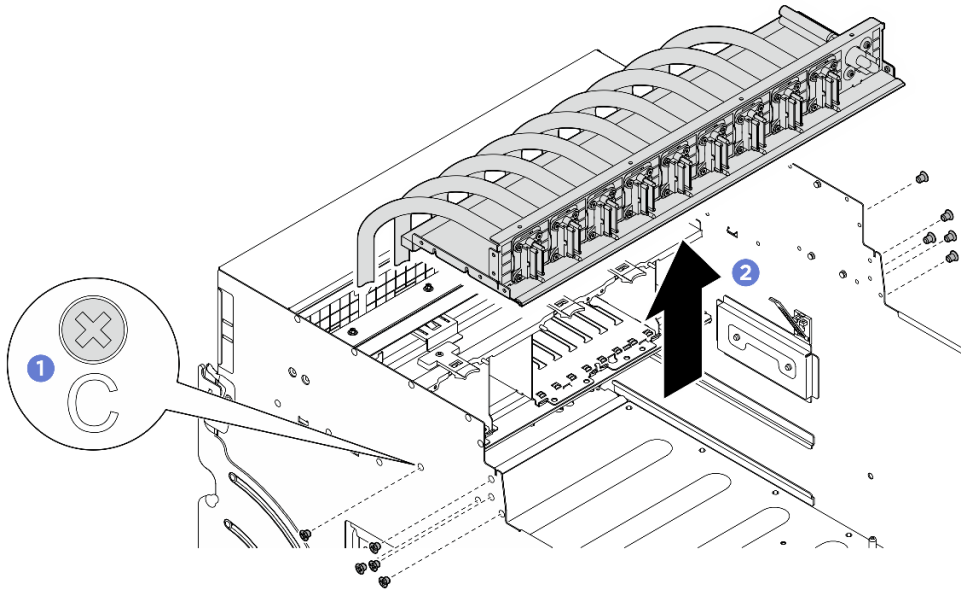


Figure 166. Front PCIe switch cable harness removal

- Step 6. If needed, remove the cables from the front PCIe switch cable harness.
- **Front I/O module, integrated diagnostics panel, GPU management, or signal cable**
Unfasten the four screws to remove the cable from the front PCIe switch cable harness.

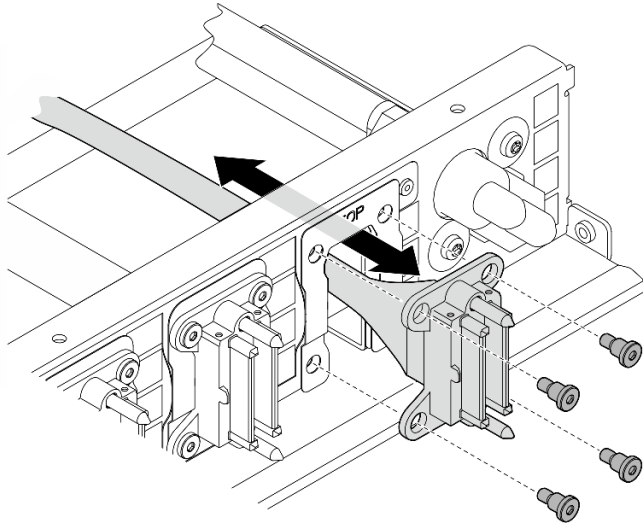


Figure 167. Front I/O module, integrated diagnostics panel, GPU management, or signal cable removal

- **Power cable**

1. Remove the two screws and the two washers on the front PCIe switch cable harness.
2. Remove the cable from the front PCIe switch cable harness.

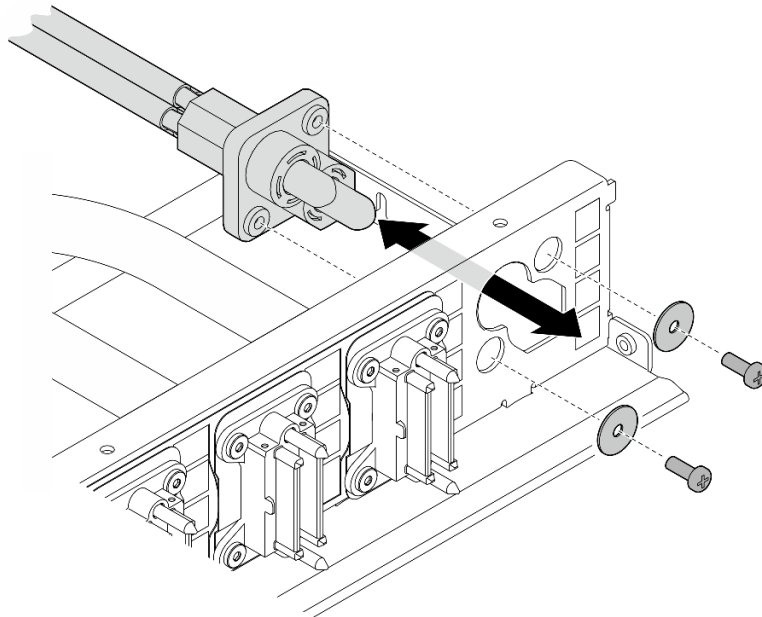


Figure 168. Power cable removal

After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Install the front PCIe switch cable harness

Follow instructions in this section to install the front PCIe switch cable harness. The procedure must be executed by a trained technician.

About this task

Attention:

- Read “Installation Guidelines” on page 1 and “Safety inspection checklist” on page 2 to ensure that you work safely.
- Touch the static-protective package that contains the component to any unpainted metal surface on the server; then, remove it from the package and place it on a static-protective surface.
- Two people and one lifting device on site that can support up to 400 lb (181 kg) are required to perform this procedure. If you do not already have a lifting device available, Lenovo offers the Genie Lift GL-8 material lift that can be purchased at Data Center Solution Configurator: <https://dcsc.lenovo.com/#/configuration/cto/7D5YCTO1WW?hardwareType=lifttool>. Make sure to include the Foot-release brake and the Load Platform when ordering the Genie Lift GL-8 material lift.

Note: Make sure you have a 5 mm hex socket screwdriver available to properly replace the component:

Procedure

- Step 1. If necessary, attach the label to the signal cable(s).
- 1 Attach the white space portion of the label to the end of the cable that connects to the PCIe switch board.
 - 2 Wrap the label around the cable and attach it to the white space portion.

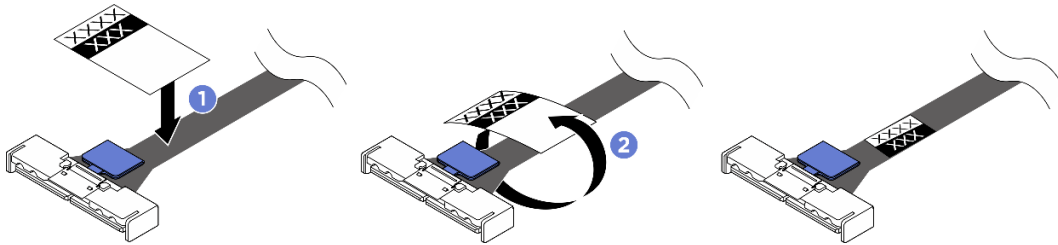


Figure 169. Label application

Note: See the table below to identify the corresponding labels for the cables.

From	To	Label
Front PCIe switch cable harness: MCIO 1 cable	PCIe switch board: MCIO connector 1 (MCIO1)	MCIO 1
Front PCIe switch cable harness: MCIO 2 cable	PCIe switch board: MCIO connector 2 (MCIO2)	MCIO 2
Front PCIe switch cable harness: MCIO 3 cable	PCIe switch board: MCIO connector 3 (MCIO3)	MCIO 3
Front PCIe switch cable harness: MCIO 4 cable	PCIe switch board: MCIO connector 4 (MCIO4)	MCIO 4
Front PCIe switch cable harness: MCIO 5 cable	PCIe switch board: MCIO connector 5 (MCIO5)	MCIO 5
Front PCIe switch cable harness: MCIO 6 cable	PCIe switch board: MCIO connector 6 (MCIO6)	MCIO 6

Front PCIe switch cable harness: MCIO 7 cable	PCIe switch board: MCIO connector 7 (MCIO7)	MCIO 7
Front PCIe switch cable harness: MCIO 8 cable	PCIe switch board: MCIO connector 8 (MCIO8)	MCIO 8

Step 2. If needed, install the cables to the front PCIe switch cable harness.

- **Front I/O module, integrated diagnostics panel, GPU management, or signal cable**

Align the cable with the hole on the front PCIe switch cable harness and insert it; then, fasten the four screws to secure the cable.

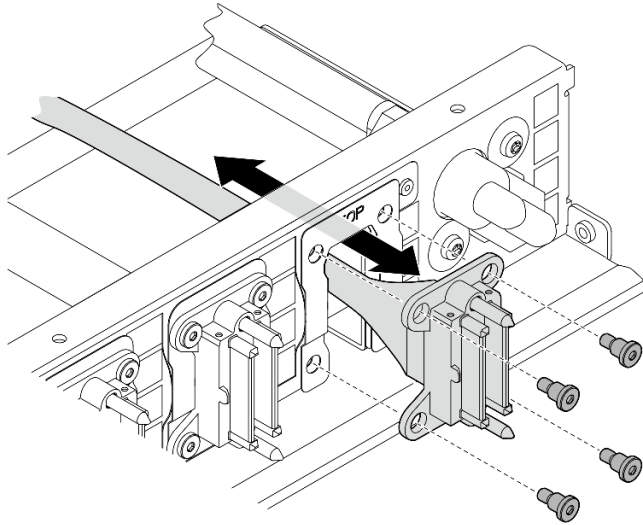


Figure 170. Front I/O module, integrated diagnostics panel, GPU management, or signal cable installation

- **Power cable**

1. Align the cable with the hole on the front PCIe switch cable harness, and insert it.
2. Insert the two washers and the two screws to the holes, and fasten them to secure the cable.

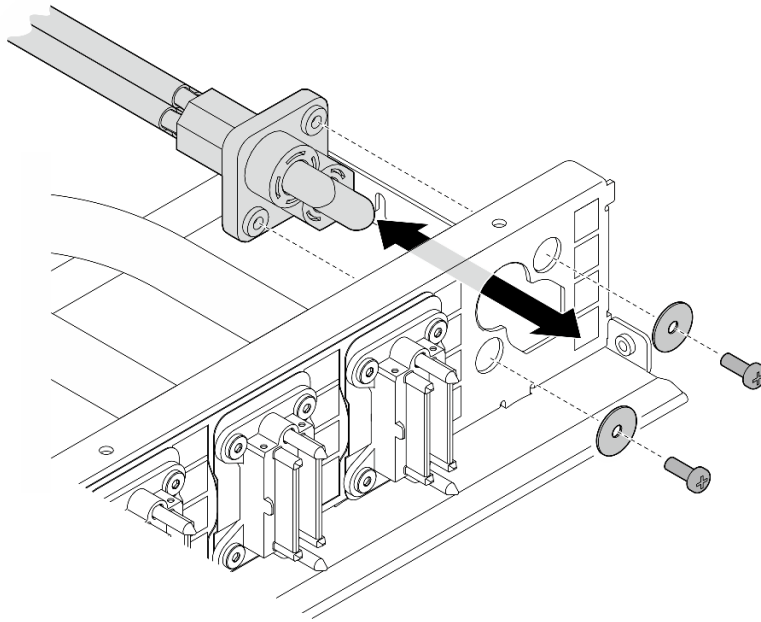


Figure 171. Power cable installation

Step 3. Install the front PCIe switch cable harness.

- a. ① Align the front PCIe switch cable harness with the four guide pins on the 8U GPU shuttle; then, lower the front PCIe switch cable harness into the 8U GPU shuttle until it is securely engaged.
- b. ② Locate the ten screw holes marked with **C** on both sides of the 8U GPU shuttle; then, fasten the ten screws to secure the front PCIe switch cable harness.

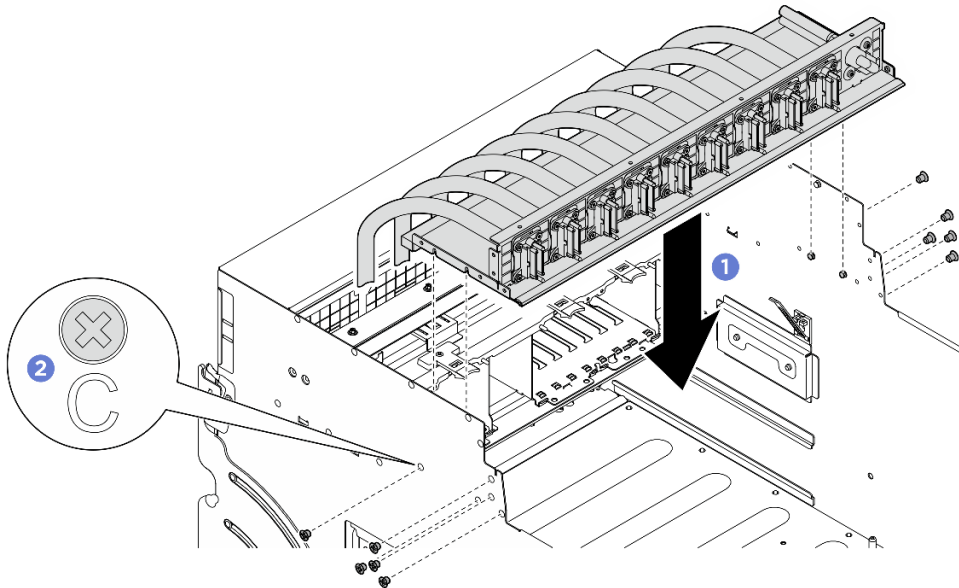


Figure 172. Front PCIe switch cable harness installation

Step 4. Connect the cables to the PCIe switch board and the PSU interposer. See [“PCIe switch board cable routing” on page 212](#) and [“Power cable routing” on page 205](#) for more information.

Step 5. Install the following front I/O module cables.

- Fasten the two hex nuts (1) to install the Mini DisplayPort cable to the front I/O bracket.
- Fasten the two screws (2) to install the USB cable to the front I/O bracket.

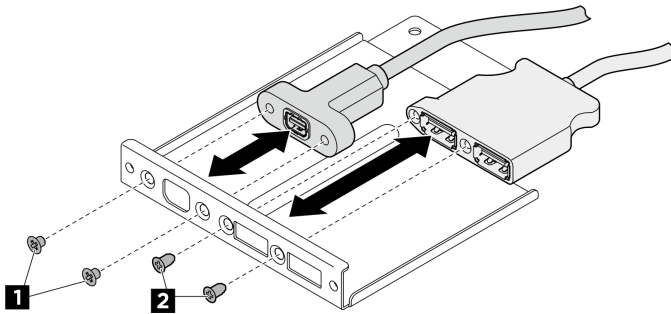


Figure 173. Front I/O module cables installation

Step 6. Install the front I/O module.

- 1 Insert the front I/O module into the front I/O module slot.
- 2 Fasten the inner screw to secure the front I/O module.
- 3 Fasten the two outer screws to secure the front I/O module.

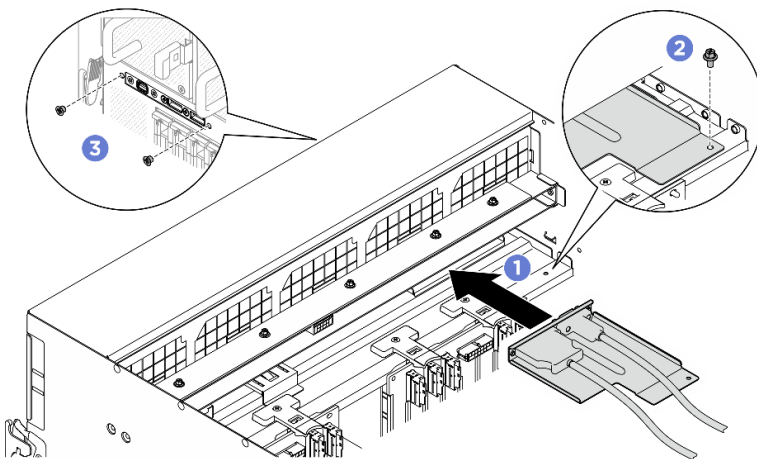


Figure 174. Front I/O module installation

After you finish

1. Reinstall the integrated diagnostics panel. See [“Install the integrated diagnostics panel” on page 54.](#)
2. Reinstall the I/O cover. See [“Install the I/O cover” on page 163.](#)
3. Reinstall the cable cover. See [“Install the cable cover” on page 33.](#)
4. Reinstall the 8U GPU shuttle. See [“Install the 8U GPU shuttle” on page 30.](#)
5. Reinstall all the 2.5-inch hot-swap drives or drive bay fillers (if any) into the drive bays. See [“Install a 2.5-inch hot-swap drive” on page 24](#)
6. Reinstall all the front fans. See [“Install a hot-swap fan \(front and rear\)” on page 40.](#)
7. Reinstall all the power supply units. See [“Install a hot-swap power supply unit” on page 84.](#)
8. Complete the parts replacement. See [“Complete the parts replacement” on page 191.](#)

Remove the rear PCIe switch cable harness

Follow instructions in this section to remove the rear PCIe switch cable harness. The procedure must be executed by a trained technician.

About this task

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 7](#).

Procedure

- Step 1. Remove the 2U compute shuttle. See [“Remove the 2U compute shuttle” on page 26](#).
- Step 2. Disconnect the cables that connected from the rear PCIe switch cable harness to the system board assembly.
- Step 3. Remove the rear PCIe switch cable harness.
 - a. ① Unfasten the six screws on both sides of the 2U compute shuttle.
 - b. ② Remove the rear PCIe switch cable harness from the 2U compute shuttle.

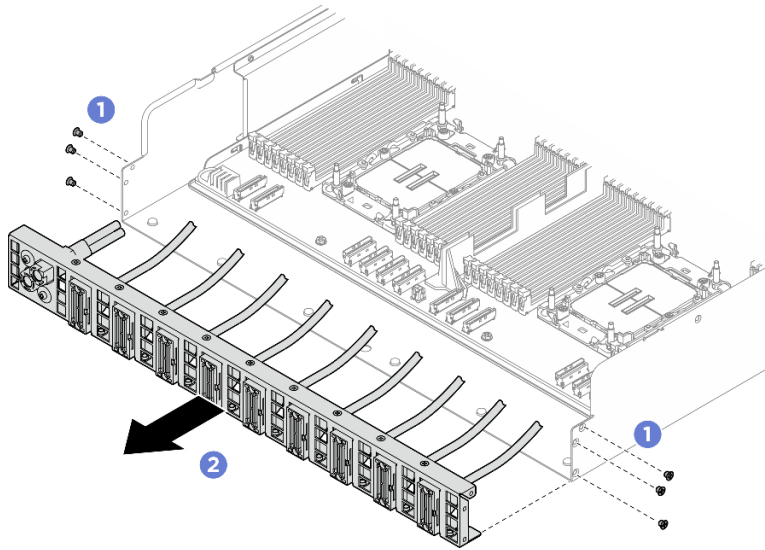


Figure 175. Rear PCIe switch cable harness removal

- Step 4. If needed, remove the cables from the rear PCIe switch cable harness.
 - **Front I/O module, integrated diagnostics panel, GPU management, or signal cable**
 1. ① Unfasten the two screws that secure the bracket to the rear PCIe switch cable harness.
 2. ② Slide the bracket away from the rear PCIe switch cable harness.
 3. ③ Remove the cable from the rear PCIe switch cable harness.

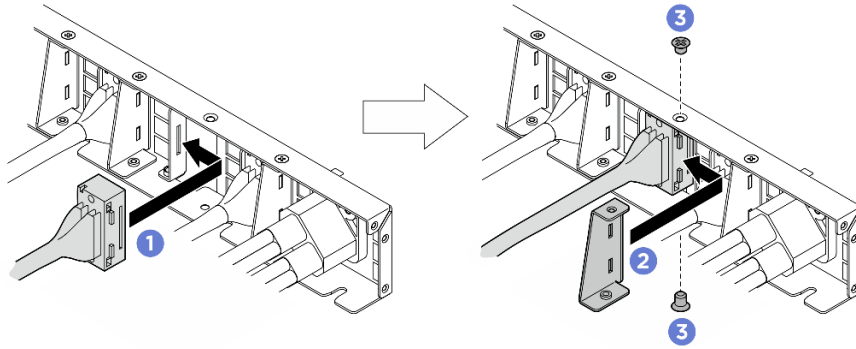


Figure 176. Front I/O module, integrated diagnostics panel, GPU management, or signal cable removal

- **Power cable**

1. Remove the two screws and the two washers on the rear PCIe switch cable harness.
2. Remove the cable from the rear PCIe switch cable harness.

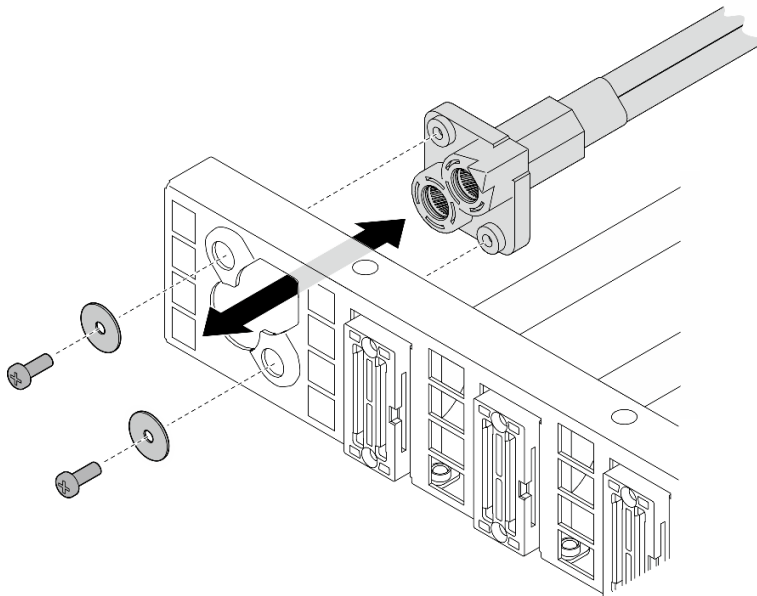


Figure 177. Power cable removal

After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Install the rear PCIe switch cable harness

Follow instructions in this section to install the rear PCIe switch cable harness. The procedure must be executed by a trained technician.

About this task

Attention:

- Read “[Installation Guidelines](#)” on page 1 and “[Safety inspection checklist](#)” on page 2 to ensure that you work safely.
- Touch the static-protective package that contains the component to any unpainted metal surface on the server; then, remove it from the package and place it on a static-protective surface.

Procedure

Step 1. If needed, install the cables to the rear PCIe switch cable harness.

- **Front I/O module, integrated diagnostics panel, GPU management, or signal cable**

1. ① Align the cable with the slot on the bracket that is mounted on the rear PCIe switch cable harness, and insert it.
2. ② Align the bracket with the two tabs on the cable, and insert it.
3. ③ Fasten the two screws to secure the bracket and the cable.

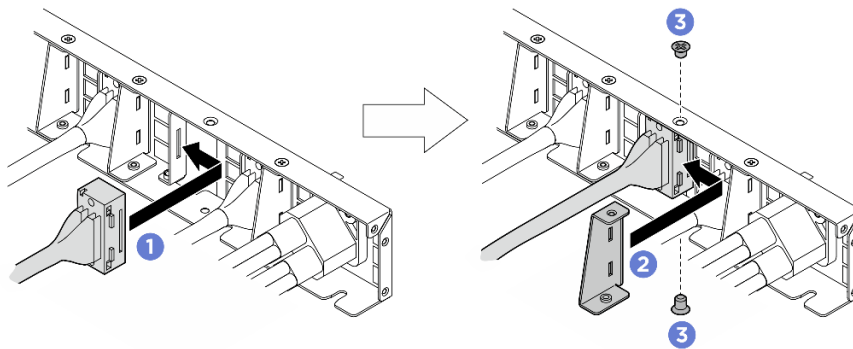


Figure 178. Front I/O module, integrated diagnostics panel, GPU management, or signal cable installation

- **Power cable**

1. Align the cable with the hole on the rear PCIe switch cable harness, and insert it.
2. Insert the two washers and the two screws to the holes, and fasten them to secure the cable.

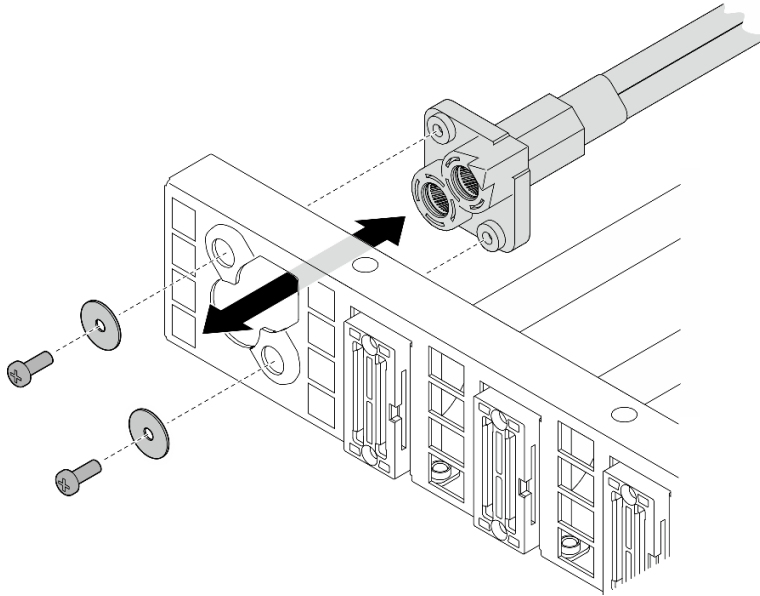


Figure 179. Power cable installation

Step 2. Install the rear PCIe switch cable harness.

- a. 1 Align the rear PCIe switch cable harness with the six guide pins on the 2U compute shuttle; then, insert the rear PCIe switch cable harness into the 2U compute shuttle until it is securely engaged.
- b. 2 Fasten the six screws to secure the rear PCIe switch cable harness.

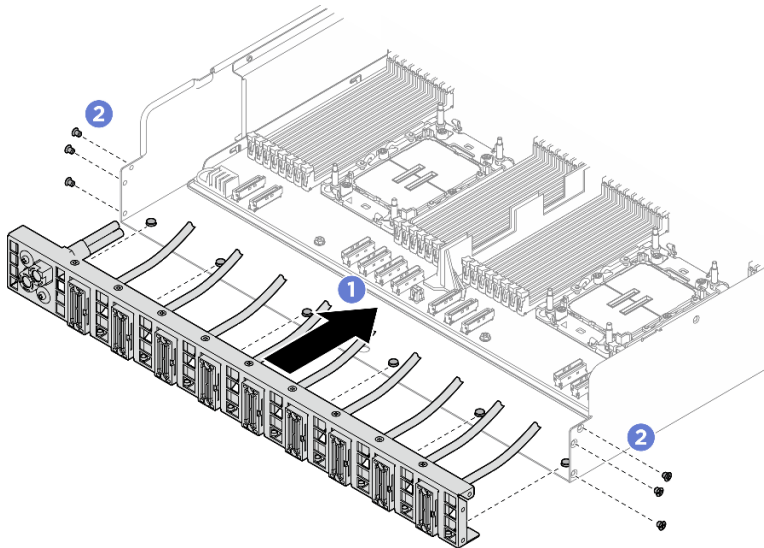


Figure 180. Rear PCIe switch cable harness installation

Step 3. Connect the cables to the system board assembly. See [“Front I/O module and integrated diagnostics panel cable routing”](#) on page 203, [“PCIe switch board cable routing”](#) on page 212, and [“Power cable routing”](#) on page 205 for more information.

After you finish

1. Reinstall the 2U compute shuttle. See [“Install the 2U compute shuttle”](#) on page 27.

2. Complete the parts replacement. See [“Complete the parts replacement” on page 191](#).

PCIe switch shuttle replacement (trained technician only)

Follow instructions in this section to remove and install the PCIe switch shuttle.

Important: This task must be operated by trained technicians that are certified by Lenovo Service. Do not attempt to remove or install the part without proper training and qualification.

Remove the PCIe switch shuttle

Follow instructions in this section to remove the PCIe switch shuttle. The procedure must be executed by a trained technician.

About this task

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Power off the server and peripheral devices and disconnect the power cords and all external cables. See [“Power off the server” on page 7](#).
- Anti-static gloves are recommended as a precaution while disconnecting cables from the PCIe switch board.

Procedure

Step 1. Disengage the PCIe switch shuttle from the 8U GPU shuttle.

- a. ① Press the two blue release latches.
- b. ② Rotate the two release levers until they are perpendicular to the PCIe switch shuttle.
- c. ③ Pull the PCIe switch shuttle forward until it stops.

Note: Push the two release levers back until they lock into place after pulling out the PCIe switch shuttle to avoid damage.

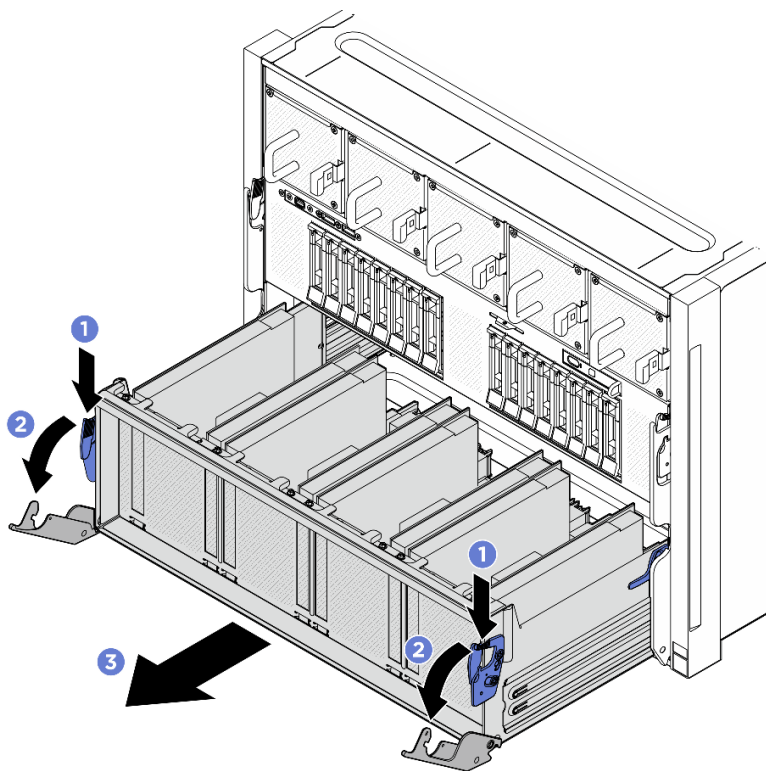


Figure 181. PCIe switch shuttle removal to stop position

Step 2. Disconnect the cables from the PCIe switch board.

Step 3. Remove the PCIe switch shuttle.

- a. 1 Press the two lock latches on both sides of the PCIe switch shuttle.
- b. 2 Slide the PCIe switch shuttle fully forward and remove it from the 8U GPU shuttle.

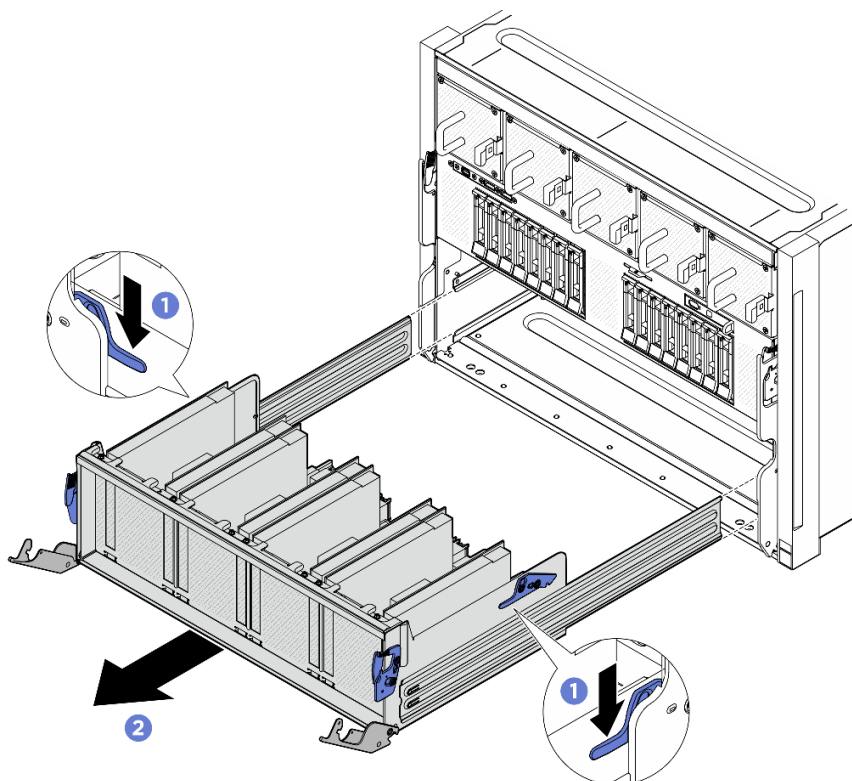


Figure 182. PCIe switch shuttle removal from 8U GPU shuttle

After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

Install the PCIe switch shuttle

Follow instructions in this section to install the PCIe switch shuttle. The procedure must be executed by a trained technician.

About this task

Attention:

- Read [“Installation Guidelines” on page 1](#) and [“Safety inspection checklist” on page 2](#) to ensure that you work safely.
- Touch the static-protective package that contains the component to any unpainted metal surface on the server; then, remove it from the package and place it on a static-protective surface.
- Anti-static gloves are recommended as a precaution while connecting cables to the PCIe switch board.

Procedure

- Step 1. Fully open the two release levers; then, align the PCIe switch shuttle with the opening in the front of the 8U GPU shuttle, and slide it into the 8U GPU shuttle until it snaps into place.

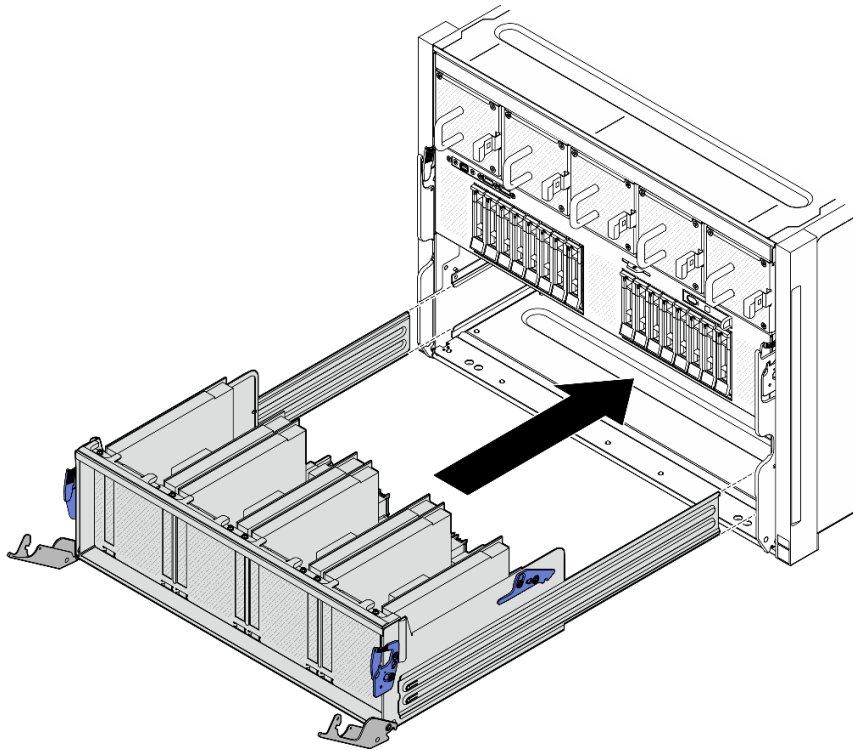


Figure 183. PCIe switch shuttle installation to stop position

- Step 2. Connect the cables to the PCIe switch board. See [“2.5-inch drive backplane cable routing” on page 208](#) and [“PCIe switch board cable routing” on page 212](#) for more information.
- Step 3. Install the PCIe switch shuttle.
- a. ① Press the two lock latches on both sides of the PCIe switch shuttle.
 - b. ② Push the PCIe switch shuttle into the 8U GPU shuttle until it stops.
 - c. ③ Rotate the two release levers until they lock into place.

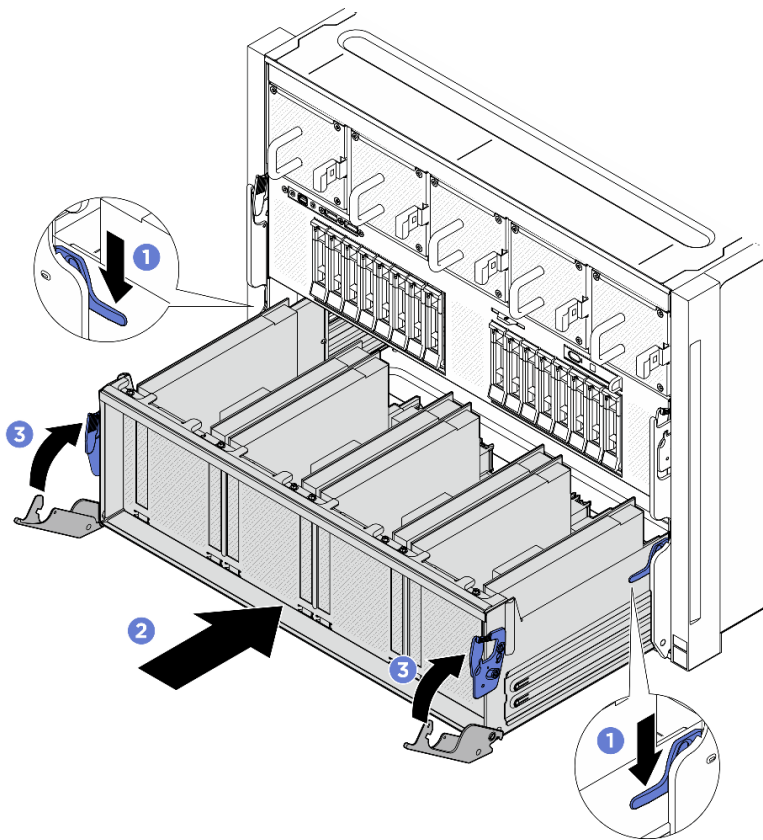


Figure 184. PCIe switch shuttle installation to 8U GPU shuttle

After you finish

Complete the parts replacement. See “Complete the parts replacement” on page 191.

Complete the parts replacement

Go through the checklist to complete parts replacement

To complete the parts replacement, do the following:

1. Ensure that all components have been reassembled correctly and that no tools or loose screws are left inside your server.
2. Properly route and secure the cables in the server. Refer to the cable connecting and routing information for each component.
3. Reconnect the power cords and any cables that you removed.
4. Power on the server and any peripheral devices. See “Power on the server” on page 6.
5. Update the server configuration.
 - Download and install the latest device drivers: <http://datacentersupport.lenovo.com>.
 - Update the system firmware. See “Update the firmware” in *User Guide* or *System Configuration Guide*.
 - Update the UEFI configuration. See <https://pubs.lenovo.com/uefi-overview/>.
 - Reconfigure the disk arrays if you have installed or removed a hot-swap drive. See <https://pubs.lenovo.com/lxpm-overview/> for the LXPM documentation compatible with your server.

Chapter 2. Internal cable routing

See this section to do cable routing for specific components.

Note: Disengage all latches, release tabs, or locks on cable connectors when you disconnect cables from the system board. Failing to release them before removing the cables will damage the cable sockets on the system board, which are fragile. Any damage to the cable sockets might require replacing the system board.

Identifying connectors

See this section to locate and identify the connectors on the electric boards.

Drive backplane connectors

See this section to locate the connectors on the drive backplane.

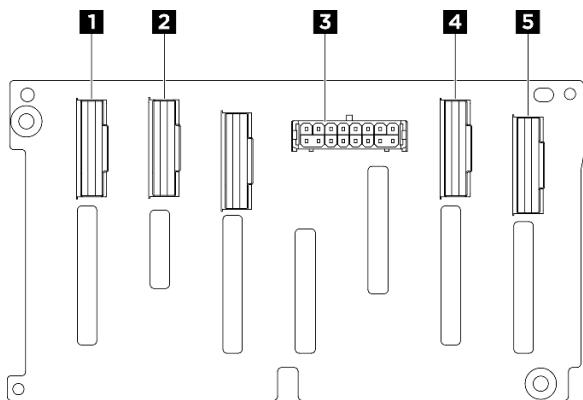


Figure 185. 2.5-inch NVMe backplane connectors

1 NVMe connector 6-7	2 NVMe connector 4-5
3 Power connector	4 NVMe connector 2-3
5 NVMe connector 0-1	

Fan control board connectors

See this section to locate the connectors on the fan control board.

- [“Front fan control board” on page 193](#)
- [“Rear fan control board” on page 194](#)

Front fan control board

 


Figure 186. Front fan control board connector

1 Power connector

Rear fan control board

 


Figure 187. Rear fan control board connector

1 Power connector

PCIe riser card connectors

See this section to locate the connectors on the PCIe riser card.

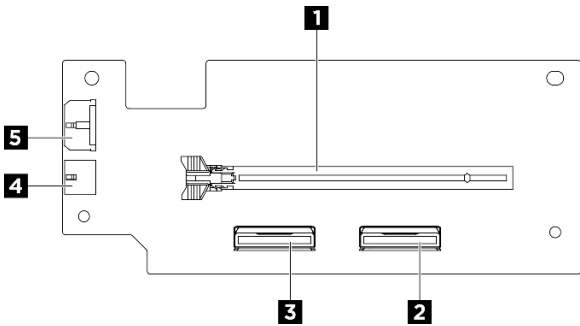


Figure 188. PCIe riser card connectors

1 PCIe x16 (Gen5) slot	3 PCIe riser signal connector (MCIO 1)
2 PCIe riser signal connector (MCIO 2)	4 PCIe riser power connector (RISER_PWR)
5 DPU power connector (AUX_PWR)	

PCIe switch board connectors

See this section to locate the connectors on the PCIe switch board.

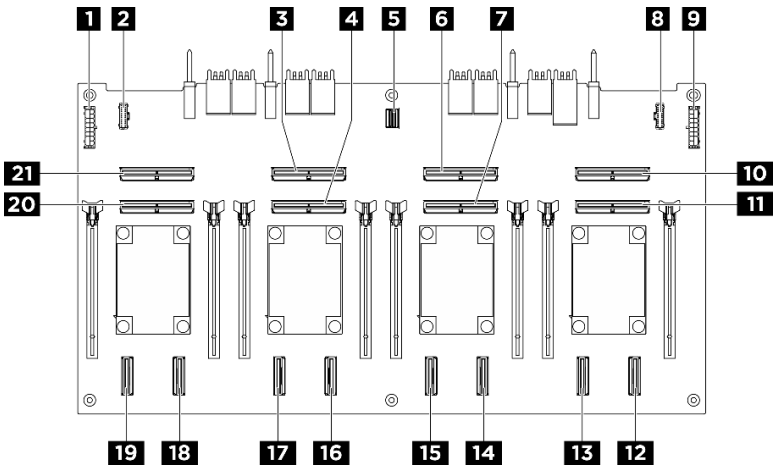


Figure 189. PCIe switch board connectors

1 Power distribution board power connector 1 (PDB PWR1)	2 Power distribution board sideband connector 1 (PDB SB1)
3 MCIO connector 3 (MCIO3)	4 MCIO connector 4 (MCIO4)
5 GPU management connector (MGMT)	6 MCIO connector 5 (MCIO5)
7 MCIO connector 6 (MCIO6)	8 Power distribution board sideband connector 2 (PDB SB2)
9 Power distribution board power connector 2 (PDB PWR2)	10 MCIO connector 7 (MCIO7)
11 MCIO connector 8 (MCIO8)	12 NVMe connector 8 (NVME8)
13 NVMe connector 7 (NVME7)	14 NVMe connector 6 (NVME6)
15 NVMe connector 5 (NVME5)	16 NVMe connector 4 (NVME4)
17 NVMe connector 3 (NVME3)	18 NVMe connector 2 (NVME2)
19 NVMe connector 1 (NVME1)	20 MCIO connector 2 (MCIO2)
21 MCIO connector 1 (MCIO1)	

PCIe switch cable harness cables

See this section to locate the cables on the PCIe switch cable harness.

- [“Front PCIe switch cable harness” on page 195](#)
- [“Rear PCIe switch cable harness” on page 196](#)

Front PCIe switch cable harness

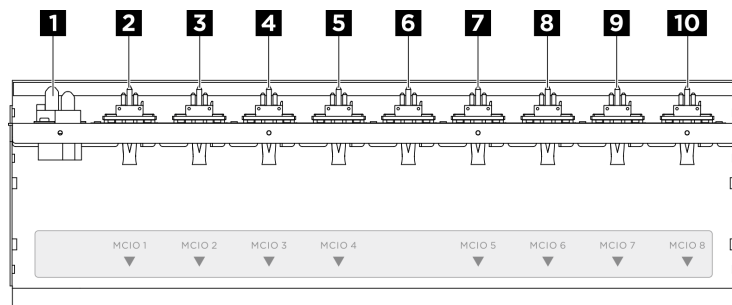


Figure 190. Front PCIe switch cable harness cables

1 Power cables	2 MCIO 1 cable
3 MCIO 2 cable	4 MCIO 3 cable
5 MCIO 4 cable	6 <ul style="list-style-type: none"> • USB / Mini DisplayPort cable • Integrated diagnostics panel cable • GPU management cable
7 MCIO 5 cable	8 MCIO 6 cable
9 MCIO 7 cable	10 MCIO 8 cable

Rear PCIe switch cable harness

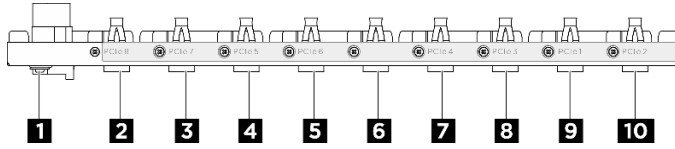


Figure 191. Rear PCIe switch cable harness cables

1 Power cables	2 MCIO 1 cable
3 MCIO 9 cable	4 MCIO 2 cable Notes: <ul style="list-style-type: none">• Cable end A plugs into connector B.• Cable end B plugs into connector A.
5 MCIO 3 cable	6 <ul style="list-style-type: none">• USB / Mini DisplayPort cable• Integrated diagnostics panel cable• GPU management cable
7 MCIO 5 cable Notes: <ul style="list-style-type: none">• Cable end A plugs into connector B.• Cable end B plugs into connector A.	8 MCIO 10 cable
9 MCIO 6 cable	10 MCIO 7 cable Notes: <ul style="list-style-type: none">• Cable end A plugs into connector B.• Cable end B plugs into connector A.

Power distribution board connectors

See this section to locate the connectors on the power distribution board.

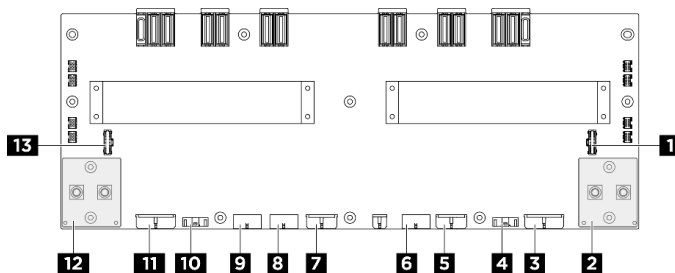


Figure 192. Power distribution board connectors

1 PSU interposer sideband connector 2 (PIB SB2)	2 Right GPU baseboard power connector (GPU PWR)
3 PCIe switch board power connector 2 (FRONT RISER PWR2)	4 PCIe switch board sideband connector 2 (SWSB2)
5 Backplane 2 power connector (BP2 PWR)	6 Front fan control board power connector (FRONT FAN PWR)

7 Backplane 1 power connector (BP1 PWR)	8 Rear fan control board (top) power connector (REAR FAN PWR2)
9 Rear fan control board (bottom) power connector (REAR FAN PWR1)	10 PCIe switch board sideband connector 1 (SWSB1)
11 PCIe switch board power connector 1 (FRONT RISER PWR1)	12 Left GPU baseboard power connector (GPU PWR)
13 PSU interposer sideband connector 1 (PIB SB1)	

PSU interposer connectors

See this section to locate the connectors on the PSU interposer.

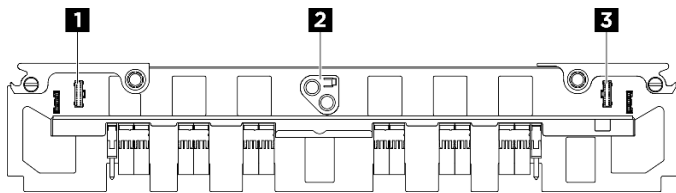


Figure 193. PSU interposer connectors

1 Power distribution board sideband connector 1 (PDB SB1)	2 System board assembly power connector (MB PWR)
3 Power distribution board sideband connector 2 (PDB SB2)	

System board connectors for cable routing

The following illustrations show the internal connectors on the system board that are used for internal cable routing.

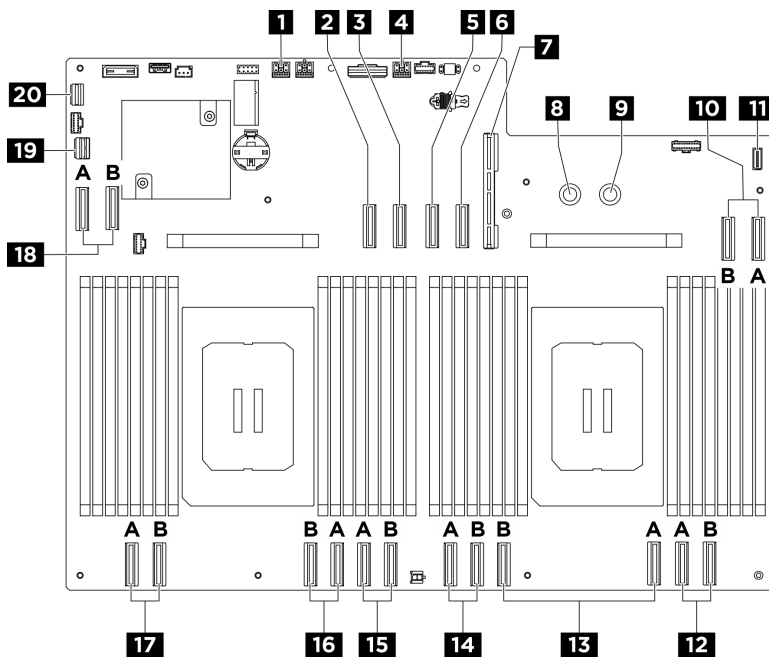


Figure 194. System board connectors for cable routing

Table 2. System board connectors for cable routing

1 PCIe Riser 2 power and sideband connector (BP PWR/ SIG 2)	2 PCIe Riser 2 signal connector (MCIO4B)
3 PCIe Riser 2 signal connector (MCIO4A)	4 PCIe Riser 1 power and sideband connector (BP PWR/ SIG 3)
5 PCIe Riser 1 signal connector (MCIO8A)	6 PCIe Riser 1 signal connector (MCIO8B)
7 System I/O board connector (DC-SCM)	8 PDB_0V connector (PSU_GND)
9 PDB_P12V connector (PSU_P12V)	10 MCIO connector 7 (MCIO7A/MCIO7B)
11 Integrated diagnostics panel connector (FRONT IO2)	12 MCIO connector 6 (MCIO6A/MCIO6B)
13 MCIO connector 5 (MCIO5A/MCIO5B)	14 MCIO connector 10 (MCIO10A/MCIO10B)
15 MCIO connector 3 (MCIO3A/MCIO3B)	16 MCIO connector 2 (MCIO2A/MCIO2B)
17 MCIO connector 1 (MCIO1A/MCIO1B)	18 MCIO connector 9 (MCIO9A/MCIO9B)
19 PCIe switch sideband connector (PCIE SW SIDEBAND)	20 Front USB / Mini DisplayPort connector (FRONT IO1)

Common components cable routing

Follow the instructions in this section to learn how to do cable routing for common components.

- [“Fan control board cable routing” on page 202](#)
- [“Front I/O module and integrated diagnostics panel cable routing” on page 203](#)
- [“Power cable routing” on page 205](#)
- [“PSU interposer cable routing” on page 207](#)
- [“System I/O board cable routing” on page 205](#)

- “PCIe riser cable routing” on page 199

PCIe riser cable routing

Use the section to understand the cable routing for the PCIe risers.

Notes:

- Connections between connectors; **1↔1, 2↔2, 3↔3, ... n↔n**
- When routing the cables, ensure that all cables are routed appropriately through the cable guides.
- A label on each cable indicates the connection source and destination. This information is in the format **RY-X** and **P Z**. Where **Y** indicates the PCIe riser number, **X** indicates the connector on the riser card, and **Z** indicates the connector on the system board assembly.

PCIe riser cable routing

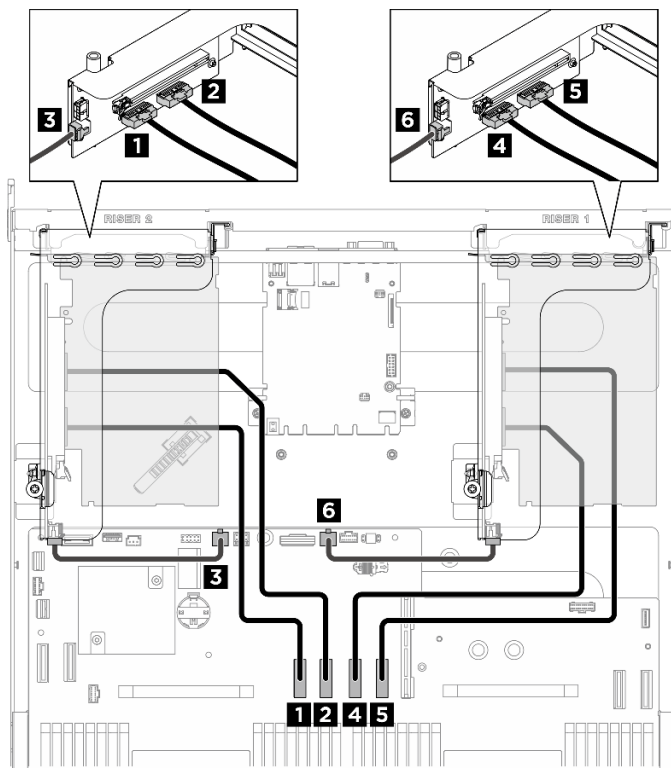


Figure 195. PCIe riser cable routing

From	To	Label
1 PCIe riser 2 signal connector (MCIO 1)	System board assembly: PCIe Riser 2 signal connectors (MCIO4B)	R2-MCIO 1 MCIO 4B
2 PCIe riser 2 signal connector (MCIO 2)	System board assembly: PCIe Riser 2 signal connectors (MCIO4A)	R2-MCIO 2 MCIO 4A
3 PCIe Riser 2 power connector (RISER PWR)	System board assembly: PCIe Riser 2 power and sideband connector (BP PWR/SIG 1)	R2-Riser PWR PWR/SIG 2

From	To	Label
4 PCIe riser 1 signal connector (MCIO 1)	System board assembly: PCIe Riser 1 signal connectors (MCIO8A)	R1-MCIO 1 MCIO 8A
5 PCIe riser 1 signal connector (MCIO 2)	System board assembly: PCIe Riser 1 signal connectors (MCIO8B)	R1-MCIO 2 MCIO 8B
6 PCIe Riser 1 power connector (RISER PWR)	System board assembly: PCIe Riser 1 power and sideband connector (BP PWR/SIG 3)	R1-Riser PWR PWR/SIG 3

DPU power cable routing

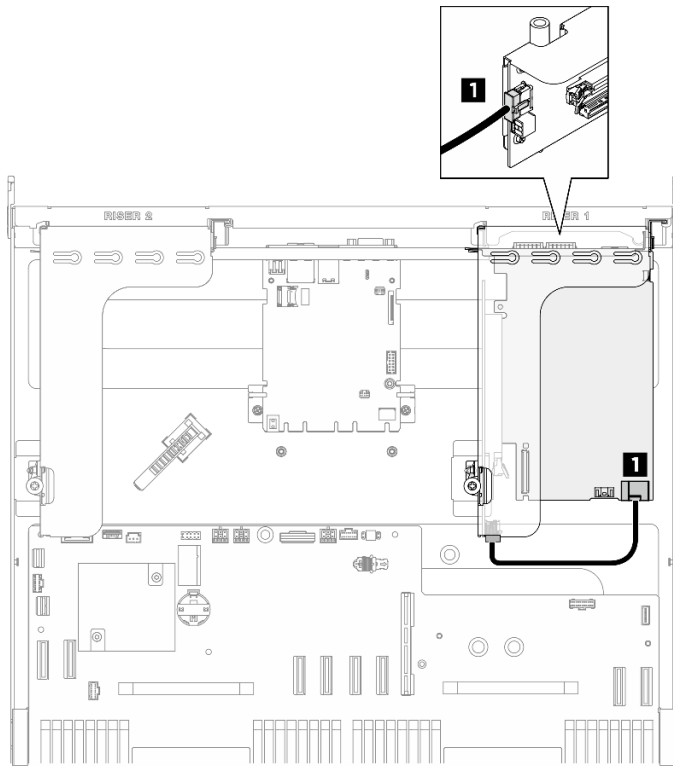
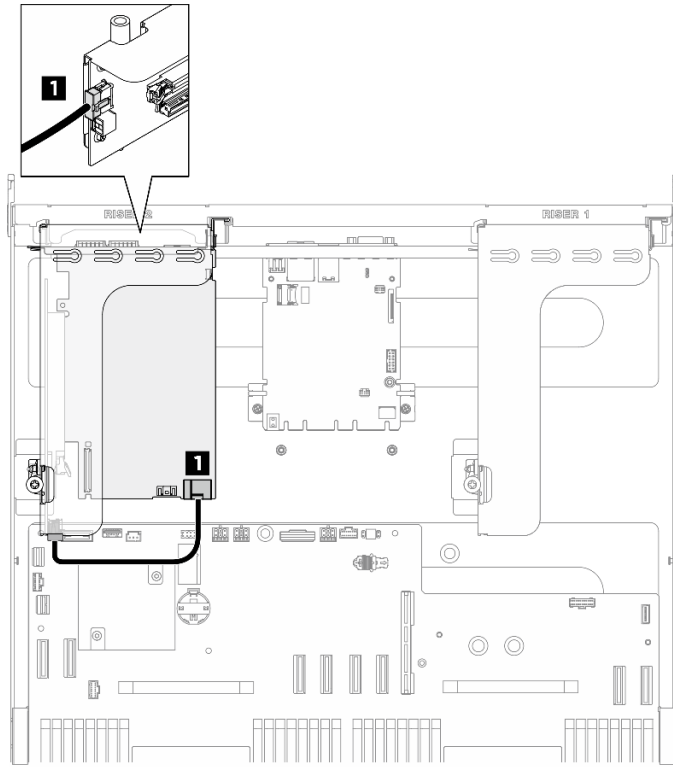


Figure 196. DPU power cable routing

Cable	From	To
1	DPU adapter: Power connector	PCIe riser 1 or 2: Power connector

Fan control board cable routing

Use the section to understand the cable routing for the front or rear fan control board.

Based on the location of the fan control board, select the corresponding routing plan:

- “Front fan control board” on page 202
- “Rear fan control board (top)” on page 202
- “Rear fan control board (bottom)” on page 203

Front fan control board

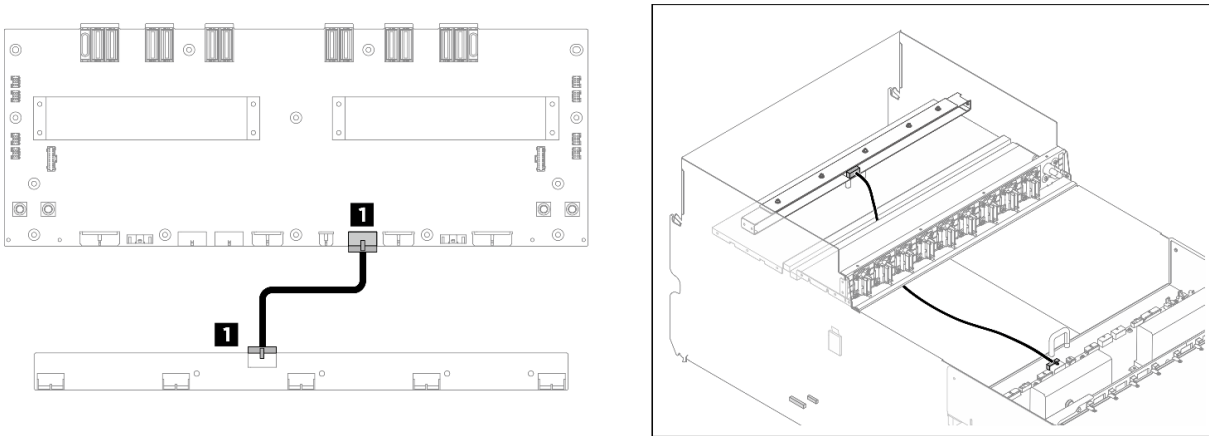


Figure 197. Front fan control board cable routing

Cable	From	To	Label
1	Front fan control board: Power connector	Power distribution board: Front fan control board power connector (FRONT FAN PWR)	F-Fan PWR FNT PWR

Rear fan control board (top)

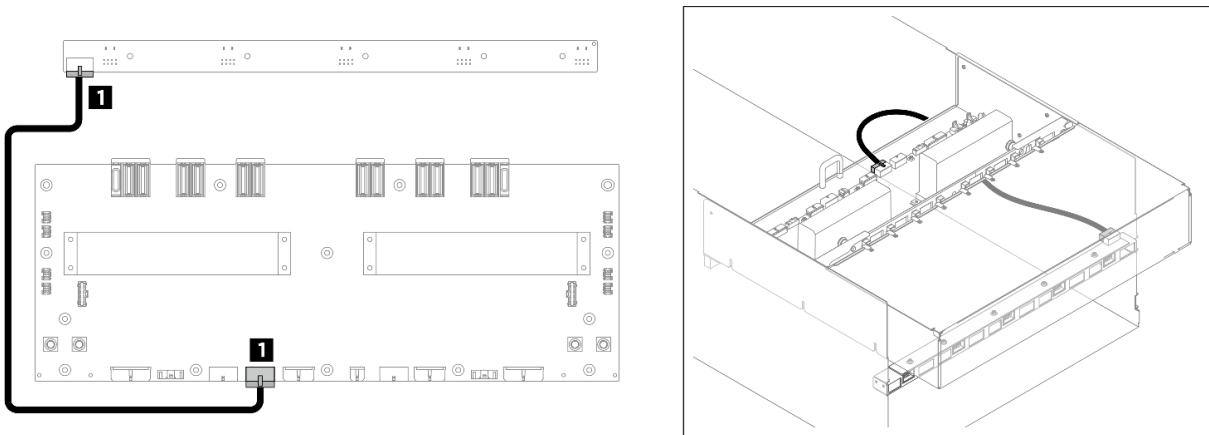


Figure 198. Rear fan control board (top) cable routing

Cable	From	To	Label
1	Rear fan control board (top): Power connector	Power distribution board: Rear fan control board (top) power connector (REAR FAN PWR2)	R-Fan PWR2 TOP PWR

Rear fan control board (bottom)

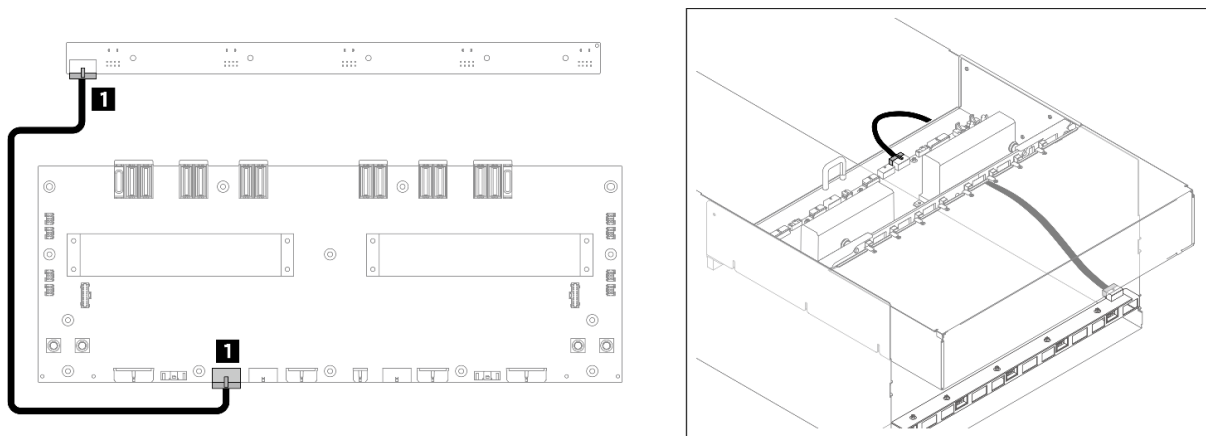


Figure 199. Rear fan control board (bottom) cable routing

Cable	From	To	Label
1	Rear fan control board (bottom): Power connector	Power distribution board: Rear fan control board (bottom) power connector (REAR FAN PWR1)	R-Fan PWR1 LOW PWR

Front I/O module and integrated diagnostics panel cable routing

Use the section to understand the cable routing for the front I/O module and the integrated diagnostics panel.

Based on the location, select the corresponding routing plan:

- [“In 2U compute shuttle” on page 203](#)
- [“In 8U GPU shuttle” on page 204](#)

In 2U compute shuttle

Note: Make sure to route the cables through the cable guide as instructed.

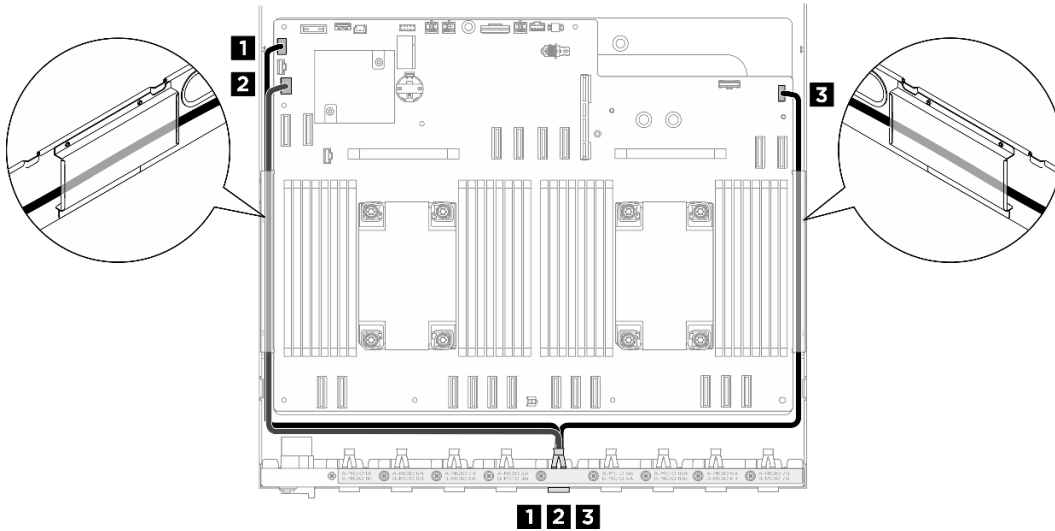


Figure 200. Front I/O module and integrated diagnostics panel cable routing

Cable	From	To
1	Rear PCIe switch cable harness: USB / Mini DisplayPort cable	System board assembly: Front USB / Mini DisplayPort connector (FRONT IO1)
2	PCIe switch board: GPU management cable	System board assembly: PCIe switch sideband connector (PCIE SW SIDEBAND)
3	Rear PCIe switch cable harness: Integrated diagnostics panel cable	System board assembly: Integrated diagnostics panel connector (FRONT IO2)

For GPU management cable routing on the PCIe switch board, see [“PCIe switch board cable routing”](#) on page 212.

In 8U GPU shuttle

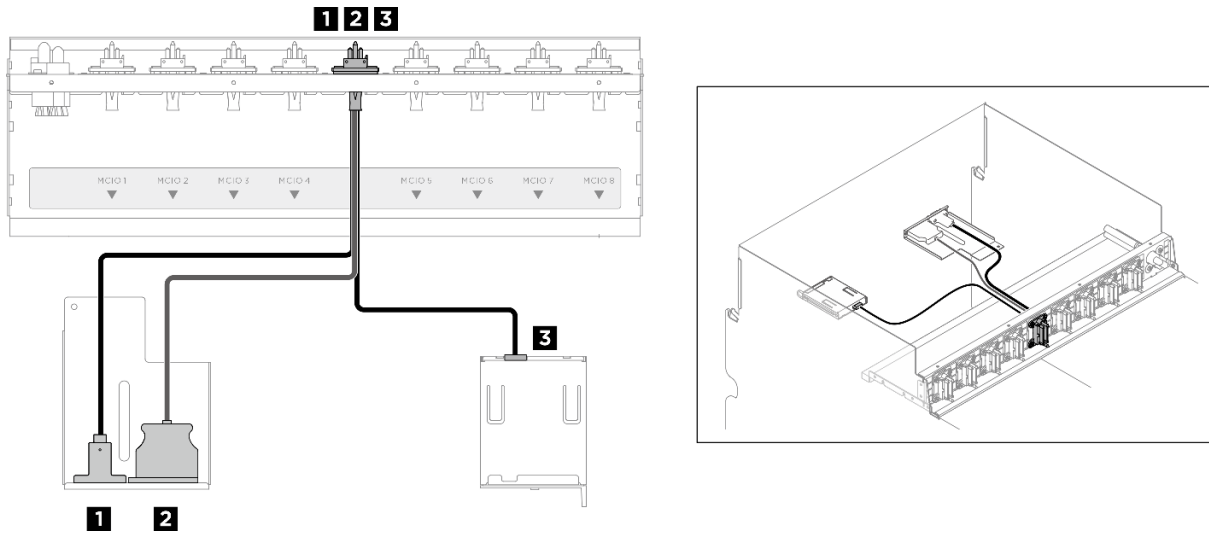


Figure 201. Front I/O module and integrated diagnostics panel cable routing

Cable	From	To
1	Front PCIe switch cable harness: Mini DisplayPort cable	Front I/O module
2	Front PCIe switch cable harness: USB cable	Front I/O module
3	Front PCIe switch cable harness: Integrated diagnostics panel cable	Integrated diagnostics panel

System I/O board cable routing

Use the section to understand the cable routing for the system I/O board.

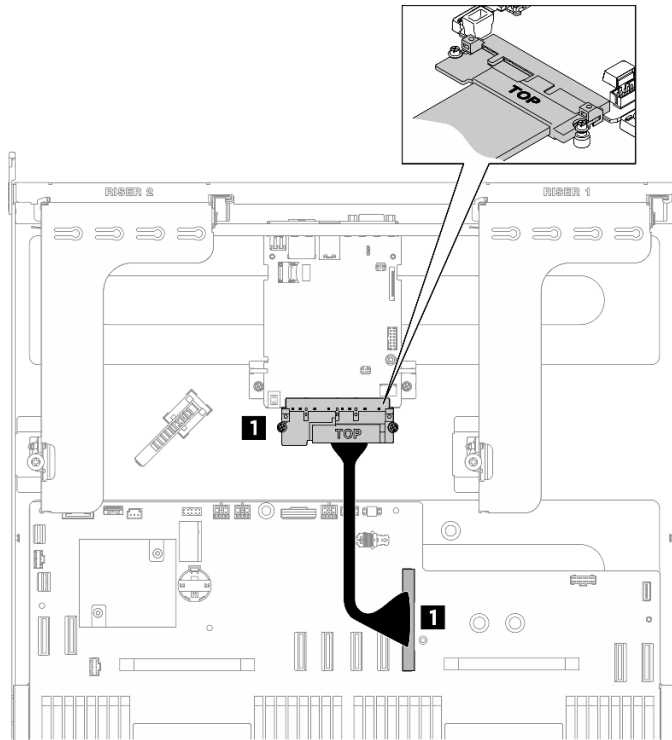


Figure 202. System I/O board cable routing

Cable	From	To
1	System I/O board: Processor board connector	System board assembly: System I/O board connector (DC-SCM)

Power cable routing

Use the section to understand the cable routing for the power cables on the system board.

Notes:

- Connections between connectors; **1**↔**1**, **2**↔**2**, **3**↔**3**, ... **n**↔**n**
- When routing the cables, ensure that all cables are routed appropriately through the cable guides.

Based on the location, select the corresponding routing plan:

- [“In 2U compute shuttle” on page 206](#)

- “In 8U GPU shuttle” on page 207

In 2U compute shuttle

Note: Make sure to route the cables through the cable guide as instructed.

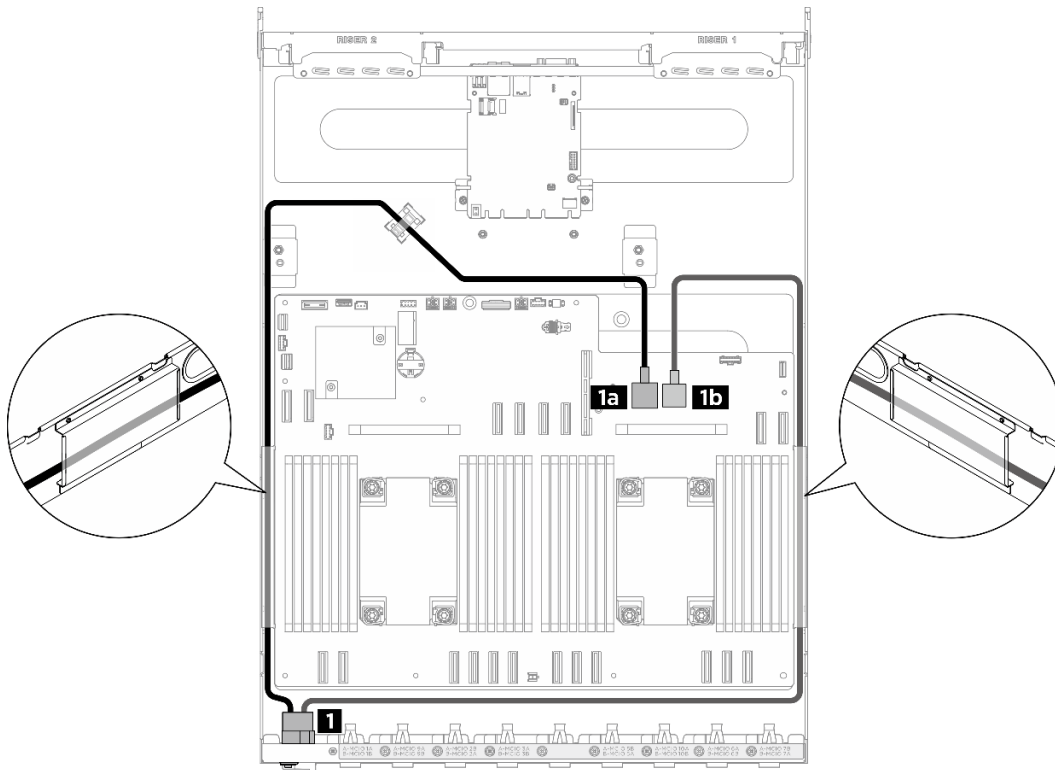


Figure 203. Power cable routing

Cable	From	To
1	Front PCIe switch cable harness: Power cables	1a System board: PDB_0V connector (PSU_GND) 1b System board: PDB_P12V connector (PSU_P12V)

In 8U GPU shuttle

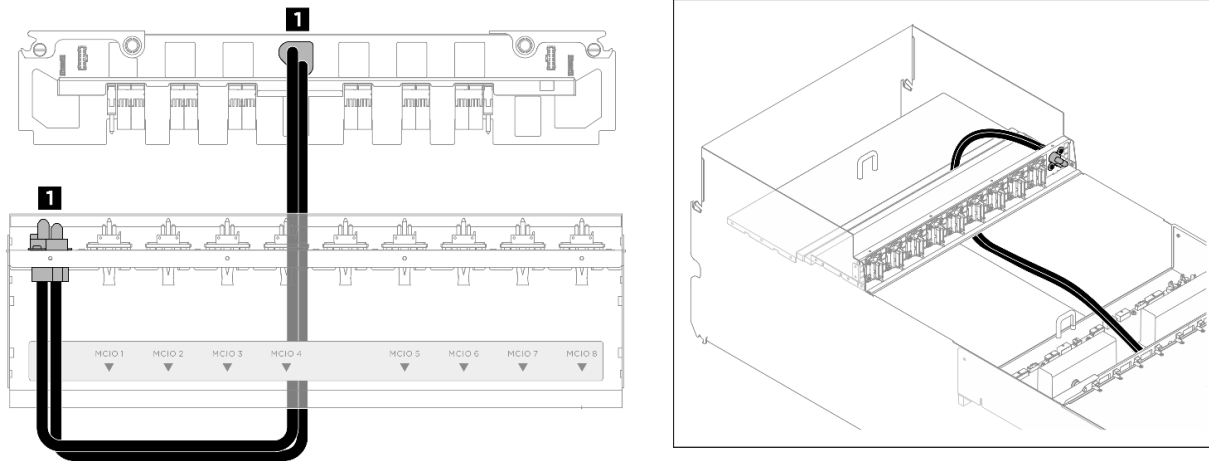


Figure 204. Power cable routing

Cable	From	To
1	Front PCIe switch cable harness: Power cables	PSU interposer: System board assembly power connector (MB PWR)

PSU interposer cable routing

Use the section to understand the cable routing for the PSU interposer.

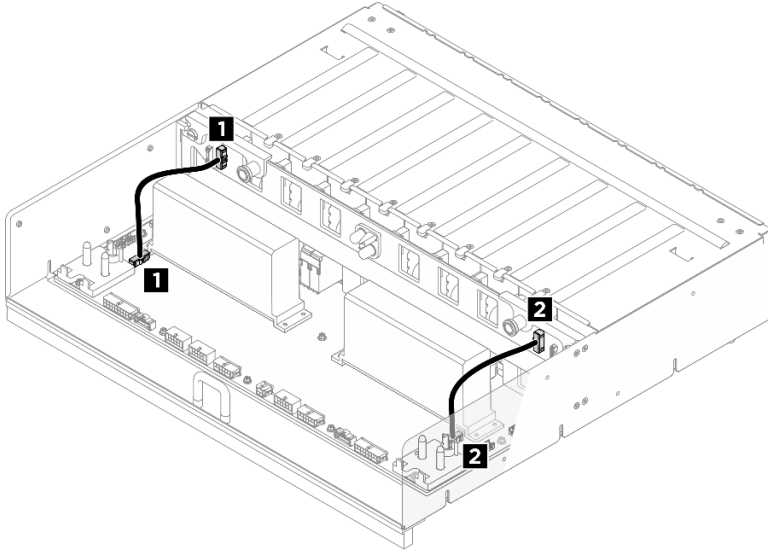


Figure 205. PSU interposer cable routing

Cable	From	To
1	PSU interposer: Power distribution board sideband connector 1 (PDB SB1)	Power distribution board: PSU interposer sideband connector 1 (PIB SB1)
2	PSU interposer: Power distribution board sideband connector 2 (PDB SB2)	Power distribution board: PSU interposer sideband connector 2 (PIB SB2)

The H100/H200 GPU Model cable routing

Use the section to understand the cable routing for the H100/H200 GPU Model.

Note: Go through the following sections in [“Identifying connectors” on page 193](#) to acquire necessary information before starting cable routing.

- [“2.5-inch drive backplane cable routing” on page 208](#)
- [“GPU baseboard cable routing” on page 211](#)
- [“PCIe switch board cable routing” on page 212](#)

2.5-inch drive backplane cable routing

Use the section to understand the cable routing for the 2.5-inch drive backplane.

Based on the location of the drive backplane, select the corresponding routing plan:

- [“Backplane 1” on page 208](#)
- [“Backplane 2” on page 209](#)

Backplane 1

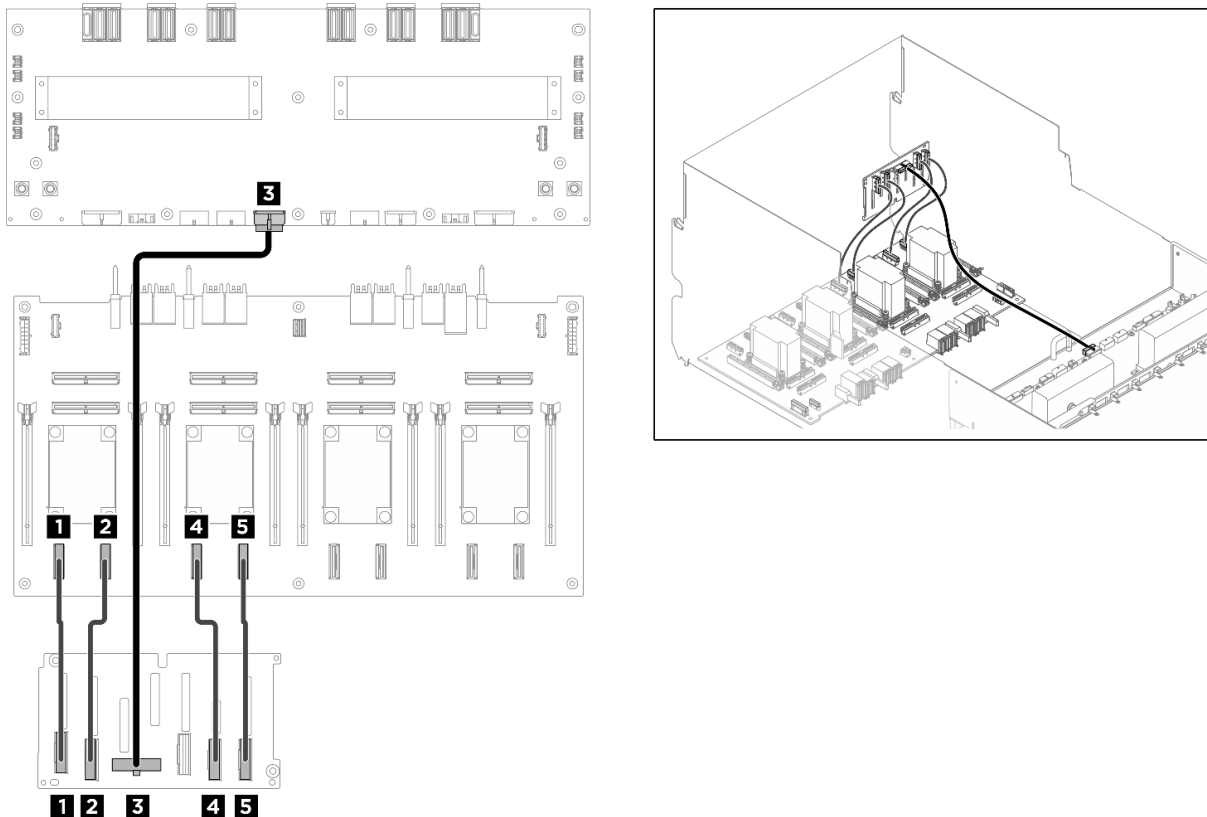


Figure 206. Backplane 1 cable routing

Cable	From	To	Label
1	Backplane 1: NVMe connector 0-1	PCIe switch board: NVMe connector 1 (NVME1)	NVME 0-1 NVME 1
2	Backplane 1: NVMe connector 2-3	PCIe switch board: NVMe connector 2 (NVME2)	NVME 2-3 NVME 2
3	Backplane 1: Power connector	Power distribution board: Backplane 1 power connector (BP1 PWR)	N/A
4	Backplane 1: NVMe connector 4-5	PCIe switch board: NVMe connector 3 (NVME3)	NVME 4-5 NVME 3
5	Backplane 1: NVMe connector 6-7	PCIe switch board: NVMe connector 4 (NVME4)	NVME 6-7 NVME 4

Backplane 2

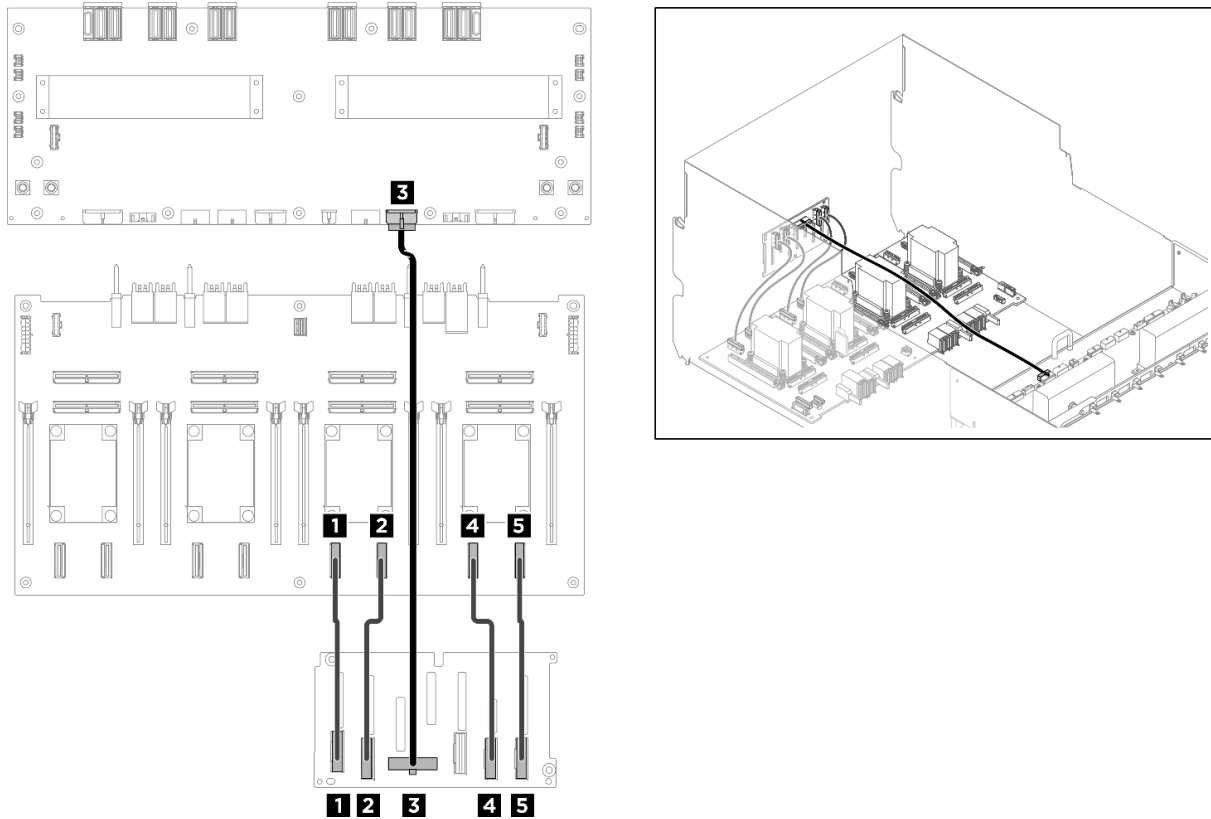


Figure 207. Backplane 2 cable routing

Cable	From	To	Label
1	Backplane 2: NVMe connector 0-1	PCIe switch board: NVMe connector 5 (NVME5)	NVME 0-1 NVME 5
2	Backplane 2: NVMe connector 2-3	PCIe switch board: NVMe connector 6 (NVME6)	NVME 2-3 NVME 6
3	Backplane 2: Power connector	Power distribution board: Backplane 2 power connector (BP2 PWR)	N/A
4	Backplane 2: NVMe connector 4-5	PCIe switch board: NVMe connector 7 (NVME7)	NVME 4-5 NVME 7
5	Backplane 2: NVMe connector 6-7	PCIe switch board: NVMe connector 8 (NVME8)	NVME 6-7 NVME 8

After you finish

Divide the cables connected to the PCIe switch board into four bundles, and secure them with cable ties.

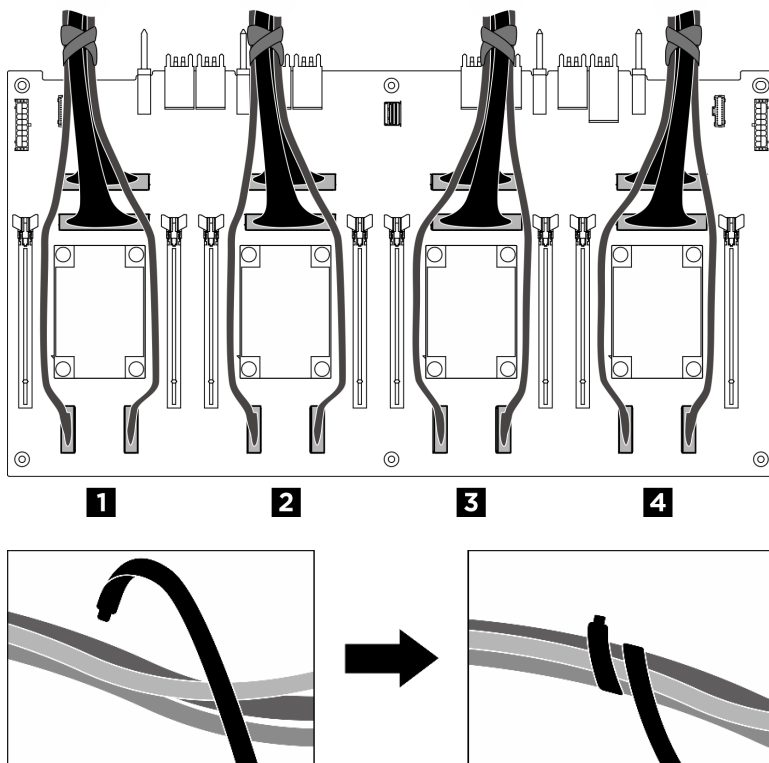


Figure 208. Securing cables with cable ties

Bundle	Cable
1	<ul style="list-style-type: none"> • Two backplane 1 signal cables (connected to NVMe connectors 1 and 2) • Two PCIe switch board signal cables (connected to MCIO connectors 1 and 2)
2	<ul style="list-style-type: none"> • Two backplane 1 signal cables (connected to NVMe connectors 3 and 4) • Two PCIe switch board signal cables (connected to MCIO connectors 3 and 4)
3	<ul style="list-style-type: none"> • Two backplane 2 signal cables (connected to NVMe connectors 5 and 6) • Two PCIe switch board signal cables (connected to MCIO connectors 5 and 6)
4	<ul style="list-style-type: none"> • Two backplane 2 signal cables (connected to NVMe connectors 7 and 8) • Two PCIe switch board signal cables (connected to MCIO connectors 7 and 8)

GPU baseboard cable routing

Use the section to understand the cable routing for the GPU baseboard.

Note: Make sure to route the cables through the cable clips as instructed.

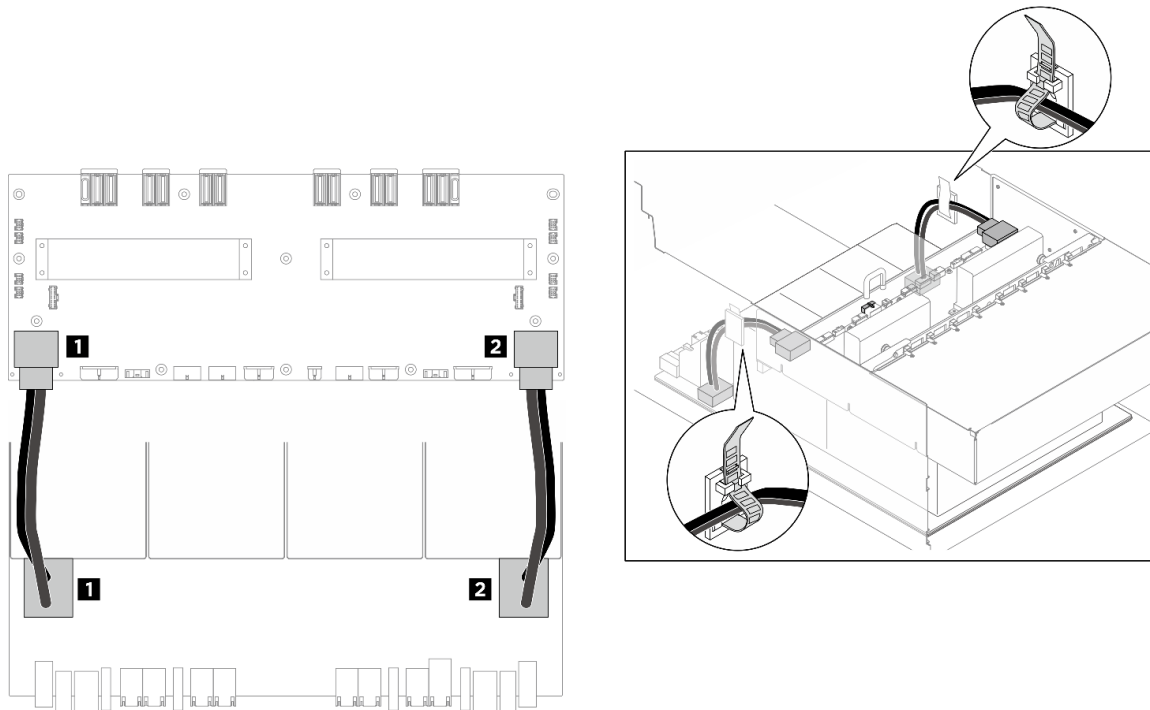


Figure 209. GPU baseboard cable routing

Cable	From	To
1	GPU baseboard: Left power connector	Power distribution board: Left GPU baseboard power connector (GPU PWR)
2	GPU baseboard: Right power connector	Power distribution board: Right GPU baseboard power connector (GPU PWR)

PCIe switch board cable routing

Use the section to understand the cable routing for the PCIe switch board.


Based on the location, select the corresponding routing plan:

- [“In 2U compute shuttle” on page 212](#)
- [“In 8U GPU shuttle” on page 213](#)

In 2U compute shuttle

- [Signal cables](#)
- [GPU management cable](#)

Signal cables

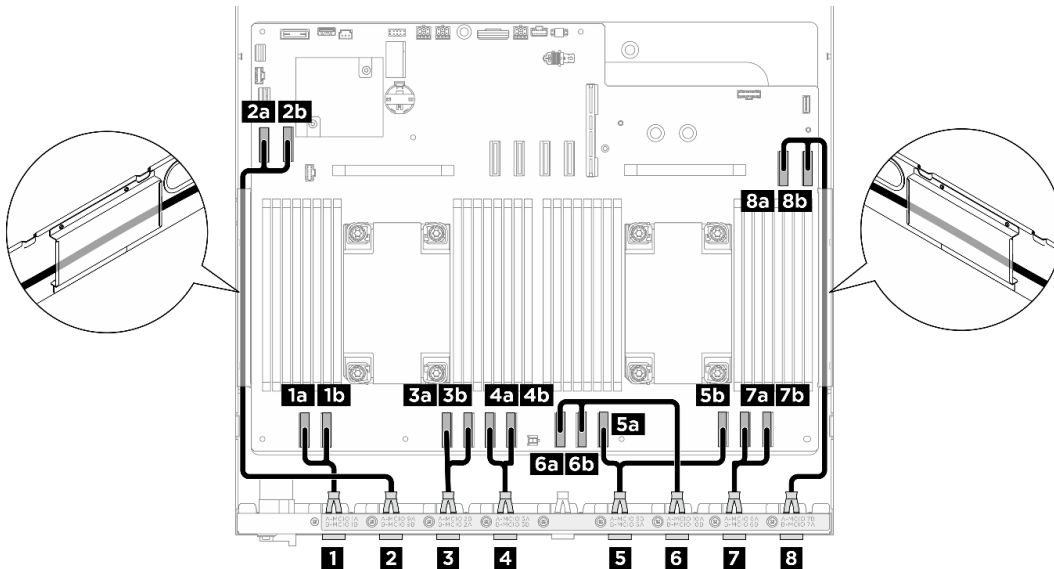





Cable	From	To
1	Rear switch cable harness: MCIO 1 cable	1a System board assembly: MCIO connector 1 (MCIO1A)
		1b System board assembly: MCIO connector 1 (MCIO1B)
2	Rear switch cable harness: MCIO 9 cable	2a System board assembly: MCIO connector 9 (MCIO9A)
		2b System board assembly: MCIO connector 9 (MCIO9B)

Cable	From	To
3	Rear switch cable harness: MCIO 2 cable Notes: <ul style="list-style-type: none">• Cable end A plugs into connector B.• Cable end B plugs into connector A.	3a System board assembly: MCIO connector 2 (MCIO2B)
		3b System board assembly: MCIO connector 2 (MCIO2A)
4	Rear switch cable harness: MCIO 3 cable	4a System board assembly: MCIO connector 3 (MCIO3A)
		4b System board assembly: MCIO connector 3 (MCIO3B)
5	Rear switch cable harness: MCIO 5 cable Notes: <ul style="list-style-type: none">• Cable end A plugs into connector B.• Cable end B plugs into connector A.	5a System board assembly: MCIO connector 5 (MCIO5B)
		5b System board assembly: MCIO connector 5 (MCIO5A)
6	Rear switch cable harness: MCIO 10 cable	6a System board assembly: MCIO connector 10 (MCIO10A)
		6b System board assembly: MCIO connector 10 (MCIO10B)
7	Rear switch cable harness: MCIO 6 cable	7a System board assembly: MCIO connector 6 (MCIO6A)
		7b System board assembly: MCIO connector 6 (MCIO6B)
8	Rear switch cable harness: MCIO 7 cable Notes: <ul style="list-style-type: none">• Cable end A plugs into connector B.• Cable end B plugs into connector A.	8a System board assembly: MCIO connector 7 (MCIO7B)
		8b System board assembly: MCIO connector 7 (MCIO7A)

In 8U GPU shuttle

- [Signal cables](#)
- [GPU management cable](#)
- [Power and sideband cables](#)

Signal cables

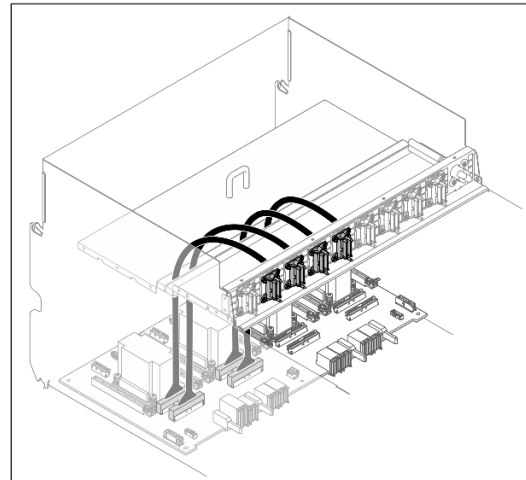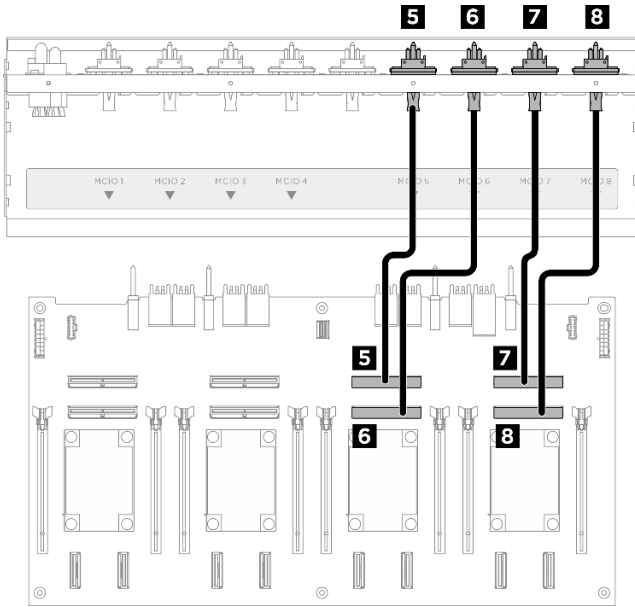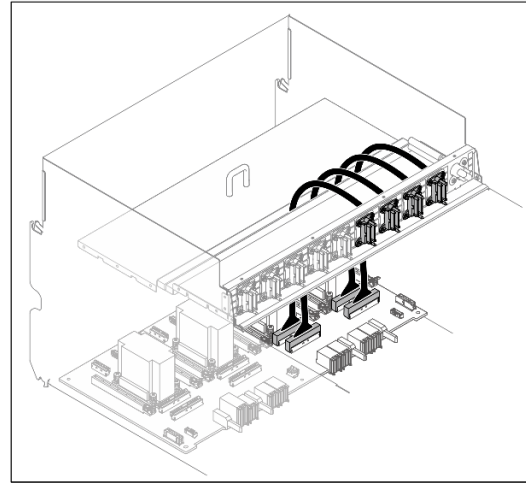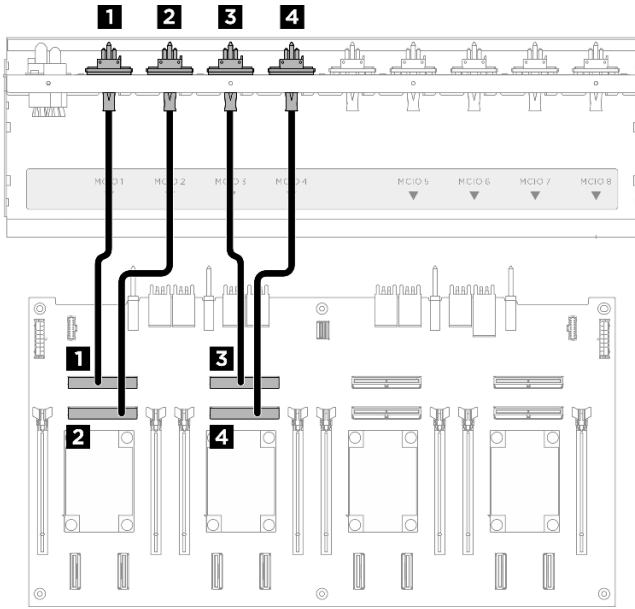

Cable	From	To	Label
1	Front PCIe switch cable harness: MCI0 1 cable	PCIe switch board: MCI0 connector 1 (MCI01)	MCI0 1
2	Front PCIe switch cable harness: MCI0 2 cable	PCIe switch board: MCI0 connector 2 (MCI02)	MCI0 2
3	Front PCIe switch cable harness: MCI0 3 cable	PCIe switch board: MCI0 connector 3 (MCI03)	MCI0 3
4	Front PCIe switch cable harness: MCI0 4 cable	PCIe switch board: MCI0 connector 4 (MCI04)	MCI0 4
5	Front PCIe switch cable harness: MCI0 5 cable	PCIe switch board: MCI0 connector 5 (MCI05)	MCI0 5
6	Front PCIe switch cable harness: MCI0 6 cable	PCIe switch board: MCI0 connector 6 (MCI06)	MCI0 6

Cable	From	To	Label
7	Front PCIe switch cable harness: MCIO 7 cable	PCIe switch board: MCIO connector 7 (MCIO7)	MCIO 7
8	Front PCIe switch cable harness: MCIO 8 cable	PCIe switch board: MCIO connector 8 (MCIO8)	MCIO 8

Divide the cables connected to the PCIe switch board into four bundles, and secure them with cable ties.


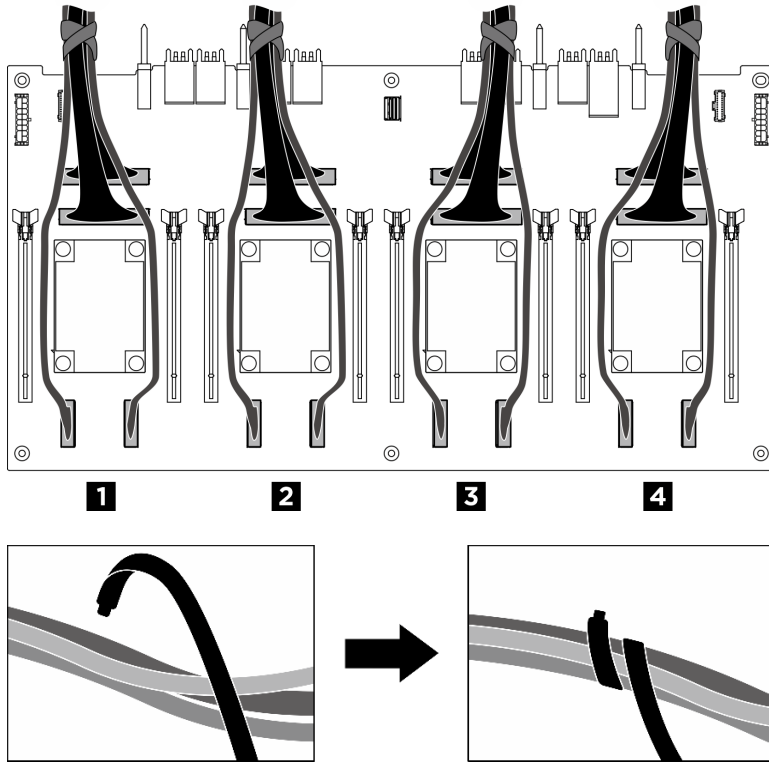


Figure 210. Securing cables with cable ties

Bundle	Cable
1	<ul style="list-style-type: none"> • Two backplane 1 signal cables (connected to NVMe connectors 1 and 2) • Two PCIe switch board signal cables (connected to MCIO connectors 1 and 2)
2	<ul style="list-style-type: none"> • Two backplane 1 signal cables (connected to NVMe connectors 3 and 4) • Two PCIe switch board signal cables (connected to MCIO connectors 3 and 4)

<p>3</p>	<ul style="list-style-type: none"> • Two backplane 2 signal cables (connected to NVMe connectors 5 and 6) • Two PCIe switch board signal cables (connected to MCIO connectors 5 and 6)
<p>4</p>	<ul style="list-style-type: none"> • Two backplane 2 signal cables (connected to NVMe connectors 7 and 8) • Two PCIe switch board signal cables (connected to MCIO connectors 7 and 8)

GPU management cable

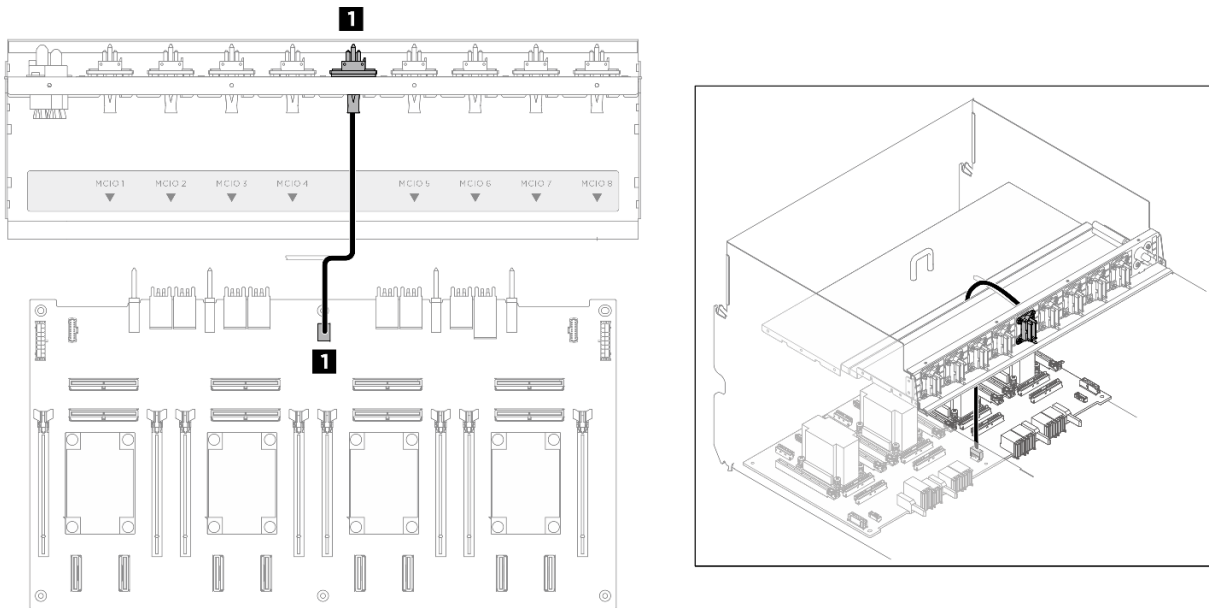



Cable	From	To
1	Front PCIe switch cable harness: GPU management cable	PCIe switch board: GPU management connector (MGMT)

Figure 211. PCIe switch board cable routing (GPU management cable)

For GPU management cable routing on the system board, see [“Front I/O module and integrated diagnostics panel cable routing”](#) on page 203.

Power and sideband cables

Note: Make sure to route the cables through the cable clips as instructed.

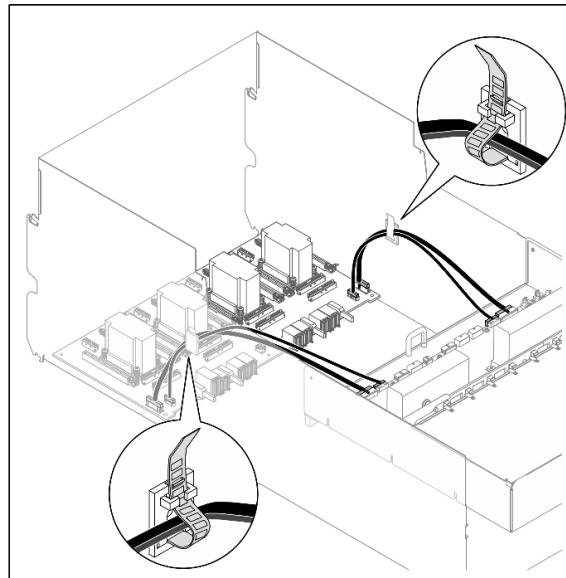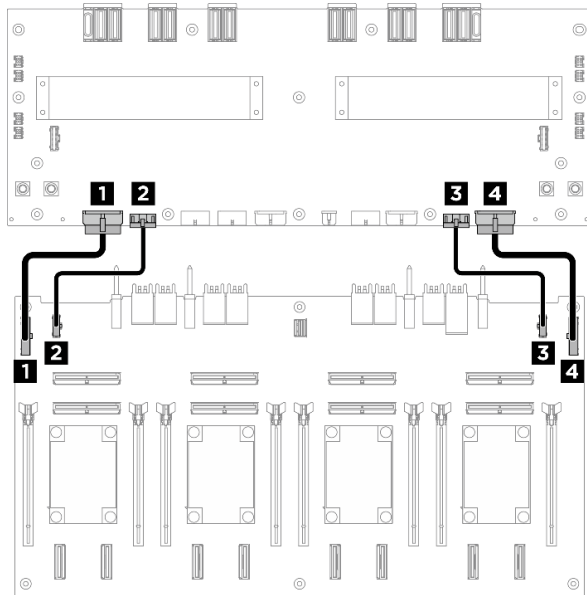

Cable	From	To
1	PCIe switch board: Power distribution board power connector 1 (PDB PWR1)	Power distribution board: PCIe switch board power connector 1 (FRONT RISER PWR1)
2	PCIe switch board: Power distribution board sideband connector 1 (PDB SB1)	Power distribution board: PCIe switch board sideband connector 1 (SWSB1)
3	PCIe switch board: Power distribution board power connector 2 (PDB PWR2)	Power distribution board: PCIe switch board power connector 2 (FRONT RISER PWR2)
4	PCIe switch board: Power distribution board sideband connector 2 (PDB SB2)	Power distribution board: PCIe switch board sideband connector 2 (SWSB2)

Figure 212. PCIe switch board cable routing (power and sideband cables)

Chapter 3. Problem determination

Use the information in this section to isolate and resolve issues that you might encounter while using your server.

Lenovo servers can be configured to automatically notify Lenovo Support if certain events are generated. You can configure automatic notification, also known as Call Home, from management applications, such as the Lenovo XClarity Administrator. If you configure automatic problem notification, Lenovo Support is automatically alerted whenever a server encounters a potentially significant event.

To isolate a problem, you should typically begin with the event log of the application that is managing the server:

- If you are managing the server from the Lenovo XClarity Administrator, begin with the Lenovo XClarity Administrator event log.
- If you are using some other management application, begin with the Lenovo XClarity Controller event log.

Web resources

- **Tech tips**

Lenovo continually updates the support website with the latest tips and techniques that you can use to solve issues that your server might encounter. These Tech Tips (also called retain tips or service bulletins) provide procedures to work around issues or solve problems related to the operation of your server.

To find the Tech Tips available for your server:

1. Go to <http://datacentersupport.lenovo.com> and navigate to the support page for your server.
2. Click on **How To's** from the navigation pane.
3. Click **Article Type** → **Solution** from the drop-down menu.

Follow the on-screen instructions to choose the category for the problem that you are having.

- **Lenovo Data Center Forum**

- Check https://forums.lenovo.com/t5/Datacenter-Systems/ct-p/sv_eg to see if someone else has encountered a similar problem.

Event logs

An *alert* is a message or other indication that signals an event or an impending event. Alerts are generated by the Lenovo XClarity Controller or by UEFI in the servers. These alerts are stored in the Lenovo XClarity Controller Event Log. If the server is managed by the Chassis Management Module 2 or by the Lenovo XClarity Administrator, alerts are automatically forwarded to those management applications.

Note: For a listing of events, including user actions that might need to be performed to recover from an event, see the *Messages and Codes Reference*, which is available at https://pubs.lenovo.com/sr680a-v3/pdf_files.html.

Lenovo XClarity Administrator event log

If you are using Lenovo XClarity Administrator to manage server, network, and storage hardware, you can view the events from all managed devices through the XClarity Administrator.

Logs

The Event log provides a history of hardware and management conditions that have been detected.

Show:

All Event Sources

All Dates

Severity	Serviceability	Date and Time	System	Event	System Type	Source ID
Warning	Support	Jan 30, 2017, 7:48:07 AM	Chassis114:...	Node Node 08 device	Chassis	Jan 30, 20
Warning	Support	Jan 30, 2017, 7:48:07 AM	Chassis114:...	Node Node 02 device	Chassis	Jan 30, 20
Warning	User	Jan 30, 2017, 7:48:07 AM	Chassis114:...	I/O module IO Module	Chassis	Jan 30, 20
Warning	User	Jan 30, 2017, 7:48:07 AM	Chassis114:...	Node Node 08 incom	Chassis	Jan 30, 20

Figure 213. Lenovo XClarity Administrator event log

For more information about working with events from XClarity Administrator, see:

https://pubs.lenovo.com/lxca/events_vieweventlog

Lenovo XClarity Controller event log

The Lenovo XClarity Controller monitors the physical state of the server and its components using sensors that measure internal physical variables such as temperature, power-supply voltages, fan speeds, and component status. The Lenovo XClarity Controller provides various interfaces to systems management software and to system administrators and users to enable remote management and control of a server.

The Lenovo XClarity Controller monitors all components of the server and posts events in the Lenovo XClarity Controller event log.

ThinkSystem System name: XCC0023579PK

Event Log Audit Log Maintenance History

Customize Table Clear Logs Refresh

Type: All Source All Date

Severity	Source	Event ID	Message	Date
	System	0X4000000E00000000	Remote login successful. Login ID: userid from webguis at IP address: 10.104.194.180.	27 Jul 2015, 08:11:04 AM
	System	0X4000000E00000000	Remote login successful. Login ID: userid from webguis at IP address: 10.104.194.180.	27 Jul 2015, 08:11:04 AM
	System	0X4000000E00000000	Remote login successful. Login ID: userid from webguis at IP address: 10.104.194.180.	27 Jul 2015, 08:11:04 AM
	System	0X4000000E00000000	Remote login successful. Login ID: userid from webguis at IP address: 10.104.194.180.	27 Jul 2015, 08:11:04 AM

Figure 214. Lenovo XClarity Controller event log

For more information about accessing the Lenovo XClarity Controller event log, see:

“Viewing Event Logs” section in the XCC documentation compatible with your server at <https://pubs.lenovo.com/lxcc-overview/>

Specifications

Summary of the features and specifications of the server. Depending on the model, some features might not be available, or some specifications might not apply.

Refer to the below table for specifications categories and the content of each category.

Specification category	Technical specifications	Mechanical specifications	Environmental specifications
Content	<ul style="list-style-type: none"> • Processor • Memory • M.2 Drive • Storage expansion • Expansion slots • Graphics processing unit (GPU) • Integrated functions and I/O connectors • Network • System fan • Electrical input • Minimal configuration for debugging • Operating systems 	<ul style="list-style-type: none"> • Dimension • Weight 	<ul style="list-style-type: none"> • Environmental

Technical specifications

Summary of the technical specifications of server. Depending on the model, some features might not be available, or some specifications might not apply.

Processor
<p>Supports two 5th Gen Intel® Xeon® Scalable processors up to 350W TDP, with integrated memory controller and Intel Mesh UPI (Ultra Path Interconnect) topology.</p> <ul style="list-style-type: none"> • Up to two Platinum level processors with LGA 4677 sockets • Scalable up to 60 cores per socket • Supports UPI v2.0 links at higher width (x96) and speed: up to 12.8, 14.4, 16, 20 GT/s • Thermal Design Power (TDP): up to 350 watts <p>For a list of supported processors, see: https://serverproven.lenovo.com.</p>

Memory

See for detailed information about memory configuration and setup.

- Memory module type:
 - TruDDR5 5600MHz RDIMM: 64 GB (2Rx4) and 96 GB (2Rx4)
- Capacity
 - Minimum: 2TB
 - Maximum: 3TB
- Slots: 16 DIMM slots per processor, 32 DIMM slots in total

For a list of supported memory modules, see: <https://serverproven.lenovo.com>.

M.2 Drive

The server supports the following M.2 drive capacity:

- 960 GB

The following form factors are supported:

- 110 mm (22110)

For a list of supported M.2 drives, see: <https://serverproven.lenovo.com>.

Storage expansion

- Up to sixteen 2.5-inch hot-swap NVMe drives
- Up to two M.2 drives (Onboard VROC RAID support)

For a list of supported drives, see: <https://serverproven.lenovo.com>.

Expansion slots

- Eight front PCIe slots
- Two rear PCIe slots

For more information, see “Front view” in *User Guide* or *System Configuration Guide* and “Rear view” in *User Guide* or *System Configuration Guide*.

Graphics processing unit (GPU)

The server supports the following GPU configurations:

- Eight NVIDIA H100 700W SXM5 GPUs with 80GB HBM3 memory
- Eight NVIDIA H200 700W SXM5 GPUs with 141GB HBM3 memory

Integrated functions and I/O connectors

- Lenovo XClarity Controller (XCC), which provides service processor control and monitoring functions, video controller, and remote keyboard, video, mouse, and remote drive capabilities.
 - The server supports Lenovo XClarity Controller 2 (XCC2). For additional information about Lenovo XClarity Controller 2 (XCC2), refer to <https://pubs.lenovo.com/lxcc-overview/>.
- Front connectors:
 - One USB 3.1 Gen 1 (5 Gbps) connector
 - One USB 3.1 Gen 1 (5 Gbps) with USB 2.0 XCC system management function
 - One Mini DisplayPort connector
 - Integrated diagnostics panel
 - Power button and power LED (green)
 - Network Activity LED (green)
 - System ID button/LED (blue)
 - System Error LED (yellow)
- Rear connectors:
 - One XCC system management port (10/100/1000 Mbps RJ-45) on the rear to connect to a systems-management network. This RJ-45 connector is dedicated to the Lenovo XClarity Controller functions.
 - Two USB 3.1 Gen 1 (5 Gbps) connectors
 - One VGA connector

Note: The maximum video resolution is 1920 x 1200 at 60 Hz.

Network

Rear ConnectX-6 SFP28 2-Port PCIe Ethernet Adapter

RAID adapter

Onboard software RAID support for M.2 drives (Intel VROC NVMe RAID):

- Intel VROC standard: requires an activation key and supports RAID level 0 and 1

System fan

Fifteen 80 mm x 80 mm x 56 mm dual-rotor fans

Electrical input

Eight power supplies provide N+N redundancy support.

- 2600-watt Titanium, input power 200-240 Vac

Important: Power supplies and redundant power supplies in the server must be with the same power rating, wattage or level.

Minimal configuration for debugging

- Two processors
- Thirty-Two memory modules
- Eight power supplies
- One M.2 drive (If OS is needed by debugging)
- Fifteen system fans
- Rear ConnectX-6 SFP28 2-Port PCIe Ethernet Adapter (if network is required)

Operating systems

Supported and certified operating system:

- Canonical Ubuntu

References:

- Complete list of available operating systems: <https://lenovopress.lenovo.com/osig>.
- OS deployment instructions, see “Deploy the operating system” in *User Guide* or *System Configuration Guide*.

Mechanical specifications

Summary of the mechanical specifications of server. Depending on the model, some features might not be available, or some specifications might not apply.

Dimension

- Chassis:
 - Height: 351 mm (13.82 inches)
 - Width (with EIA flange): 483 mm (19.02 inches)
 - Depth (with power supplies): 924.2 mm (36.39 inches)
- 2U compute shuttle (without release levers):
 - Height: 85.7 mm (3.37 inches)
 - Width: 438 mm (17.24 inches)
 - Depth: 585.8 mm (23.06 inches)
- 8U GPU shuttle (without release levers):
 - Height: 344.4 mm (13.56 inches)
 - Width: 440 mm (17.32 inches)
 - Depth: 847 mm (33.35 inches)

Weight

- Chassis (empty): 19.4 kg (43 lbs)
- 2U compute shuttle: approximately 10.3 kg (22.8 lbs), depending on the configuration.
- 8U GPU shuttle: approximately 73.2 kg (162 lbs) with H100/H200 GPU complex, depending on the configuration.
- Total server: approximately 102.9 kg (226.8 lbs) with H100/H200 GPU complex, depending on the configuration.

Environmental specifications

Summary of the environmental specifications of server. Depending on the model, some features might not be available, or some specifications might not apply.

Environment

ThinkSystem SR680a V3 complies with ASHRAE Class A2 specifications with certain thermal restrictions. System performance may be impacted when operating temperature is out of permitted conditions.

- Air temperature:
 - Operating
 - ASHRAE Class A2: 10°C to 35°C (50°F to 95°F); the maximum ambient temperature decreases by 1°C for every 300 m (984 ft) increase in altitude above 900 m (2,953 ft).
 - Server off: 5°C to 45°C (41°F to 113°F)
 - Shipment/storage: -20°C to 60°C (-4°F to 140°F)
- Maximum altitude: 3,050 m (10,000 ft)
- Relative Humidity (non-condensing):
 - Operating
 - ASHRAE Class A2: 8% to 80%; maximum dew point: 21°C (70°F)
 - Shipment/storage: 8% to 90%
- Particulate contamination

Attention: Airborne particulates and reactive gases acting alone or in combination with other environmental factors such as humidity or temperature might pose a risk to the server. For information about the limits for particulates and gases, see [“Particulate contamination” on page 225](#).

Note: The server is designed for standard data center environment and recommended to be placed in industrial data center.

Particulate contamination

Attention: Airborne particulates (including metal flakes or particles) and reactive gases acting alone or in combination with other environmental factors such as humidity or temperature might pose a risk to the device that is described in this document.

Risks that are posed by the presence of excessive particulate levels or concentrations of harmful gases include damage that might cause the device to malfunction or cease functioning altogether. This specification sets forth limits for particulates and gases that are intended to avoid such damage. The limits must not be viewed or used as definitive limits, because numerous other factors, such as temperature or moisture content of the air, can influence the impact of particulates or environmental corrosives and gaseous contaminant transfer. In the absence of specific limits that are set forth in this document, you must implement practices that maintain particulate and gas levels that are consistent with the protection of human health and safety. If Lenovo determines that the levels of particulates or gases in your environment have caused damage to the device, Lenovo may condition provision of repair or replacement of devices or parts on implementation of appropriate remedial measures to mitigate such environmental contamination. Implementation of such remedial measures is a customer responsibility.

Table 3. Limits for particulates and gases

Contaminant	Limits
Reactive gases	<p>Severity level G1 as per ANSI/ISA 71.04-1985¹:</p> <ul style="list-style-type: none"> • The copper reactivity level shall be less than 200 Angstroms per month ($\text{\AA}/\text{month} \approx 0.0035 \mu\text{g}/\text{cm}^2\text{-hour}$ weight gain).² • The silver reactivity level shall be less than 200 Angstroms per month ($\text{\AA}/\text{month} \approx 0.0035 \mu\text{g}/\text{cm}^2\text{-hour}$ weight gain).³ • The reactive monitoring of gaseous corrosivity must be conducted approximately 5 cm (2 in.) in front of the rack on the air inlet side at one-quarter and three-quarter frame height off the floor or where the air velocity is much higher.
Airborne particulates	<p>Data centers must meet the cleanliness level of ISO 14644-1 class 8.</p> <p>For data centers without airside economizer, the ISO 14644-1 class 8 cleanliness might be met by choosing one of the following filtration methods:</p> <ul style="list-style-type: none"> • The room air might be continuously filtered with MERV 8 filters. • Air entering a data center might be filtered with MERV 11 or preferably MERV 13 filters. <p>For data centers with airside economizers, the choice of filters to achieve ISO class 8 cleanliness depends on the specific conditions present at that data center.</p> <ul style="list-style-type: none"> • The deliquescent relative humidity of the particulate contamination should be more than 60% RH.⁴ • Data centers must be free of zinc whiskers.⁵
<p>¹ ANSI/ISA-71.04-1985. <i>Environmental conditions for process measurement and control systems: Airborne contaminants</i>. Instrument Society of America, Research Triangle Park, North Carolina, U.S.A.</p> <p>² The derivation of the equivalence between the rate of copper corrosion growth in the thickness of the corrosion product in $\text{\AA}/\text{month}$ and the rate of weight gain assumes that Cu_2S and Cu_2O grow in equal proportions.</p> <p>³ The derivation of the equivalence between the rate of silver corrosion growth in the thickness of the corrosion product in $\text{\AA}/\text{month}$ and the rate of weight gain assumes that Ag_2S is the only corrosion product.</p> <p>⁴ The deliquescent relative humidity of particulate contamination is the relative humidity at which the dust absorbs enough water to become wet and promote ionic conduction.</p> <p>⁵ Surface debris is randomly collected from 10 areas of the data center on a 1.5 cm diameter disk of sticky electrically conductive tape on a metal stub. If examination of the sticky tape in a scanning electron microscope reveals no zinc whiskers, the data center is considered free of zinc whiskers.</p>	

System board connectors

The following illustration shows the internal connectors on the system board.

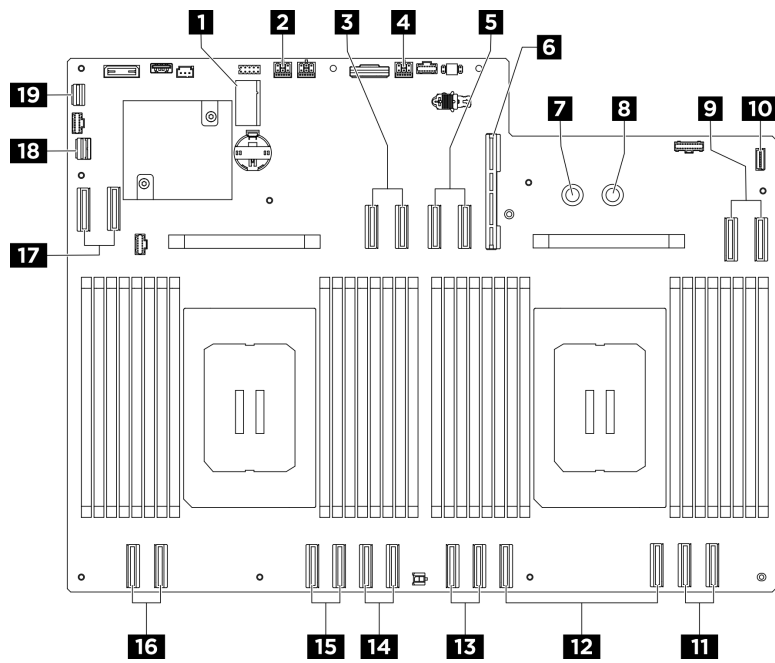


Figure 215. System board connectors

Table 4. System board connectors

1 M.2 slot 1 / M.2 slot 2	2 PCIe Riser 2 power and sideband connector
3 MCIO connector 4 / PCIe Riser 2 signal connectors	4 PCIe Riser 1 power and sideband connector
5 MCIO connector 8 / PCIe Riser 1 signal connectors	6 System I/O board connector (DC-SCM)
7 PDB_0V connector (PSU_GND)	8 PDB_P12V connector (PSU_P12V)
9 MCIO connector 7	10 Integrated diagnostics panel connector
11 MCIO connector 6	12 MCIO connector 5
13 MCIO connector 10	14 MCIO connector 3
15 MCIO connector 2	16 MCIO connector 1
17 MCIO connector 9	18 PCIe switch sideband connector
19 Front USB / Mini DisplayPort connector	

Troubleshooting by system LEDs and diagnostics display

See the following section for information on available system LEDs and diagnostics display.

Drive LEDs

This topic provides information on drive LEDs.

The following table describes the problems that are indicated by drive activity LED and drive status LED.

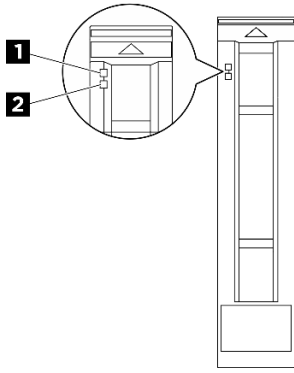


Figure 216. Drive LEDs

Table 5. Drive LEDs

LED	Description
1 Drive activity LED (green)	Each hot-swap drive comes with an activity LED. When this LED is flashing, it indicates that the drive is in use.
2 Drive status LED (yellow)	The drive status LED indicates the following status: <ul style="list-style-type: none"> • The LED is lit: the drive has failed. • The LED is flashing slowly (once per second): the drive is being rebuilt. • The LED is flashing rapidly (three times per second): the drive is being identified.

Power supply LEDs

This topic provides information about various power supply LED status and corresponding action suggestions.

The following minimal configuration is required for the server to start:

- Two processors
- Thirty-Two memory modules
- Eight power supplies
- One M.2 drive (If OS is needed by debugging)
- Fifteen system fans
- Rear ConnectX-6 SFP28 2-Port PCIe Ethernet Adapter (if network is required)

The following table describes the problems that are indicated by various combinations of the power supply LEDs and the power-on LED and suggested actions to correct the detected problems.

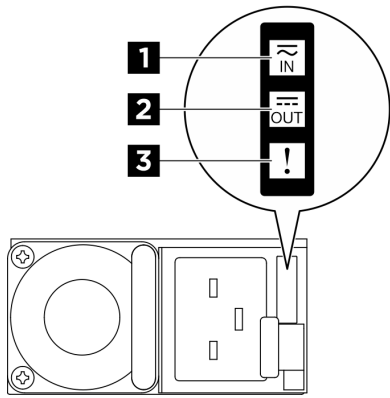


Figure 217. CFFv4 power supply LEDs

Table 6. CFFv4 power supply LEDs

LED	Description
1 Input status	<p>The input status LED can be in one of the following states:</p> <ul style="list-style-type: none"> Off: The power supply is disconnected from the AC power source. Green: The power supply is connected to the AC power source.
2 Output status	<p>The output status LED can be in one of the following states:</p> <ul style="list-style-type: none"> Off: The server is powered off, or the power supply is not working properly. If the server is powered on but the output status LED is off, replace the power supply. Slow blinking green (about one flash every two seconds): The power supply is in cold redundancy active mode. Fast blinking green (about 2 flashes each second): The power supply is in cold redundancy sleep mode. Green: The server is on and the power supply is working normally.
3 Fault LED	<ul style="list-style-type: none"> Off: The power supply is working normally Amber: The power supply may have failed. Dump the FFDC log from the system and contact Lenovo back end support team for PSU data log reviewing.

Rear system LEDs

This topic provides information on system LEDs on the rear of the server.

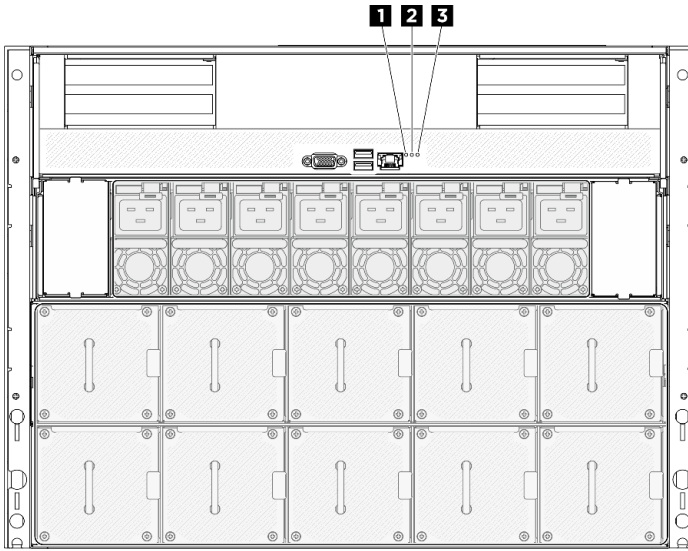


Figure 218. System LEDs on the rear view

1 Location LED (blue)	2 System error LED (yellow)	3 RoT error LED (amber)
------------------------------	------------------------------------	--------------------------------

Table 7. System LEDs on the rear view

LED	Description and actions
1 Location LED (blue)	This LED is used as a presence detection LED. You can use Lenovo XClarity Controller to light this LED remotely. Use this LED to locate the server among other servers visually.
2 System error LED (yellow)	LED on: an error has occurred. Complete the following steps: <ol style="list-style-type: none"> 1. Check the identification LED and check log LED and follow the instructions. 2. Check the Lenovo XClarity Controller event log and the system error log for information about the error. 3. Save the log if necessary, and clear the log afterwards.
3 RoT error LED (amber)	The RoT error LED indicates that there is a Root of Trust failure on either the XCC or UEFI image.

XCC system management port LEDs

This topic provides information on LEDs of XCC system management port (10/100/1000 Mbps RJ-45).

The following table describes the problems that are indicated by LEDs on XCC system management port (10/100/1000 Mbps RJ-45).

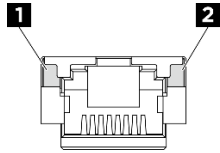


Figure 219. XCC system management port (10/100/1000 Mbps RJ-45) LEDs



Table 8. XCC system management port (10/100/1000 Mbps RJ-45) LEDs

LED	Description
1 XCC system management port (10/100/1000 Mbps RJ-45) link LED	Use this green LED to distinguish the network connectivity status: <ul style="list-style-type: none"> • Off: The network link is disconnected. • Green: The network link is established.
2 XCC system management port (10/100/1000 Mbps RJ-45) activity LED	Use this green LED to distinguish the network activity status: <ul style="list-style-type: none"> • Off: The server is disconnected from a LAN. • Green: The network is connected and active.

Integrated diagnostics panel


The Integrated diagnostics panel is attached to the front of the server, while it allows quick access to system information such as errors, system status, firmware, network, and health information. The Integrated Diagnostics Panel may also provide front operator panel function.

Location of the integrated diagnostics panel

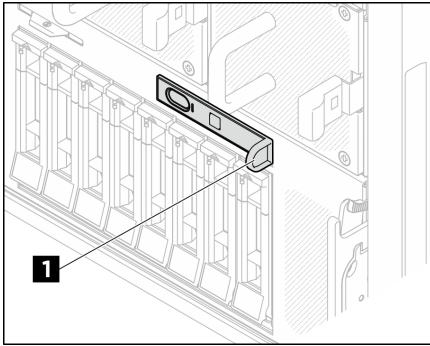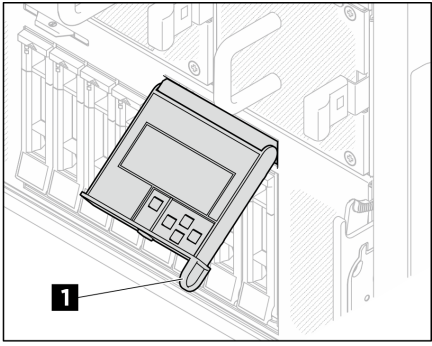Location	<p>The integrated diagnostics panel is attached to the front of the 8U GPU shuttle.</p>  
Callout	<p>1 The handle with which the panel can be pulled out from the server.</p> <p>Notes:</p> <ul style="list-style-type: none"> • The panel can be pushed in or pulled out regardless of the system power status. • When pulling it out, do it gently to avoid damage.

Display panel overview


The diagnostics device consists of an LCD display and 5 navigation buttons.

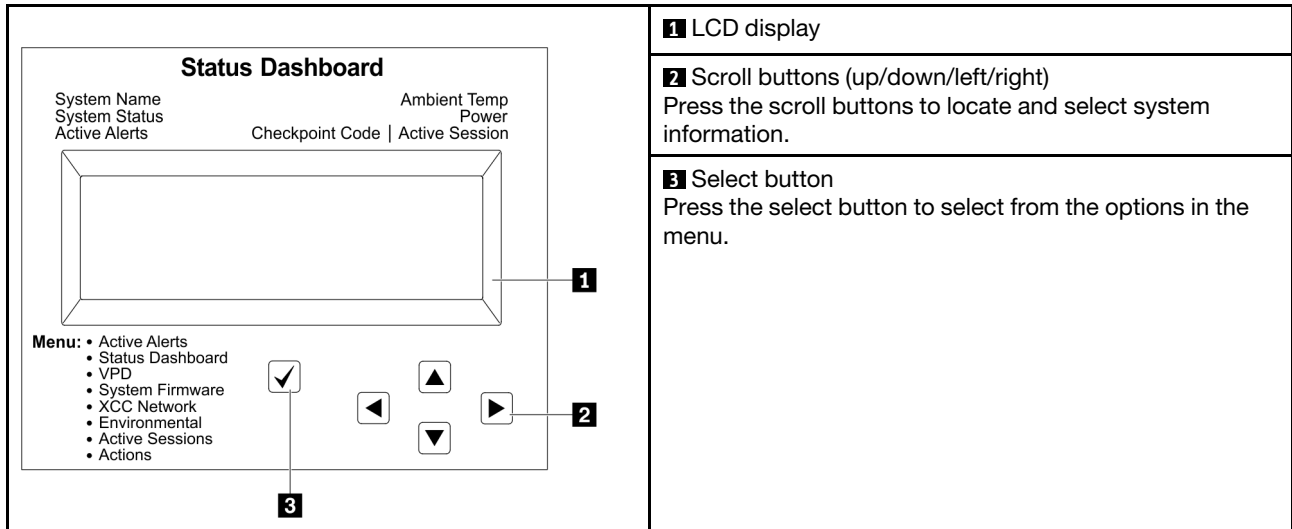

Option flow diagram

The LCD panel displays various system information. Navigate through the options with the scroll keys.

Depending on the model, the options and entries on the LCD display might be different.

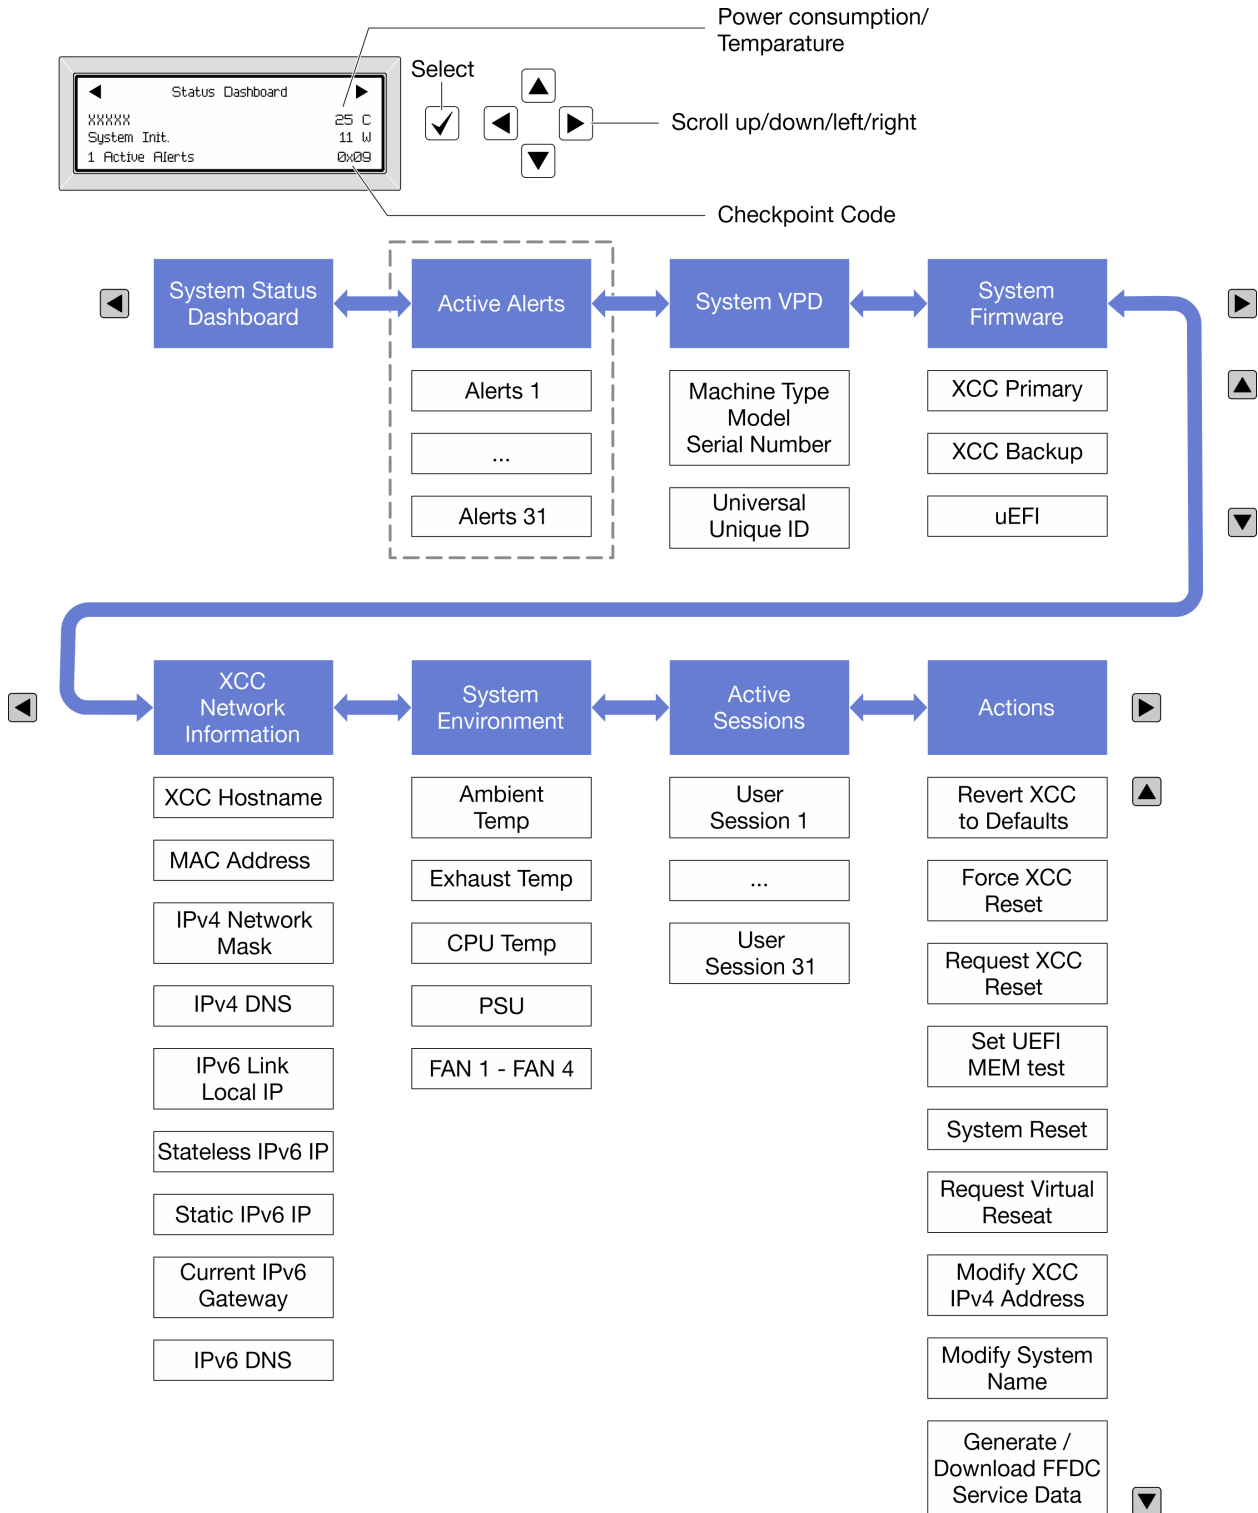

Full menu list

Following is the list of available options. Switch between an option and the subordinate information entries with the select button, and switch among options or information entries with the scroll buttons.

Depending on the model, the options and entries on the LCD display might be different.

Home Menu (System Status Dashboard)

Home Menu	Example
<ul style="list-style-type: none"> 1 System name 2 System status 3 Active alert quantity 4 Temperature 5 Power consumption 6 Checkpoint code 	<p>The screenshot shows a 'Status Dashboard' screen with the following elements: <ul style="list-style-type: none"> 1: Points to the system name 'xxxxxx'. 2: Points to the system status 'System Init.'. 3: Points to the active alert quantity '1 Active Alerts'. 4: Points to the temperature '25 C'. 5: Points to the power consumption '11 W'. 6: Points to the checkpoint code '0x09'. </p>

Active Alerts

Sub Menu	Example
Home screen: Active error quantity Note: The “Active Alerts” menu displays only the quantity of active errors. If no errors occur, the “Active Alerts” menu will not be available during navigation.	1 Active Alerts
Details screen: <ul style="list-style-type: none"> • Error message ID (Type: Error/Warning/Information) • Occurrence time • Possible sources of the error 	Active Alerts: 1 Press ▼ to view alert details FQXSPPU009N(Error) 04/07/2020 02:37:39 PM CPU 1 Status: Configuration Error

System VPD Information

Sub Menu	Example
<ul style="list-style-type: none"> • Machine type and serial number • Universal Unique ID (UUID) 	Machine Type: xxxx Serial Num: xxxxxx Universal Unique ID: xxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxx

System Firmware

Sub Menu	Example
XCC Primary <ul style="list-style-type: none"> Firmware level (status) Build ID Version number Release date 	XCC Primary (Active) Build: DVI399T Version: 4.07 Date: 2020-04-07
XCC Backup <ul style="list-style-type: none"> Firmware level (status) Build ID Version number Release date 	XCC Backup (Active) Build: D8BT05I Version: 1.00 Date: 2019-12-30
UEFI <ul style="list-style-type: none"> Firmware level (status) Build ID Version number Release date 	UEFI (Inactive) Build: DOE101P Version: 1.00 Date: 2019-12-26

XCC Network Information

Sub Menu	Example
<ul style="list-style-type: none"> XCC hostname MAC address IPv4 Network Mask IPv4 DNS IPv6 Link Local IP Stateless IPv6 IP Static IPv6 IP Current IPv6 Gateway IPv6 DNS <p>Note: Only the MAC address that is currently in use is displayed (extension or shared).</p>	XCC Network Information XCC Hostname: XCC-xxxx-SN MAC Address: xx:xx:xx:xx:xx:xx IPv4 IP: xx.xx.xx.xx IPv4 Network Mask: x.x.x.x IPv4 Default Gateway: x.x.x.x

System Environmental Information

Sub Menu	Example
<ul style="list-style-type: none">• Ambient temperature• Exhaust temperature• CPU temperature• PSU status• Spinning speed of fans by RPM	Ambient Temp: 24 C Exhaust Temp: 30 C CPU1 Temp: 50 C PSU1: Vin= 213 w Inlet= 26 C FAN1 Front: 21000 RPM FAN2 Front: 21000 RPM FAN3 Front: 21000 RPM FAN4 Front: 21000 RPM

Active Sessions

Sub Menu	Example
Quantity of active sessions	Active User Sessions: 1

Actions

Sub Menu	Example
Several quick actions are available: <ul style="list-style-type: none">• Revert XCC to Defaults• Force XCC Reset• Request XCC Reset• Set UEFI Memory Test• Request Virtual Reseat• Modify XCC Static IPv4 Address/Net mask/Gateway• Modify System Name• Generate/Download FFDC Service Data	Request XCC Reset? This will request the BMC to reboot itself. Hold <input checked="" type="checkbox"/> for 3 seconds

General problem determination procedures

Use the information in this section to resolve problems if the event log does not contain specific errors or the server is inoperative.

If you are not sure about the cause of a problem and the power supplies are working correctly, complete the following steps to attempt to resolve the problem:

1. Power off the server.
2. Make sure that the server is cabled correctly.
3. Remove or disconnect the following devices if applicable, one at a time, until you find the failure. Power on and configure the server each time you remove or disconnect a device.
 - Any external devices.
 - Surge-suppressor device (on the server).
 - Printer, mouse, and non-Lenovo devices.
 - Each adapter.

- Hard disk drives.
- Memory modules until you reach the minimal configuration for debugging that is supported for the server.

To determine the minimal configuration for your server, see “Minimal configuration for debugging” in [“Technical specifications” on page 221](#).

4. Power on the server.

If the problem is solved when you remove an adapter from the server, but the problem recurs when you install the same adapter again, suspect the adapter. If the problem recurs when you replace the adapter with a different one, try a different PCIe slot.

If the problem appears to be a networking problem and the server passes all system tests, suspect a network cabling problem that is external to the server.

Resolving suspected power problems

Power problems can be difficult to solve. For example, a short circuit can exist anywhere on any of the power distribution buses. Usually, a short circuit will cause the power subsystem to shut down because of an overcurrent condition.

Complete the following steps to diagnose and resolve a suspected power problem.

Step 1. Check the event log and resolve any errors related to the power.

Note: Start with the event log of the application that is managing the server. For more information about event logs, see [“Event logs” on page 219](#).

Step 2. Check for short circuits, for example, if a loose screw is causing a short circuit on a circuit board.

Step 3. Remove the adapters and disconnect the cables and power cords to all internal and external devices until the server is at the minimal configuration for debugging that is required for the server to start. To determine the minimal configuration for your server, see “Minimal configuration for debugging” in [“Technical specifications” on page 221](#).

Step 4. Reconnect all AC power cords and turn on the server. If the server starts successfully, reseal the adapters and devices one at a time until the problem is isolated.

If the server does not start from the minimal configuration, replace the components in the minimal configuration one at a time until the problem is isolated.

Resolving suspected Ethernet controller problems

The method that you use to test the Ethernet controller depends on which operating system you are using. See the operating-system documentation for information about Ethernet controllers, and see the Ethernet controller device-driver readme file.

Complete the following steps to attempt to resolve suspected problems with the Ethernet controller.

Step 1. Make sure that the correct device drivers, which come with the server are installed and that they are at the latest level.

Step 2. Make sure that the Ethernet cable is installed correctly.

- The cable must be securely attached at all connections. If the cable is attached but the problem remains, try a different cable.
- If you set the Ethernet controller to operate at 100 Mbps or 1000 Mbps, you must use Category 5 cabling.

- Step 3. Determine whether the hub supports auto-negotiation. If it does not, try configuring the integrated Ethernet controller manually to match the speed and duplex mode of the hub.
- Step 4. Check the Ethernet controller LEDs on the server. These LEDs indicate whether there is a problem with the connector, cable, or hub.

Ethernet controller LED locations are specified in [“Troubleshooting by system LEDs and diagnostics display” on page 227](#).

- The Ethernet link status LED is lit when the Ethernet controller receives a link pulse from the hub. If the LED is off, there might be a defective connector or cable or a problem with the hub.
- The Ethernet transmit/receive activity LED is lit when the Ethernet controller sends or receives data over the Ethernet network. If the Ethernet transmit/receive activity is off, make sure that the hub and network are operating and that the correct device drivers are installed.

- Step 5. Check the Network activity LED on the server. The Network activity LED is lit when data is active on the Ethernet network. If the Network activity LED is off, make sure that the hub and network are operating and that the correct device drivers are installed.

Network activity LED location is specified in [“Troubleshooting by system LEDs and diagnostics display” on page 227](#).

- Step 6. Check for operating-system-specific causes of the problem, and also make sure that the operating system drivers are installed correctly.
- Step 7. Make sure that the device drivers on the client and server are using the same protocol.

If the Ethernet controller still cannot connect to the network but the hardware appears to be working, the network administrator must investigate other possible causes of the error.

Troubleshooting by symptom

Use this information to find solutions to problems that have identifiable symptoms.

To use the symptom-based troubleshooting information in this section, complete the following steps:

1. Check the event log of the application that is managing the server and follow the suggested actions to resolve any event codes.
 - If you are managing the server from the Lenovo XClarity Administrator, begin with the Lenovo XClarity Administrator event log.
 - If you are using some other management application, begin with the Lenovo XClarity Controller event log.

For more information about event logs (see [“Event logs” on page 219](#)).

2. Review this section to find the symptoms that you are experiencing and follow the suggested actions to resolve the issue.
3. If the problem persists, contact support (see [“Contacting Support” on page 261](#)).

GPU problems

Use this information to resolve problems that are related to GPU and heat sink modules, the GPU baseboard, and the HMC card.

- [“H100/H200 GPU problems” on page 238](#)

H100/H200 GPU problems

Use this information to resolve problems that are related to GPUs.

- “Health check for GPUs” on page 239
- “System fails to detect a specific GPU” on page 242

Health check for GPUs

Note: Use one of the following utilities to check the GPU health status. Make sure to update GPU driver, which includes the following utilities required. Latest driver can be found at <https://datacentersupport.lenovo.com/tw/en/products/servers/thinksystem/sr680av3/7dhe/downloads/driver-list/>.

For more information about System Management Interface (SMI) information, see <https://developer.nvidia.com/system-management-interface>.

- nvidia-smi

Run the nvidia-smi utility to display the eight GPUs online.

```

NVIDIA-SMI 550.90.07          Driver Version: 550.90.07          CUDA Version: 12.4
-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+
GPU  Name      Perf      Persistence-M   Bus-Id      Disp.A      Volatile Uncorr. ECC
Fan  Temp      Perf      Pwr:Usage/Cap  Memory-Usage GPU-Util  Compute M.
                                     MIG M.
-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+
  0   NVIDIA   H100 80GB HBM3      Off          00000000:18:00.0 Off          0
N/A   43C      P0        77W / 700W    1MiB / 81559MiB  0%        Default
                                     Disabled
  1   NVIDIA   H100 80GB HBM3      Off          00000000:29:00.0 Off          0
N/A   41C      P0        79W / 700W    1MiB / 81559MiB  0%        Default
                                     Disabled
  2   NVIDIA   H100 80GB HBM3      Off          00000000:3A:00.0 Off          0
N/A   44C      P0        76W / 700W    1MiB / 81559MiB  0%        Default
                                     Disabled
  3   NVIDIA   H100 80GB HBM3      Off          00000000:5C:00.0 Off          0
N/A   45C      P0        73W / 700W    1MiB / 81559MiB  0%        Default
                                     Disabled
  4   NVIDIA   H100 80GB HBM3      Off          00000000:9A:00.0 Off          0
N/A   42C      P0        74W / 700W    1MiB / 81559MiB  0%        Default
                                     Disabled
  5   NVIDIA   H100 80GB HBM3      Off          00000000:AA:00.0 Off          0
N/A   40C      P0        75W / 700W    1MiB / 81559MiB  0%        Default
                                     Disabled
  6   NVIDIA   H100 80GB HBM3      Off          00000000:BA:00.0 Off          0
N/A   40C      P0        75W / 700W    1MiB / 81559MiB  0%        Default
                                     Disabled
  7   NVIDIA   H100 80GB HBM3      Off          00000000:CA:00.0 Off          0
N/A   42C      P0        78W / 700W    1MiB / 81559MiB  0%        Default
                                     Disabled
-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+
Processes:
GPU  GI  CI      PID  Type  Process name      GPU Memory
ID  ID  ID                                     Usage
-----+-----+-----+-----+-----+-----+-----+-----+-----+
No running processes found

```

Figure 220. nvidia-smi

- nvidia-smi -L

Run the nvidia-smi -L utility to display the eight GPUs online with UUID.

```

GPU 0: NVIDIA H100 80GB HBM3 (UUID: GPU-6e0a65fb-718e-5b02-59f6-8299cf79d5ff)
GPU 1: NVIDIA H100 80GB HBM3 (UUID: GPU-1feb659e-68d7-989b-f7a5-ee58dd99022e)
GPU 2: NVIDIA H100 80GB HBM3 (UUID: GPU-0896702e-cdb2-6600-b0a7-8ccc184e6d1d)
GPU 3: NVIDIA H100 80GB HBM3 (UUID: GPU-0963c80d-fb0a-136e-895a-243459c6023f)
GPU 4: NVIDIA H100 80GB HBM3 (UUID: GPU-e30aaa97-7c92-5395-899f-fb09ab23b9e2)
GPU 5: NVIDIA H100 80GB HBM3 (UUID: GPU-94ab9e89-76fb-7428-df61-023cf4b7751e)
GPU 6: NVIDIA H100 80GB HBM3 (UUID: GPU-6fc98cc6-d0d4-a04b-16b1-1e629800d849)
GPU 7: NVIDIA H100 80GB HBM3 (UUID: GPU-4cf011b1-5de1-d8d6-a26a-b48961e1d5c8)

```

Figure 221. nvidia-smi -L

- nvidia-smi -q --id=1 -f <output file name>

Run the nvidia-smi -q --id=1 -f <output file name> utility to export GPU inventory information.

Type the desired file name in <output file name> to store the output. For example: nvidia-smi -q --id=1 -f /tmp/queryoam1.txt.

```

=====NVSMI LOG=====
Timestamp                : Sat Jun 15 15:12:42 2024
Driver Version           : 550.90.07
CUDA Version             : 12.4
Attached GPUs            : 8
GPU 00000000:29:00.0
  Product Name           : NVIDIA H100 80GB HBM3
  Product Brand          : NVIDIA
  Product Architecture   : Hopper
  Display Mode           : Enabled
  Display Active         : Disabled
  Persistence Mode       : Disabled
  Addressing Mode        : None
  MIG Mode
    Current              : Disabled
    Pending              : Disabled
  Accounting Mode        : Disabled
  Accounting Mode Buffer Size : 4000
  Driver Model
    Current              : N/A
    Pending              : N/A
  Serial Number          : 1654123019435
  GPU UUID               : GPU-1feb659e-68d7-989b-f7a5-ee58dd99022e
  Minor Number           : 1
  VBIOS Version          : 96.00.89.00.01
  MultiGPU Board         : No
  Board ID               : 0x2900
  Board Part Number      : 692-2G520-0200-000
  GPU Part Number        : 2330-885-A1
  FRU Part Number        : N/A
  Module ID              : 8
  Inforom Version
    Image Version        : G520.0200.00.05
    OEM Object           : 2.1
    ECC Object           : 7.16
    Power Management Object : N/A
  Inforom BBX Object Flush
    Latest Timestamp     : N/A
    Latest Duration      : N/A
  GPU Operation Mode
    Current              : N/A
    Pending              : N/A
  GPU C2C Mode           : Disabled
  GPU Virtualization Mode
    Virtualization Mode  : None
    Host vGPU Mode       : N/A
    vGPU Heterogeneous Mode : N/A
  GPU Reset Status
    Reset Required       : No

```

Figure 222. nvidia-smi -q --id=1 -f <output file name>

- nvidia-smi pci --getErrorCounters

Run the nvidia-smi pci --getErrorCounters utility to display error counters of the eight GPUs.

```

~$ nvidia-smi pci --getErrorCounters
GPU 0: NVIDIA H100 80GB HBM3 (UUID: GPU-6e0a65fb-718e-5b02-59f6-8299cf79d5ff)
REPLAY_COUNTER: 0
REPLAY_ROLLOVER_COUNTER: 0
L0_TO_RECOVERY_COUNTER: 5
CORRECTABLE_ERRORS: 0
NAKS_RECEIVED: 0
RECEIVER_ERROR: 0
BAD_TLP: 0
NAKS_SENT: 0
BAD_DLLP: 0
NON_FATAL_ERROR: 0
FATAL_ERROR: 0
UNSUPPORTED_REQ: 0
LCRC_ERROR: 0
LANE_ERROR:
  lane 0: 0
  lane 1: 0
  lane 2: 0
  lane 3: 0
  lane 4: 0
  lane 5: 0
  lane 6: 0
  lane 7: 0
  lane 8: 0
  lane 9: 0
  lane 10: 0
  lane 11: 0
  lane 12: 0
GPU 1: NVIDIA H100 80GB HBM3 (UUID: GPU-1feb659e-68d7-989b-f7a5-ee58dd99022e)
REPLAY_COUNTER: 0
REPLAY_ROLLOVER_COUNTER: 0
L0_TO_RECOVERY_COUNTER: 5
CORRECTABLE_ERRORS: 0
NAKS_RECEIVED: 0
RECEIVER_ERROR: 0

```

Figure 223. nvidia-smi pci --getErrorCounters

- nvidia-smi pci --getErrorCounters --id=<id number>

Run the nvidia-smi pci --getErrorCounters --id=<id number> utility to display error counters of a specific GPU.

Type the ID number of a specific GPU in <id number>. For example: nvidia-smi pci --getErrorCounters --id=2.

```

~$ nvidia-smi pci --getErrorCounters --id=2
GPU 2: NVIDIA H100 80GB HBM3 (UUID: GPU-0896702e-cdb2-6600-b0a7-8ccc184e6d1d)
REPLAY_COUNTER: 0
REPLAY_ROLLOVER_COUNTER: 0
L0_TO_RECOVERY_COUNTER: 5
CORRECTABLE_ERRORS: 0
NAKS_RECEIVED: 0
RECEIVER_ERROR: 0
BAD_TLP: 0
NAKS_SENT: 0
BAD_DLLP: 0
NON_FATAL_ERROR: 0
FATAL_ERROR: 0
UNSUPPORTED_REQ: 0
LCRC_ERROR: 0
LANE_ERROR:
  lane 0: 0
  lane 1: 0
  lane 2: 0
  lane 3: 0
  lane 4: 0
  lane 5: 0
  lane 6: 0
  lane 7: 0
  lane 8: 0
  lane 9: 0
  lane 10: 0
  lane 11: 0
  lane 12: 0

```

Figure 224. nvidia-smi pci --getErrorCounters --id=<id number>

System fails to detect a specific GPU

When one of the events appears in the XCC web event log, it indicates the system fails to detect one or more specific GPUs.

- When event **FQXSPI00015M: Fault in slot [PhysicalConnectorSystemElementName] on system [ComputerSystemElementName]**. appears, see [Messages and Codes Reference](#) to solve the problem.
- When event **FQXSFIO0010M: An Uncorrectable PCIe Error has Occurred at Bus [arg1] Device [arg2] Function [arg3]. The Vendor ID for the device is [arg4] and the Device ID is [arg5]. The physical [arg6] number is [arg7]**. appears, see [Messages and Codes Reference](#) to solve the problem.

Notes: Parameters:

- [arg1] Bus
- [arg2] Device
- [arg3] Function
- [arg4] VID
- [arg5] DID
- [arg6] Slot/Bay
- [arg7] Instance number

Note: The following table shows the GPU and heat sink module numbering and corresponding slot numbering in XCC.

GPU and heat sink module numbering	Slot numbering in XCC
GPU 1	Slot 21
GPU 2	Slot 24
GPU 3	Slot 22
GPU 4	Slot 23
GPU 5	Slot 17
GPU 6	Slot 20
GPU 7	Slot 18
GPU 8	Slot 19

Intermittent problems

Use this information to solve intermittent problems.

- “Intermittent external device problems” on page 243
- “Intermittent KVM problems” on page 243
- “Intermittent unexpected reboots” on page 244

Intermittent external device problems

Complete the following steps until the problem is solved.

1. Update the UEFI and XCC firmware to the latest versions.
2. Make sure that the correct device drivers are installed. See the manufacturer's website for documentation.
3. For a USB device:
 - a. Make sure that the device is configured correctly.

Restart the server and press the key according to the on-screen instructions to display the LXPM system setup interface. (For more information, see the “Startup” section in the LXPM documentation compatible with your server at <https://pubs.lenovo.com/lxpm-overview/>.) Then, click **System Settings** → **Devices and I/O Ports** → **USB Configuration**.

- b. Connect the device to another port. If using a USB hub, remove the hub and connect the device directly to the server. Make sure that the device is configured correctly for the port.

Intermittent KVM problems

Complete the following steps until the problem is solved.

Video problems:

1. Make sure that all cables and the console breakout cable are properly connected and secure.

2. Make sure that the monitor is working properly by testing it on another server.
3. Test the console breakout cable on a working server to ensure that it is operating properly. Replace the console breakout cable if it is defective.

Keyboard problems:

Make sure that all cables and the console breakout cable are properly connected and secure.

Mouse problems:

Make sure that all cables and the console breakout cable are properly connected and secure.

Intermittent unexpected reboots

Note: Some uncorrectable errors require that the server reboot so that it can disable a device, such as a memory DIMM or a processor to allow the machine to boot up properly.

1. If the reset occurs during POST and the POST watchdog timer is enabled, make sure that sufficient time is allowed in the watchdog timeout value (POST Watchdog Timer).

To check the POST watchdog time, restart the server and press the key according to the on-screen instructions to display the LXPM system setup interface. (For more information, see the “Startup” section in the LXPM documentation compatible with your server at <https://pubs.lenovo.com/lxpm-overview/>.) Then, click **BMC Settings → POST Watchdog Timer**.

2. If the reset occurs after the operating system starts, do one of the followings:
 - Enter the operating system when the system operates normally and set up operating system kernel dump process (Windows and Linux base operating systems will be using different method). Enter the UEFI setup menus and disable the feature, or disable it with the following OneCli command.
`OneCli.exe config set SystemRecovery.RebootSystemOnNMI Disable --bmc XCC_USER:XCC_PASSWORD@XCC_IPAddress`
 - Disable any automatic server restart (ASR) utilities, such as the Automatic Server Restart IPMI Application for Windows, or any ASR devices that are installed.
3. See the management controller event log to check for an event code that indicates a reboot. See “[Event logs](#)” on page 219 for information about viewing the event log. If you are using Linux base operating system, then capture all logs back to Lenovo support for further investigation.

Keyboard, mouse, KVM switch or USB-device problems

Use this information to solve problems related to a keyboard, mouse, KVM switch or USB-device problems.

- “[All or some keys on the keyboard do not work](#)” on page 244
- “[Mouse does not work](#)” on page 245
- “[KVM switch problems](#)” on page 245
- “[USB-device does not work](#)” on page 245

All or some keys on the keyboard do not work

1. Make sure that:
 - The keyboard cable is securely connected.
 - The server and the monitor are turned on.
2. If you are using a USB keyboard, run the Setup utility and enable keyboardless operation.
3. If you are using a USB keyboard and it is connected to a USB hub, disconnect the keyboard from the hub and connect it directly to the server.
4. Replace the keyboard.

Mouse does not work

1. Make sure that:
 - The mouse cable is securely connected to the server.
 - The mouse device drivers are installed correctly.
 - The server and the monitor are turned on.
 - The mouse option is enabled in the Setup utility.
2. If you are using a USB mouse and it is connected to a USB hub, disconnect the mouse from the hub and connect it directly to the server.
3. Replace the mouse.

KVM switch problems

1. Make sure that the KVM switch is supported by your server.
2. Make sure that the KVM switch is powered on correctly.
3. If the keyboard, mouse or monitor can be operated normally with direct connection to the server, then replace the KVM switch.

USB-device does not work

1. Make sure that:
 - The correct USB device driver is installed.
 - The operating system supports USB devices.
2. Make sure that the USB configuration options are set correctly in system setup.

Restart the server and press the key according to the on-screen instructions to display the LXPM system setup interface. (For more information, see the “Startup” section in the LXPM documentation compatible with your server at <https://pubs.lenovo.com/lxpm-overview/>.) Then, click **System Settings → Devices and I/O Ports → USB Configuration**.

3. If you are using a USB hub, disconnect the USB device from the hub and connect it directly to the server.

Memory problems

See this section to resolve issues related to memory.

Common memory problems

- “Multiple memory modules in a channel identified as failing” on page 245
- “Displayed system memory is less than installed physical memory” on page 246
- “Invalid memory population detected” on page 246

Multiple memory modules in a channel identified as failing

Note: Each time you install or remove a memory module, you must disconnect the server from the power source; then, wait 10 seconds before restarting the server.

Complete the following procedure to solve the problem.

1. Reseat the memory modules; then, restart the server.
2. Remove the highest-numbered memory module of those that are identified and replace it with an identical known good memory module; then, restart the server. Repeat as necessary. If the failures continue after all identified memory modules are replaced, go to step 4.

3. Return the removed memory modules, one at a time, to their original connectors, restarting the server after each memory module, until a memory module fails. Replace each failing memory module with an identical known good memory module, restarting the server after each memory module replacement. Repeat step 3 until you have tested all removed memory modules.
4. Replace the highest-numbered memory module of those identified; then, restart the server. Repeat as necessary.
5. Reverse the memory modules between the channels (of the same processor), and then restart the server. If the problem is related to a memory module, replace the failing memory module.
6. (Trained technician only) Install the failing memory module into a memory module connector for processor 2 (if installed) to verify that the problem is not the processor or the memory module connector.
7. (Trained technician only) Replace the system board (system board assembly).

Displayed system memory is less than installed physical memory

Complete the following procedure to solve the problem.

Note: Each time you install or remove a memory module, you must disconnect the server from the power source; then, wait 10 seconds before restarting the server.

1. Make sure that:
 - No error LEDs are lit. See [“Troubleshooting by system LEDs and diagnostics display” on page 227](#).
 - No memory module error LEDs are lit on the system board (system board assembly).
 - Memory mirrored channel does not account for the discrepancy.
 - The memory modules are seated correctly.
 - You have installed the correct type of memory module (see [“Memory module installation rules and order” on page 5](#) for requirements).
 - After changing or replacing a memory module, memory configuration is updated accordingly in the Setup Utility.
 - All banks of memory are enabled. The server might have automatically disabled a memory bank when it detected a problem, or a memory bank might have been manually disabled.
 - There is no memory mismatch when the server is at the minimum memory configuration.
2. Reseat the memory modules, and then restart the server.
3. Check the POST error log:
 - If a memory module was disabled by a systems-management interrupt (SMI), replace the memory module.
 - If a memory module was disabled by the user or by POST, reseat the memory module; then, run the Setup Utility and enable the memory module.
4. Re-enable all memory modules using the Setup Utility, and then restart the server.
5. (Trained technician only) Install the failing memory module into a memory module connector for processor 2 (if installed) to verify that the problem is not the processor or the memory module connector.
6. (Trained technician only) Replace the system board (system board assembly).

Invalid memory population detected

If this warning message appears, complete the following steps:

Invalid memory population (unsupported DIMM population) detected. Please verify memory configuration is valid.

1. See [“Memory module installation rules and order” on page 5](#) to make sure the present memory module population sequence is supported.

2. If the present sequence is indeed supported, see if any of the modules is displayed as “disabled” in Setup Utility.
3. Reseat the module that is displayed as “disabled,” and reboot the system.
4. If the problem persists, replace the memory module.

Monitor and video problems

Use this information to solve problems related to a monitor or video.

- [“Incorrect characters are displayed” on page 247](#)
- [“Screen is blank” on page 247](#)
- [“Screen goes blank when you start some application programs” on page 247](#)
- [“The monitor has screen jitter, or the screen image is wavy, unreadable, rolling, or distorted” on page 247](#)
- [“The wrong characters appear on the screen” on page 248](#)

Incorrect characters are displayed

Complete the following steps:

1. Verify that the language and locality settings are correct for the keyboard and operating system.
2. If the wrong language is displayed, update the server firmware to the latest level. See “Update the firmware” in *User Guide* or *System Configuration Guide*.

Screen is blank

Note: Make sure that the expected boot mode has not been changed from the UEFI to Legacy or vice versa.

1. If the server is attached to a KVM switch, bypass the KVM switch to eliminate it as a possible cause of the problem: connect the monitor cable directly to the correct connector on the rear of the server.
2. The management controller remote presence function is disabled if you install an optional video adapter. To use the management controller remote presence function, remove the optional video adapter.
3. If the server is installed with the graphical adapters while turning on the server, the Lenovo logo is displayed on the screen after approximately 3 minutes. This is normal operation while the system loads.
4. Make sure that:
 - The server is turned on and there is power supplied to the server.
 - The monitor cables are connected correctly.
 - The monitor is turned on and the brightness and contrast controls are adjusted correctly.
5. Make sure that the correct server is controlling the monitor, if applicable.
6. Make sure that the video output is not affected by corrupted server firmware; See “Update the firmware” in *User Guide* or *System Configuration Guide*.
7. If the problem remains, contact Lenovo Support.

Screen goes blank when you start some application programs

1. Make sure that:
 - The application program is not setting a display mode that is higher than the capability of the monitor.
 - You installed the necessary device drivers for the application.

The monitor has screen jitter, or the screen image is wavy, unreadable, rolling, or distorted

1. If the monitor self-tests show that the monitor is working correctly, consider the location of the monitor. Magnetic fields around other devices (such as transformers, appliances, fluorescents, and other monitors) can cause screen jitter or wavy, unreadable, rolling, or distorted screen images. If this happens, turn off the monitor.

Attention: Moving a color monitor while it is turned on might cause screen discoloration.

Move the device and the monitor at least 305 mm (12 in.) apart, and turn on the monitor.

Notes:

- a. To prevent diskette drive read/write errors, make sure that the distance between the monitor and any external diskette drive is at least 76 mm (3 in.).
- b. Non-Lenovo monitor cables might cause unpredictable problems.
2. Reseat the monitor cable.
3. Replace the components listed in step 2 one at a time, in the order shown, restarting the server each time:
 - a. Monitor cable
 - b. Video adapter (if one is installed)
 - c. Monitor
 - d. (Trained technician only) System board (system board assembly)

The wrong characters appear on the screen

Complete the following steps until the problem is solved:

1. Verify that the language and locality settings are correct for the keyboard and operating system.
2. If the wrong language is displayed, update the server firmware to the latest level. See “Update the firmware” in *User Guide* or *System Configuration Guide*.

Network problems

Use this information to resolve issues related to networking.

- [“Cannot wake server using Wake on LAN” on page 248](#)
- [“Could not log in using LDAP account with SSL enabled” on page 248](#)

Cannot wake server using Wake on LAN

Complete the following steps until the problem is resolved:

1. If you are using the dual-port network adapter and the server is connected to the network using Ethernet 5 connector, check the system-error log or IMM2 system event log (see [“Event logs” on page 219](#)), make sure:
 - a. Fan 3 is running in standby mode, if Emulex dual port 10GBase-T embedded adapter is installed.
 - b. The room temperature is not too high (see [“Specifications” on page 221](#)).
 - c. The air vents are not blocked.
 - d. The air baffle is installed securely.
2. Reseat the dual-port network adapter.
3. Turn off the server and disconnect it from the power source; then, wait 10 seconds before restarting the server.
4. If the problem still remains, replace the dual-port network adapter.

Could not log in using LDAP account with SSL enabled

Complete the following steps until the problem is resolved:

1. Make sure that the license key is valid.
2. Generate a new license key and log in again.

Observable problems

Use this information to solve observable problems.

- “Server hangs during the UEFI boot process” on page 249
- “The server immediately displays the POST Event Viewer when it is turned on” on page 249
- “Server is unresponsive (POST is complete and operating system is running)” on page 249
- “Server is unresponsive (POST failed and cannot start System Setup)” on page 250
- “Voltage planar fault is displayed in the event log” on page 250
- “Unusual smell” on page 251
- “Server seems to be running hot” on page 251
- “Cracked parts or cracked chassis” on page 251

Server hangs during the UEFI boot process

If the system hangs during the UEFI boot process with the message UEFI: DXE INIT on the display, make sure that Option ROMs were not configured with a setting of **Legacy**. You can remotely view the current settings for Option ROMs by running the following command using the Lenovo XClarity Essentials OneCLI:

```
onecli config show EnableDisableAdapterOptionROMSupport --bmc xcc_userid:xcc_password@xcc_ipaddress
```

To recover a system that hangs during the boot process with Legacy Option ROM settings, see the following Tech Tip:

<https://datacentersupport.lenovo.com/solutions/ht506118>

If legacy Option ROMs must be used, do not set slot Option ROMs to **Legacy** on the Devices and I/O Ports menu. Instead, set slot Option ROMs to **Auto** (the default setting), and set the System Boot Mode to **Legacy Mode**. Legacy option ROMs will be invoked shortly before the system boots.

The server immediately displays the POST Event Viewer when it is turned on

Complete the following steps until the problem is solved.

1. Correct any errors that are indicated by the system LEDs and diagnostics display.
2. Make sure that the server supports all the processors and that the processors match in speed and cache size.

You can view processor details from system setup.

To determine if the processor is supported for the server, see <https://serverproven.lenovo.com>.

3. (Trained technician only) Make sure that processor 1 is seated correctly.
4. (Trained technician only) Remove processor 2 and restart the server.
5. Replace the following components one at a time, in the order shown, restarting the server each time:
 - a. (Trained technician only) Processor
 - b. (Trained technician only) System board (system board assembly)

Server is unresponsive (POST is complete and operating system is running)

Complete the following steps until the problem is solved.

- If you are in the same location as the compute node, complete the following steps:

1. If you are using a KVM connection, make sure that the connection is operating correctly. Otherwise, make sure that the keyboard and mouse are operating correctly.
 2. If possible, log in to the compute node and verify that all applications are running (no applications are hung).
 3. Restart the compute node.
 4. If the problem remains, make sure that any new software has been installed and configured correctly.
 5. Contact your place of purchase of the software or your software provider.
- If you are accessing the compute node from a remote location, complete the following steps:
 1. Make sure that all applications are running (no applications are hung).
 2. Attempt to log out of the system and log back in.
 3. Validate the network access by pinging or running a trace route to the compute node from a command line.
 - a. If you are unable to get a response during a ping test, attempt to ping another compute node in the enclosure to determine whether it is a connection problem or compute node problem.
 - b. Run a trace route to determine where the connection breaks down. Attempt to resolve a connection issue with either the VPN or the point at which the connection breaks down.
 4. Restart the compute node remotely through the management interface.
 5. If the problem remains, verify that any new software has been installed and configured correctly.
 6. Contact your place of purchase of the software or your software provider.

Server is unresponsive (POST failed and cannot start System Setup)

Configuration changes, such as added devices or adapter firmware updates, and firmware or application code problems can cause the server to fail POST (the power-on self-test).

If this occurs, the server responds in either of the following ways:

- The server restarts automatically and attempts POST again.
- The server hangs, and you must manually restart the server for the server to attempt POST again.

After a specified number of consecutive attempts (automatic or manual), the server reverts to the default UEFI configuration and starts System Setup so that you can make the necessary corrections to the configuration and restart the server. If the server is unable to successfully complete POST with the default configuration, there might be a problem with the system board (system board assembly).

You can specify the number of consecutive restart attempts in System Setup. Restart the server and press the key according to the on-screen instructions to display the LXPM system setup interface. (For more information, see the “Startup” section in the LXPM documentation compatible with your server at <https://pubs.lenovo.com/lxpm-overview/>.) Then, click **System Settings** → **Recovery and RAS** → **POST Attempts** → **POST Attempts Limit**. Available options are 3, 6, 9, and disable.

Voltage planar fault is displayed in the event log

Complete the following steps until the problem is solved.

1. Revert the system to the minimum configuration. See “Specifications” on page 221 for the minimally required number of processors and DIMMs.
2. Restart the system.
 - If the system restarts, add each of the removed items one at a time and restart the system each time until the error occurs. Replace the item for which the error occurs.
 - If the system does not restart, suspect the system board (system board assembly).

Unusual smell

Complete the following steps until the problem is solved.

1. An unusual smell might be coming from newly installed equipment.
2. If the problem remains, contact Lenovo Support.

Server seems to be running hot

Complete the following steps until the problem is solved.

Multiple compute nodes or chassis:

1. Make sure that the room temperature is within the specified range (see [“Specifications” on page 221](#)).
2. Make sure that the fans are installed correctly.
3. Update the UEFI and XCC to the latest versions.
4. Make sure that the fillers in the server are installed correctly (see [Chapter 1 “Hardware replacement procedures” on page 1](#) for detailed installation procedures).
5. Use the IPMI command to ramp up the fan speed to the full fan speed to see whether the issue can be resolved.

Note: The IPMI raw command should only be used by trained technician and each system has its own specific IPMI raw command.

6. Check the management processor event log for rising temperature events. If there are no events, the compute node is running within normal operating temperatures. Note that you can expect some variation in temperature.

Cracked parts or cracked chassis

Contact Lenovo Support.

Optional-device problems

Use this information to solve problems related to optional devices.

- [“External USB device is not recognized” on page 251](#)
- [“PCIe adapter is not recognized or is not functioning” on page 251](#)
- [“Insufficient PCIe resources are detected.” on page 252](#)
- [“A Lenovo optional device that was just installed does not work.” on page 252](#)
- [“A Lenovo optional device that worked previously does not work now” on page 253](#)

External USB device is not recognized

Complete the following steps until the problem is resolved:

1. Update the UEFI firmware to the latest version.
2. Make sure that the proper drivers are installed on the compute node. See the product documentation for the USB device for information about device drivers.
3. Use the Setup utility to make sure that the device is configured correctly.
4. If the USB device is plugged into a hub or the console breakout cable, unplug the device and plug it directly into the USB port on the front of the compute node.

PCIe adapter is not recognized or is not functioning

Complete the following steps until the problem is resolved:

1. Update the UEFI firmware to the latest version.
2. Check the event log and resolve any issues related to the device.
3. Validate that the device is supported for the server (see <https://serverproven.lenovo.com>). Make sure that the firmware level on the device is at the latest supported level and update the firmware if applicable.
4. Make sure that the adapter is installed in a correct slot.
5. Make sure that the proper device drivers are installed for the device.
6. Resolve any resource conflicts if running legacy mode (UEFI). Check legacy ROM boot orders and modify the UEFI setting for MM config base.

Note: Ensure that you modify the ROM boot order associated with the PCIe adapter to the first execution order.

7. Check <http://datacentersupport.lenovo.com> for any tech tips (also known as retain tips or service bulletins) that might be related to the adapter.
8. Ensure any adapter external connections are correct and that the connectors are not physically damaged.
9. Make sure that the PCIe adapter is installed with the supported operating system.

Insufficient PCIe resources are detected.

If you see an error message stating “Insufficient PCI Resources Detected,” complete the following steps until the problem is resolved:

1. Press Enter to access System Setup Utility.
2. Select **System Settings → Devices and I/O Ports → MM Config Base**; then, modify the setting to increase the device resources. For example, modify 3 GB to 2 GB or modify 2 GB to 1 GB.
3. Save the settings and restart the system.
4. If the error recurs with the highest device resource setting (1GB), shutdown the system and remove some PCIe devices; then, power on the system.
5. If the reboot failed, repeat step 1 to step 4.
6. If the error recurs, press Enter to access System Setup Utility.
7. Select **System Settings → Devices and I/O Ports → PCI 64-Bit Resource Allocation**, then; modify the setting from **Auto** to **Enable**.
8. If the Boot Device does not support MMIO above 4GB for Legacy Boot, use UEFI Boot Mode or remove/disable some PCIe devices.
9. DC cycle the system and ensure the system is enter UEFI boot menu or the operating system; then, capture the FFDC log.
10. Contact Lenovo technical support.

A Lenovo optional device that was just installed does not work.

1. Make sure that:
 - The device is supported for the server (see <https://serverproven.lenovo.com>).
 - You followed the installation instructions that came with the device and the device is installed correctly.
 - You have not loosened any other installed devices or cables.
 - You updated the configuration information in system setup. When you start a server and press the key according to the on-screen instructions to display the Setup Utility. (For more information, see the “Startup” section in the LXPM documentation compatible with your server at <https://pubs.lenovo.com/lxpm-overview/>.) Whenever memory or any other device is changed, you must update the configuration.
2. Reseat the device that you have just installed.

3. Replace the device that you have just installed.
4. Reseat the cable connection and check there is no physical damage to the cable.
5. If there is any cable damage, then replace the cable.

A Lenovo optional device that worked previously does not work now

1. Make sure that all of the cable connections for the device are secure.
2. If the device comes with test instructions, use those instructions to test the device.
3. Reseat the cable connection and check if any physical parts have been damaged.
4. Replace the cable.
5. Reseat the failing device.
6. Replace the failing device.

Performance problems

Use this information to solve performance problems.

- [“Network performance” on page 253](#)
- [“Operating system performance” on page 253](#)

Network performance

Complete the following steps until the problem is solved:

1. Isolate which network is operating slowly (such as storage, data, and management). You might find it helpful to use ping tools or operating-system tools such as task manager or resource manager.
2. Check for traffic congestion on the network.
3. Update the NIC device driver, or the storage device controller device driver.
4. Use the traffic-diagnostic tools that are provided by the IO-module manufacturer.

Operating system performance

Complete the following steps until the problem is solved:

1. If you have recently made changes to the compute node (for example updated device drivers or installed software applications) remove the changes.
2. Check for any networking issues.
3. Check the operating system logs for performance related errors.
4. Check for events related to high temperatures and power issues as the compute node might be throttled to help with cooling. If it is throttled, reduce the workload on the compute node to help improve performance.
5. Check for events related to disabled DIMMs. If you do not have enough memory for the application workload, your operating system will have poor performance.
6. Ensure that the workload is not too high for the configuration.

Power on and power off problems

Use this information to resolve issues when powering on or powering off the server.

- [“The power button does not work \(server does not start\)” on page 254](#)
- [“Server does not power on” on page 254](#)

The power button does not work (server does not start)

Note: The power button will not function until approximately 1 to 3 minutes after the server has been connected to ac power to allow time for BMC to initialize.

Complete the following steps until the problem is resolved:

1. Make sure that the power button on the server is working correctly:
 - a. Disconnect the server power cords.
 - b. Reconnect the server power cords.
 - c. Reseat the integrated diagnostics panel cable, and then repeat steps 1a and 2b.
 - If the server starts, reseat the integrated diagnostics panel.
 - If the problem remains, replace the integrated diagnostics panel.
2. Make sure that:
 - The power cords are correctly connected to the server and to a working electrical outlet.
 - The LEDs on the power supply do not indicate a problem.
 - The Power button LED is lit on and is flashing slowly.
 - The push force is enough and with button force response.
3. If the power button LED is not lit on or is not flashing correctly, reseat all the power supplies and make sure AC LED on PSU rear side are lit on.
4. If you have just installed an optional device, remove it, and restart the server.
5. If the issue is still observed or without power button LED lit on, implement the minimum configuration to check whether any specific components lock the power permission. Replace the each power supply and check the power button function after installing the each one.
6. If everything is still done and the issue cannot be resolved, collect the failure information with system logs captured to Lenovo support.

Server does not power on

Complete the following steps until the problem is resolved:

1. Check the event log for any events related to the server not powering on.
2. Check for any LEDs that are flashing amber.
3. Check the power LED on the system board (system board assembly).
4. Check if AC power LED is lit on or the amber LED is lit on at the PSU rear side.
5. AC cycle the system.
6. Remove the CMOS battery for at least ten seconds, then, reinstall the CMOS battery.
7. Try to power on the system by IPMI command through XCC or by the power button.
8. Implement the minimum configuration (see [“Technical specifications” on page 221](#)).
9. Reseat all power supplies and make sure that AC LEDs on the PSU rear side are lit.
10. Replace the each power supply and check the power button function after installing the each one.
11. If the issue cannot be resolved by above actions, call service to review the issue symptom and see whether the system board (system board assembly) replacement is necessary.

Power problems

Use this information to resolve issues related to power.

System error LED is on and event log "Power supply has lost input" is displayed

To resolve the problem, ensure that:

1. The power supply is properly connected to a power cord.
2. The power cord is connected to a properly grounded electrical outlet for the server.
3. Make sure that the power supply AC source is stable within the supported range.
4. Swap the power supply to see if the issue follows the power supply, if it follows the power supply, then replace the failing one.
5. Review the event log and see how the problem it is to follow the event log actions to resolved the problems.

Serial-device problems

Use this information to solve problems with serial ports or devices.

- ["Number of displayed serial ports is less than the number of installed serial ports" on page 255](#)
- ["Serial device does not work" on page 255](#)

Number of displayed serial ports is less than the number of installed serial ports

Complete the following steps until the problem is solved.

1. Make sure that:
 - Each port is assigned a unique address in the Setup utility and none of the serial ports is disabled.
 - The serial-port adapter (if one is present) is seated correctly.
2. Reseat the serial port adapter.
3. Replace the serial port adapter.

Serial device does not work

1. Make sure that:
 - The device is compatible with the server.
 - The serial port is enabled and is assigned a unique address.
 - The device is connected to the correct connector (see ["System board connectors" on page 226](#)).
2. Reseat the following components:
 - a. Failing serial device.
 - b. Serial cable.
3. Replace the following components:
 - a. Failing serial device.
 - b. Serial cable.
4. (Trained technician only) Replace the system board (system board assembly).

Software problems

Use this information to solve software problems.

1. To determine whether the problem is caused by the software, make sure that:
 - The server has the minimum memory that is needed to use the software. For memory requirements, see the information that comes with the software.

Note: If you have just installed an adapter or memory, the server might have a memory-address conflict.

- The software is designed to operate on the server.
 - Other software works on the server.
 - The software works on another server.
2. If you receive any error messages while you use the software, see the information that comes with the software for a description of the messages and suggested solutions to the problem.
 3. Contact your place of purchase of the software.

Storage drive problems

Use this information to resolve issues related to the storage drives.

- [“Server cannot recognize a drive” on page 256](#)
- [“Multiple drives fail” on page 257](#)
- [“Multiple drives are offline” on page 257](#)
- [“A replacement drive does not rebuild” on page 257](#)
- [“Green drive activity LED does not represent actual state of associated drive” on page 257](#)
- [“Yellow drive status LED does not represent actual state of associated drive” on page 257](#)
- [“U.3 NVMe drive can be detected in NVMe connection, but cannot be detected in Tri-mode” on page 258](#)

Server cannot recognize a drive

Complete the following steps until the problem is solved.

1. Observe the associated yellow drive status LED. If the LED is lit, it indicates a drive fault.
2. If the status LED is lit, remove the drive from the bay, wait 45 seconds, and reinsert the drive, making sure that the drive assembly connects to the drive backplane.
3. Observe the associated green drive activity LED and the yellow status LED and perform corresponding operations in different situations:
 - If the green activity LED is flashing and the yellow status LED is not lit, the drive is recognized by the controller and is working correctly. Run the diagnostics tests for the drives. When you start a server and press the key according to the on-screen instructions, the LXPM is displayed by default. (For more information, see the “Startup” section in the LXPM documentation compatible with your server at <https://pubs.lenovo.com/lxpm-overview/>.) You can perform drive diagnostics from this interface. From the Diagnostic page, click **Run Diagnostic → Disk Drive Test**.
 - If the green activity LED is flashing and the yellow status LED is flashing slowly, the drive is recognized by the controller and is rebuilding.
 - If neither LED is lit or flashing, check whether the drive backplane is correctly seated. For details, go to step 4.
 - If the green activity LED is flashing and the yellow status LED is lit, replace the drive.
4. Make sure that the drive backplane is correctly seated. When it is correctly seated, the drive assemblies correctly connect to the backplane without bowing or causing movement of the backplane.
5. Reseat the backplane power cable and repeat steps 1 through 3.
6. Reseat the backplane signal cable and repeat steps 1 through 3.
7. Suspect the backplane signal cable or the backplane:
 - Replace the affected backplane signal cable.
 - Replace the affected backplane.

8. Run the diagnostics tests for the drives. When you start a server and press the key according to the on-screen instructions, the LXPM is displayed by default. (For more information, see the “Startup” section in the LXPM documentation compatible with your server at <https://pubs.lenovo.com/lxpm-overview/>.) You can perform drive diagnostics from this interface. From the Diagnostic page, click **Run Diagnostic → Disk Drive Test**.

Based on those tests:

- If the backplane passes the test but the drives are not recognized, replace the backplane signal cable and run the tests again.
- Replace the backplane.
- If the adapter fails the test, disconnect the backplane signal cable from the adapter and run the tests again.
- If the adapter fails the test, replace the adapter.

Multiple drives fail

Complete the following steps until the problem is solved:

- View the Lenovo XClarity Controller event log for events related to power supplies or vibration issues and resolve those events.
- Make sure that the device drivers and firmware for the drive and server are at the latest level.

Important: Some cluster solutions require specific code levels or coordinated code updates. If the device is part of a cluster solution, verify that the latest level of code is supported for the cluster solution before you update the code.

Multiple drives are offline

Complete the following steps until the problem is solved:

- View the Lenovo XClarity Controller event log for events related to power supplies or vibration issues and resolve those events.
- View the storage subsystem log for events related to the storage subsystem and resolve those events.

A replacement drive does not rebuild

Complete the following step until the problem is solved:

1. Make sure that the drive is recognized by the adapter (the green drive activity LED is flashing).

Green drive activity LED does not represent actual state of associated drive

Complete the following steps until the problem is solved:

1. If the green drive activity LED does not flash when the drive is in use, run the diagnostics tests for the drives. When you start a server and press the key according to the on-screen instructions, the LXPM is displayed by default. (For more information, see the “Startup” section in the LXPM documentation compatible with your server at <https://pubs.lenovo.com/lxpm-overview/>.) You can perform drive diagnostics from this interface. From the Diagnostic page, click **Run Diagnostic → Disk Drive Test**
2. If the drive passes the test, replace the backplane.
3. If the drive fails the test, replace the drive.

Yellow drive status LED does not represent actual state of associated drive

Complete the following steps until the problem is solved:


1. Turn off the server.
2. Reseat the SAS/SATA adapter.

3. Reseat the backplane signal cable and backplane power cable.
4. Reseat the drive.
5. Power on the server and observe the activity of the drive LEDs.

U.3 NVMe drive can be detected in NVMe connection, but cannot be detected in Tri-mode

In Tri-mode, NVMe drives are connected via a PCIe x1 link to the controller. To support Tri-mode with U.3 NVMe drives, **U.3 x1 mode** must be enabled for the selected drive slots on the backplane through the XCC Web GUI. By default, the backplane setting is **U.2 x4 mode**.

Complete the following steps to enable **U.3 x1 mode**:

1. Log into the XCC Web GUI, and choose **Storage → Detail** from the navigation tree on the left.
2. In the window that is displayed, click the icon  next to **Backplane**.
3. In the dialog box that is displayed, select the target drive slots and click **Apply**.
4. Do a DC power cycle to make the setting take effect.

Appendix A. Getting help and technical assistance

If you need help, service, or technical assistance or just want more information about Lenovo products, you will find a wide variety of sources available from Lenovo to assist you.

On the World Wide Web, up-to-date information about Lenovo systems, optional devices, services, and support are available at:

<http://datacentersupport.lenovo.com>

Note: IBM is Lenovo's preferred service provider for ThinkSystem.

Before you call

Before you call, there are several steps that you can take to try and solve the problem yourself. If you decide that you do need to call for assistance, gather the information that will be needed by the service technician to more quickly resolve your problem.

Attempt to resolve the problem yourself

You can solve many problems without outside assistance by following the troubleshooting procedures that Lenovo provides in the online help or in the Lenovo product documentation. The online help also describes the diagnostic tests that you can perform. The documentation for most systems, operating systems, and programs contains troubleshooting procedures and explanations of error messages and error codes. If you suspect a software problem, see the documentation for the operating system or program.

You can find the product documentation for your ThinkSystem products at the following location:

<https://pubs.lenovo.com/>

You can take these steps to try to solve the problem yourself:

- Check all cables to make sure that they are connected.
- Check the power switches to make sure that the system and any optional devices are turned on.
- Check for updated software, firmware, and operating-system device drivers for your Lenovo product. (See the following links) The Lenovo Warranty terms and conditions state that you, the owner of the Lenovo product, are responsible for maintaining and updating all software and firmware for the product (unless it is covered by an additional maintenance contract). Your service technician will request that you upgrade your software and firmware if the problem has a documented solution within a software upgrade.
 - Drivers and software downloads
 - <https://datacentersupport.lenovo.com/tw/en/products/servers/thinksystem/sr680av3/7dhe/downloads/driver-list/>
 - Operating system support center
 - <https://datacentersupport.lenovo.com/solutions/server-os>
 - Operating system installing instructions
 - <https://pubs.lenovo.com/thinksystem#os-installation>
- If you have installed new hardware or software in your environment, check <https://serverproven.lenovo.com> to make sure that the hardware and software are supported by your product.
- Refer to [Chapter 3 “Problem determination” on page 219](#) for instructions on isolating and solving issues.

- Go to <http://datacentersupport.lenovo.com> and check for information to help you solve the problem.

To find the Tech Tips available for your server:

1. Go to <http://datacentersupport.lenovo.com> and navigate to the support page for your server.
2. Click on **How To's** from the navigation pane.
3. Click **Article Type** → **Solution** from the drop-down menu.

Follow the on-screen instructions to choose the category for the problem that you are having.

- Check Lenovo Data Center Forum at https://forums.lenovo.com/t5/Datacenter-Systems/ct-p/sv_eg to see if someone else has encountered a similar problem.

Gathering information needed to call Support

If you require warranty service for your Lenovo product, the service technicians will be able to assist you more efficiently if you prepare the appropriate information before you call. You can also go to <http://datacentersupport.lenovo.com/warrantylookup> for more information about your product warranty.

Gather the following information to provide to the service technician. This data will help the service technician quickly provide a solution to your problem and ensure that you receive the level of service for which you might have contracted.

- Hardware and Software Maintenance agreement contract numbers, if applicable
- Machine type number (Lenovo 4-digit machine identifier). Machine type number can be found on the ID label, see “Identifying the server and access the Lenovo XClarity Controller” in *User Guide* or *System Configuration Guide*.
- Model number
- Serial number
- Current system UEFI and firmware levels
- Other pertinent information such as error messages and logs

As an alternative to calling Lenovo Support, you can go to <https://support.lenovo.com/servicerequest> to submit an Electronic Service Request. Submitting an Electronic Service Request will start the process of determining a solution to your problem by making the pertinent information available to the service technicians. The Lenovo service technicians can start working on your solution as soon as you have completed and submitted an Electronic Service Request.

Collecting service data

To clearly identify the root cause of a server issue or at the request of Lenovo Support, you might need collect service data that can be used for further analysis. Service data includes information such as event logs and hardware inventory.

Service data can be collected through the following tools:

- **Lenovo XClarity Provisioning Manager**

Use the Collect Service Data function of Lenovo XClarity Provisioning Manager to collect system service data. You can collect existing system log data or run a new diagnostic to collect new data.

- **Lenovo XClarity Controller**

You can use the Lenovo XClarity Controller web interface or the CLI to collect service data for the server. The file can be saved and sent to Lenovo Support.

- For more information about using the web interface to collect service data, see the “Backing up the BMC configuration” section in the XCC documentation compatible with your server at <https://pubs.lenovo.com/lxcc-overview/>.
- For more information about using the CLI to collect service data, see the “XCC `ffdc` command” section in the XCC documentation compatible with your server at <https://pubs.lenovo.com/lxcc-overview/>.

- **Lenovo XClarity Administrator**

Lenovo XClarity Administrator can be set up to collect and send diagnostic files automatically to Lenovo Support when certain serviceable events occur in Lenovo XClarity Administrator and the managed endpoints. You can choose to send diagnostic files to Lenovo Support using Call Home or to another service provider using SFTP. You can also manually collect diagnostic files, open a problem record, and send diagnostic files to the Lenovo Support.

You can find more information about setting up automatic problem notification within the Lenovo XClarity Administrator at https://pubs.lenovo.com/lxca/admin_setupcallhome.

- **Lenovo XClarity Essentials OneCLI**

Lenovo XClarity Essentials OneCLI has inventory application to collect service data. It can run both in-band and out-of-band. When running in-band within the host operating system on the server, OneCLI can collect information about the operating system, such as the operating system event log, in addition to the hardware service data.

To obtain service data, you can run the `getinfor` command. For more information about running the `getinfor`, see https://pubs.lenovo.com/lxce-onecli/onecli_r_getinfor_command.

Contacting Support

You can contact Support to obtain help for your issue.

You can receive hardware service through a Lenovo Authorized Service Provider. To locate a service provider authorized by Lenovo to provide warranty service, go to <https://datacentersupport.lenovo.com/serviceprovider> and use filter searching for different countries. For Lenovo support telephone numbers, see <https://datacentersupport.lenovo.com/supportphonenumber> for your region support details.

Appendix B. Documents and supports

This section provides handy documents, driver and firmware downloads, and support resources.

Documents download

This section provides introduction and download link for handy documents.

Documents

Download the following product documentations at:

https://pubs.lenovo.com/sr680a-v3/pdf_files.html

- **Rail Installation Guides**
 - Rail installation in a rack
- **User Guide**
 - Complete overview, system configuration, hardware components replacing, and troubleshooting.
Selected chapters from *User Guide*:
 - **System Configuration Guide** : Server overview, components identification, system LEDs and diagnostics display, product unboxing, setting up and configuring the server.
 - **Hardware Maintenance Guide** : Installing hardware components, cable routing, and troubleshooting.
- **Messages and Codes Reference**
 - XClarity Controller, LXPM, and uEFI events
- **UEFI Manual**
 - UEFI setting introduction

Support websites

This section provides driver and firmware downloads and support resources.

Support and downloads

- Drivers and Software download website for ThinkSystem SR680a V3
 - <https://datacentersupport.lenovo.com/tw/en/products/servers/thinksystem/sr680av3/7dhe/downloads/driver-list/>
- Lenovo Data Center Forum
 - https://forums.lenovo.com/t5/Datacenter-Systems/ct-p/sv_eg
- Lenovo Data Center Support for ThinkSystem SR680a V3
 - <https://datacentersupport.lenovo.com/products/servers/thinksystem/sr680av3/7dhe>
- Lenovo License Information Documents
 - <https://datacentersupport.lenovo.com/documents/Invo-eula>
- Lenovo Press website (Product Guides/Datasheets/White papers)
 - <https://lenovopress.lenovo.com/>

- Lenovo Privacy Statement
 - <https://www.lenovo.com/privacy>
- Lenovo Product Security Advisories
 - https://datacentersupport.lenovo.com/product_security/home
- Lenovo Product Warranty Plans
 - <http://datacentersupport.lenovo.com/warrantylookup>
- Lenovo Server Operating Systems Support Center website
 - <https://datacentersupport.lenovo.com/solutions/server-os>
- Lenovo ServerProven website (Options compatibility lookup)
 - <https://serverproven.lenovo.com>
- Operating System Installation Instructions
 - <https://pubs.lenovo.com/thinksystem#os-installation>
- Submit an eTicket (service request)
 - <https://support.lenovo.com/servicerequest>
- Subscribe to Lenovo Data Center Group product notifications (Stay up to date on firmware updates)
 - <https://datacentersupport.lenovo.com/solutions/ht509500>

Appendix C. Notices

Lenovo may not offer the products, services, or features discussed in this document in all countries. Consult your local Lenovo representative for information on the products and services currently available in your area.

Any reference to a Lenovo product, program, or service is not intended to state or imply that only that Lenovo product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any Lenovo intellectual property right may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any other product, program, or service.

Lenovo may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document is not an offer and does not provide a license under any patents or patent applications. You can send inquiries in writing to the following:

*Lenovo (United States), Inc.
8001 Development Drive
Morrisville, NC 27560
U.S.A.
Attention: Lenovo Director of Licensing*

LENOVO PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some jurisdictions do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. Lenovo may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time without notice.

The products described in this document are not intended for use in implantation or other life support applications where malfunction may result in injury or death to persons. The information contained in this document does not affect or change Lenovo product specifications or warranties. Nothing in this document shall operate as an express or implied license or indemnity under the intellectual property rights of Lenovo or third parties. All information contained in this document was obtained in specific environments and is presented as an illustration. The result obtained in other operating environments may vary.

Lenovo may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

Any references in this publication to non-Lenovo Web sites are provided for convenience only and do not in any manner serve as an endorsement of those Web sites. The materials at those Web sites are not part of the materials for this Lenovo product, and use of those Web sites is at your own risk.

Any performance data contained herein was determined in a controlled environment. Therefore, the result obtained in other operating environments may vary significantly. Some measurements may have been made on development-level systems and there is no guarantee that these measurements will be the same on generally available systems. Furthermore, some measurements may have been estimated through extrapolation. Actual results may vary. Users of this document should verify the applicable data for their specific environment.

Trademarks

LENOVO and THINKSYSTEM are trademarks of Lenovo.

All other trademarks are the property of their respective owners.

Important notes

Processor speed indicates the internal clock speed of the processor; other factors also affect application performance.

CD or DVD drive speed is the variable read rate. Actual speeds vary and are often less than the possible maximum.

When referring to processor storage, real and virtual storage, or channel volume, KB stands for 1 024 bytes, MB stands for 1 048 576 bytes, and GB stands for 1 073 741 824 bytes.

When referring to hard disk drive capacity or communications volume, MB stands for 1 000 000 bytes, and GB stands for 1 000 000 000 bytes. Total user-accessible capacity can vary depending on operating environments.

Maximum internal hard disk drive capacities assume the replacement of any standard hard disk drives and population of all hard-disk-drive bays with the largest currently supported drives that are available from Lenovo.

Maximum memory might require replacement of the standard memory with an optional memory module.

Each solid-state memory cell has an intrinsic, finite number of write cycles that the cell can incur. Therefore, a solid-state device has a maximum number of write cycles that it can be subjected to, expressed as total bytes written (TBW). A device that has exceeded this limit might fail to respond to system-generated commands or might be incapable of being written to. Lenovo is not responsible for replacement of a device that has exceeded its maximum guaranteed number of program/erase cycles, as documented in the Official Published Specifications for the device.

Lenovo makes no representations or warranties with respect to non-Lenovo products. Support (if any) for the non-Lenovo products is provided by the third party, not Lenovo.

Some software might differ from its retail version (if available) and might not include user manuals or all program functionality.

Electronic emission notices

When you attach a monitor to the equipment, you must use the designated monitor cable and any interference suppression devices that are supplied with the monitor.

Additional electronic emissions notices are available at:

https://pubs.lenovo.com/important_notices/

Taiwan Region BSMI RoHS declaration

單元 Unit	限用物質及其化學符號 Restricted substances and its chemical symbols					
	鉛Lead (PB)	汞Mercury (Hg)	鎘Cadmium (Cd)	六價鉻 Hexavalent chromium (Cr ⁶⁺)	多溴聯苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)
機架	○	○	○	○	○	○
外部蓋板	○	○	○	○	○	○
機械組合作件	-	○	○	○	○	○
空氣傳動設備	-	○	○	○	○	○
冷卻組合作件	-	○	○	○	○	○
內存模組	-	○	○	○	○	○
處理器模組	-	○	○	○	○	○
圖形處理器模組	-	○	○	○	○	○
電纜組合作件	-	○	○	○	○	○
電源供應器	-	○	○	○	○	○
儲備設備	-	○	○	○	○	○
印刷電路板	-	○	○	○	○	○

備考1. “超出0.1 wt %”及“超出0.01 wt %”係指限用物質之百分比含量超出百分比含量基準值。
 Note1 : “exceeding 0.1wt%” and “exceeding 0.01 wt%” indicate that the percentage content of the restricted substance exceeds the reference percentage value of presence condition.

備考2. “○”係指該項限用物質之百分比含量未超出百分比含量基準值。
 Note2 : “○”indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence.

備考3. “-”係指該項限用物質為排除項目。
 Note3 : The “-” indicates that the restricted substance corresponds to the exemption.

0724

Taiwan Region import and export contact information

Contacts are available for Taiwan Region import and export information.

委製商/進口商名稱: 台灣聯想環球科技股份有限公司
進口商地址: 台北市南港區三重路 66 號 8 樓
進口商電話: 0800-000-702

Lenovo[™]