



ThinkSystem DE Series Maintaining IOM



Machine Types: DE2000H (7Y70, 7Y71), DE4000H (7Y74, 7Y75, 7Y77), DE4000F (7Y76), DE6000H (7Y78, 7Y80), DE6000F (7Y79), DE6400 (7DB6), DE6600 (7DB7), DE120S (7Y63), DE240S (7Y68), and DE600S (7Y69)

Second edition (March 2024)

© Copyright Lenovo 2022, 2024.

LIMITED AND RESTRICTED RIGHTS NOTICE: If data or software is delivered pursuant to a General Services Administration (GSA) contract, use, reproduction, or disclosure is subject to restrictions set forth in Contract No. GS-35F-05925

Contents

Contents	i	After replacing an IOM	5
Replacing an IOM	1	Appendix A. Contacting Support	7
Preparing to remove an IOM	2	Appendix B. Notices	9
Removing an IOM	4	Trademarks	10
Installing an IOM	5		

Replacing an IOM


I/O modules (IOMs) provide the intelligence for drive shelf I/O operations. The DE120S, DE240S and DE600s drive shelves have two. If an IOM fails, you must replace it as soon as possible.

- You have a replacement IOM that is supported for your drive shelf model.
- You have an ESD wristband, or you have taken other antistatic precautions.
- You have labels to identify each cable that is connected to the IOM.

Use this procedure to replace an IOM in the following shelves:

- DE120S drive shelf, which contains 12 drives
- DE240S drive shelf, which contains 24 drives
- DE600S drive shelf, which contains 60 drives

The following figure shows the back of a DE120S or DE240S drive shelf with two IOMs:

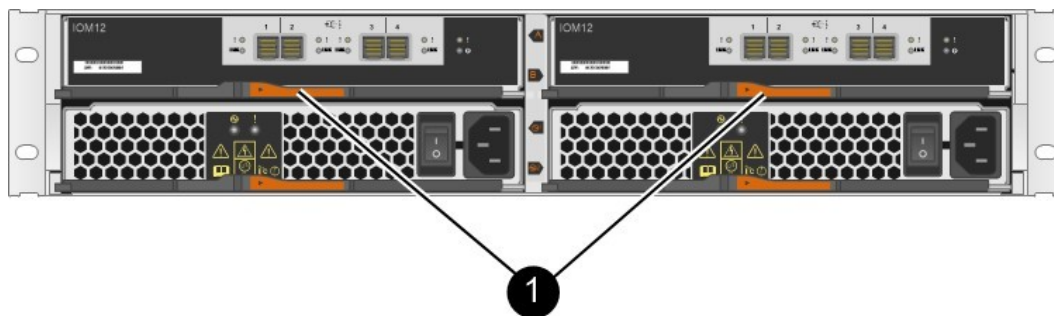

Item	Description
1	Drive shelf with two IOMs above the power-fan canisters

The following figure shows the back of a DE600S drive shelf with two IOMs:



Item	Description
1	Drive shelf with two IOMs between the two power canisters

You can replace an IOM while your storage array is powered on and performing host I/O operations, as long as the following conditions are true:

- The second IOM in the drive shelf has an Optimal status.
- The **OK to remove** field in the Details area of the Recovery Guru in ThinkSystem System Manager displays **Yes**, indicating that it is safe to remove this component.

Attention: If the second IOM in the drive shelf does not have Optimal status or if the Recovery Guru indicates that it is not OK to remove the IOM, contact technical support.

Preparing to remove an IOM

Before removing a I/O module (IOM), collect support data about your storage system and locate the failed component.

You can determine if you have a failed IOM in these ways:

- The Recovery Guru in ThinkSystem System Manager software directs you to replace a failed IOM.

Note: Before replacing an IOM, select **Recheck** from the Recovery Guru to ensure no other items must be addressed first.

- The amber Attention LED on the IOM is on, indicating that the component has a fault.


Attention: If both IOMs in the shelf have their Attention LEDs on, contact technical support for assistance.

Step 1. Collect support data for your storage array.

Collecting support data before and after replacing a component ensures you can send a full set of logs to technical support in case the replacement does not resolve the problem.

Option	Description
ThinkSystem System Manager	<ol style="list-style-type: none">1. Select Support → Support Center → Diagnostics.2. Select Collect Support Data.3. Click Collect. The file is saved in the Downloads folder for your browser with the name <code>supportdata.7z</code> .
From the SMCli	Execute the following command: <code>smcli <ip address> -u <userid> -p <password> -c "save storageArray supportData file=\ "filename.7z\"";"</code>

Step 2. From ThinkSystem System Manager, determine which IOM has failed.


- a. Select **Hardware**.
- b. Look at the IOM icon  to the right of the Shelf drop-down lists to determine which shelf has the failed IOM. If an IOM has failed, the icon will be red.
- c. When you find the shelf with the red IOM icon, select **Show back of shelf**.
- d. On the **IOMs** tab, look at the status of the two IOMs to determine which IOM must be replaced.

An IOM with a **Failed** status must be replaced.

Attention: If the second IOM in the drive shelf does not have **Optimal** status, do not attempt to hot-swap the IOM. Instead, contact technical support for assistance.

Note: You can also find the information about the failed IOM in the Details area of the Recovery Guru, or you can review the information displayed for the drive shelf.


- Step 3. If you need help physically finding this IOM in your storage array, turn on the locate LEDs for the shelf and the IOMs.
- Select **Hardware**.
 - Select **Shelf** → **Turn on locator light**.

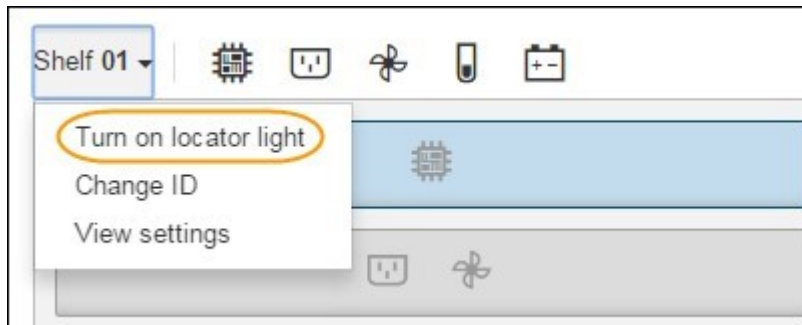

The following LEDs turn on:

- The blue Locate LED on the shelf's operator display panel (front view)
- The blue Locate LEDs on both the failed IOM and the optimal IOM within that shelf (back view)

- Step 4. From the back of the storage array, look at the LEDs to determine which IOM to replace.

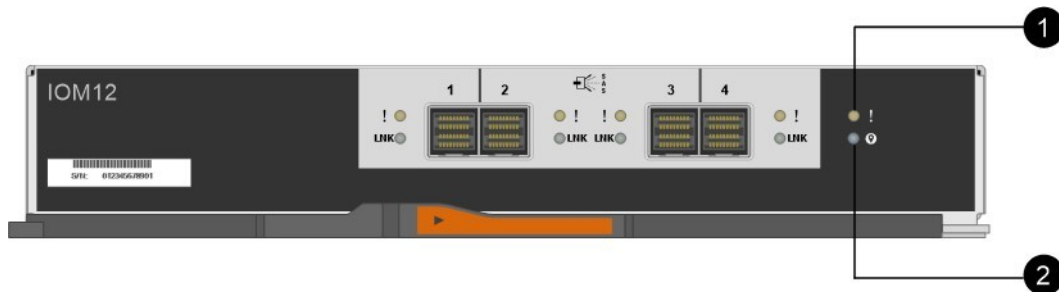

Item	LED name	State	Description
1	Attention	Solid amber	The IOM has an error.
2	Locate	Solid blue	You have issued a request to turn on the shelf's locator light. Note: Depending on what caused the IOM to fail, the locator LED on the failed IOM might not be lit.

You must replace the IOM that has its Attention LED on.

Related information

[Embedded command line](#)

Removing an IOM

When you remove an I/O module (IOM), you disconnect the SAS cables, and slide the IOM out of the drive shelf.

- You have an ESD wristband, or you have taken other antistatic precautions
- You have the replacement IOM.

Step 1. Put on antistatic protection.



Step 2. Unpack the new IOM, and set it on a level surface near the drive shelf.

Save all packing materials for use when returning the failed IOM.

Step 3. Label each cable that is attached to the IOM.

Step 4. Disconnect all of the cables from the IOM.

Step 5. Squeeze the latch on the cam handle until it releases, and then open the cam handle to the right to release the IOM from the midplane.

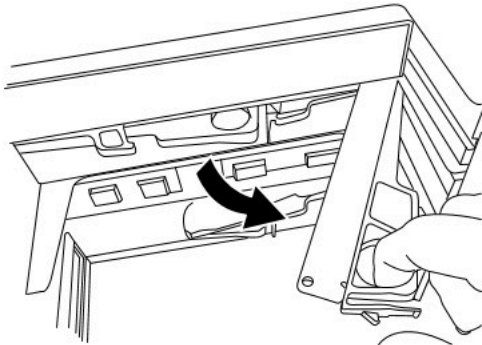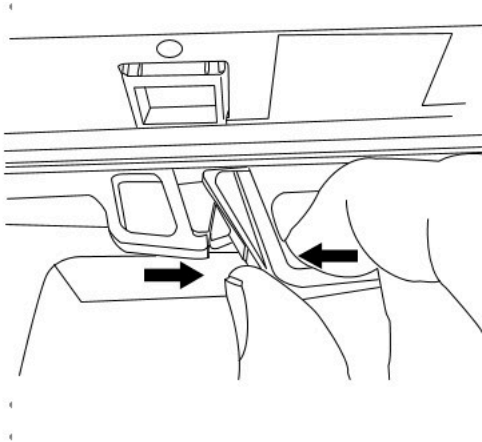

Step 6. Using two hands, pull the IOM out of the disk shelf.

When you remove the IOM, a flap swings into place to block the empty bay, helping to maintain air flow and cooling.

Installing an IOM

When you install an IOM, you slide the IOM into the shelf, close the cam handle to secure the IOM in place, and reconnect the SAS cables.

- You have an ESD wristband, or you have taken other antistatic precautions.
- You have the replacement IOM.

Step 1. With the cam handle in the open position, insert the new IOM into the disk shelf, firmly pushing until the IOM meets the midplane.

Attention: Do not use excessive force when sliding the IOM into the disk shelf; you might damage the connectors.

Step 2. Close the cam handle so that the latch clicks into the locked position and the IOM is fully seated.

Step 3. Reconnect the cables.


SAS cable connectors are keyed. When inserting the connectors make sure each connector clicks into place.

Attention: Never force the connectors into the ports; you might damage the cables, the ports, or both.

After replacing an IOM

After installing a new IOM and reconnecting the SAS cables, you must confirm that the new IOM is working correctly. Then, you can gather support data and resume operations.

Step 1. Check the Link LEDs on the IOM to verify that the IOM links have been established for all the ports that have a cable attached.

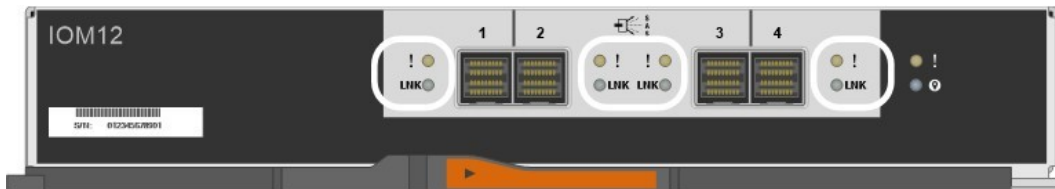

LED icon	LED name	State	Description
LNK	Link status	Green	A link has been established on the SAS port.
!	Attention	Solid amber	The IOM link has a fault.

When you first insert an IOM, the LNK LEDs for the SAS ports remain off. When the IOM is ready to start processing SAS traffic, the green LNK LEDs turn on for all ports that have SAS cables properly attached. The amber Attention LEDs for the four SAS connectors and for the IOM itself should remain off.

Step 2. From the Recovery Guru in ThinkSystem System Manager, select **Recheck** to ensure the problem has been resolved.

Step 3. If a failed IOM is still being reported, repeat the steps in [“Removing an IOM” on page 4](#) and [“Installing an IOM” on page 5](#). If the problem continues to persist, contact technical support

Step 4. Remove the antistatic protection.

Step 5. Collect support data for your storage array.

Collecting support data before and after replacing a component ensures you can send a full set of logs to technical support in case the replacement does not resolve the problem.

Option	Description
ThinkSystem System Manager	<ol style="list-style-type: none">1. Select Support → Support Center → Diagnostics.2. Select Collect Support Data.3. Click Collect. The file is saved in the Downloads folder for your browser with the name supportdata.7z.
From the SMCli	Execute the following command: <code>smcli <ip address> -u <userid> -p <password> -c "save storageArray supportData file=\ "filename.7z\";"</code>

Appendix A. Contacting Support

You can contact Support to obtain help for your issue.

You can receive hardware service through a Lenovo Authorized Service Provider. To locate a service provider authorized by Lenovo to provide warranty service, go to <https://datacentersupport.lenovo.com/serviceprovider> and use filter searching for different countries. For Lenovo support telephone numbers, see <https://datacentersupport.lenovo.com/supportphonenumberlist> for your region support details.

Appendix B. Notices

Lenovo may not offer the products, services, or features discussed in this document in all countries. Consult your local Lenovo representative for information on the products and services currently available in your area.

Any reference to a Lenovo product, program, or service is not intended to state or imply that only that Lenovo product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any Lenovo intellectual property right may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any other product, program, or service.

Lenovo may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document is not an offer and does not provide a license under any patents or patent applications. You can send inquiries in writing to the following:

*Lenovo (United States), Inc.
8001 Development Drive
Morrisville, NC 27560
U.S.A.
Attention: Lenovo Director of Licensing*

LENOVO PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some jurisdictions do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. Lenovo may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time without notice.

The products described in this document are not intended for use in implantation or other life support applications where malfunction may result in injury or death to persons. The information contained in this document does not affect or change Lenovo product specifications or warranties. Nothing in this document shall operate as an express or implied license or indemnity under the intellectual property rights of Lenovo or third parties. All information contained in this document was obtained in specific environments and is presented as an illustration. The result obtained in other operating environments may vary.

Lenovo may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

Any references in this publication to non-Lenovo Web sites are provided for convenience only and do not in any manner serve as an endorsement of those Web sites. The materials at those Web sites are not part of the materials for this Lenovo product, and use of those Web sites is at your own risk.

Any performance data contained herein was determined in a controlled environment. Therefore, the result obtained in other operating environments may vary significantly. Some measurements may have been made on development-level systems and there is no guarantee that these measurements will be the same on generally available systems. Furthermore, some measurements may have been estimated through extrapolation. Actual results may vary. Users of this document should verify the applicable data for their specific environment.

Trademarks

LENOVO, LENOVO logo, and THINKSYSTEM are trademarks of Lenovo. All other trademarks are the property of their respective owners. © 2024 Lenovo.

Lenovo